


Arlo Assembly Instructions

Your loveseat comes packaged in one boxes.

DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching the finish.

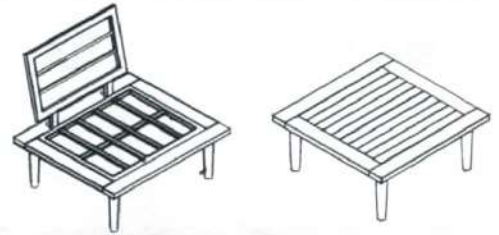

Parts List

 
A 2 x Backs




B 2 x Seat



C 1 x Table Top



D 12 x Legs

 

E 2 x Back Cushion



F 2 x Seat Cushion



G 48 x Small Bolts



M6 x 15 mm

H 4 x Long Bolts



M6 x 40mm

Hardware List

I 56 x Flat Washers

7mm x 16mm x 1mm



J 1 x Hex Key



M4 x 60mm


K 4 x Small bolts M6x20



M6 x 20mm

Assembly

Step 1

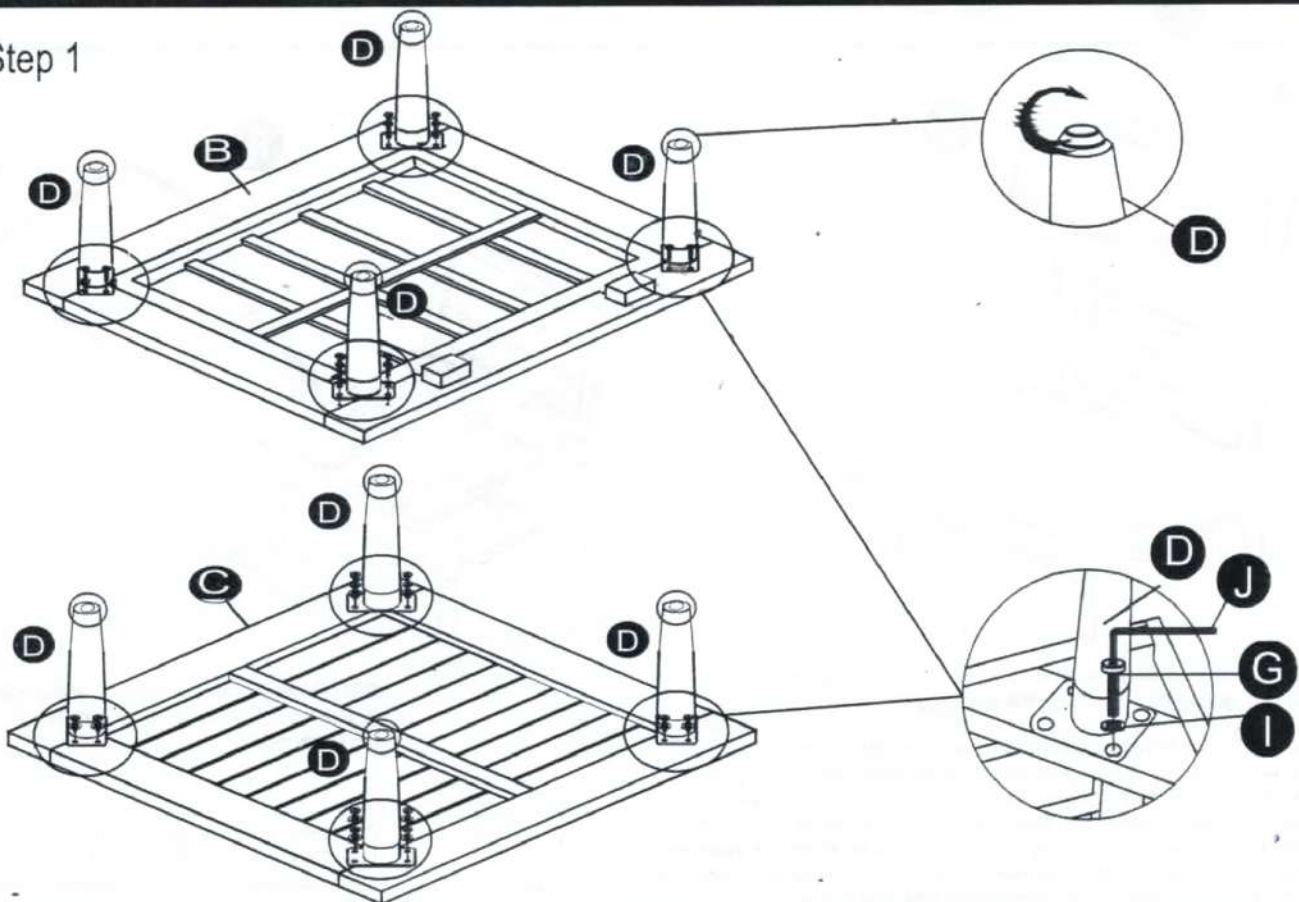


Assembly



Step 2



Step 3

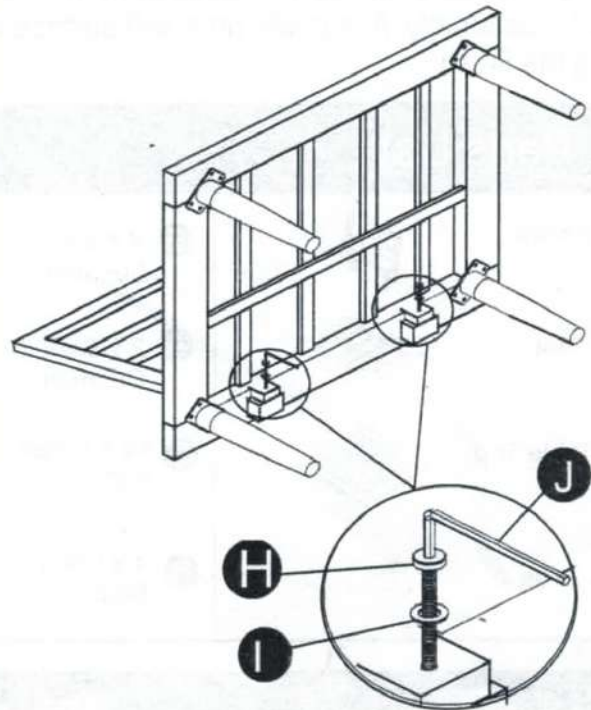

Step 4

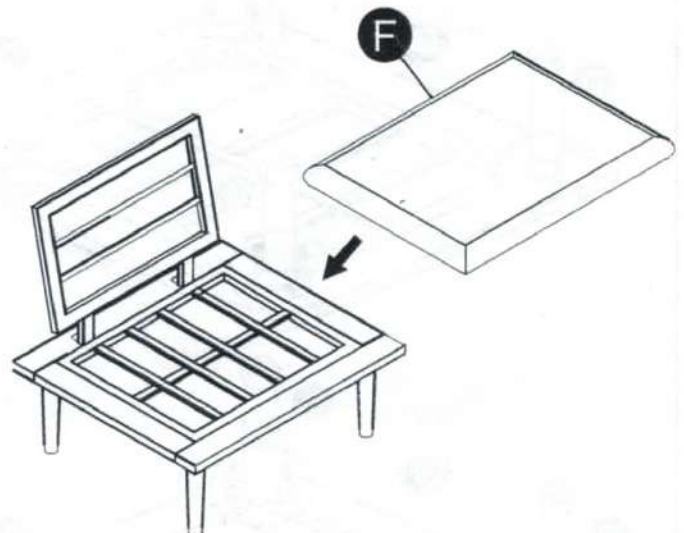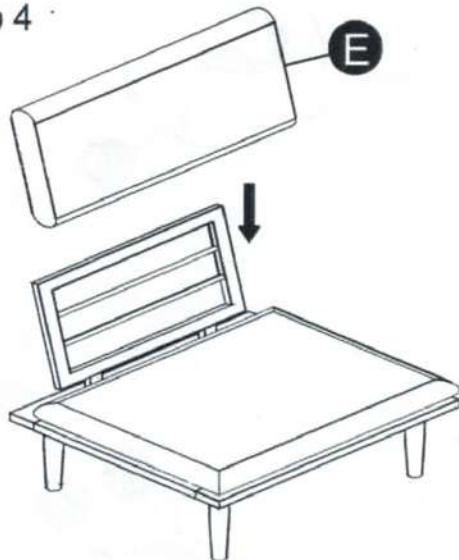

Your loveseat style may differ from images. Care for your furniture by periodically tightening all bolts using the included hex key.

One Year Warranty: The furniture is warranted against defects in workmanship and materials. Items covered would be seam slippage, frame structural integrity, fit and finish of parts. Items not covered would be product abused by the user, normal wear and tear, stains or discoloration due to use, damage in any transportation. Softening of foam is considered normal wear and tear and is not covered by warranty. Warranty is for PARTS ONLY and does not include transportation and labor costs associated with any warranty claim.

CAUTION: Tighten all components securely before use. Failure to do so may result in personal injury.

Customer Support: 866-238-0531
Mon-Fri 8:00am - 4:30pm CST
customerservice@furniturequestions.com