


ITEM NO:C8716D DINING TABLE


NO.	PARTS LIST	QTY
A	TABLE TOP	1PC
B	LEG	4PCS
C	STRETCHER	1PC
D	BOLT 1/4X15MM	8PCS
E	BOLT 1/4X30MM	8PCS
F	SPRING WASHER	8PCS
G	FLAT WASHER	8PCS
H	ALLEN KEY	1PC

Note:Pls do not tighten all bolts until the chair is assembled completely.Once assembled,tighten all bolts before attaching the chair.


STEP1

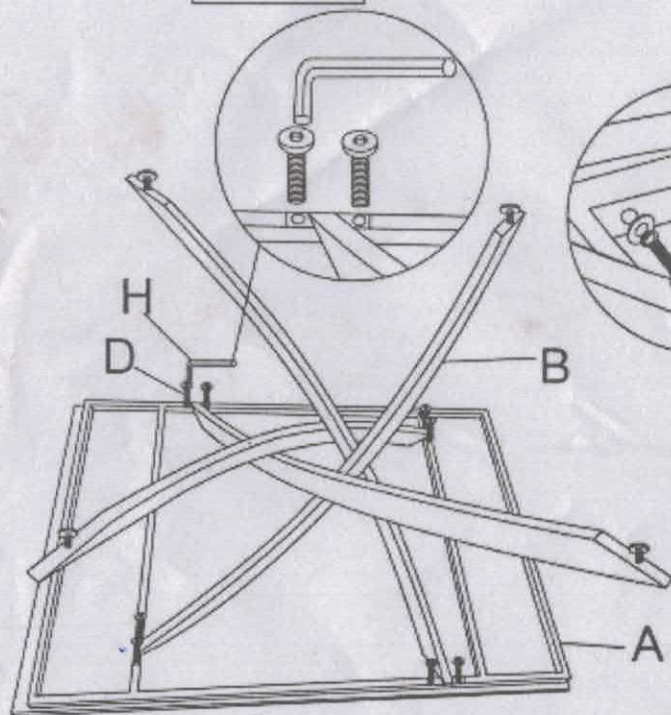

STEP2

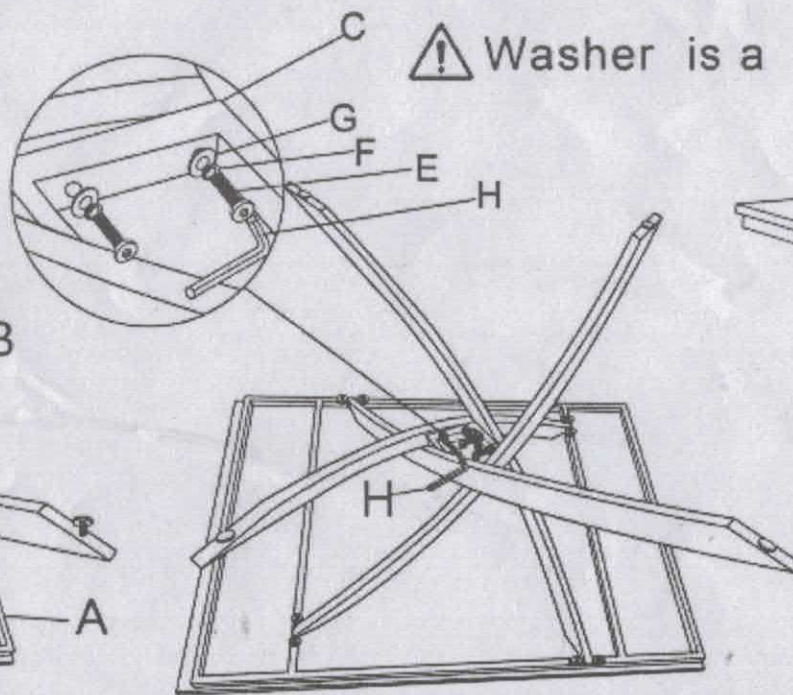

STEP3

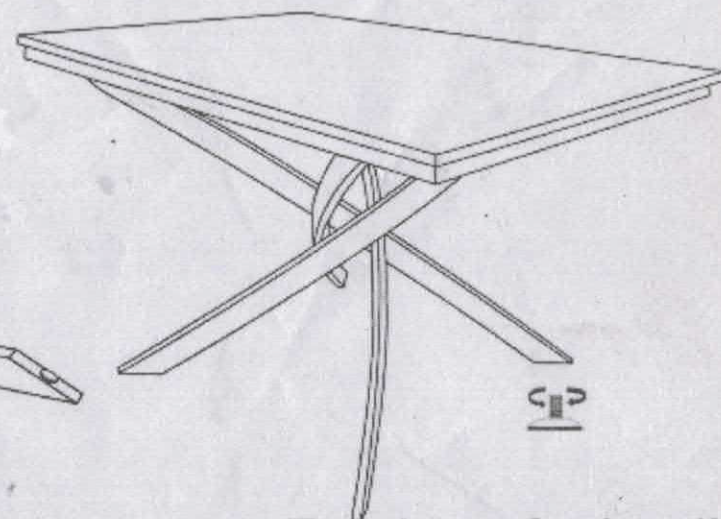

Touch me for level!