ASSEMBLY INSTRUCTIONS Swing Chair

Y3001A-GB



NOTE

- Please check you have all components, required hardware and quantity before assembling.
- If you are missing any hardware, please contact our service team.


CAUTION

- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts, screws and knobs are firmly secured.
- Check that all bolts, screws and knobs are securely tightened at least every 4 months.


WARNING

- If parts are missing, broken, damaged or worn, stop using the product until all repairs are made using manufacturer authori
- Failure to follow these warnings could result in serious injury.
- CHILDREN MUST BE SUPERVISED.


Parts List

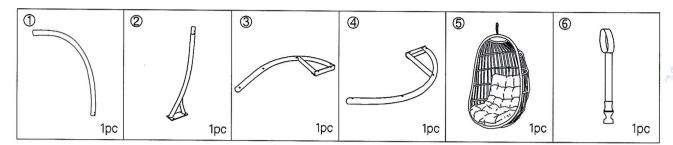



Included Hardware

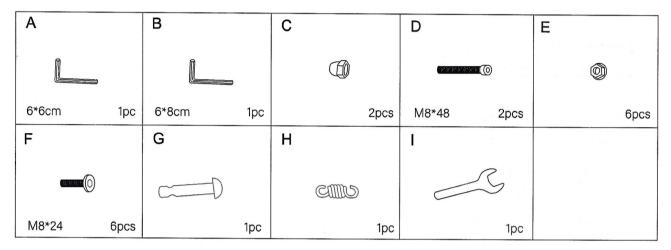

Assembly

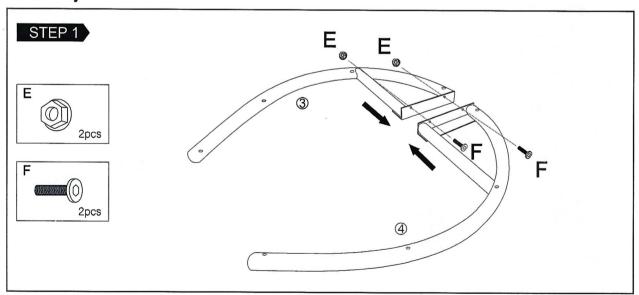

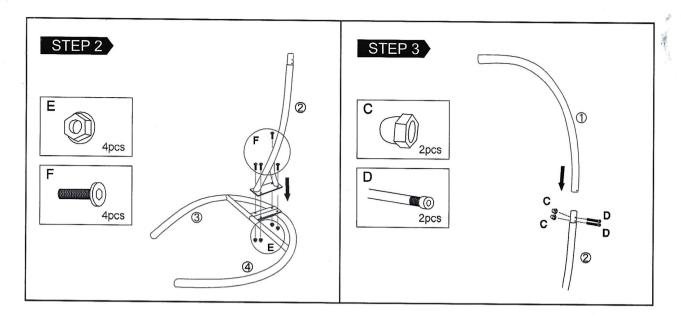

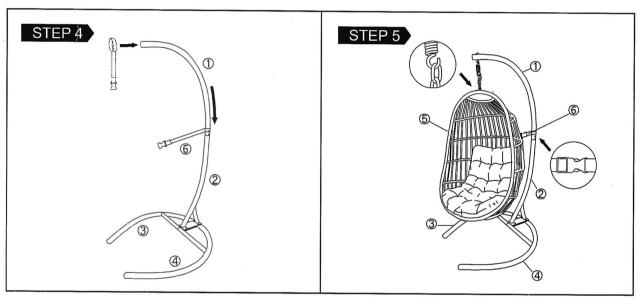

Thank you for your purchase.