


ASSEMBLY INSTRUCTION

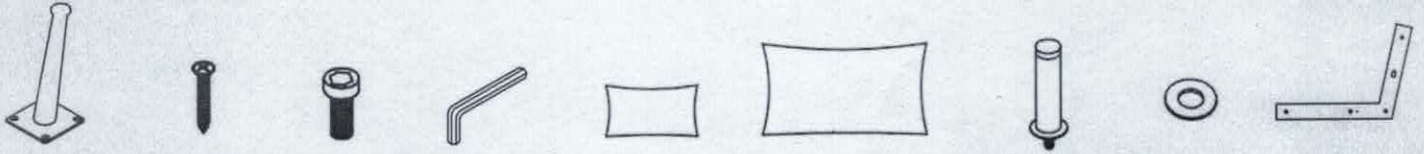

AX8

BX38

CX4

DX1

EX2

FX3

GX2

HX4

IX2

