


desk height up/down

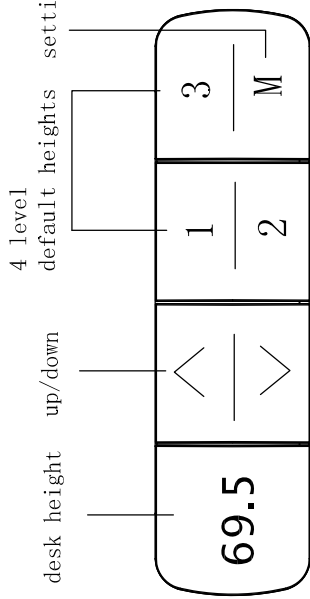

**Note** Please make sure there is no obstacle during the operation, and there is a gap between desk and wall. And all wires are long enough to allow the up-down of desk.

**Advice** Please set up as 1 the most comfortable height when you sit down, and set up as 2 the most comfortable height when you stand up. For the other two heights, you can choose whatever you like.

### Reset abnormality protection




When there is something wrong with controller reported, the digital tube shows E07-E09. Even if it has access to power after a power cut-off, it will still give an error notice no matter what button you press.

### Operation

After pressing for 5s and digital tube shows RST, release the button and press the down button, reset will be activated.


### Set up upper limit position

Press M button, the digital tube shows "S-", then release the button. Press the up button, the digital tube will flash once, release the button. Press M button again for 2s, the digital tube shows "999". The upper limit position has been set.

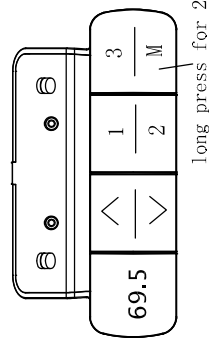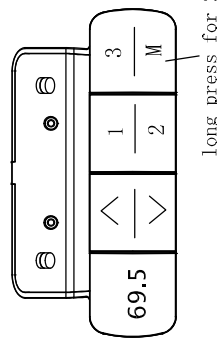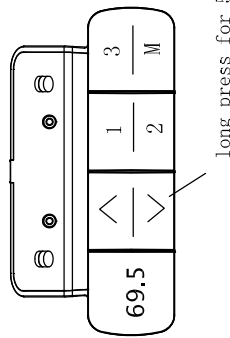

### Delete limit position

Press M button, the digital tube shows "S-", release the button. Press M button again for 2S, it shows "555". The upper and lower limits have been deleted.

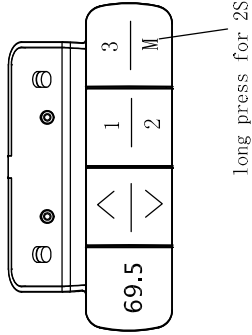


### Lock

Press M button, the digital tube shows "S-", long press M button for 5S, the digital tube shows numbers. Press M button for 3S, it shows LOC. The buttons on the hand controller are locked.


### Unlock

Under the LOC condition, long press M button for 8S, it shows numbers. Buttons on hand controller are unlocked.

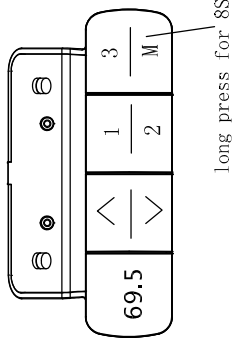


### Revise lowest height

Under the reset condition, it shows RST. Long press "M" button for 5S, it shows the height after reset and twinkles. Press up or down button to adjust to the appropriate height. 5S after releasing the button, the digital tube will go back to RST, which means the amendment is successful.

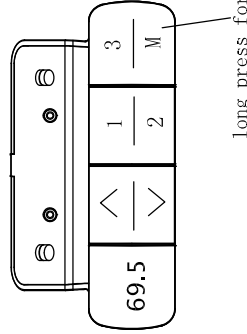


### Switch between memory inching/continuous moving

Under the reset condition (digital tube shows RST) Long press button "1" for 5s, switch inching and continuous moving. When it shows "10.1", continuous moving. When it shows "10.2", inching moving.

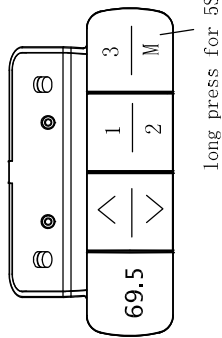

### Centimeter/inch display switch


Under the reset condition (digital tube shows RST), long press "2" for 5s, you can switch between inch display and cm display. When it shows "10.3", the height after reset will be shown in cm. When it shows "10.4", the height after reset will be shown in inch.

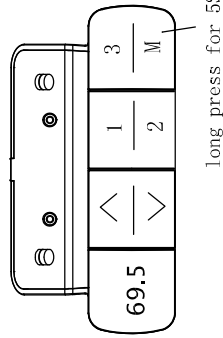

### Sensitivity setting on retreating upon obstacle

Under the reset condition (the digital tube shows RST), long press the up button for 5S, the sensitivity can be adjusted.


“10.5” --10kg  
“10.6” --15kg  
“10.7” --20kg

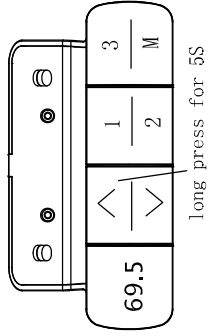

### Setting of memory position

Press M button, it shows “S-”, select and press one of the memory buttons, current height will be remembered.

Use up/down button to get the desirable height, then repeat the following action.

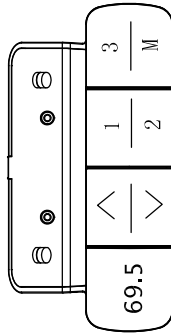

### Normal problems and solutions

1. If your desk has the following issues, please try resetting:
  - Working abnormality
  - Hand controller shows RES (reset)
  - Hand controller shows error (E07, E08 ), but motor drive wire is well connected.
2. If it shows HOT (hot) , please cut off the power and allow it to cool off for 20 minutes.