



PRODUCT NAME



NORTHSHORE 185 Entertainment Unit




EN

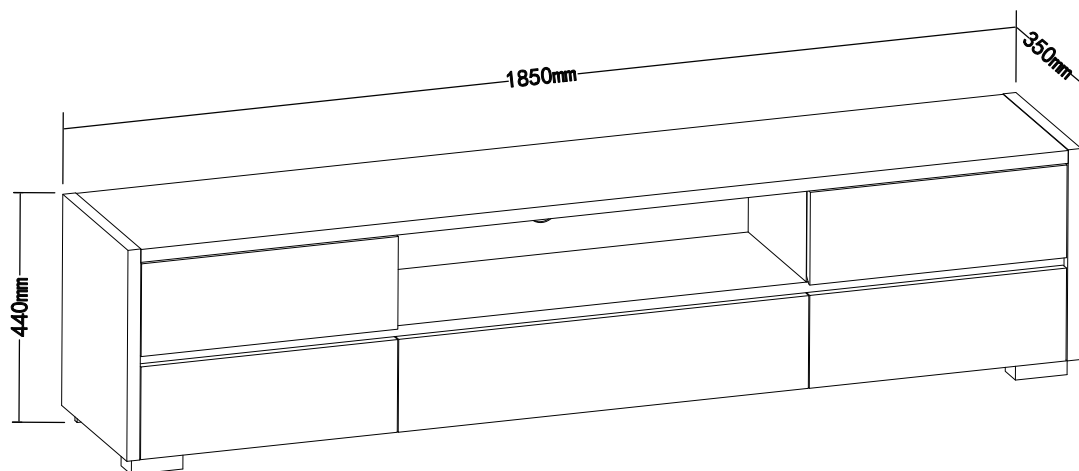


1. Identify the parts which make up your piece of furniture.
 2. Gather the hardware parts and count them.
 3. Have the necessary assembly tools ready.
 4. Organize a space for assembly, wall carpeting or a blanket will protect the furniture against scratches.
 5. Never force the assembling while you put the parts together. You are recommended to tighten the screws after the furniture has been used for some time.
 6. After assembling this product, it is advisable to regularly ventilate the room for a few days.
- KEEP THE ASSEMBLY INSTRUCTION. THE RELEVANT INFORMATION YOU CAN FIND ON IT WILL HELP YOU GET IN TOUCH WITH YOUR STORE IF A PART WAS TO BE MISSING.


1

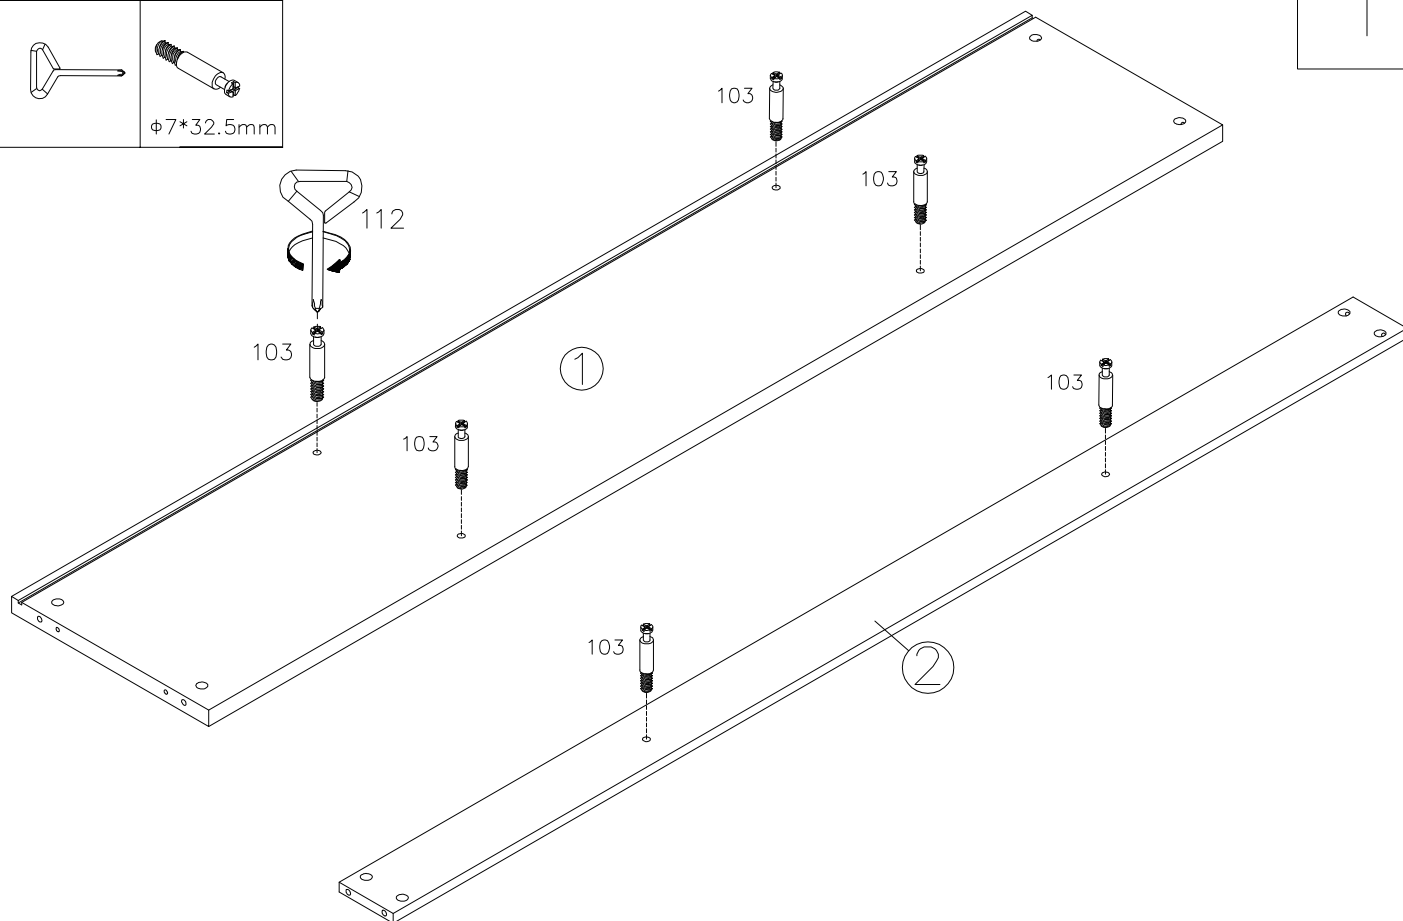





112x1	103x6
	
	Φ7*32.5mm




2

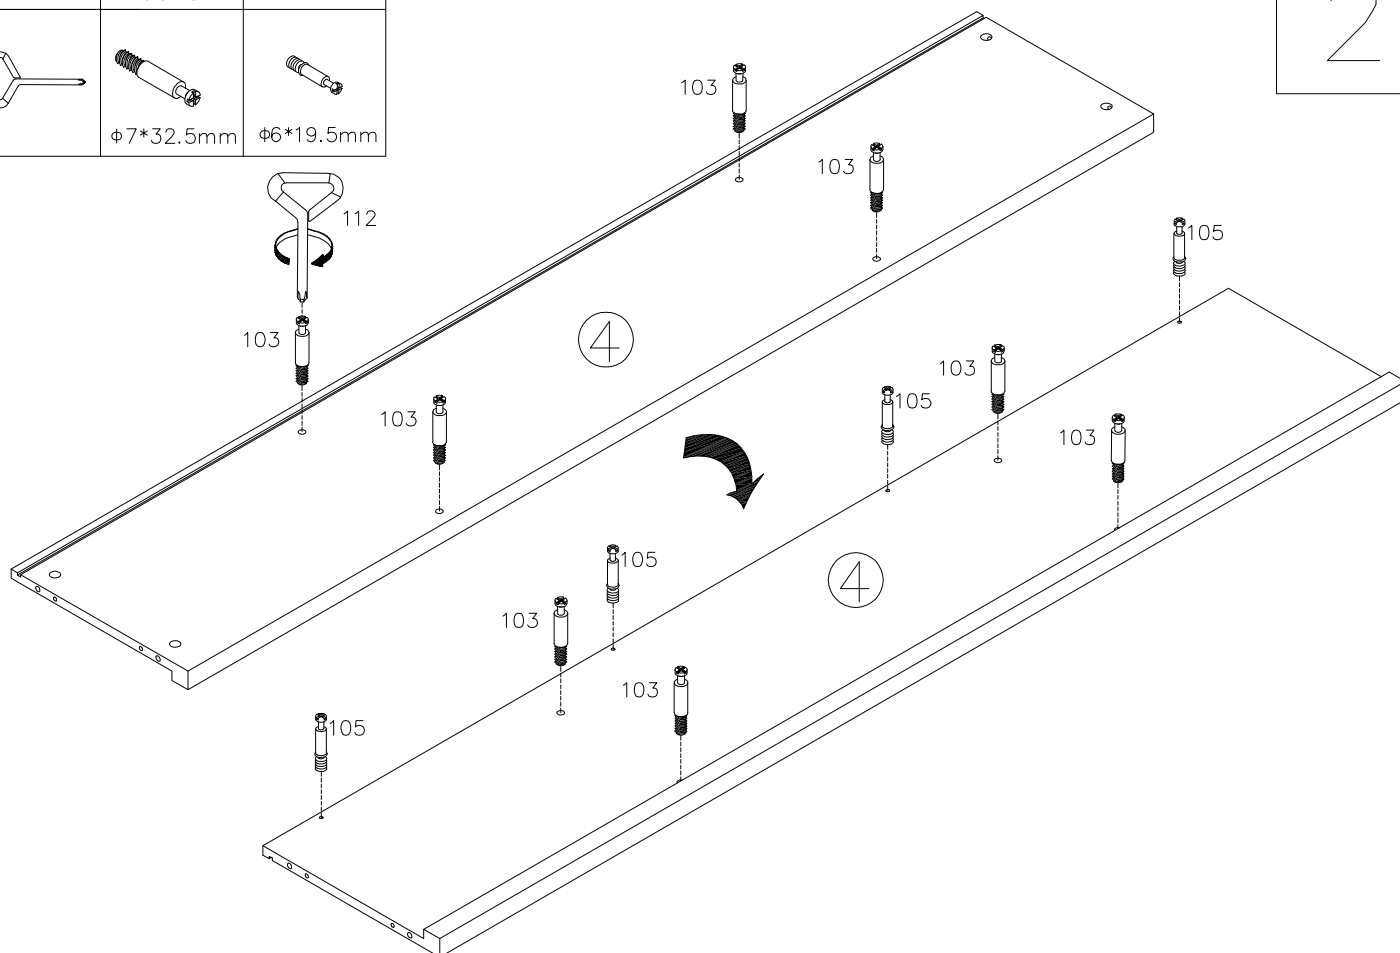


112x1	103x8	105x4
		
	Φ7*32.5mm	Φ6*19.5mm




112x1	101 x10	103x12	105x2	109B x4	108x8
					
	Φ6X30mm	Φ7*32.5mm	Φ6*19.5mm	L=300mm	Φ4X12mm

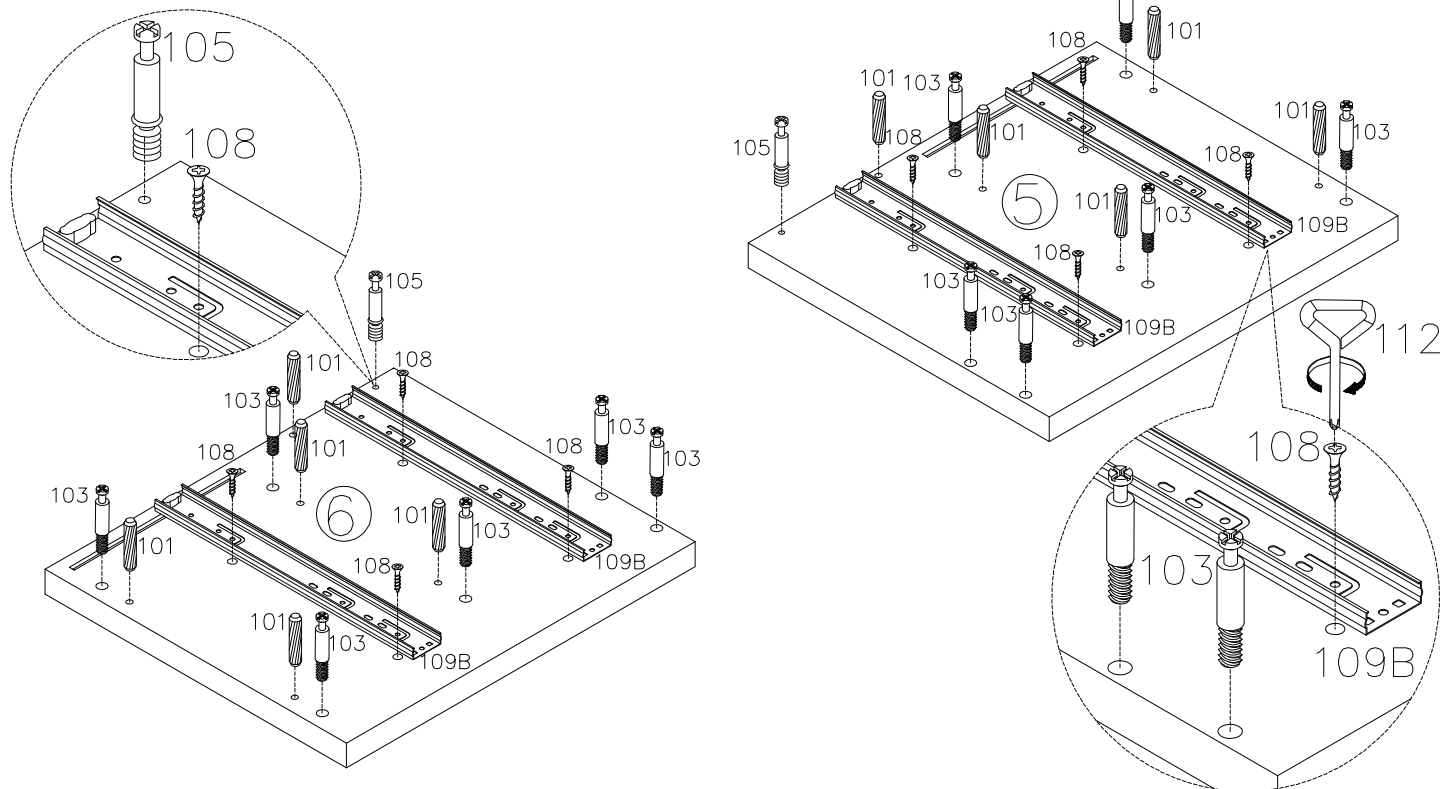

3




112x1	109B x6	108x12
		
	L= 300mm	Φ4X12mm



4

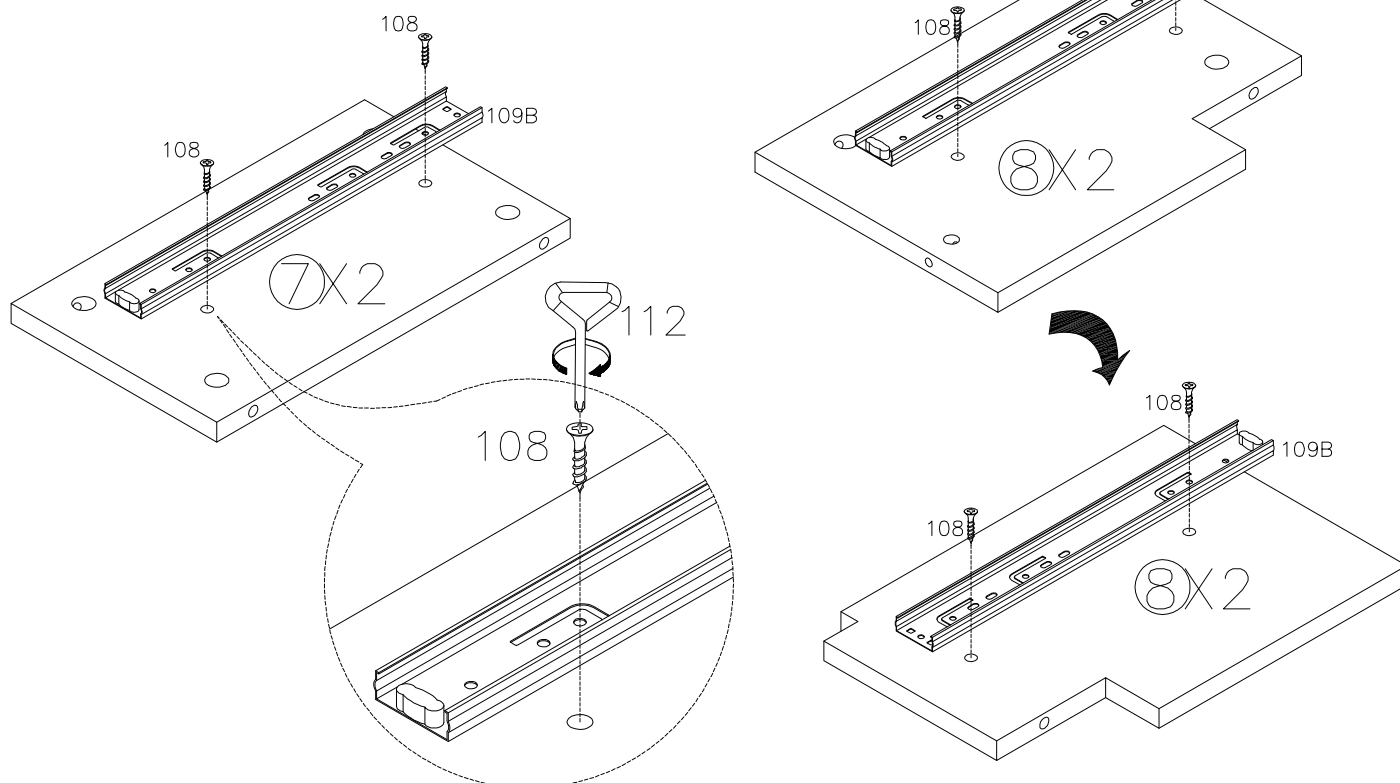


112 x1	102x4
	 Φ15*12mm





5

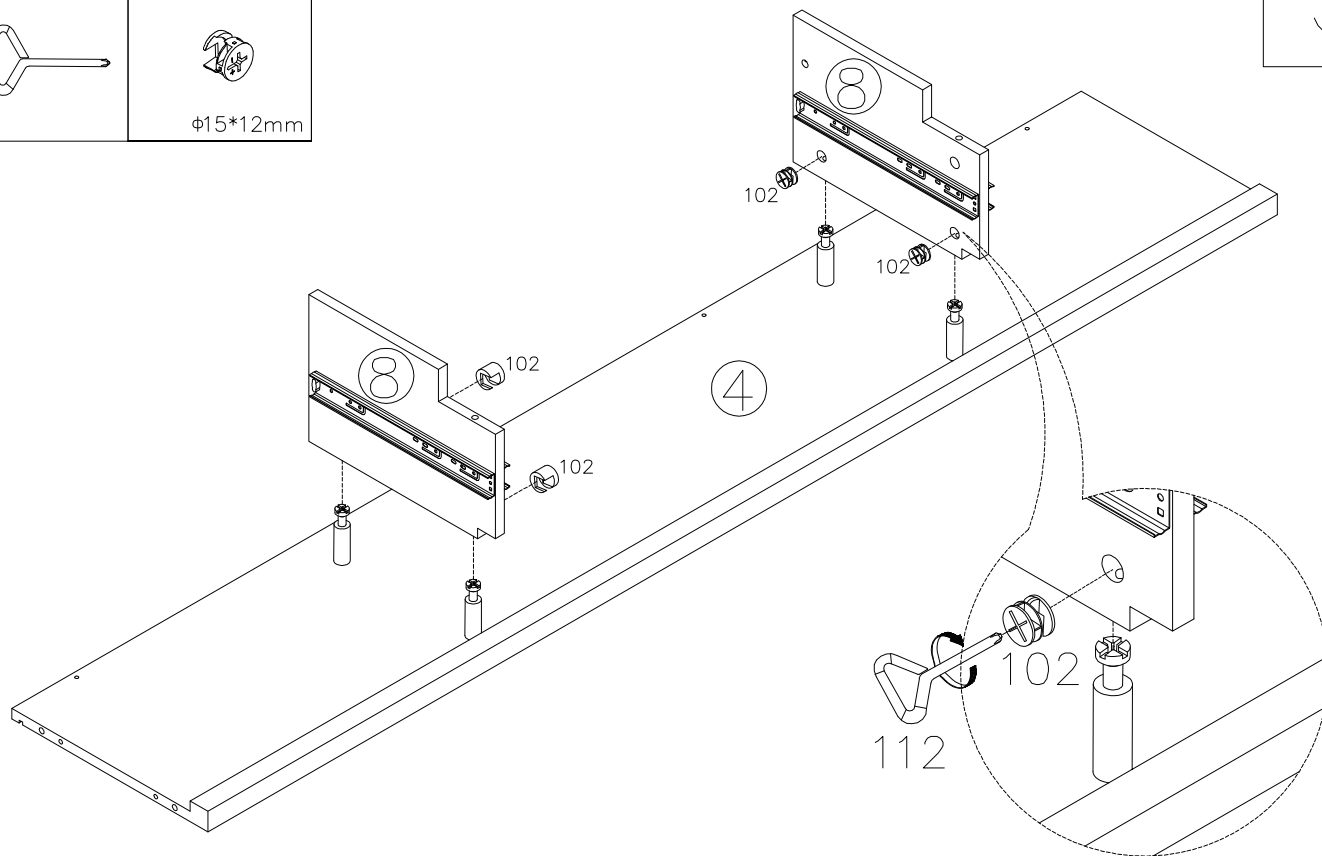


112x1	104x4
	 Φ12*10mm



6

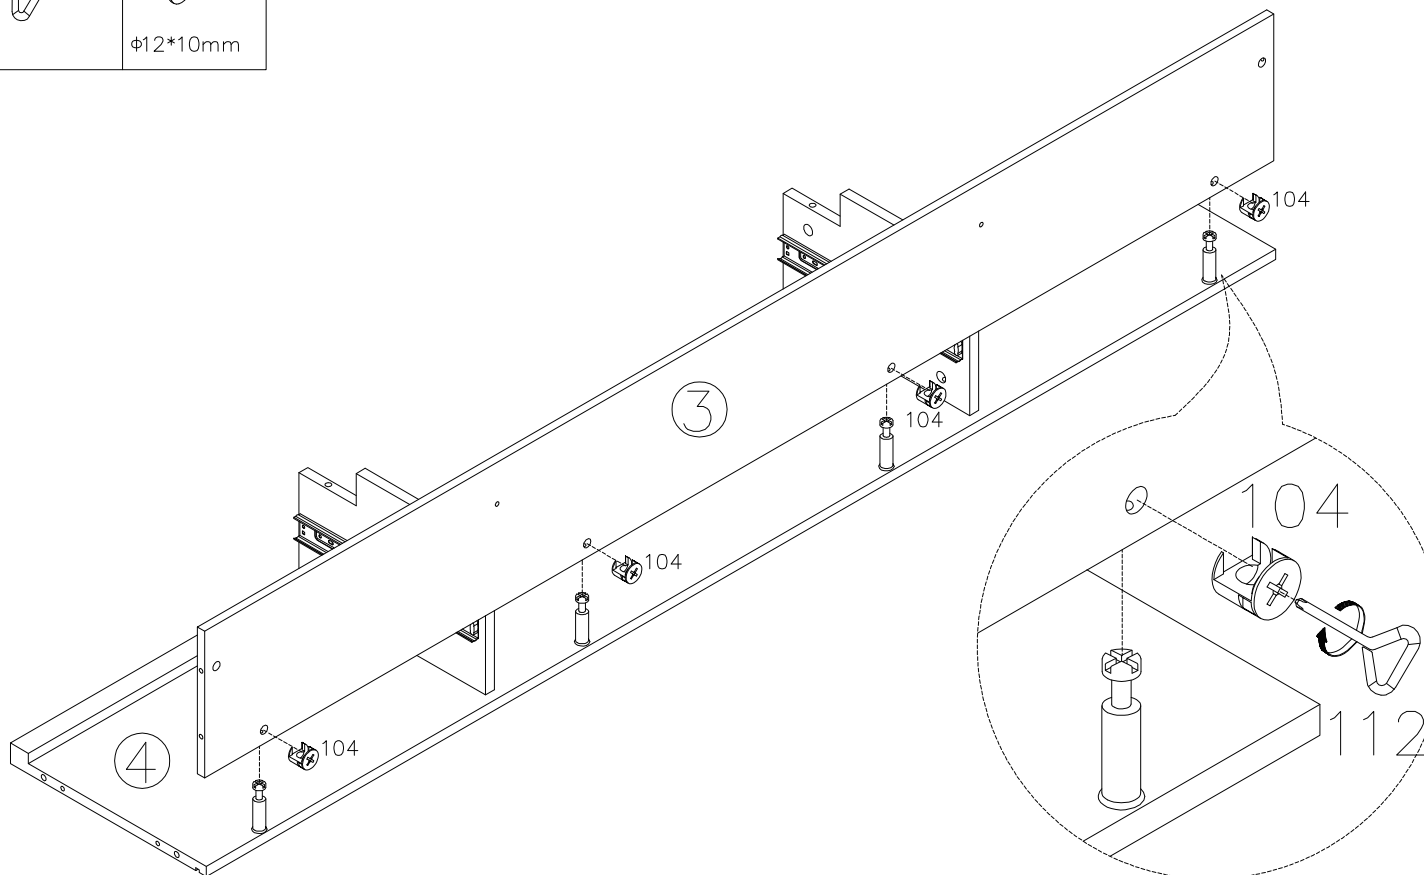


112 x1	106x2	107x2	111x6
	 φ10	 φ5X50mm	 φ12*5



7

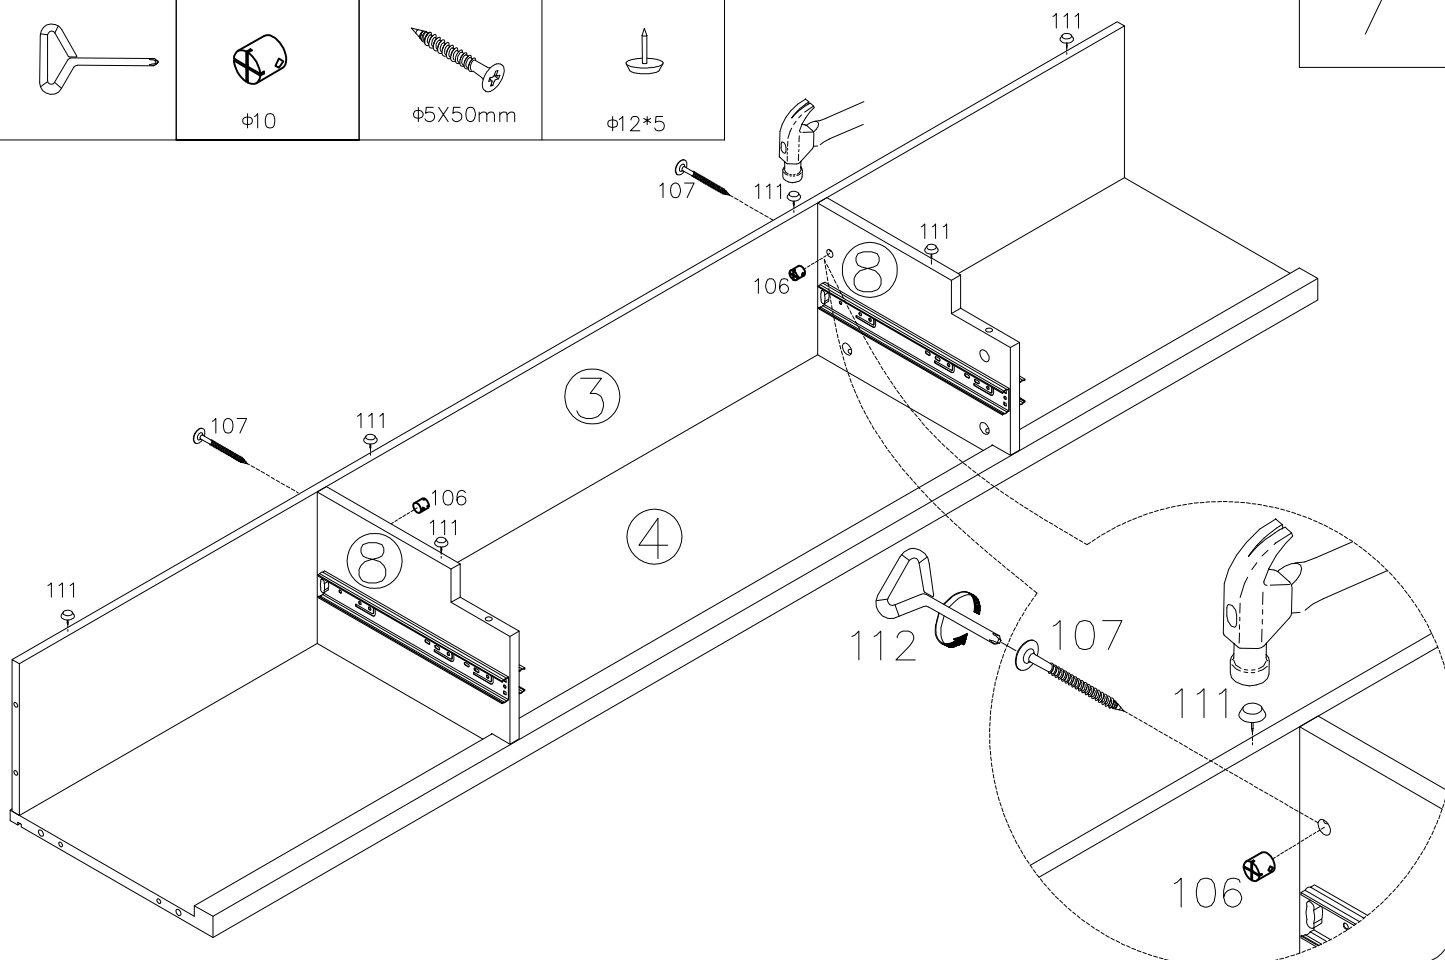


112 x1	102x6
	 φ15*12mm

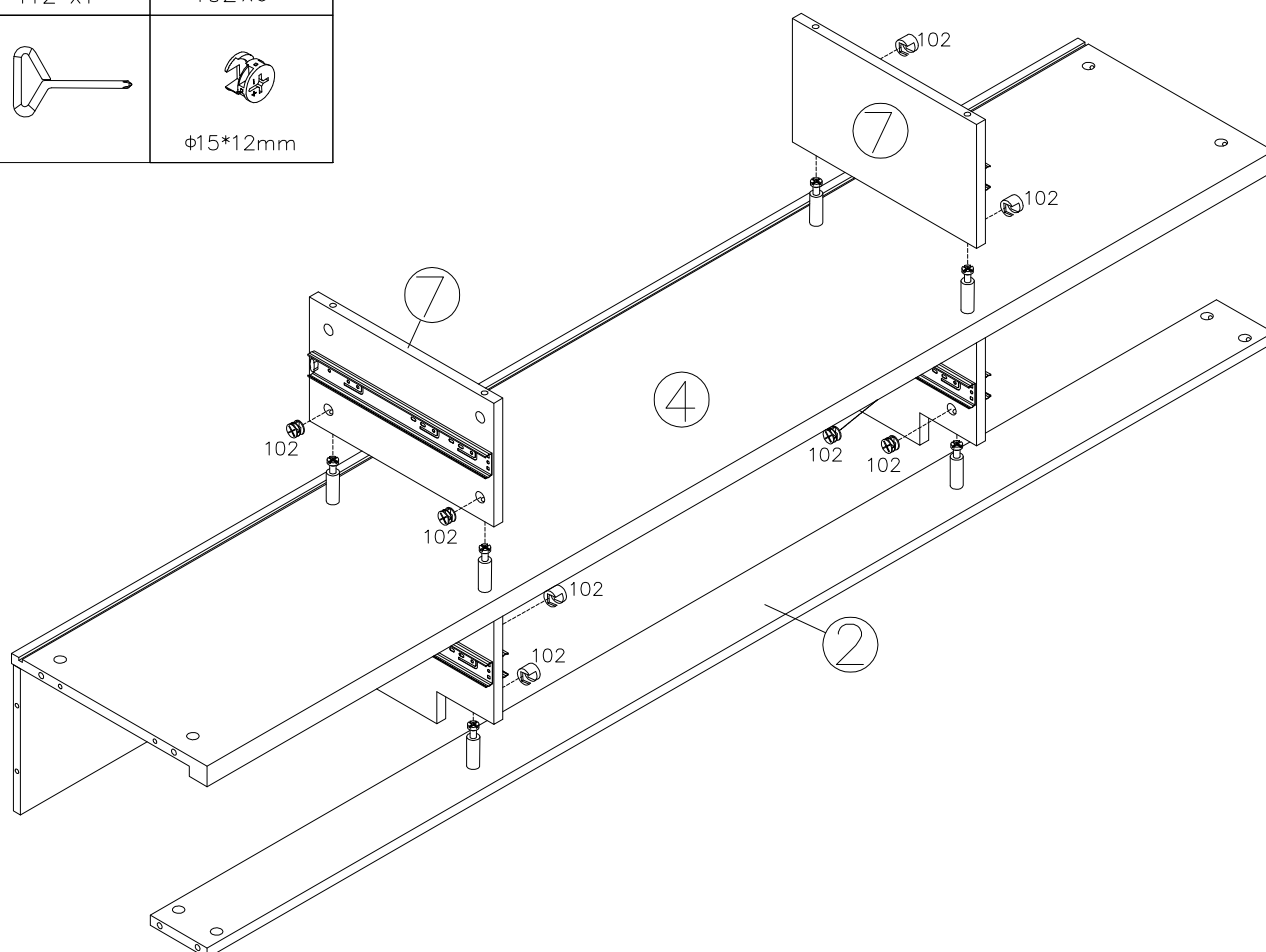


8




112 x1	102x4
	 φ15*12mm

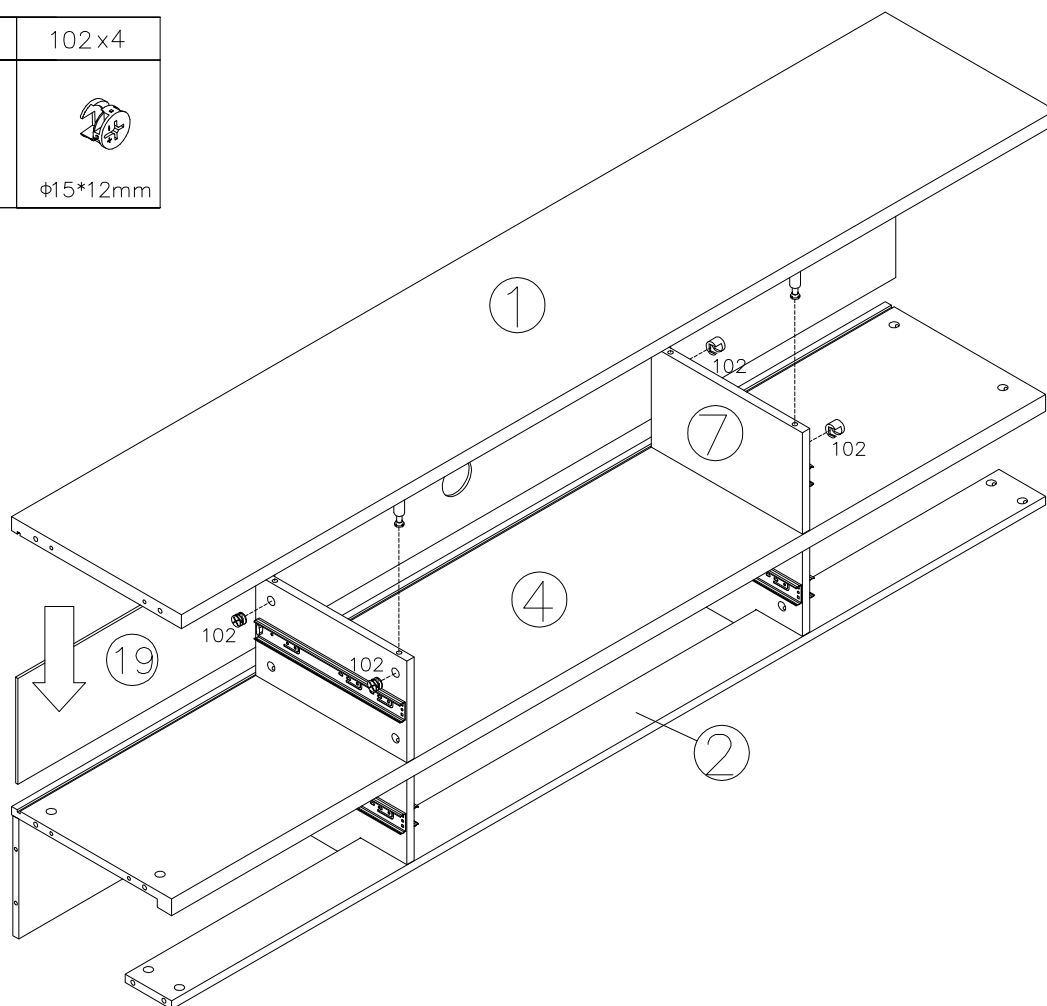

9




112 x1	102x12	104x2
	 φ15*12mm	 φ12*10mm




10

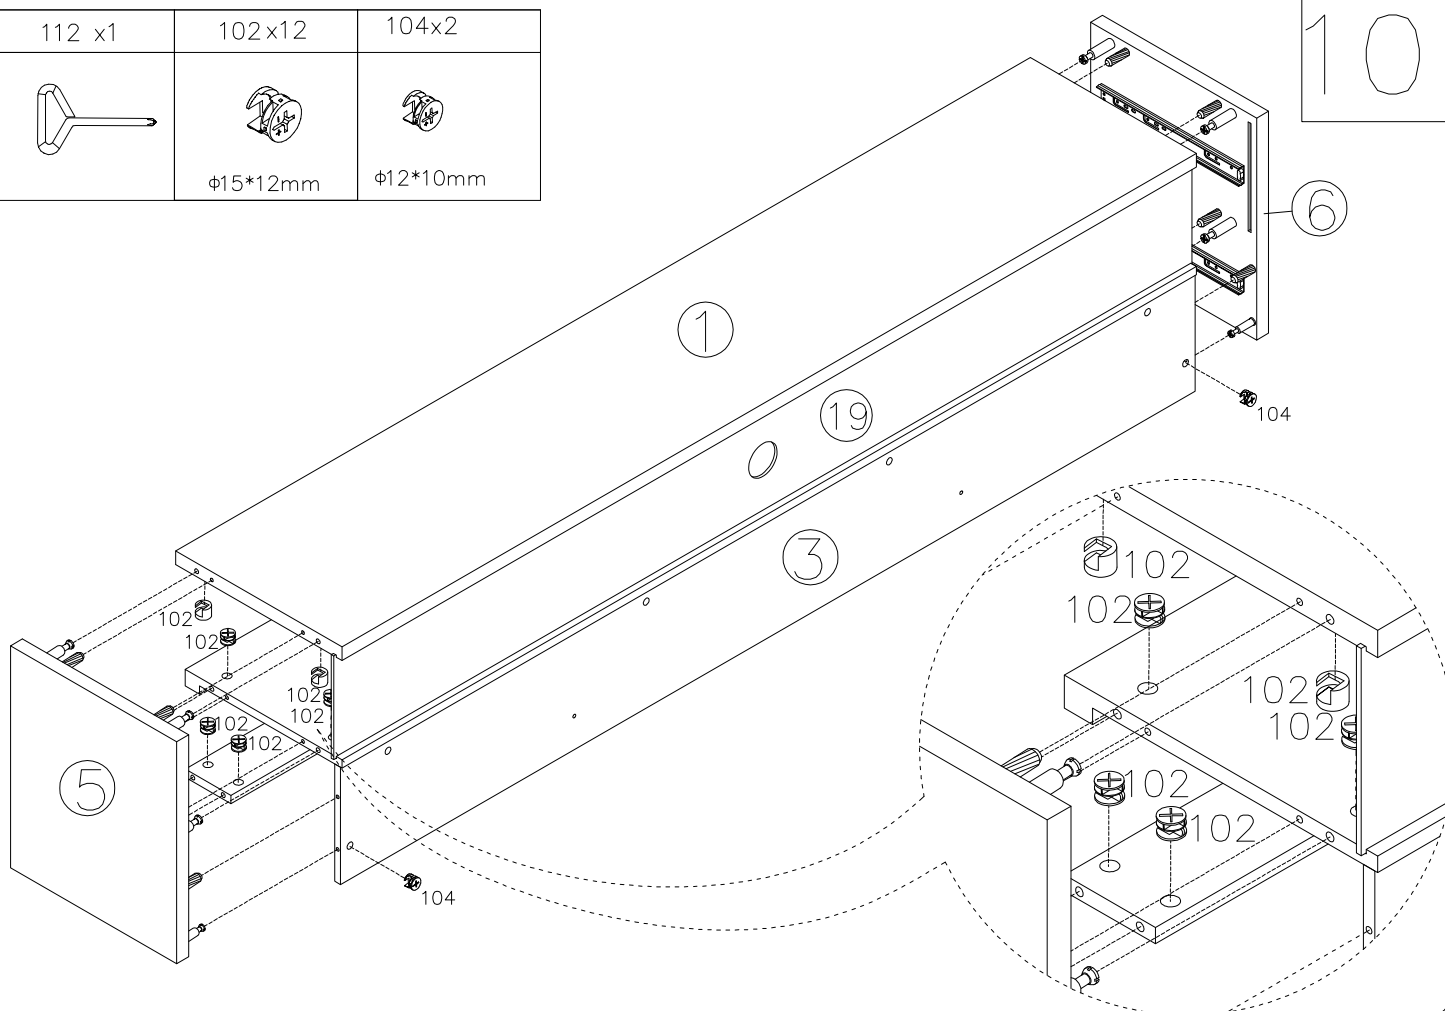


112x1	110x4
	
	M6X35

11


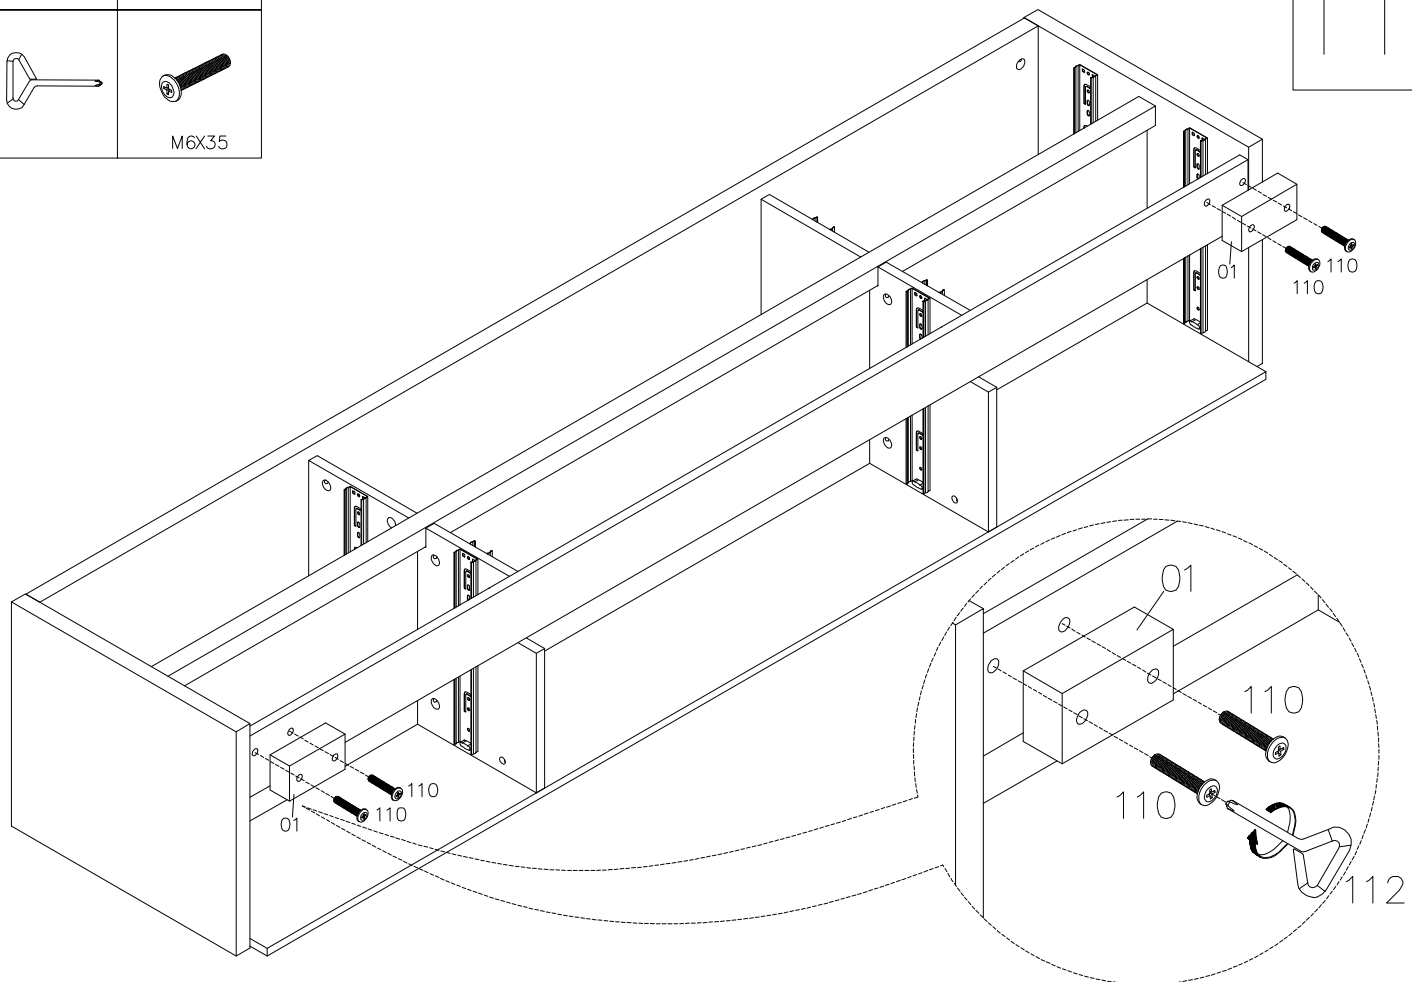





112x1	101 x10	105x24
		
	Φ6X30mm	Φ6*19.5mm

12


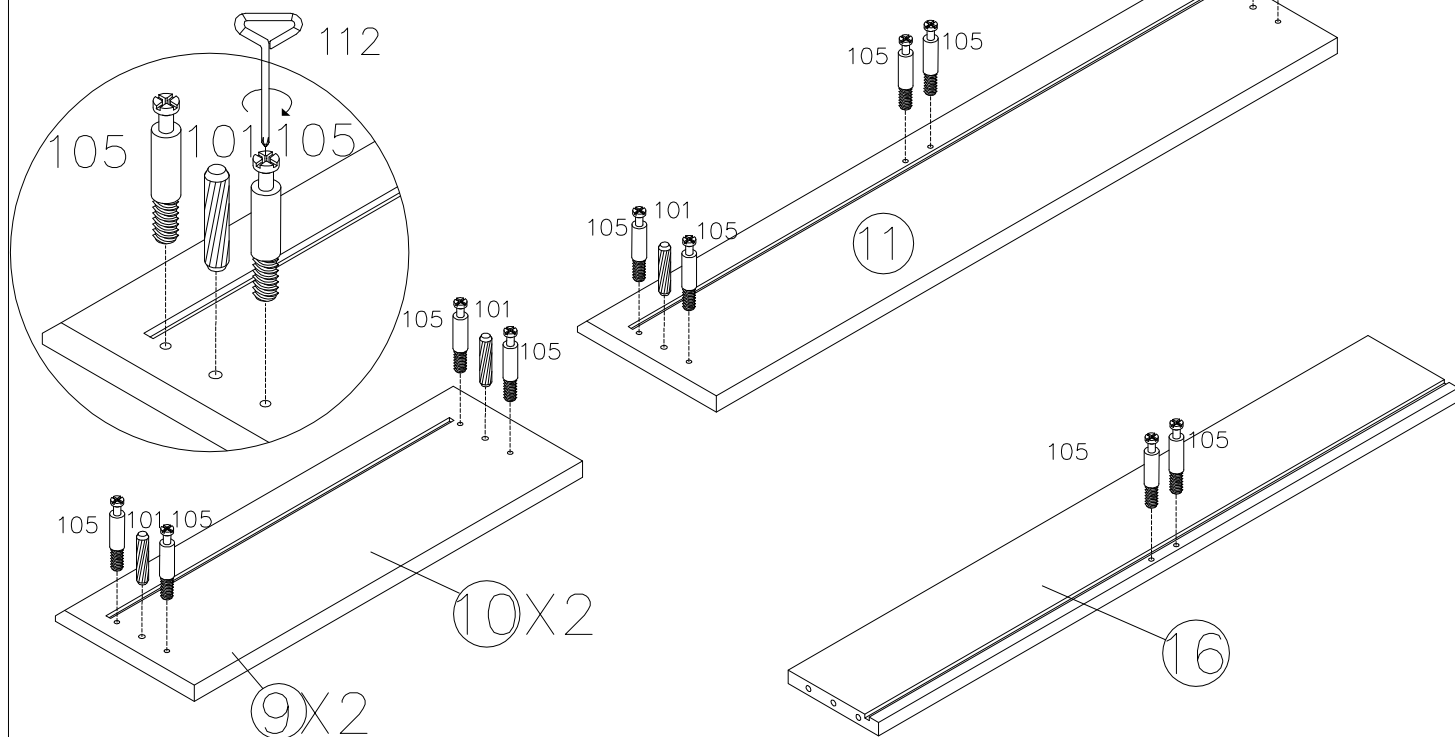





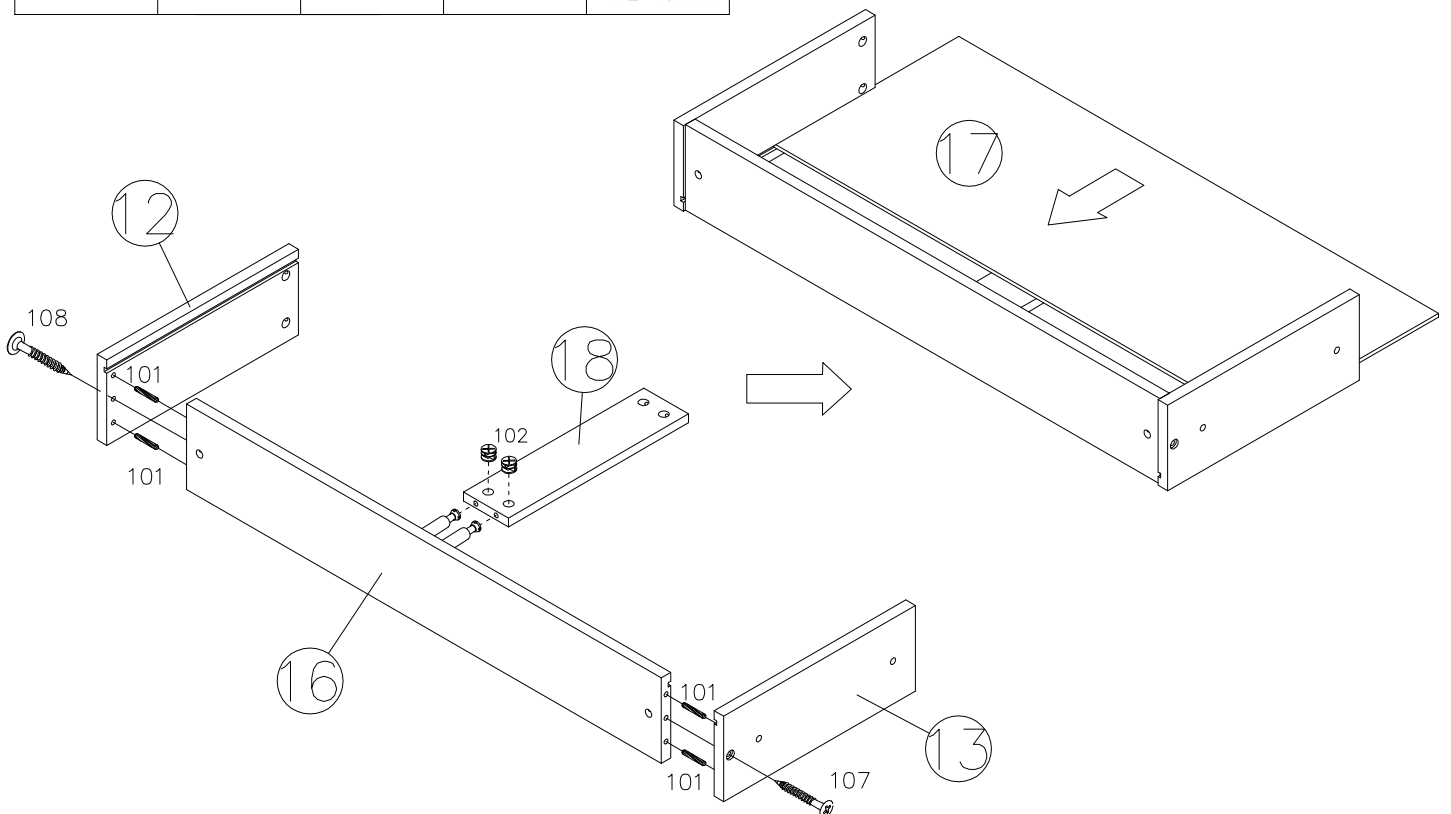
13




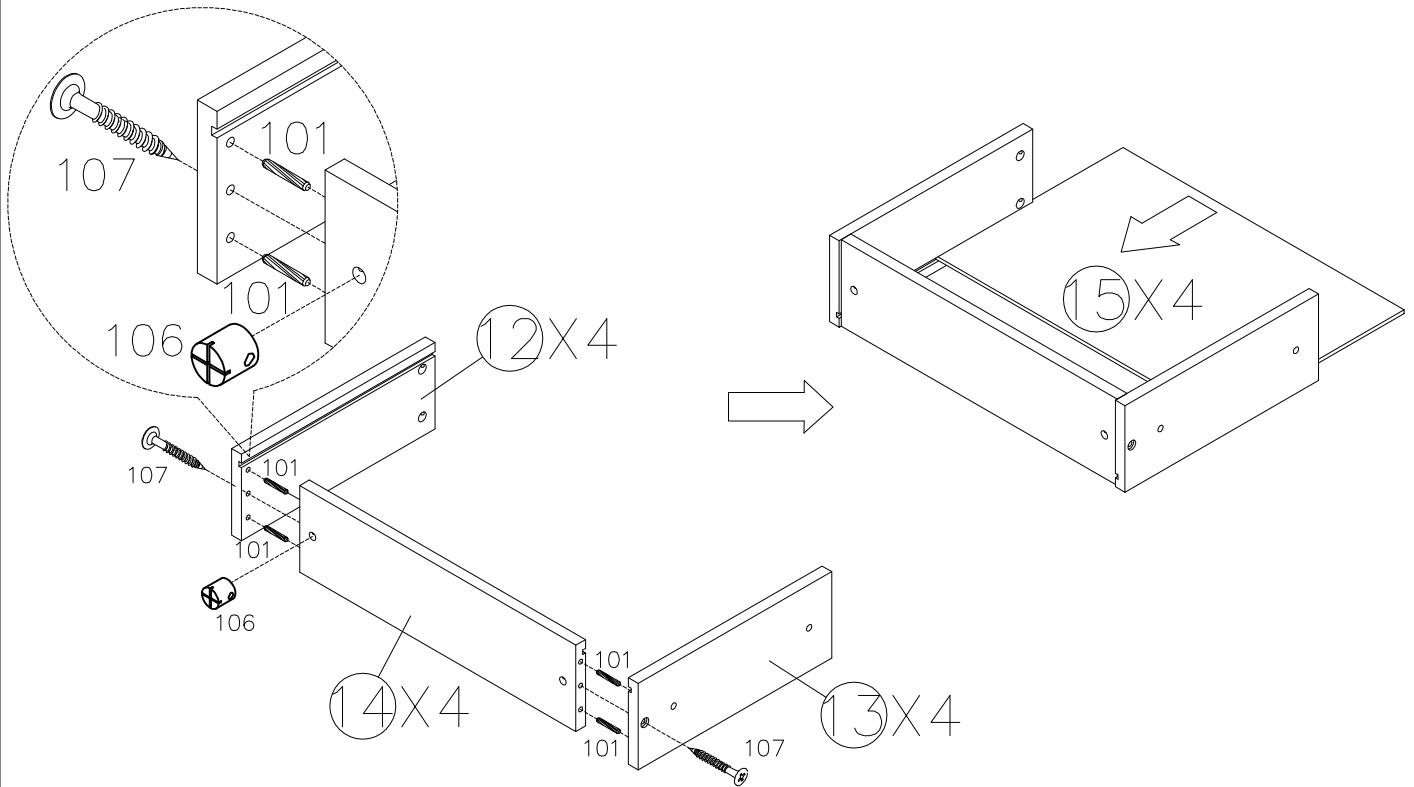
112x1	101x16	106x8	107x8
			
	Φ6X30mm	Φ10	Φ5X50mm





14



112x1	101x4	106x2	107x2	104x2
				
	Φ6X30mm	Φ10	Φ5X50mm	Φ12*10mm




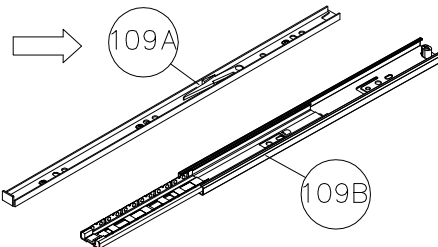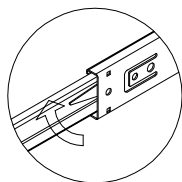


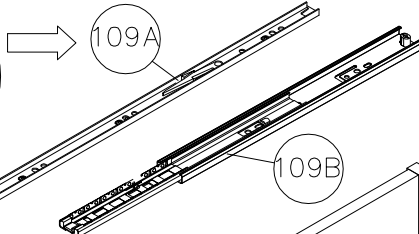
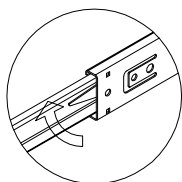
112x1	104x16	109A x4	108x16
			
	Φ12*10mm	L=300mm	Φ4X12mm

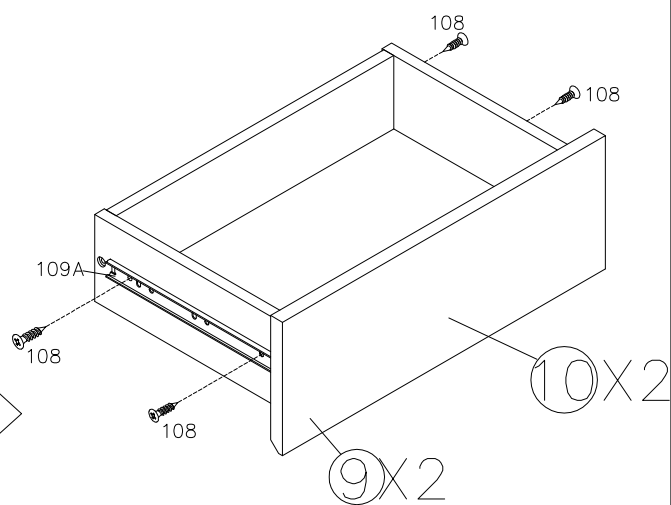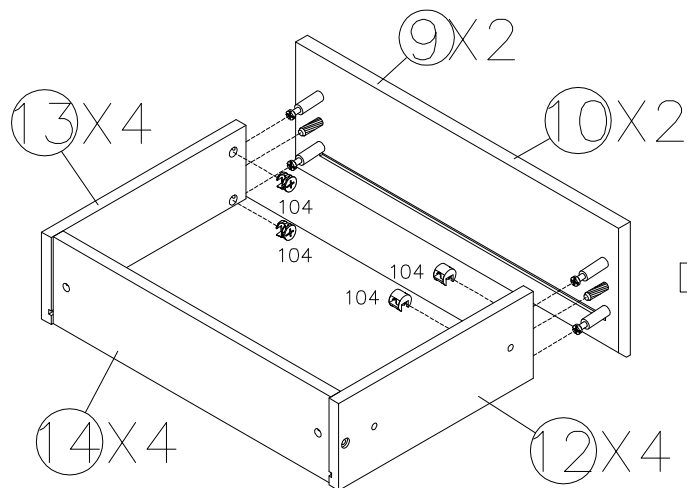




15




112x1	104x6	109A x2	108x4
			
	Φ12*10mm	L=300mm	Φ4X12mm



16

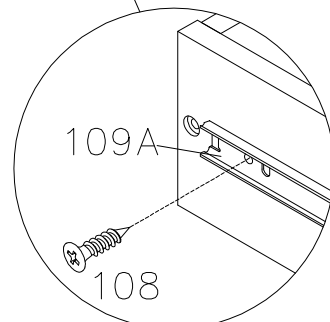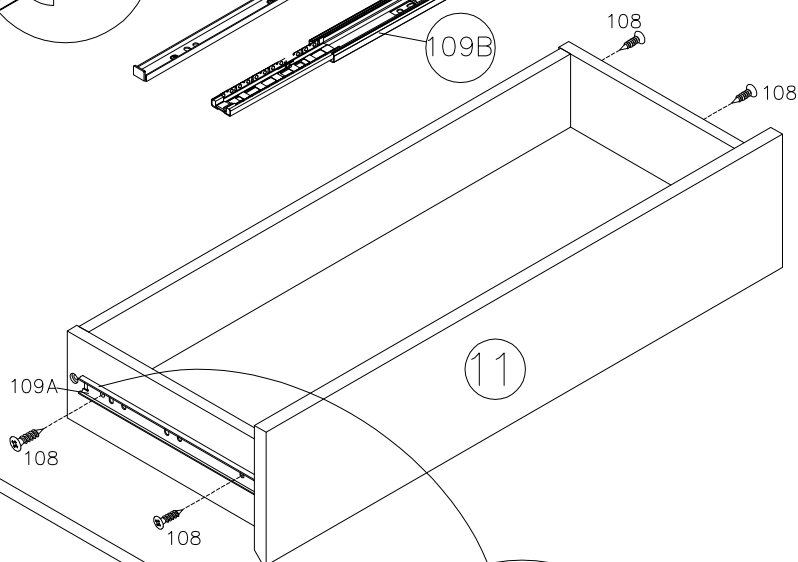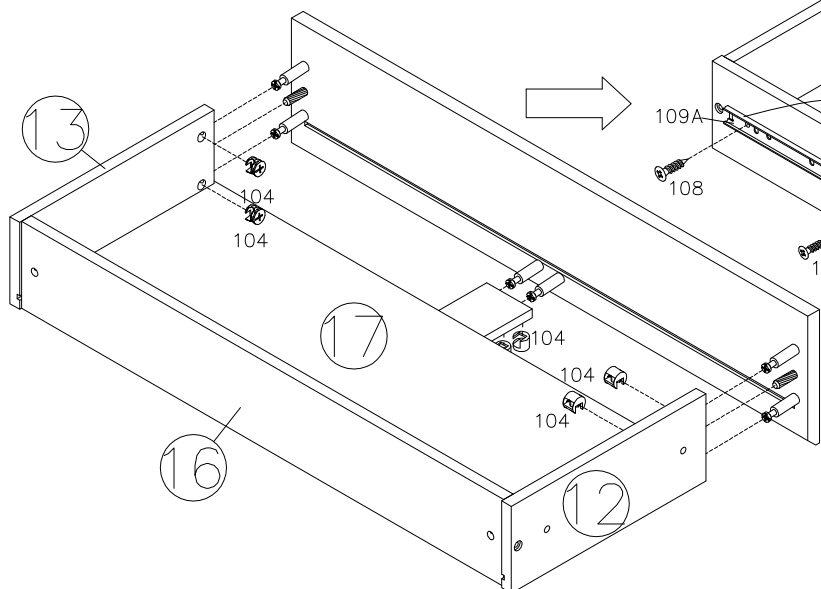

17

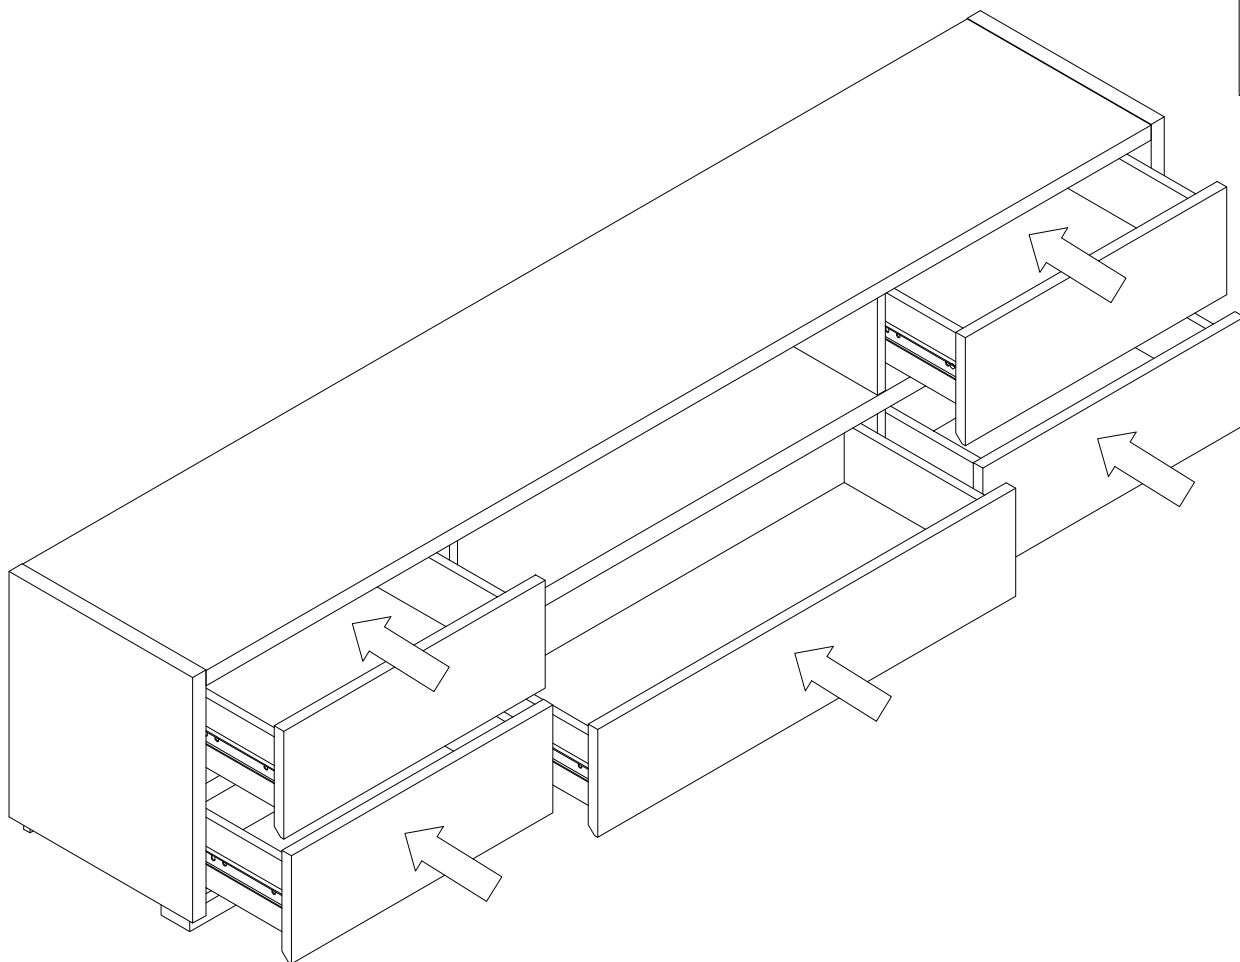

18

