



ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

ITEM NO/NO ARTICLE: BUFFET/Buffer/desserte
192607 192608 192609

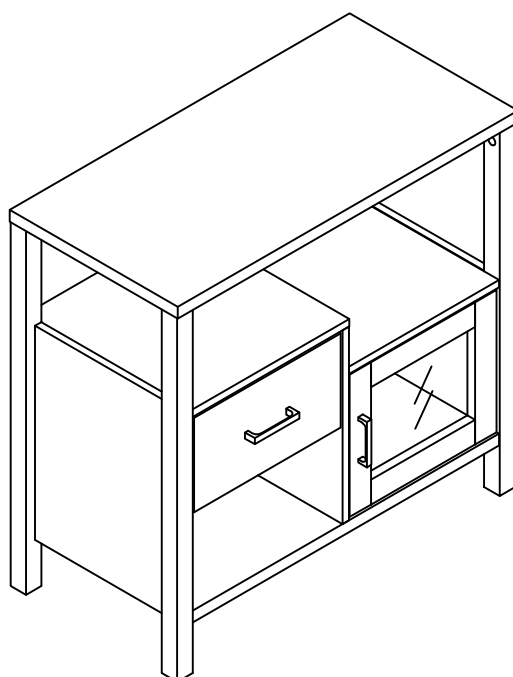

PARTS IDENTIFICATIONS / IDENTIFICATION DES PIECES







ITEM NO/NO ARTICLE: BUFFET/Buffer/desserte
192607 192608 192609

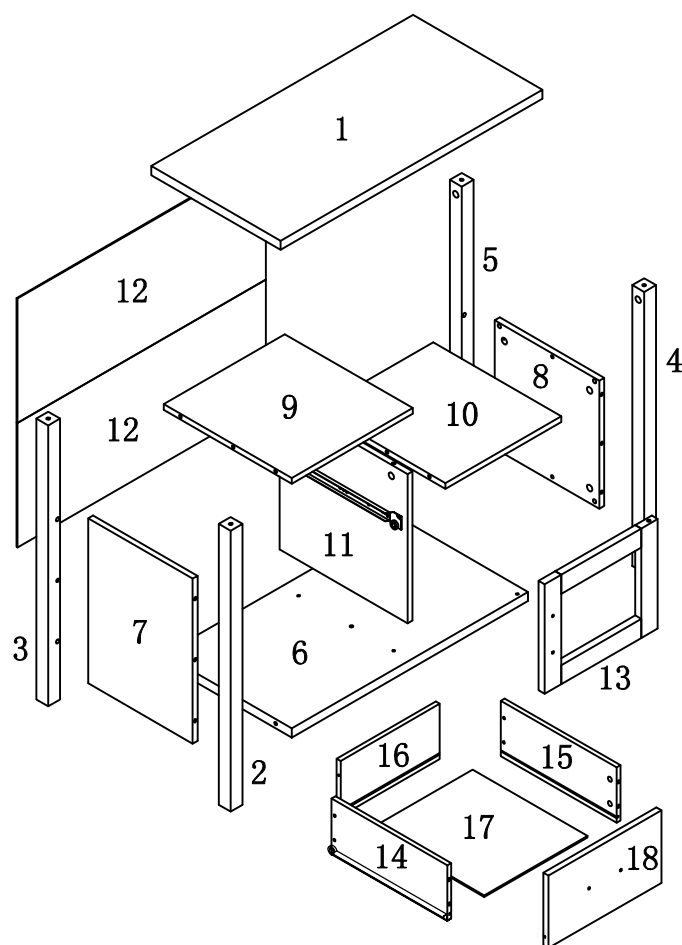


(1)	1pc	(7)	1pc	(13)	1pc
(2)	1pc	(8)	1pc	(14)	1pc
(3)	1pc	(9)	1pc	(15)	1pc
(4)	1pc	(10)	1pc	(16)	1pc
(5)	1pc	(11)	1pc	(17)	1pc
(6)	1pc	(12)	2pcs	(18)	1pc

HARDWARE IDENTIFICATIONS/ IDENTIFICATION DU KIT D'ASSEMBLAGE

ITEM NO/NO ARTICLE: BUFFET/Buffer/desserte
192607 192608 192609


A		L29	24pcs
B		ø15	24pcs
C		L20	4pcs
D		ø12	4pcs
E		ø8x25	11pcs
F		ø3 x 14	2pcs
G		ø3 x 16	2pcs
H		ø4x30	4pcs
I		ø4x50	2pcs
J			1pc
K			1pc
L			1pc
M		ø22	14pcs
N		ø16	4pcs
O			34pcs
P			2pcs
Q		M4x22	4pcs
R		197x5x1	1pc
S		ø4x25	1pc
T		ø5x40	1pc
U		ø8 x 40	1pc
V		12x12x1	2pcs
W		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

ITEM NO/NO ARTICLE: BUFFET/Buffet/desserte
192607 192608 192609

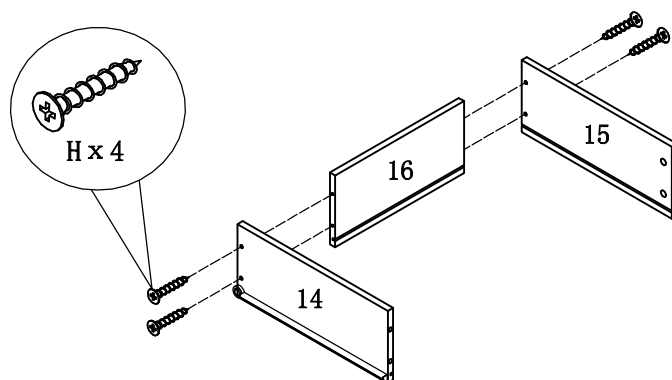


STEP 1 / ETAPE 1

STEP 2 / ETAPE 2

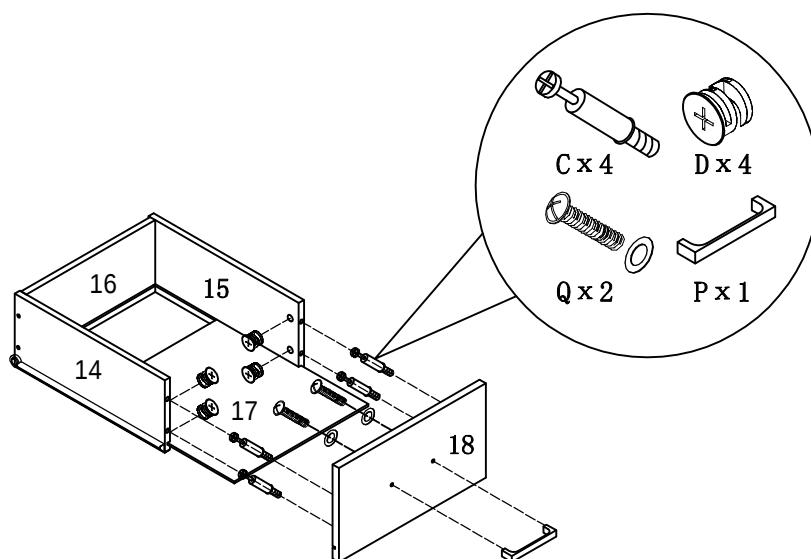


ITEM NO/NO ARTICLE: BUFFET/Buffer/desserte
192607 192608 192609

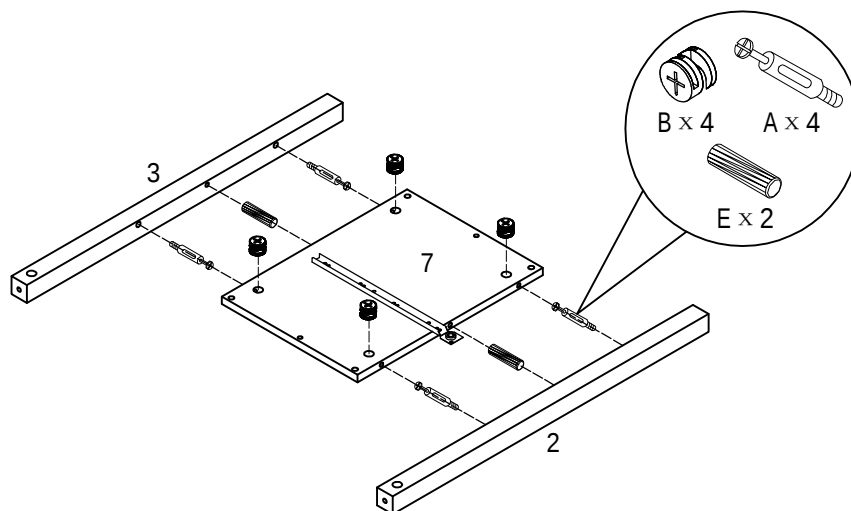


STEP 3 / ETAPE 3

STEP 4 / ETAPE 4

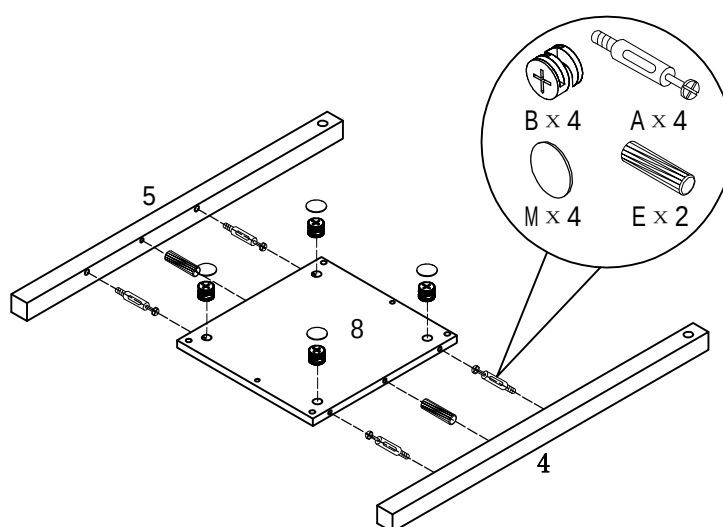


ITEM NO/NO ARTICLE: BUFFET/Buffet/desserte
192607 192608 192609

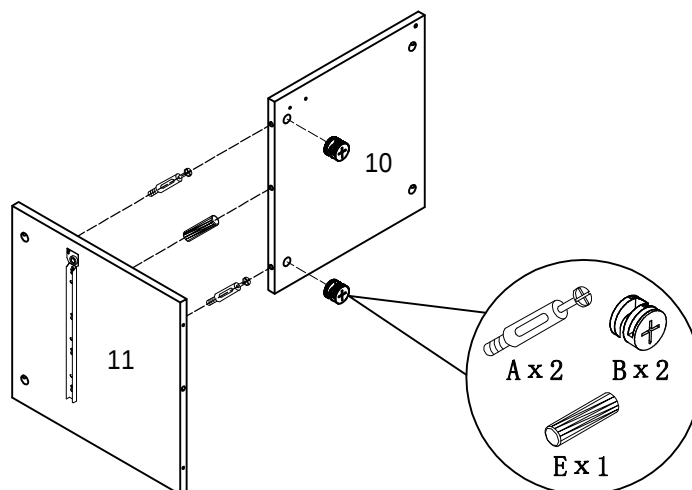


STEP 5 / ETAPE 5

STEP 6 / ETAPE 6

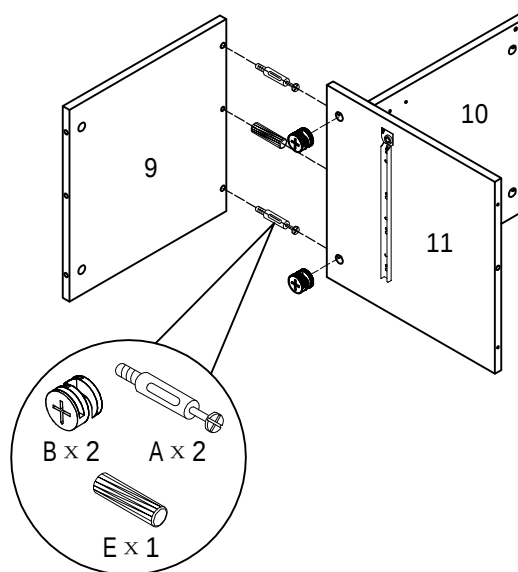



ITEM NO/NO ARTICLE: BUFFET/Buffet/desserte
192607 192608 192609

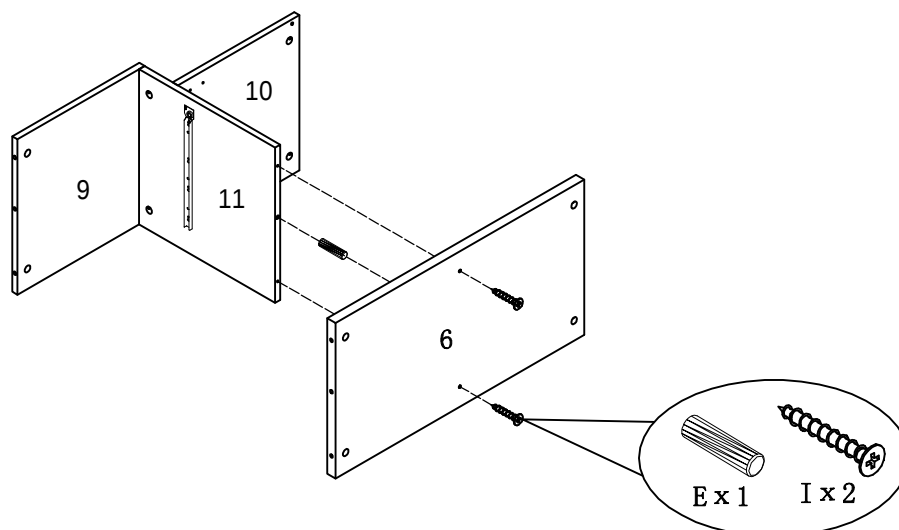


STEP 7 / ETAPE 7

STEP 8 / ETAPE 8

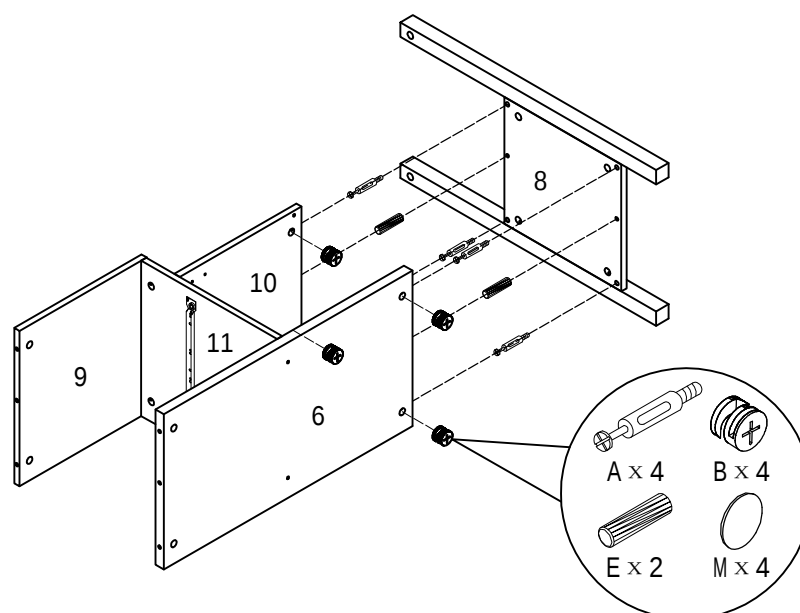




ITEM NO/NO ARTICLE: BUFFET/Buffet/desserte
192607 192608 192609

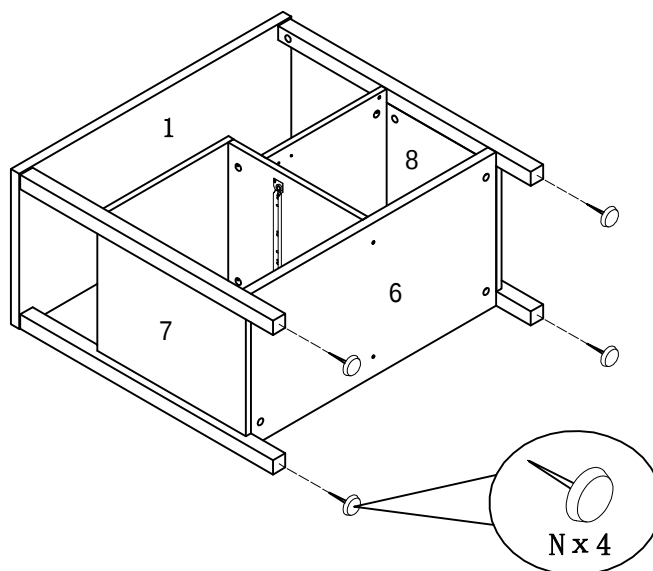


STEP 11 / ETAPE 11

STEP 12 / ETAPE 12

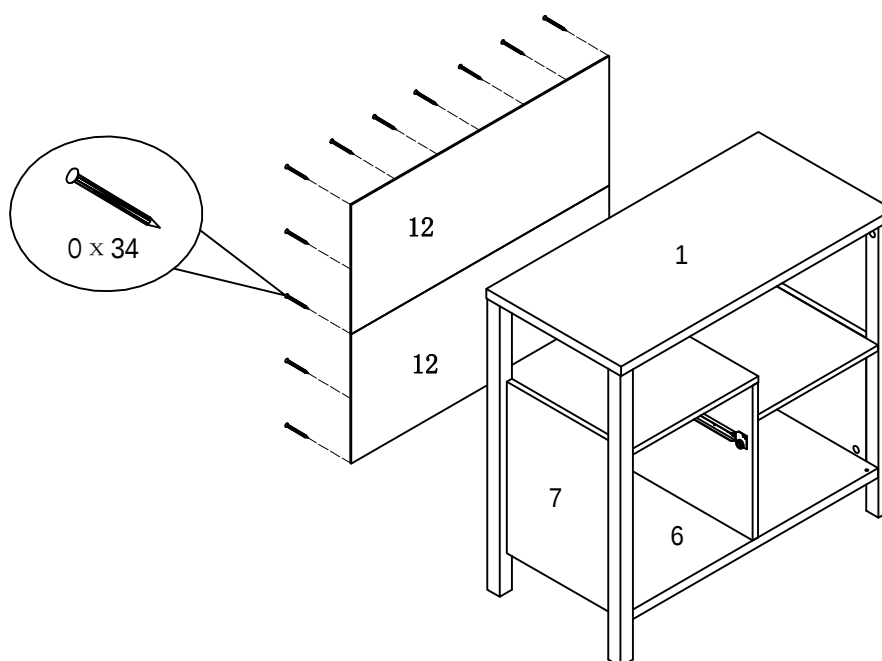


ITEM NO/NO ARTICLE: BUFFET/Buffet/desserte
192607 192608 192609


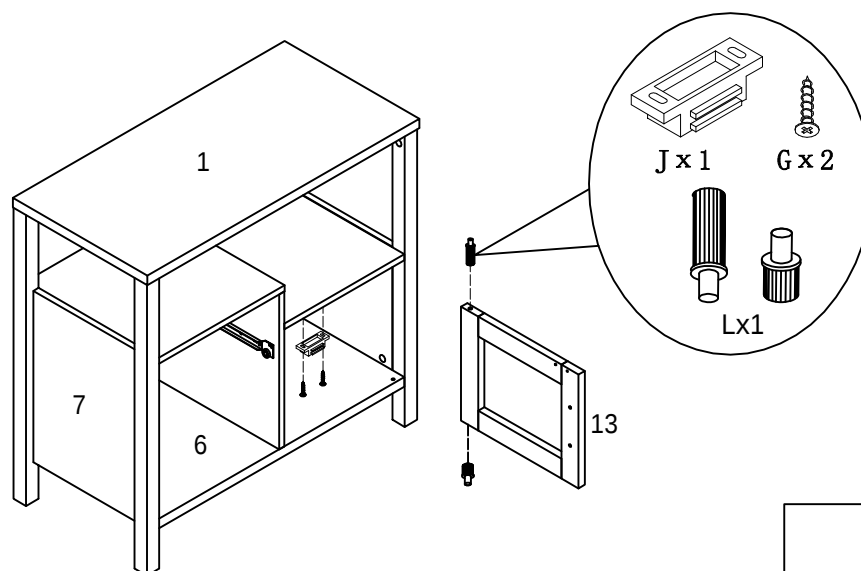


STEP 13 / ETAPE 13

STEP 14 / ETAPE 14

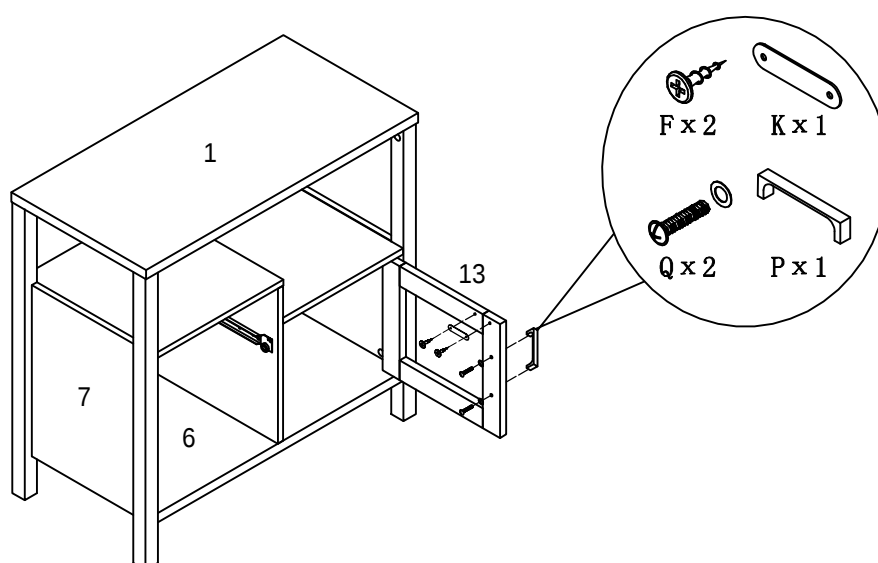


ITEM NO/NO ARTICLE: BUFFET/Buffet/desserte
192607 192608 192609

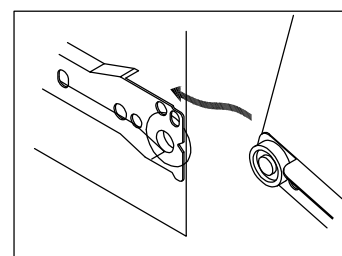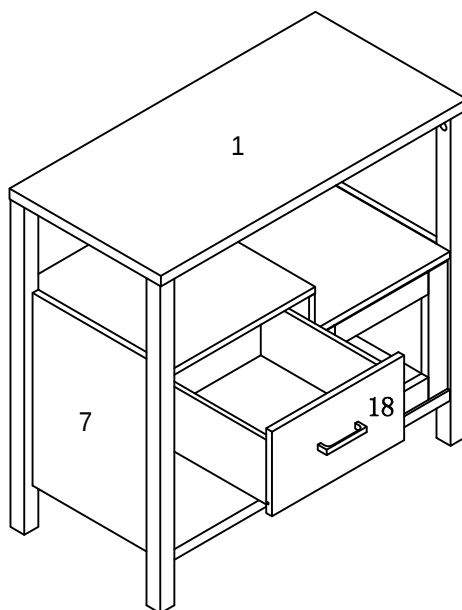

STEP 15 / ETAPE 15

STEP 16 / ETAPE 16

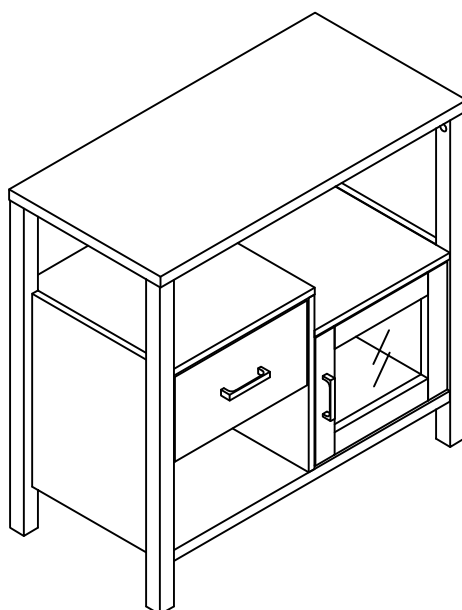


ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :


TOOLS NEEDED (NOT INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS




DRYWALL SCREW $\phi 5 \times 40$ X 1PC



STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC




DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1 / ETAPE 1

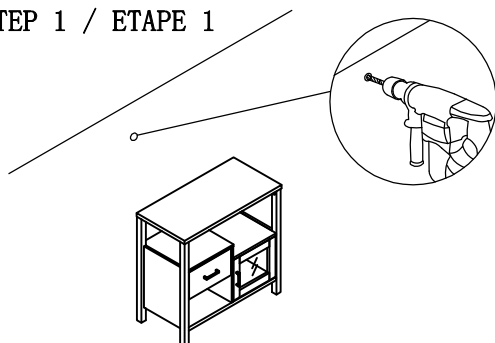


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2 / ETAPE 2

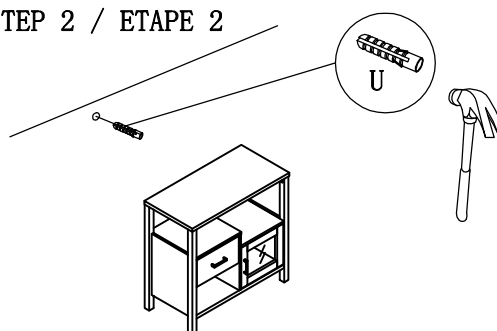


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3 / ETAPE 3

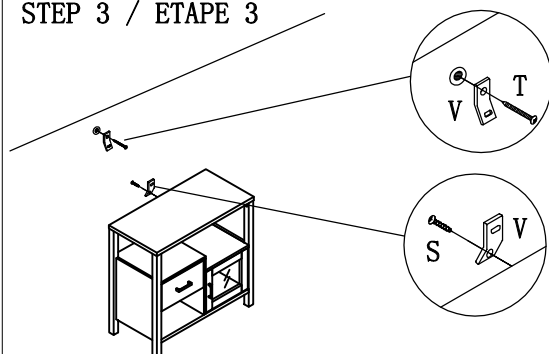

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4 / ETAPE 4

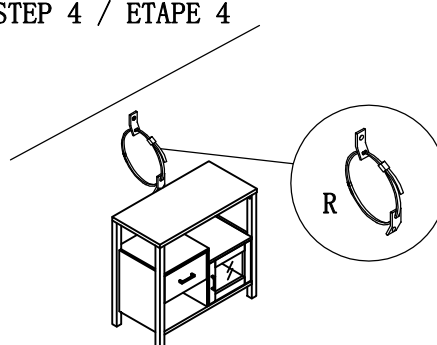

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.