

ASSEMBLY INSTRUCTIONS


MODEL NO : 860-003 (2-Door 2-Drawer Wardrobe*Oak&White)

Before you begin, please follow Assembly Instruction carefully.
Please follow them step by step.


A)  plastic dowel 36 pcs	B)  jcbc m6x40mm 14 pcs	C)  jcbc m4x50mm 4 pcs	D)  m4 x 5/8" 77 pcs	E)  minifix 4 sets	F)  (15 mm) minifix cover 4 pcs	G)  L key 1 pc	H)  'U' holder 2 pcs	I)  leg stud 4 pcs	J)  J1 J2 handle 4 sets	K)  (6mm) wood dowel 8 pcs	L)  L1 L2 stud 6 sets	M)  stopper 1 pc
---	---	--	--	--	--	--	--	---	---	---	---	--

N)  N1 N2 N3 N4 N5 Lock (S) 1 set	O)  hinge 4/8" 6 pcs	P)  P1 P2 P3 P4 L bracket 2 sets
---	--	--


Q)  aluminium pipe 6 pcs	R)  PVC H-Profile 1 pc
---	--

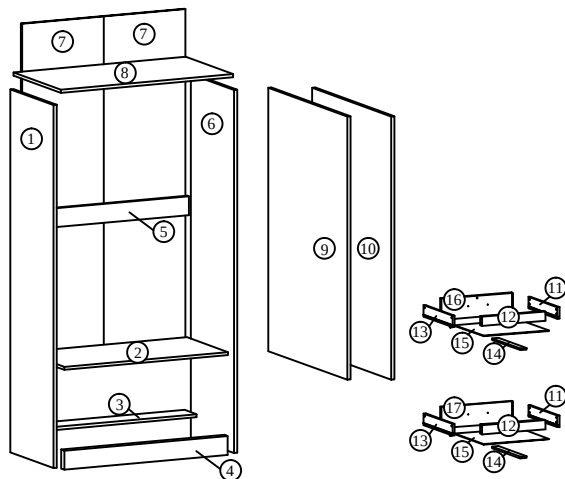


STEP 1

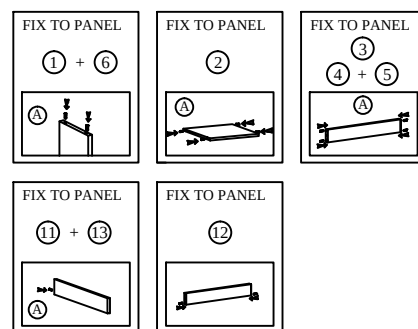


STEP 2

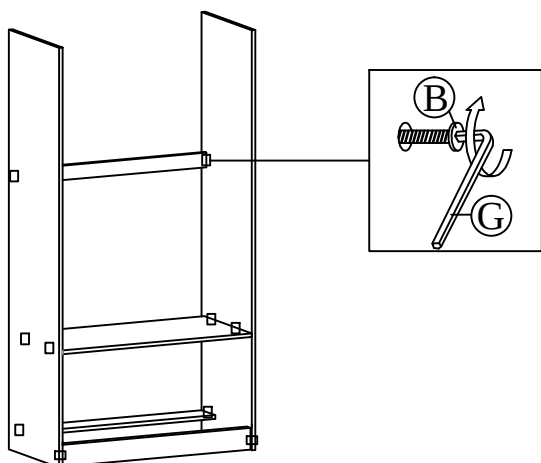


STEP 3

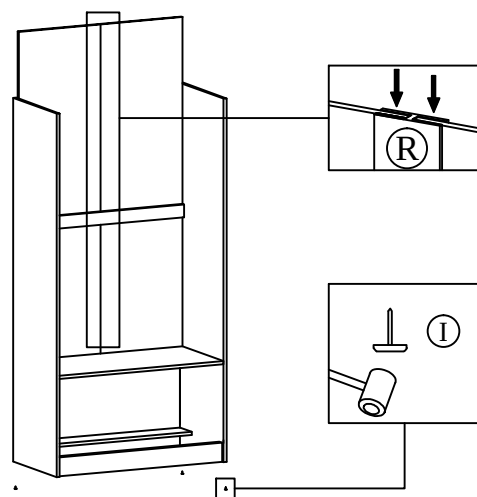

STEP 4

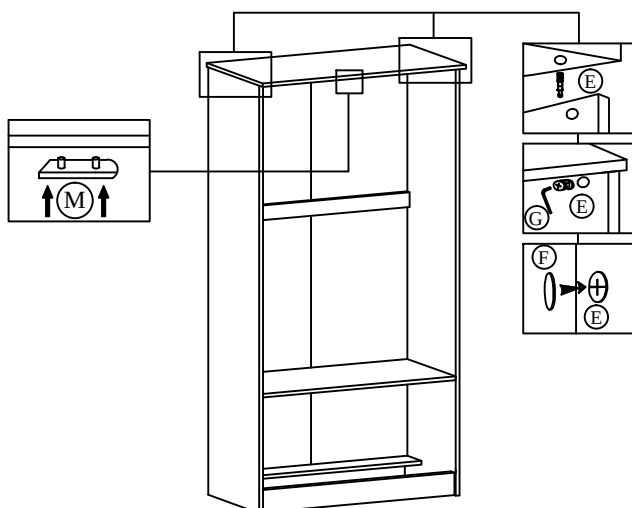

STEP 5

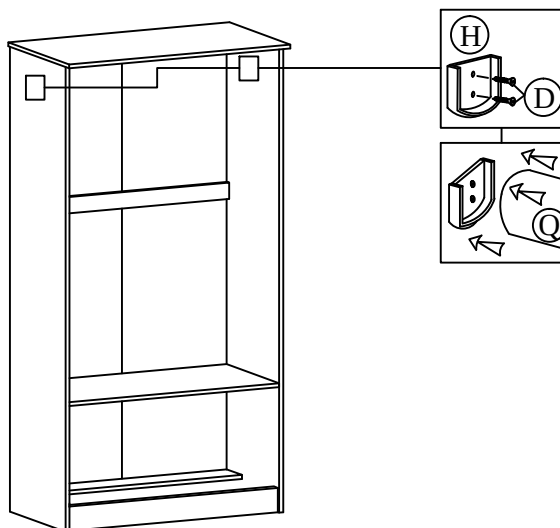


ASSEMBLY INSTRUCTIONS


MODEL NO : 860-003 (2-Door 2-Drawer Wardrobe*Oak&White)

Before you begin, please follow Assembly Instruction carefully.
Please follow them step by step.


STEP 6

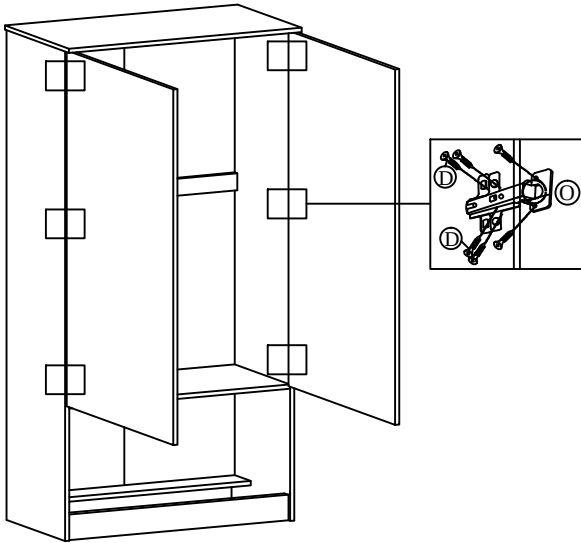


STEP 7

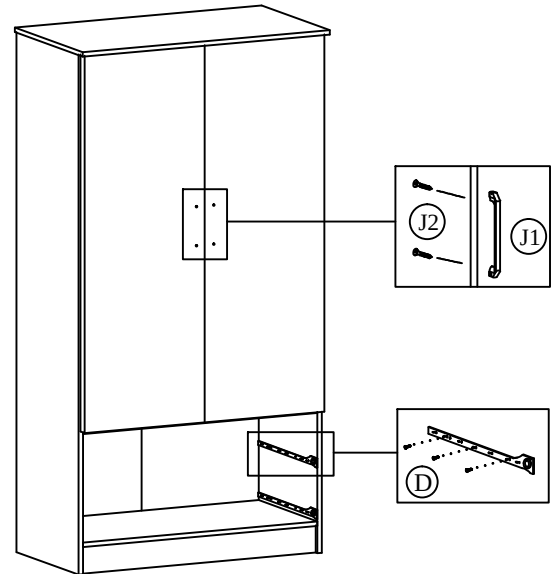


STEP 8

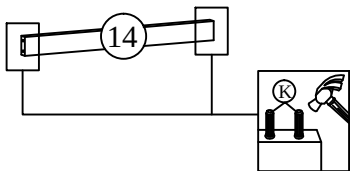


STEP 10

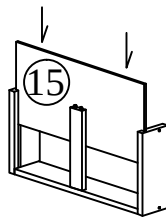


STEP 12

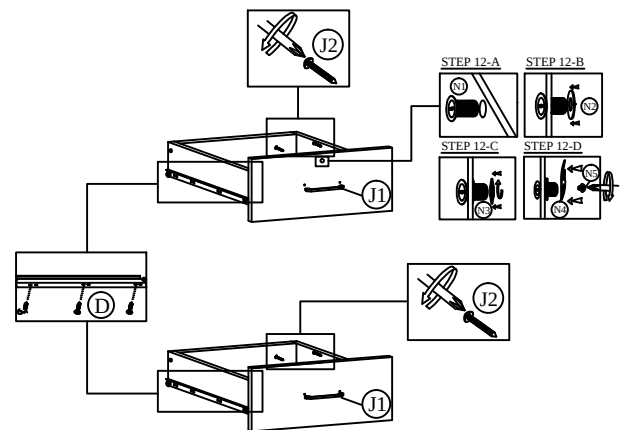


STEP 9

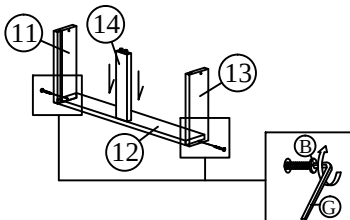



STEP 11

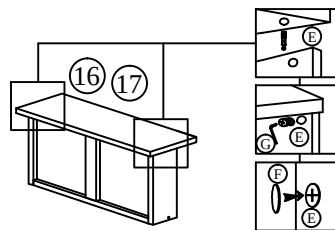

STEP 13

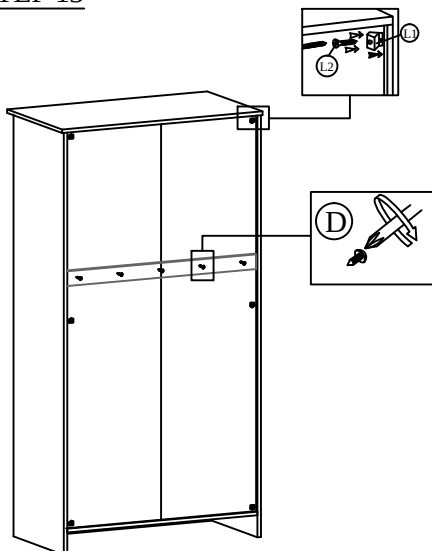

STEP 14

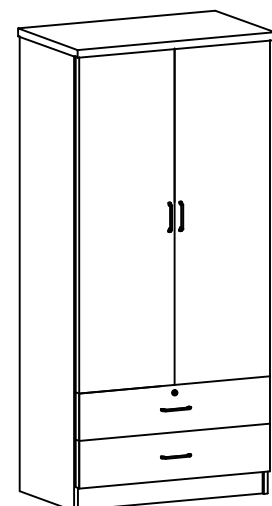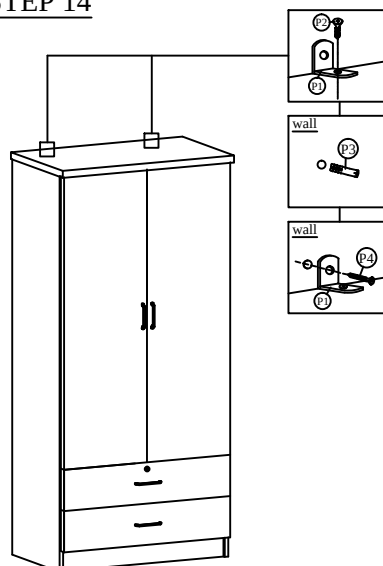

Complete