


ASSEMBLY INSTRUCTIONS


MODEL NO : 860-006

(Wardrobe System 2-Door Main Cabinet*Oak)


Before you begin, please follow Assembly Instruction carefully.
Please follow them step by step.

A)  plastic dowel 28 pcs	B)  jc bc m6x40mm 22 pcs	C)  jc bc m4x50mm 4 pcs	D)  m4 x 5/8" 58 pcs	E)  L key 1 pc	F)  'U' holder 2 pcs	G)  stopper 1 pc	H)  L bracket 2 pcs	I)  leg stud 6 pcs	J)  J1 J2 handle 2 sets	K)  K1 K2 stud 6 sets	L)  hinge 4/8" 6 pcs	M)  M1 M2 M3 M4 L bracket 6 pcs
--	---	--	--	--	--	--	---	---	---	---	--	---


N)  PVC H-Profile 1 pc	O)  aluminium pipe 1 pc
--	--

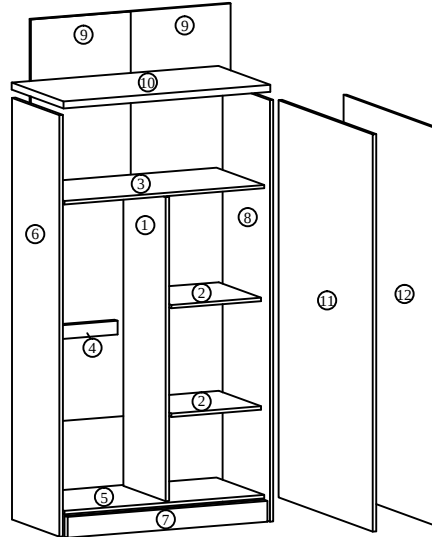


STEP 1

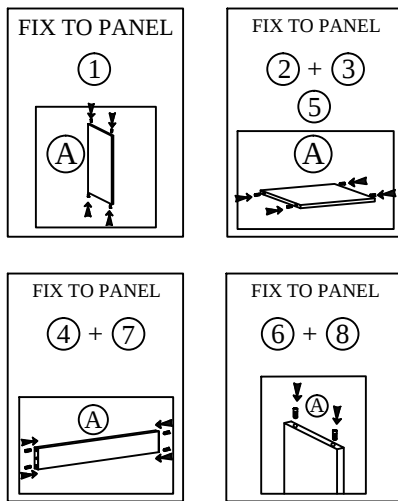


STEP 2

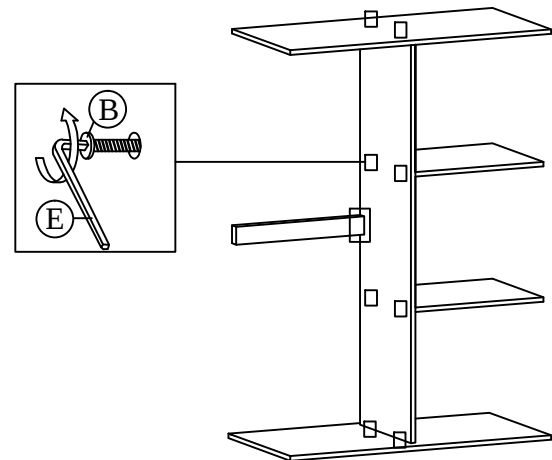

STEP 3

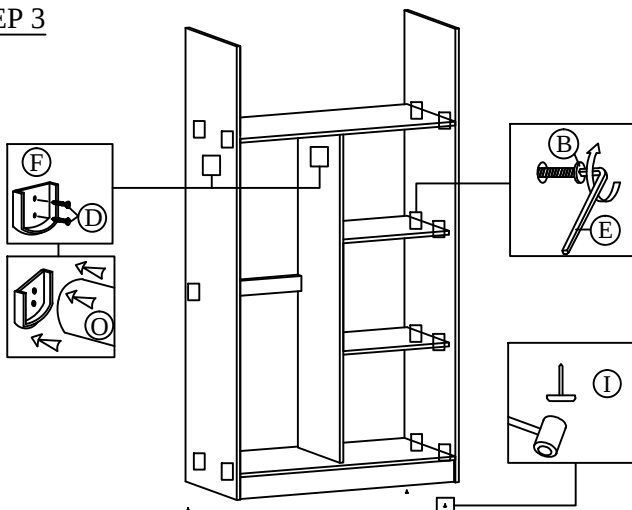

STEP 4

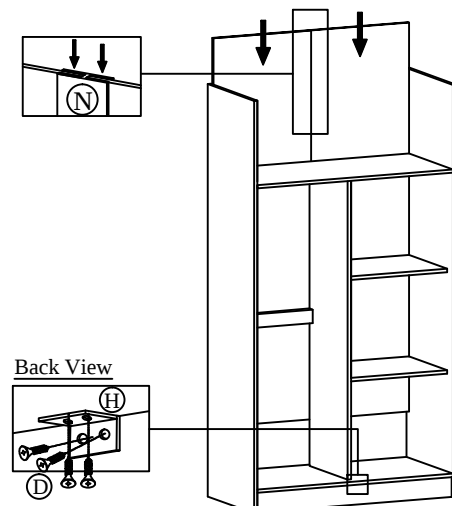


ASSEMBLY INSTRUCTIONS

MODEL NO : 860-006


(Wardrobe System 2-Door Main Cabinet*Oak)

Before you begin, please follow Assembly Instruction carefully.
Please follow them step by step.


STEP 5

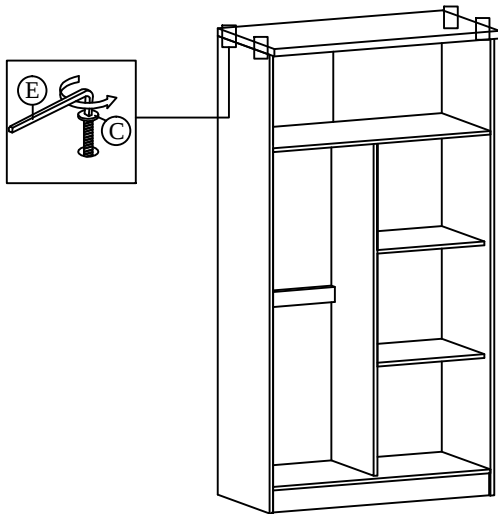


STEP 6

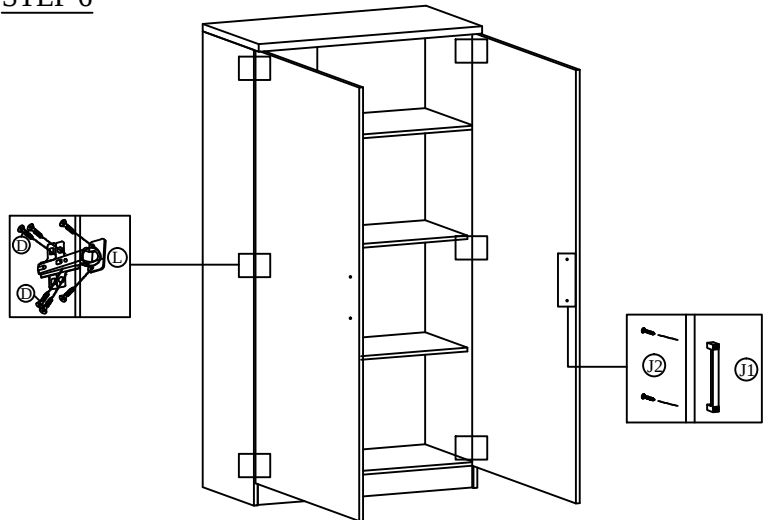



STEP 7

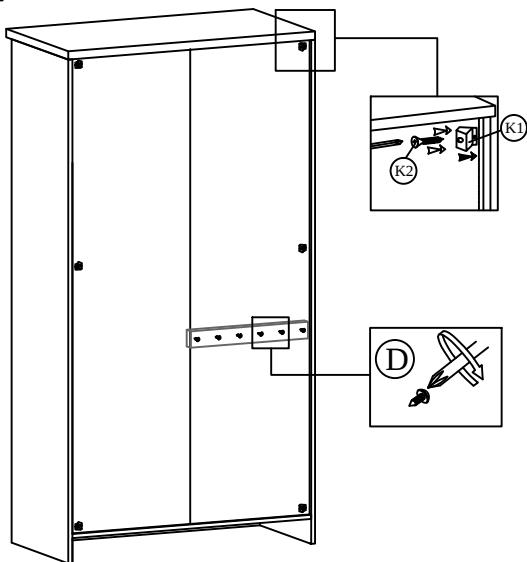

STEP 8

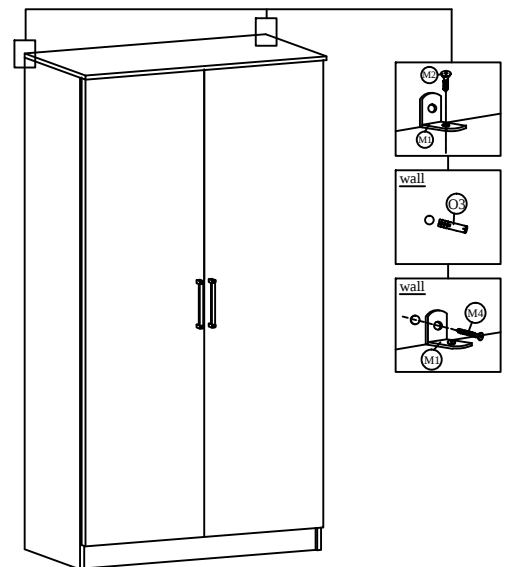

STEP 9

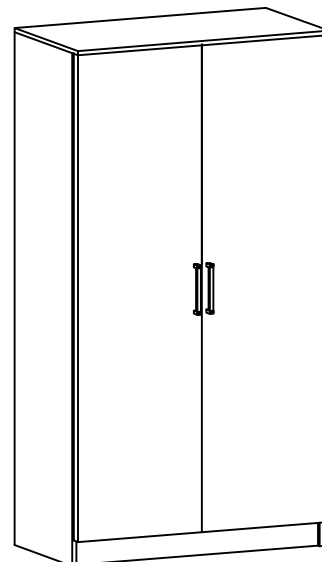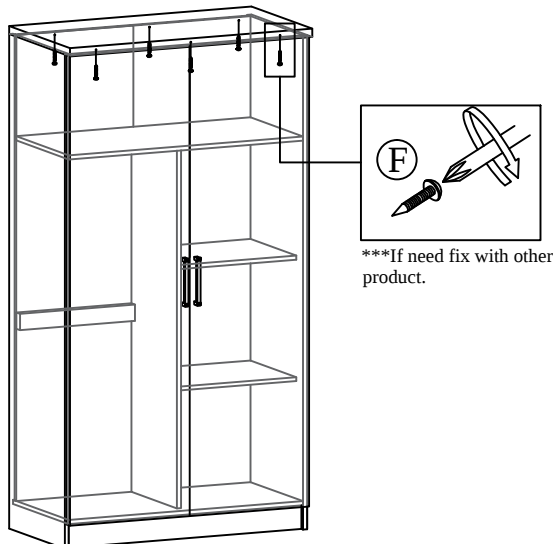

Complete