

ASSEMBLY INSTRUCTIONS



MODEL NO : 860-009

(Wardrobe System 2-Door Top Cabinet*Oak)


Before you begin, please follow Assembly Instruction carefully.
Please follow them step by step.

A)  plastic dowel 12 pcs	B)  jcbe m6x50mm 6 pcs	C)  jcbe m4x50mm 4 pcs	D)  m4 x 5/8" 24 pcs	E)  m4 x 28mm 4 pcs	F)  L key 1 pc	G)  stopper 1 pc	H)  handle 2 sets	I)  stud 4 sets	J)  hinge 4/8" 4 pcs	
---	--	--	--	---	--	--	---	---	--	--


STEP 1

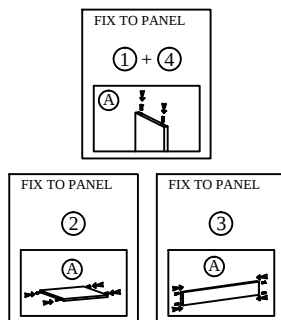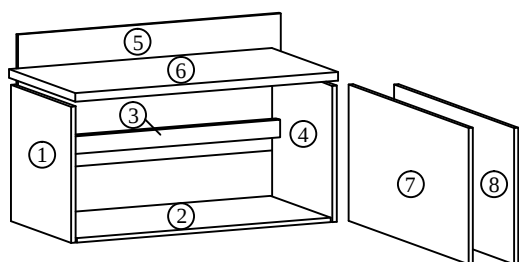


STEP 2

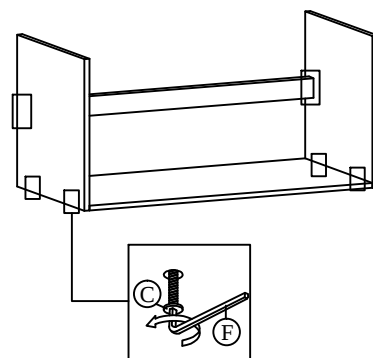


STEP 3

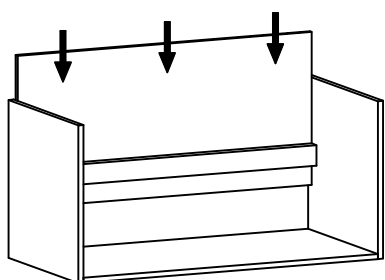


STEP 4

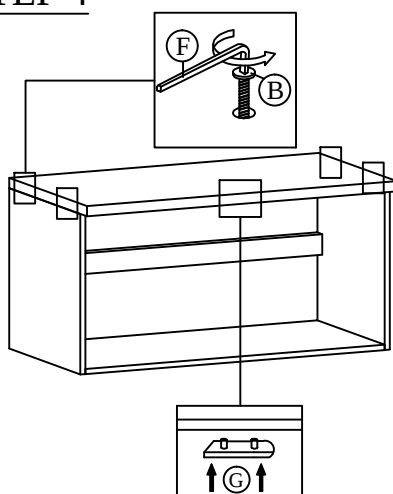


STEP 5

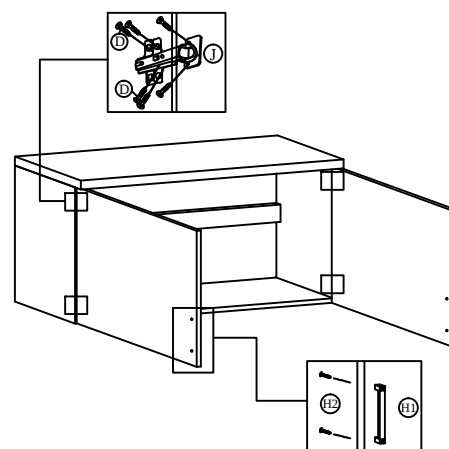


STEP 6

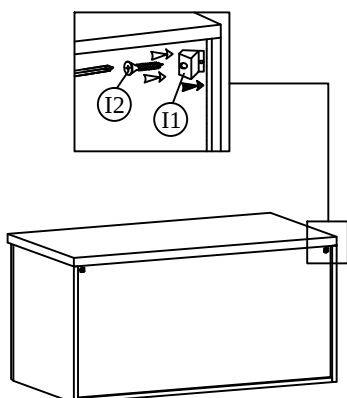

STEP 7

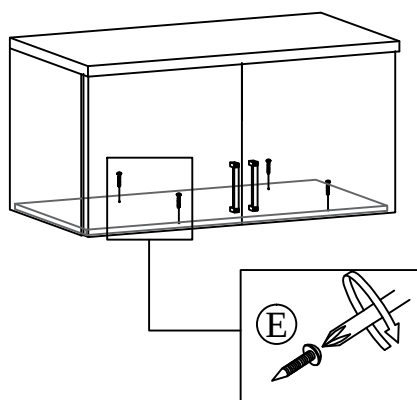

***If need fix with other product.

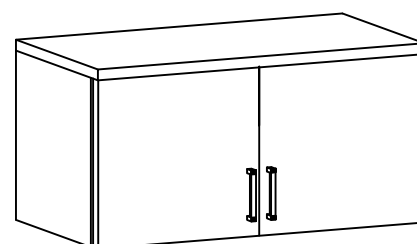

Complete