

ASSEMBLY INSTRUCTIONS

MODEL NO : 860-011

(Wardrobe System 4-Door Top Cabinet*Oak)


Before you begin, please follow Assembly Instruction carefully.
Please follow them step by step.

A)  plastic dowel 20 pcs	B)  jcbc m6x40mm 3 pcs	C)  jcbc m6x50mm 6 pcs	D)  jcbc m4x50mm 6 pcs	E)  m4 x 5/8" 48 pcs	F)  m4 x 28mm 6 pcs	G)  L key 1 pc	H)  stopper 2 pcs	I)  stud 8 sets	J)  handle 4 sets	K)  hinge 4/8" 6 pcs	L)  hinge 7/8" 2 pcs
--	---	---	---	--	---	--	---	---	---	--	--


M)

M1 M2


M3 M4
L bracket
2 sets

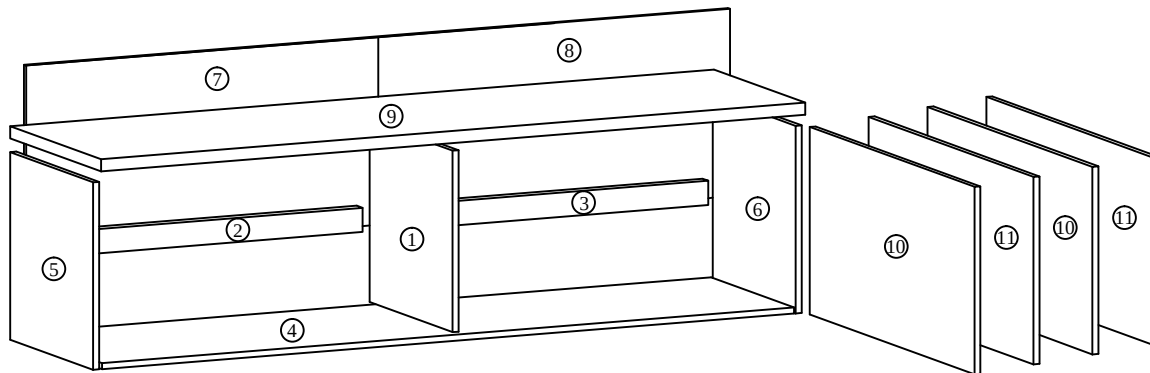


STEP 1

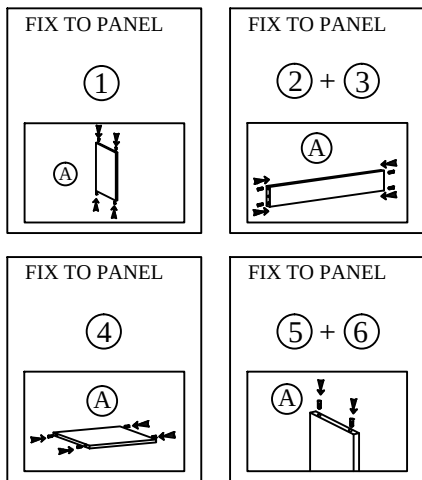


STEP 2

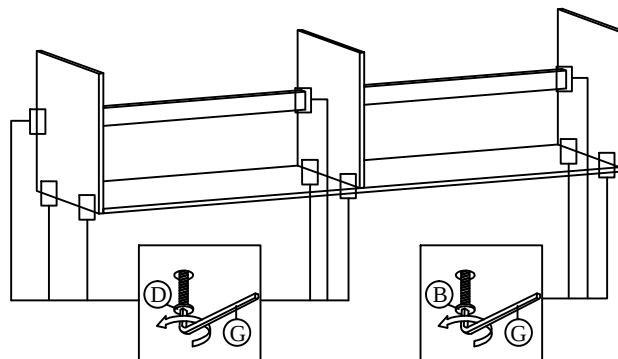

STEP 3

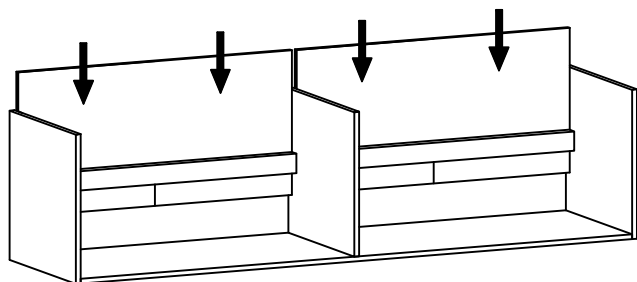

STEP 4

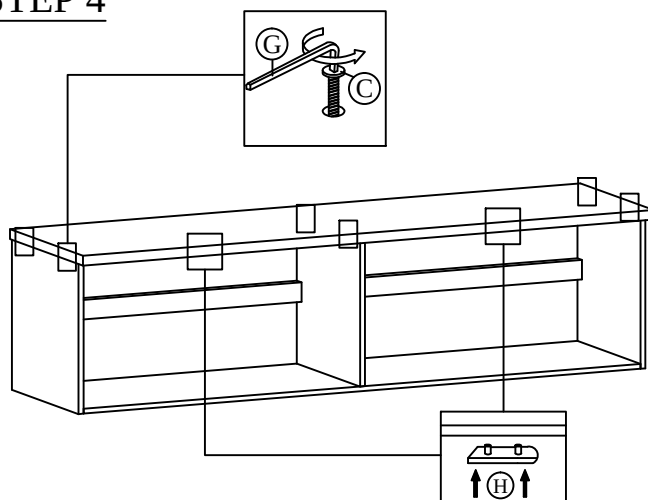


ASSEMBLY INSTRUCTIONS

MODEL NO : 860-011


(Wardrobe System 4-Door Top Cabinet*Oak)

Before you begin, please follow Assembly Instruction carefully.
Please follow them step by step.


STEP 5

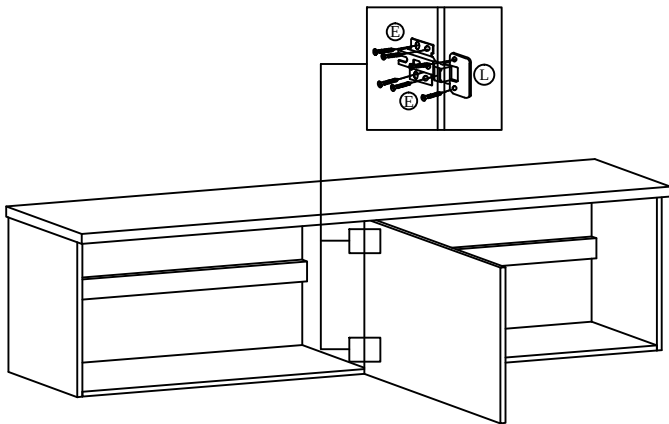


STEP 6

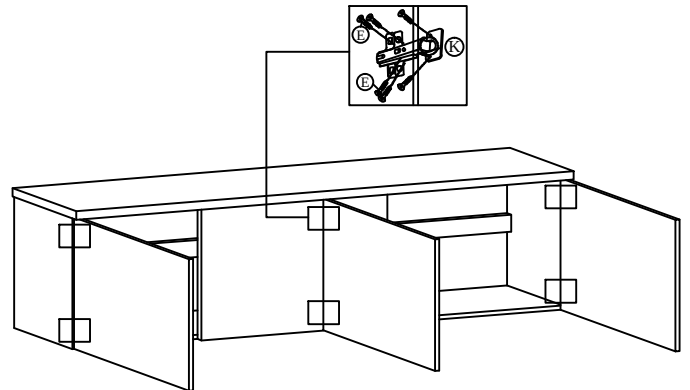



STEP 7

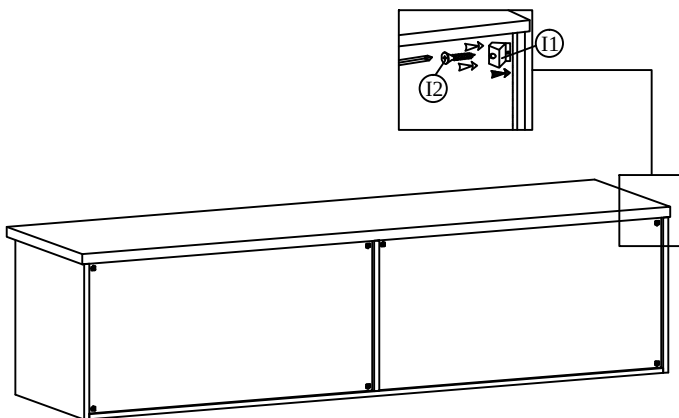

STEP 8

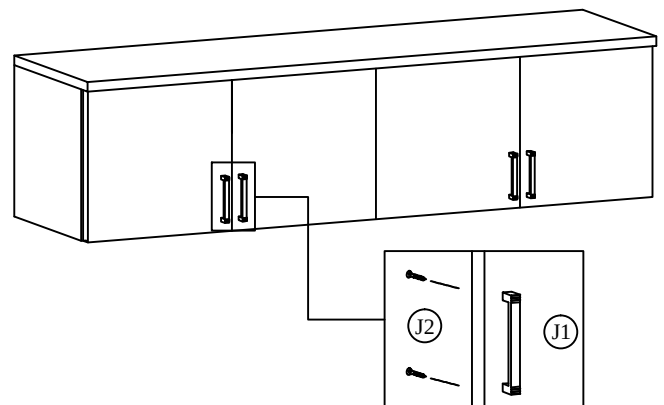

STEP 9

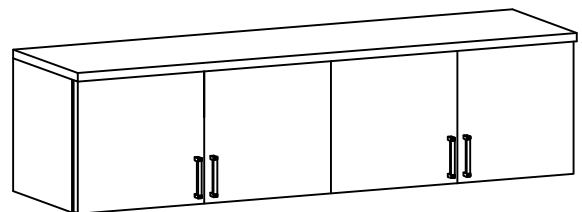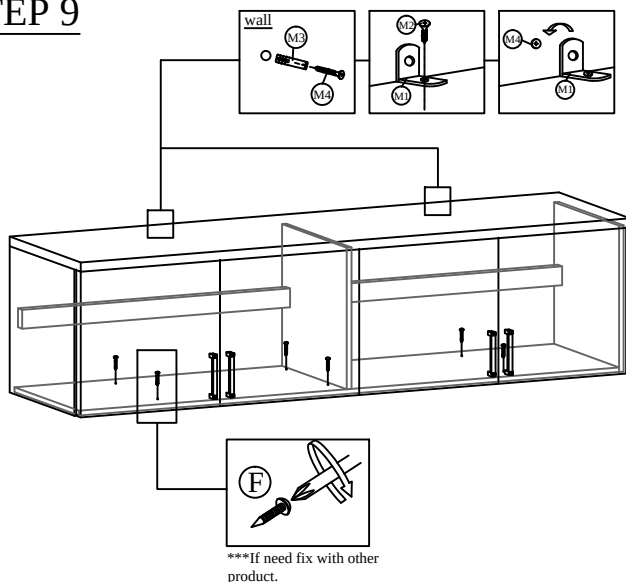

Complete