
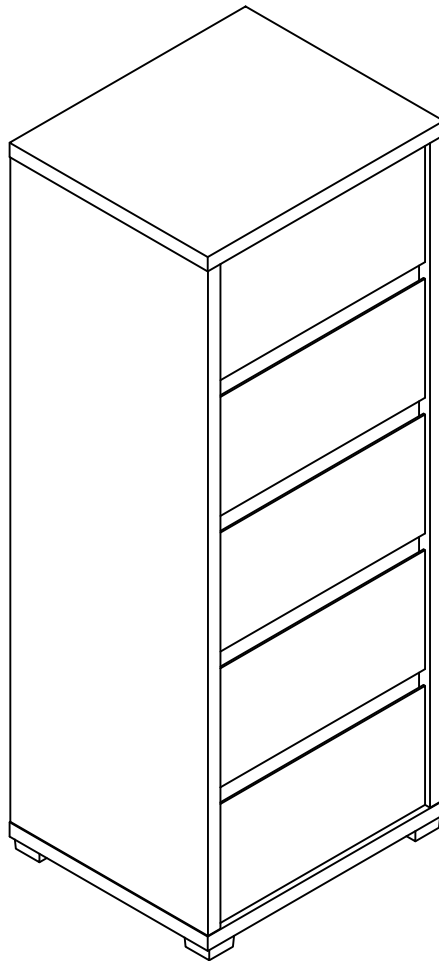
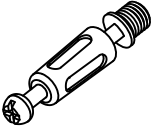

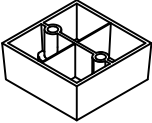










625-056 5-Drawer Slimboy*Oak

Assembly Instructions

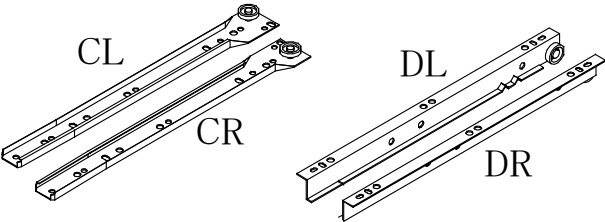



Assembly Instructions

Ø15x11  A x 40	Ø7.8x35  B x 40	Ø8x30  C x 16	Ø3.5x14  D x 40
50x50x21  E x 4	Ø4x40  F x 21	Ø4x30  G x 8	M7x48mm  H x 4
Ø4x16  I x 1	7.8x38  J x 1	4mm  K x 1	 L x 18
Ø3x16  M x 18	4mm  N x 2	62x40x18x1.2  O x 1	
14"  5sets			

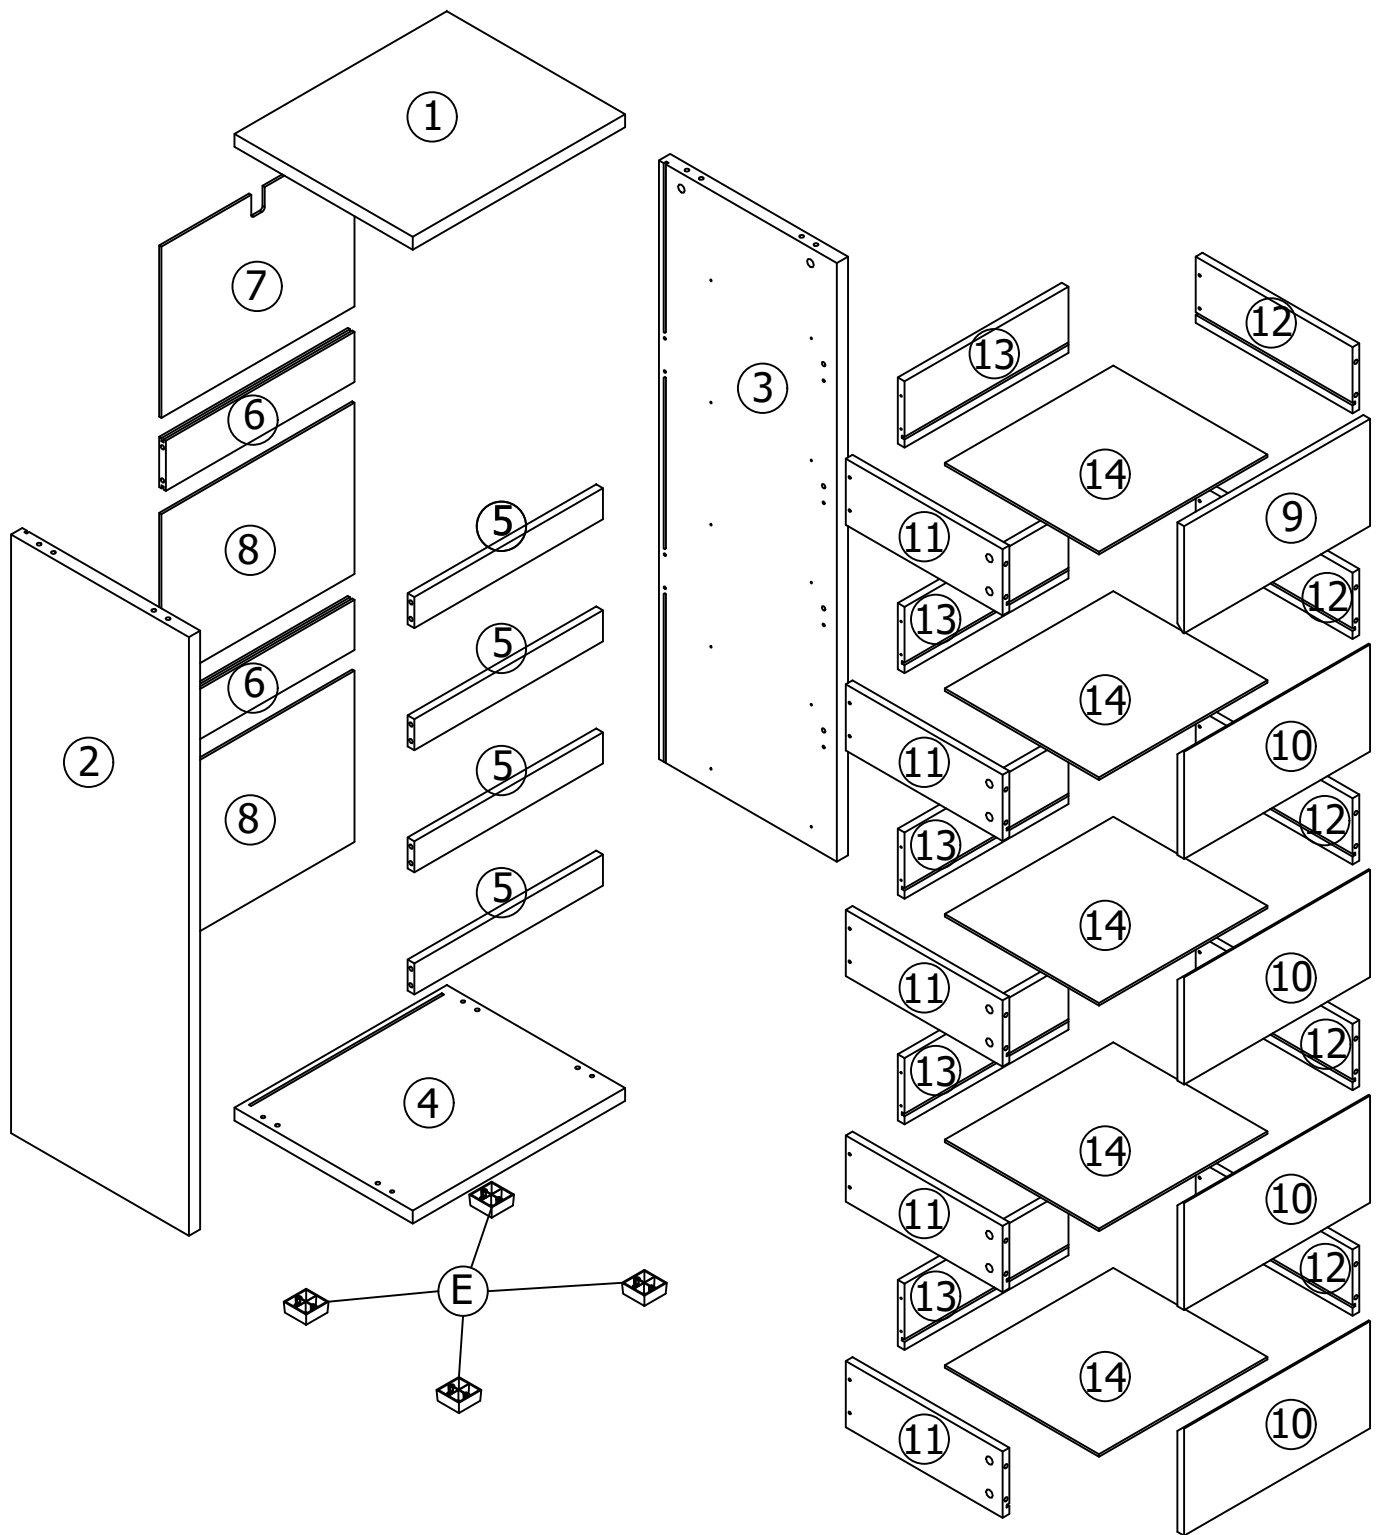


STEP 1

- D x 20
- CL x 5
- CR x 5


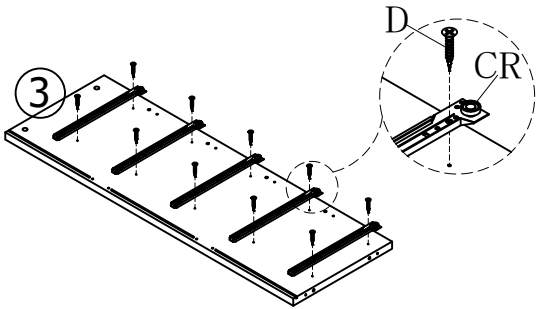


REMARK:
When installing, please make
sure the screws are flattened,
Not crooked; Otherwise the
drawers will not be installed
perfectly.

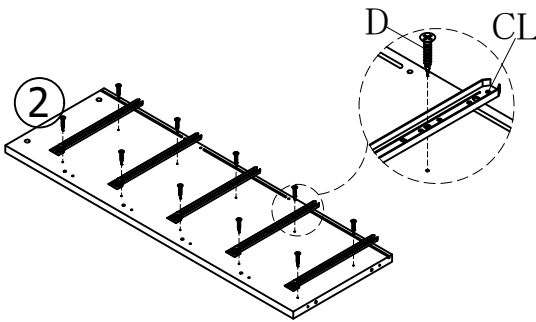


STEP 2

- A x 8
- B x 8
- C x 4

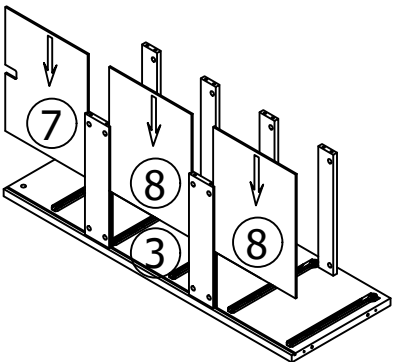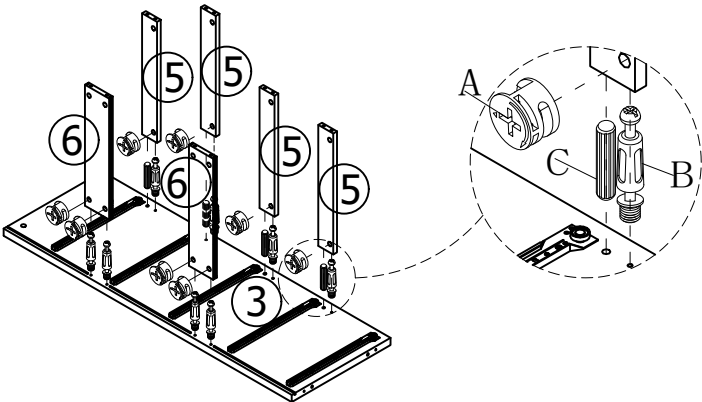


STEP 3

- A x 8
- B x 8
- C x 8
- H x 4
- K x 1

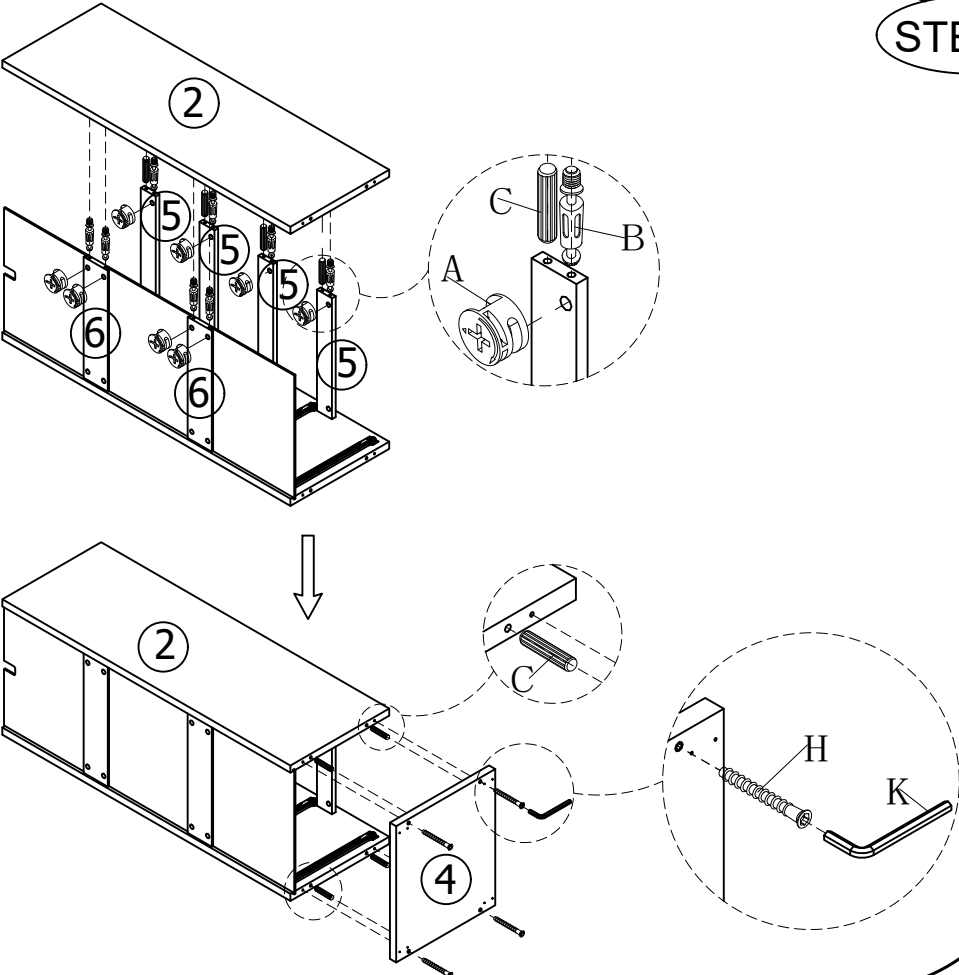


STEP 4

- E x 4
- G x 8
- I x 1
- N x 1
- O x 1

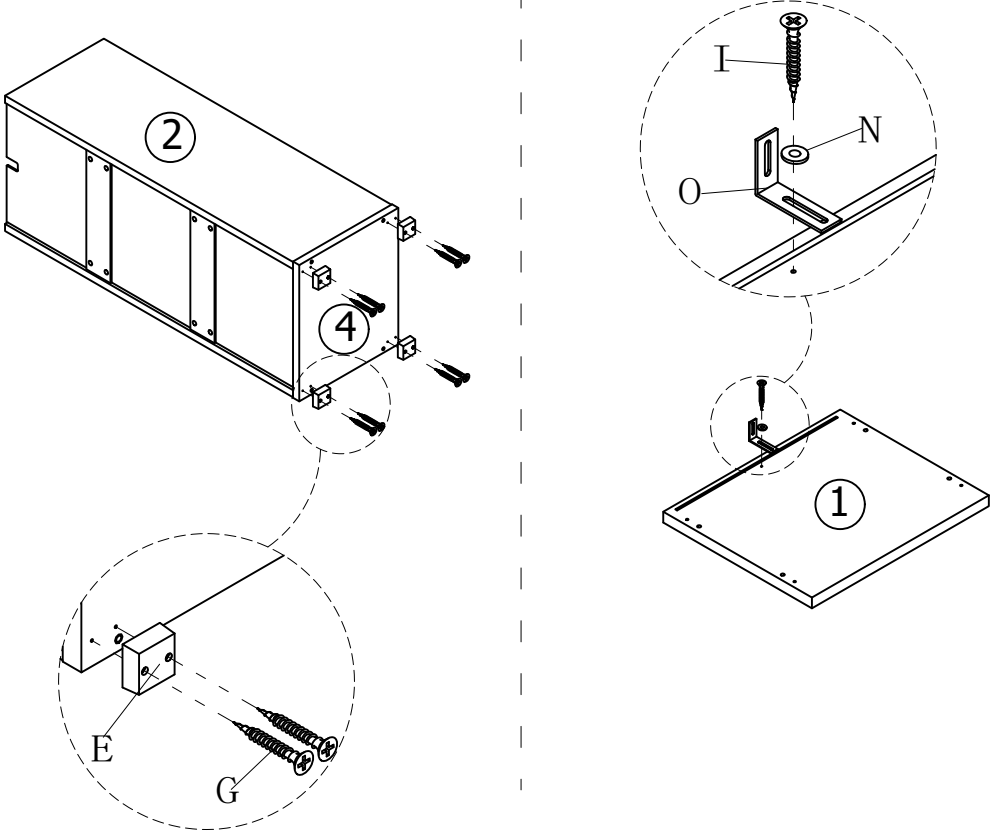


STEP 5

A	x	4
B	x	4
C	x	4
L	x	18
M	x	18

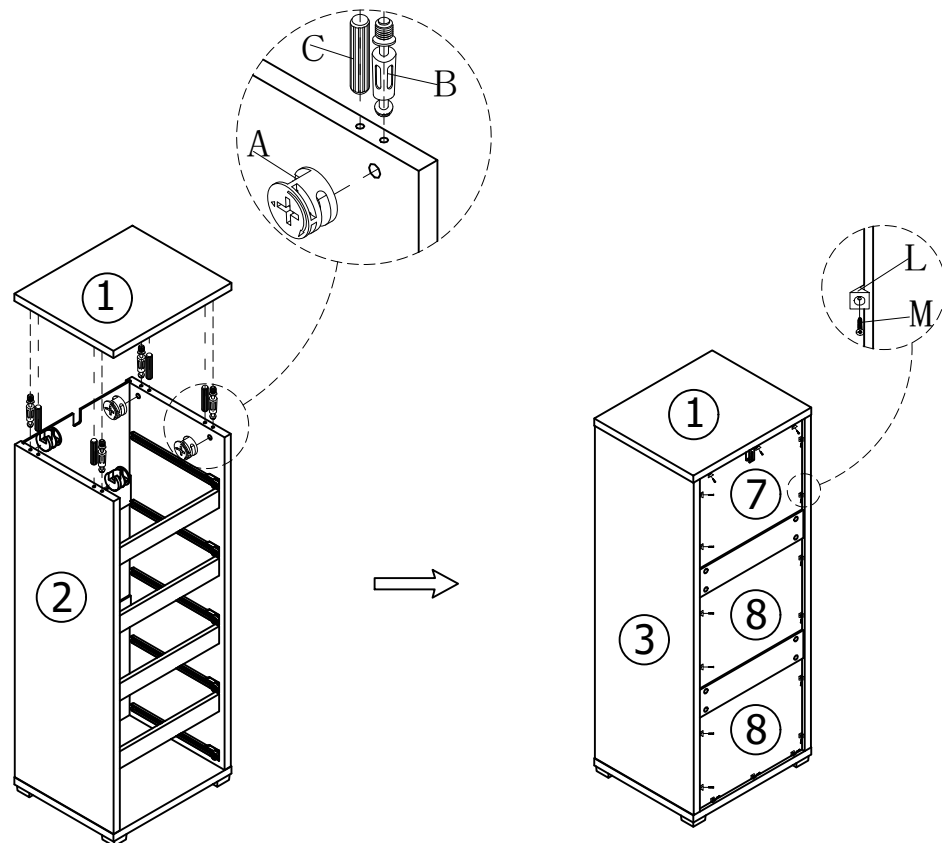



STEP 6

F	x	1
J	x	1
N	x	1

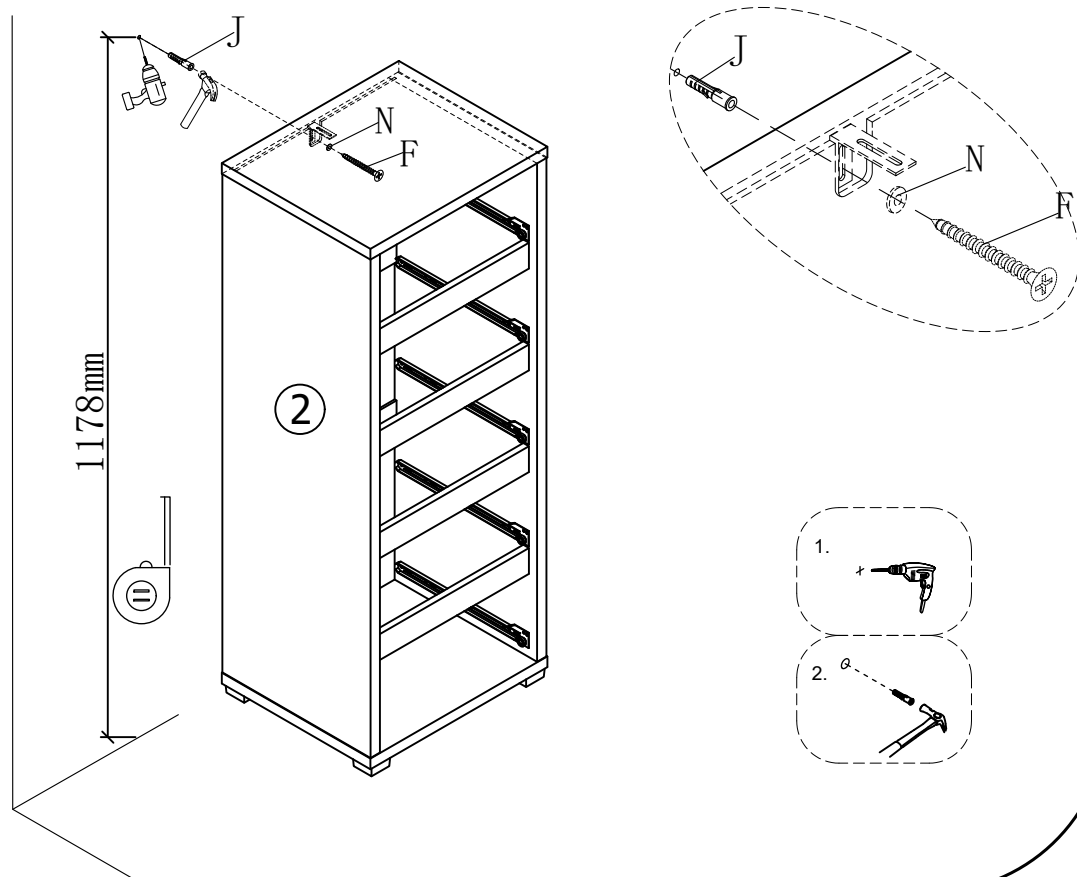



STEP 7

A x 20
B x 20

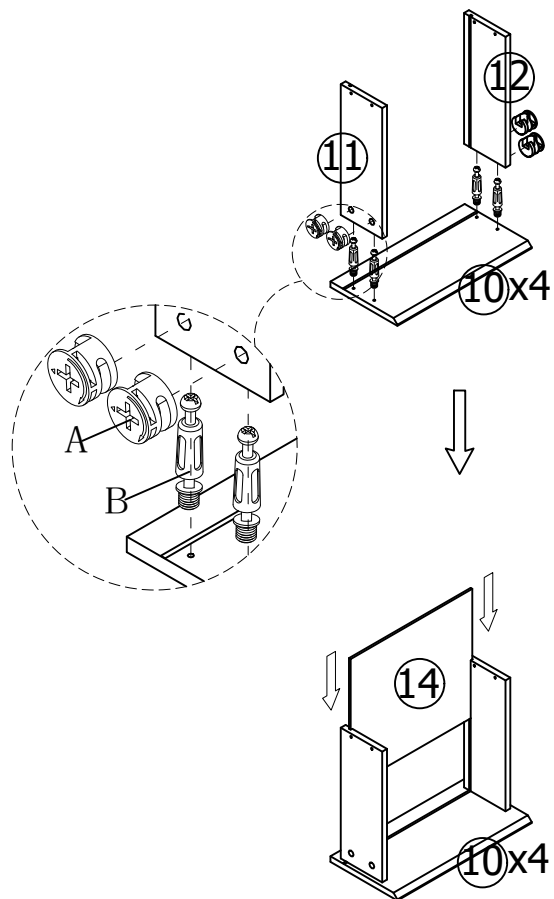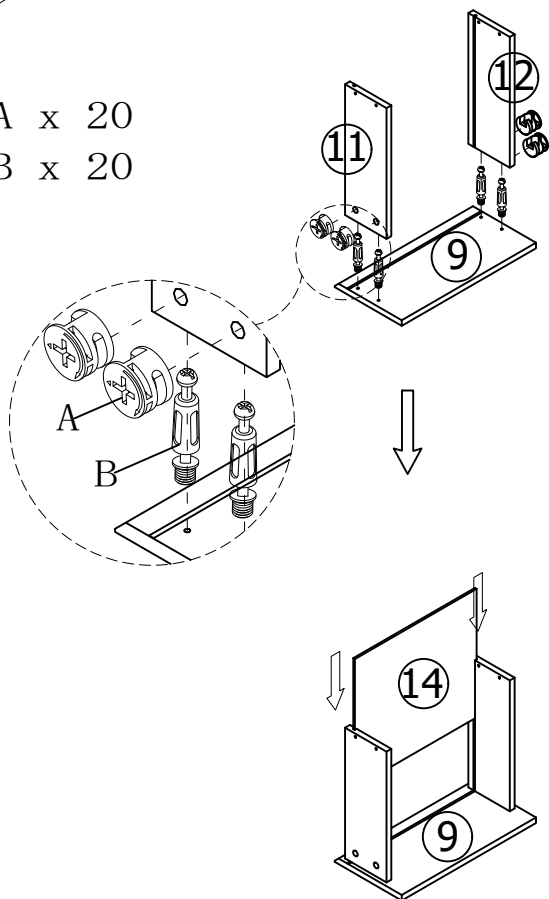


STEP 8


D x 20
F x 20
DL x 5
DR x 5

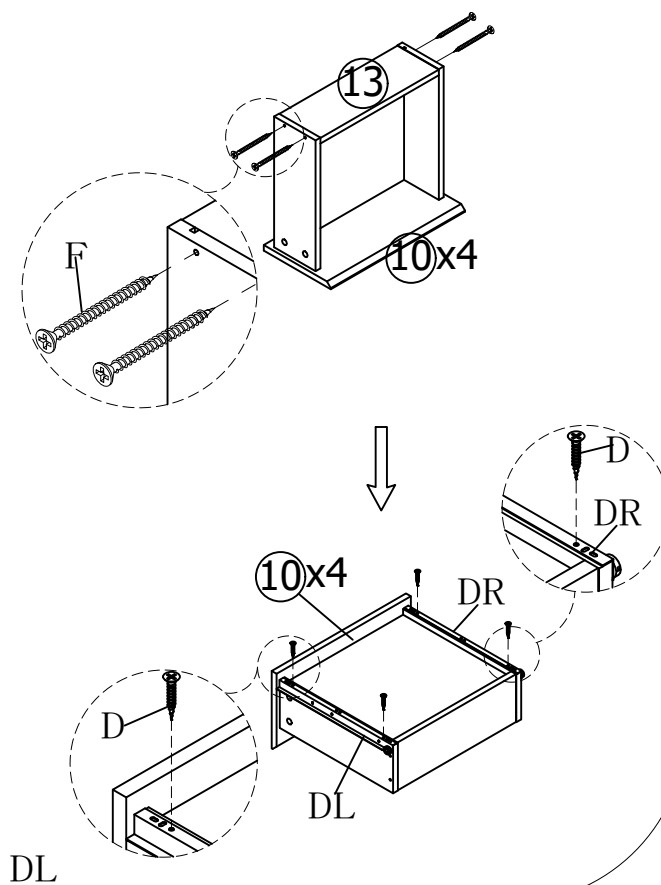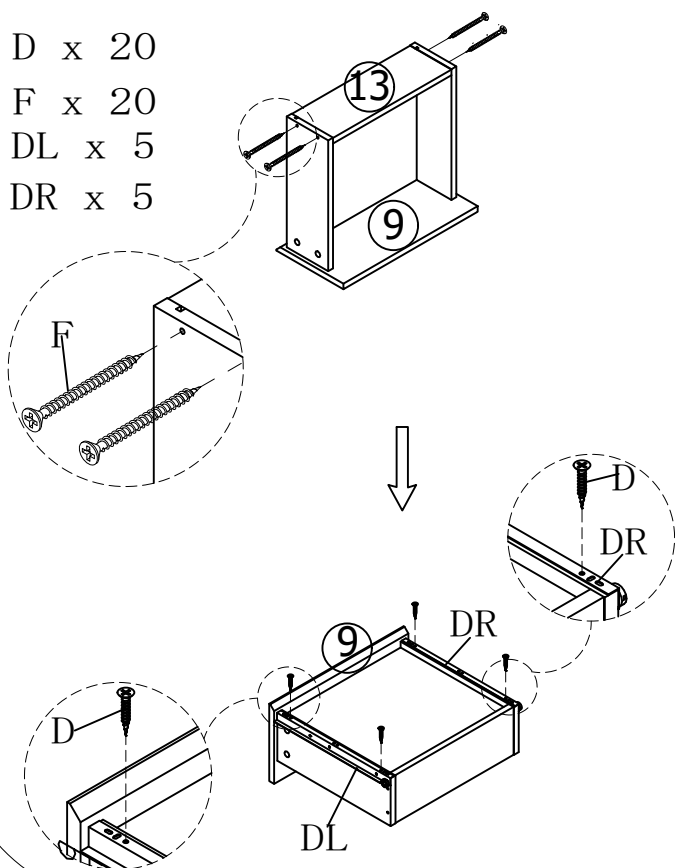

STEP 9

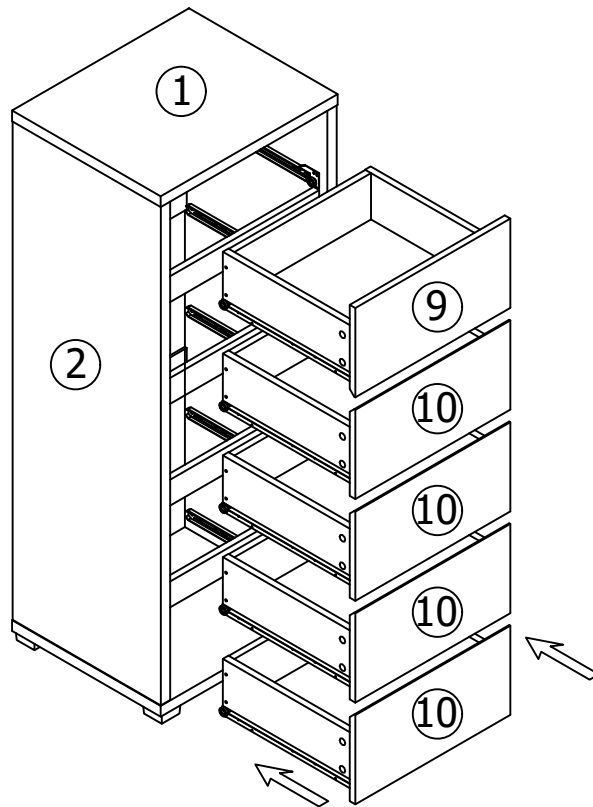

STEP 10

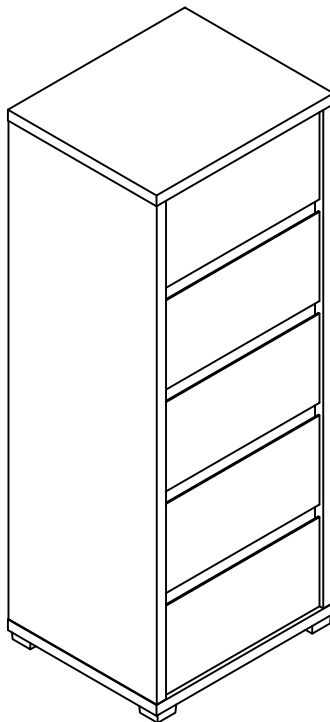

FINISH