
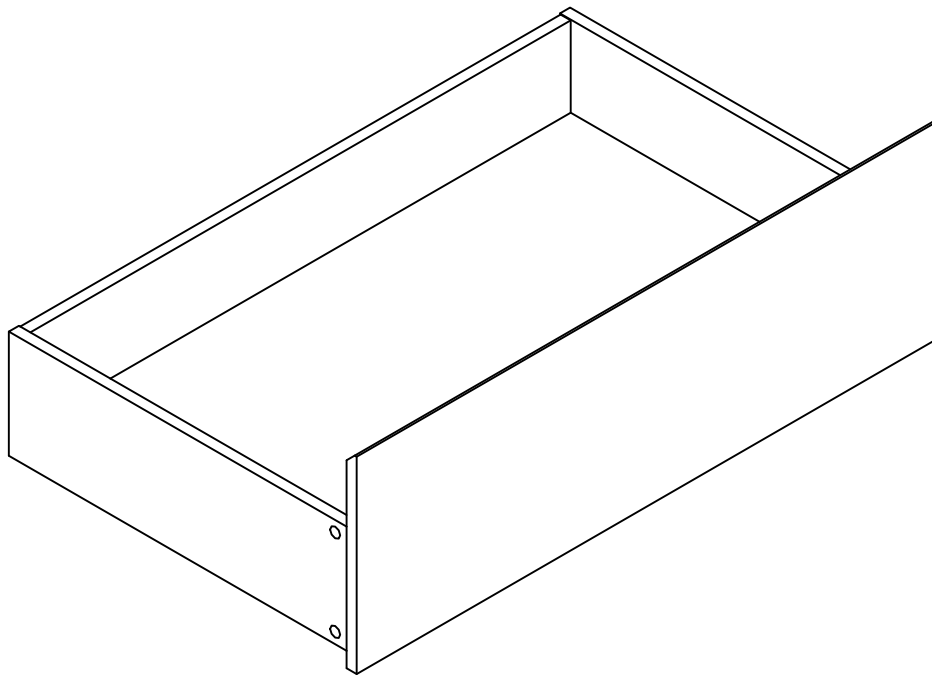
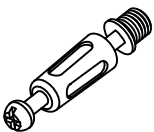




625-062 Built-in Storage Drawer*Oak

Assembly Instructions





Assembly Instructions

$\varnothing 15 \times 11$  A x 20	$\varnothing 7.8 \times 35$  B x 20	$\varnothing 8 \times 30$  C x 4	  D x 4
$\varnothing 4 \times 16$  E x 16			

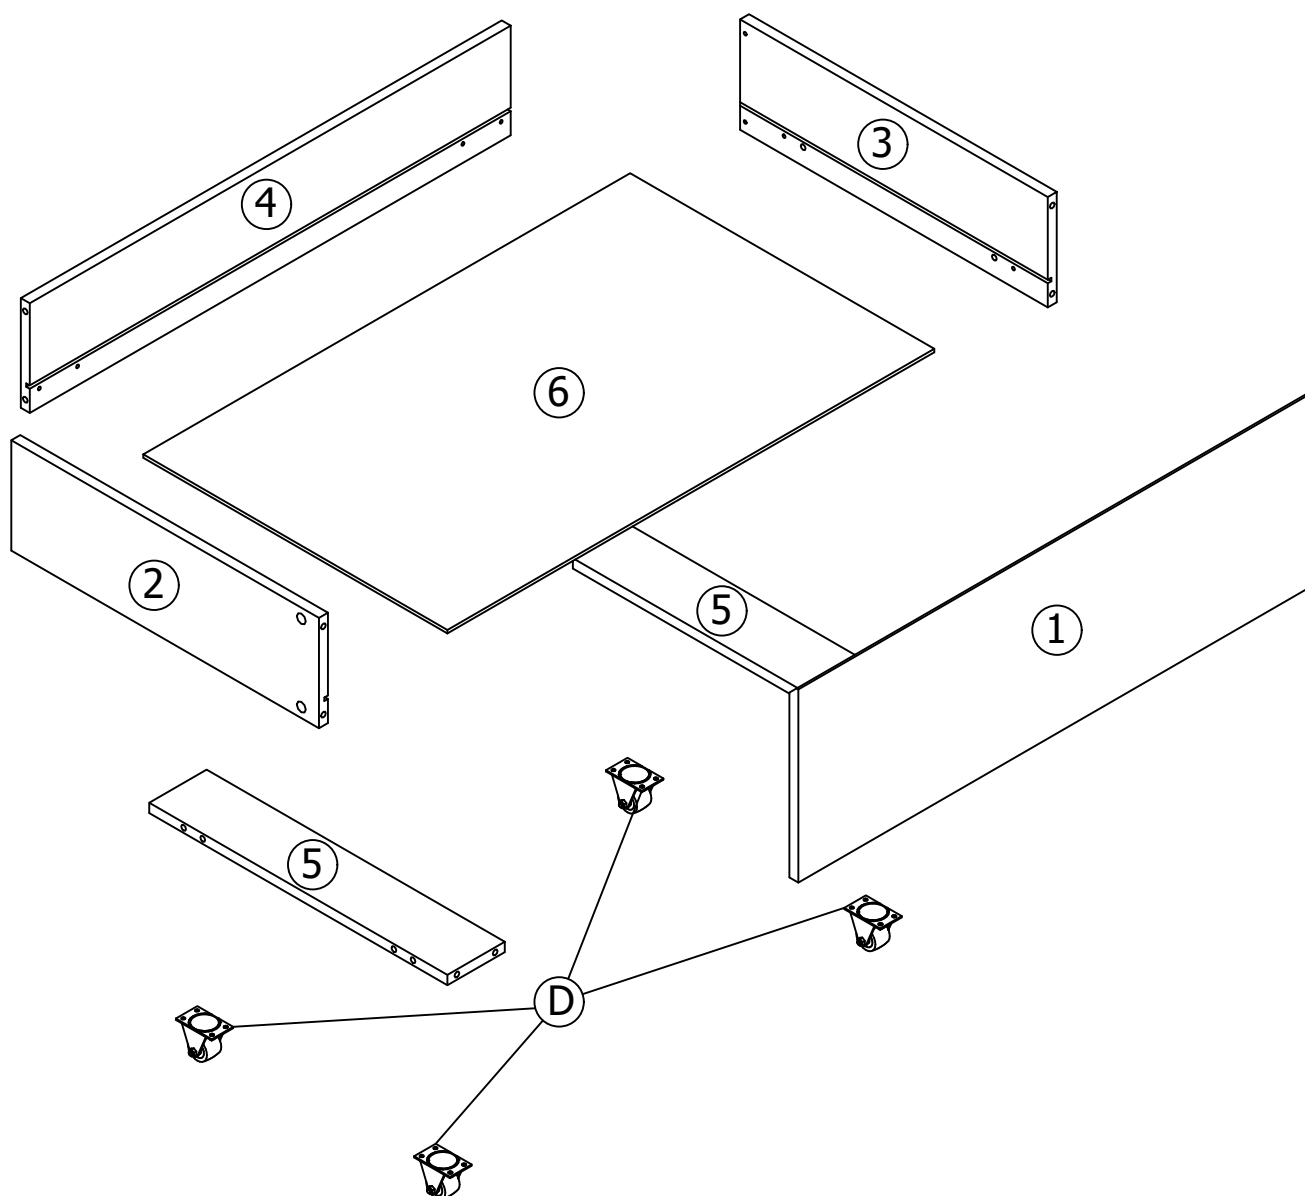



STEP 1

A x 12
B x 12
C x 4

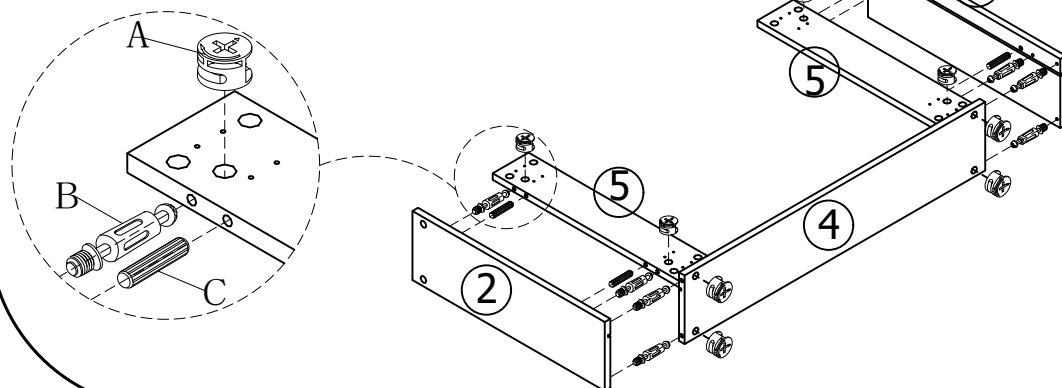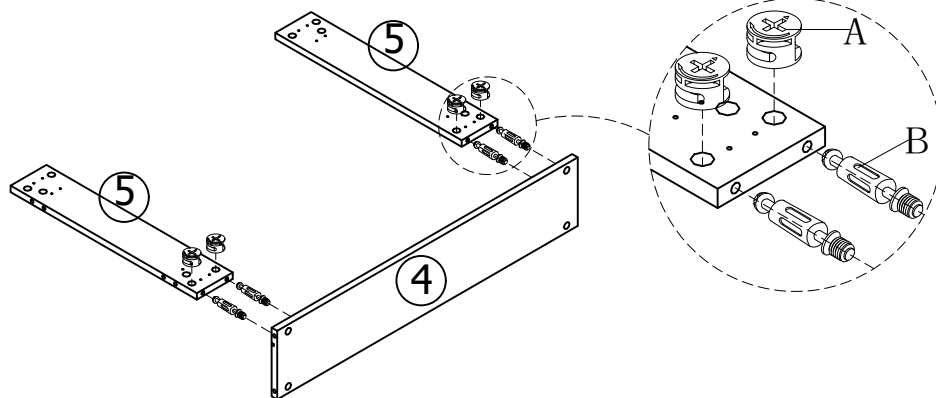


STEP 2

A x 8
B x 8

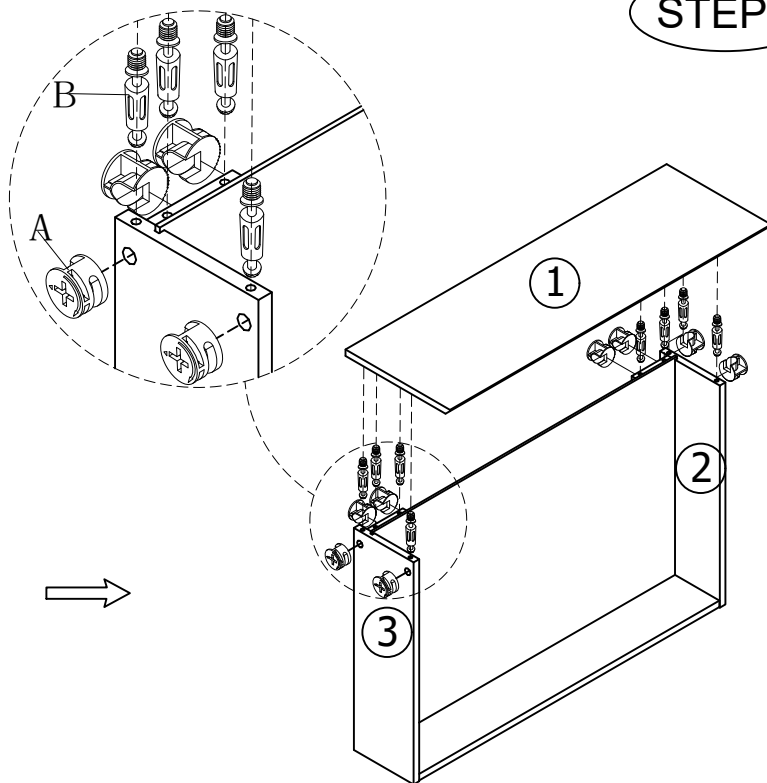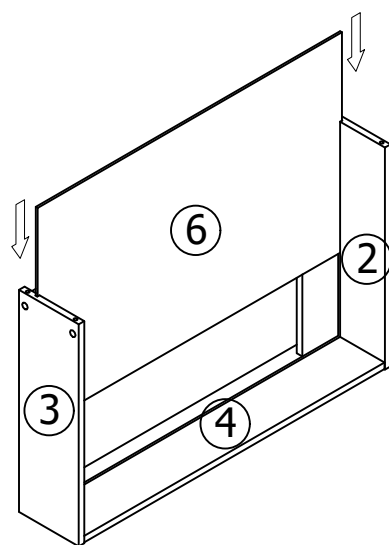

STEP 3

D x 4
E x 16

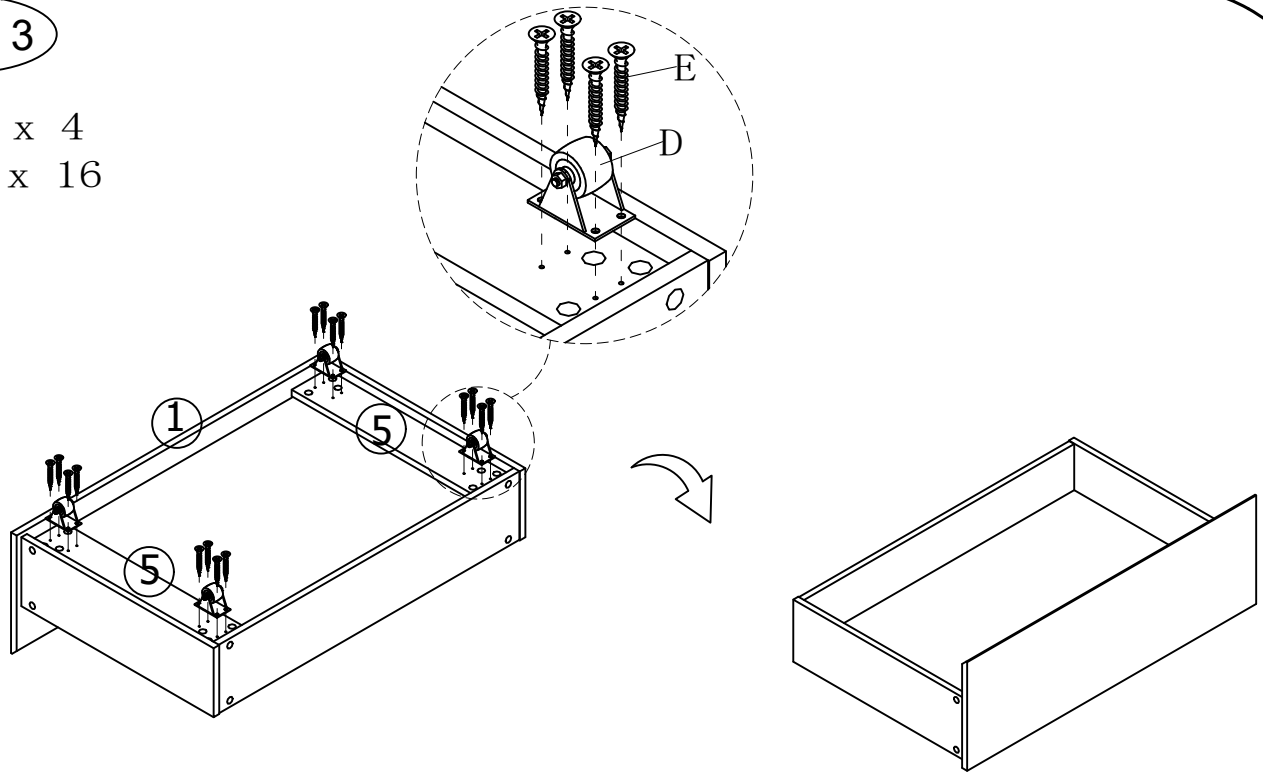

FINISH

STEP 4

The location of the bedside cabinet on the left rear side; two movable storage drawers can be fitted on the left front.

