
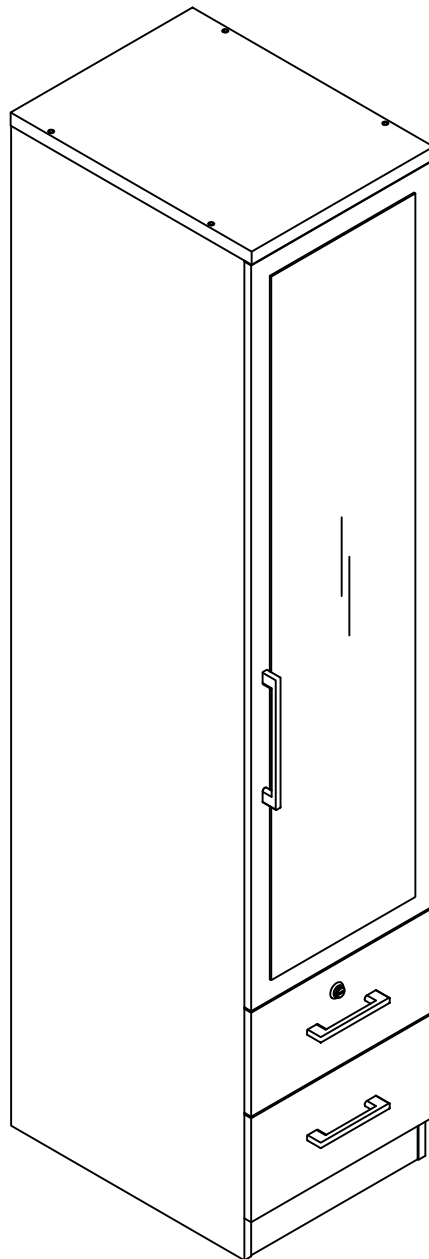
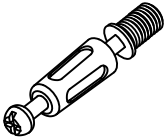




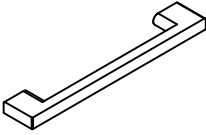
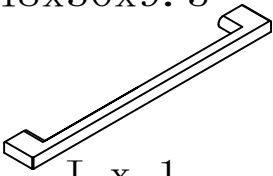
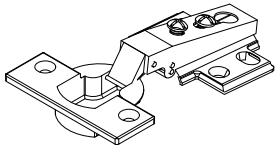


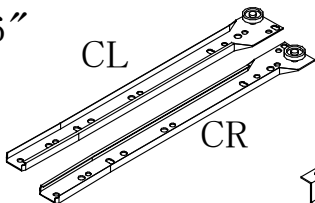



625-065, Wardrobe System 1-Door 2-Drawer Main Cabinet With Mirror*Oak

Assembly Instructions

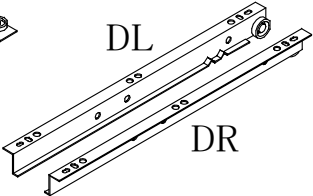

Assembly Instructions

<p>Ø15x11</p>  <p>A x 32</p>	<p>Ø7.8x35</p>  <p>B x 32</p>	<p>Ø8x30</p>  <p>C x 16</p>	<p>Ø3.5x14</p>  <p>D x 30</p>
<p>Ø4x16</p>  <p>E x 18</p>	<p>Ø4x40</p>  <p>F x 8</p>	<p></p>  <p>G x 6</p>	<p>M4x20</p>  <p>H x 6</p>
<p>152x30x9.5</p>  <p>I x 2</p>	<p>248x30x9.5</p>  <p>J x 1</p>	<p></p>  <p>K x 8</p>	<p></p>  <p>L x 3</p>
<p>Ø3*16</p>  <p>M x 16</p>	<p></p>  <p>N x 16</p>	<p>39x20x9</p>  <p>O x 1</p>	<p>Ø4x18</p>  <p>P x 4</p>
<p>Ø16</p>  <p>Q x 1</p>	<p>362mm</p>  <p>R x 1</p>	<p>16"</p>  <p>CL CR</p>  <p>DL DR</p> <p>2sets</p>	

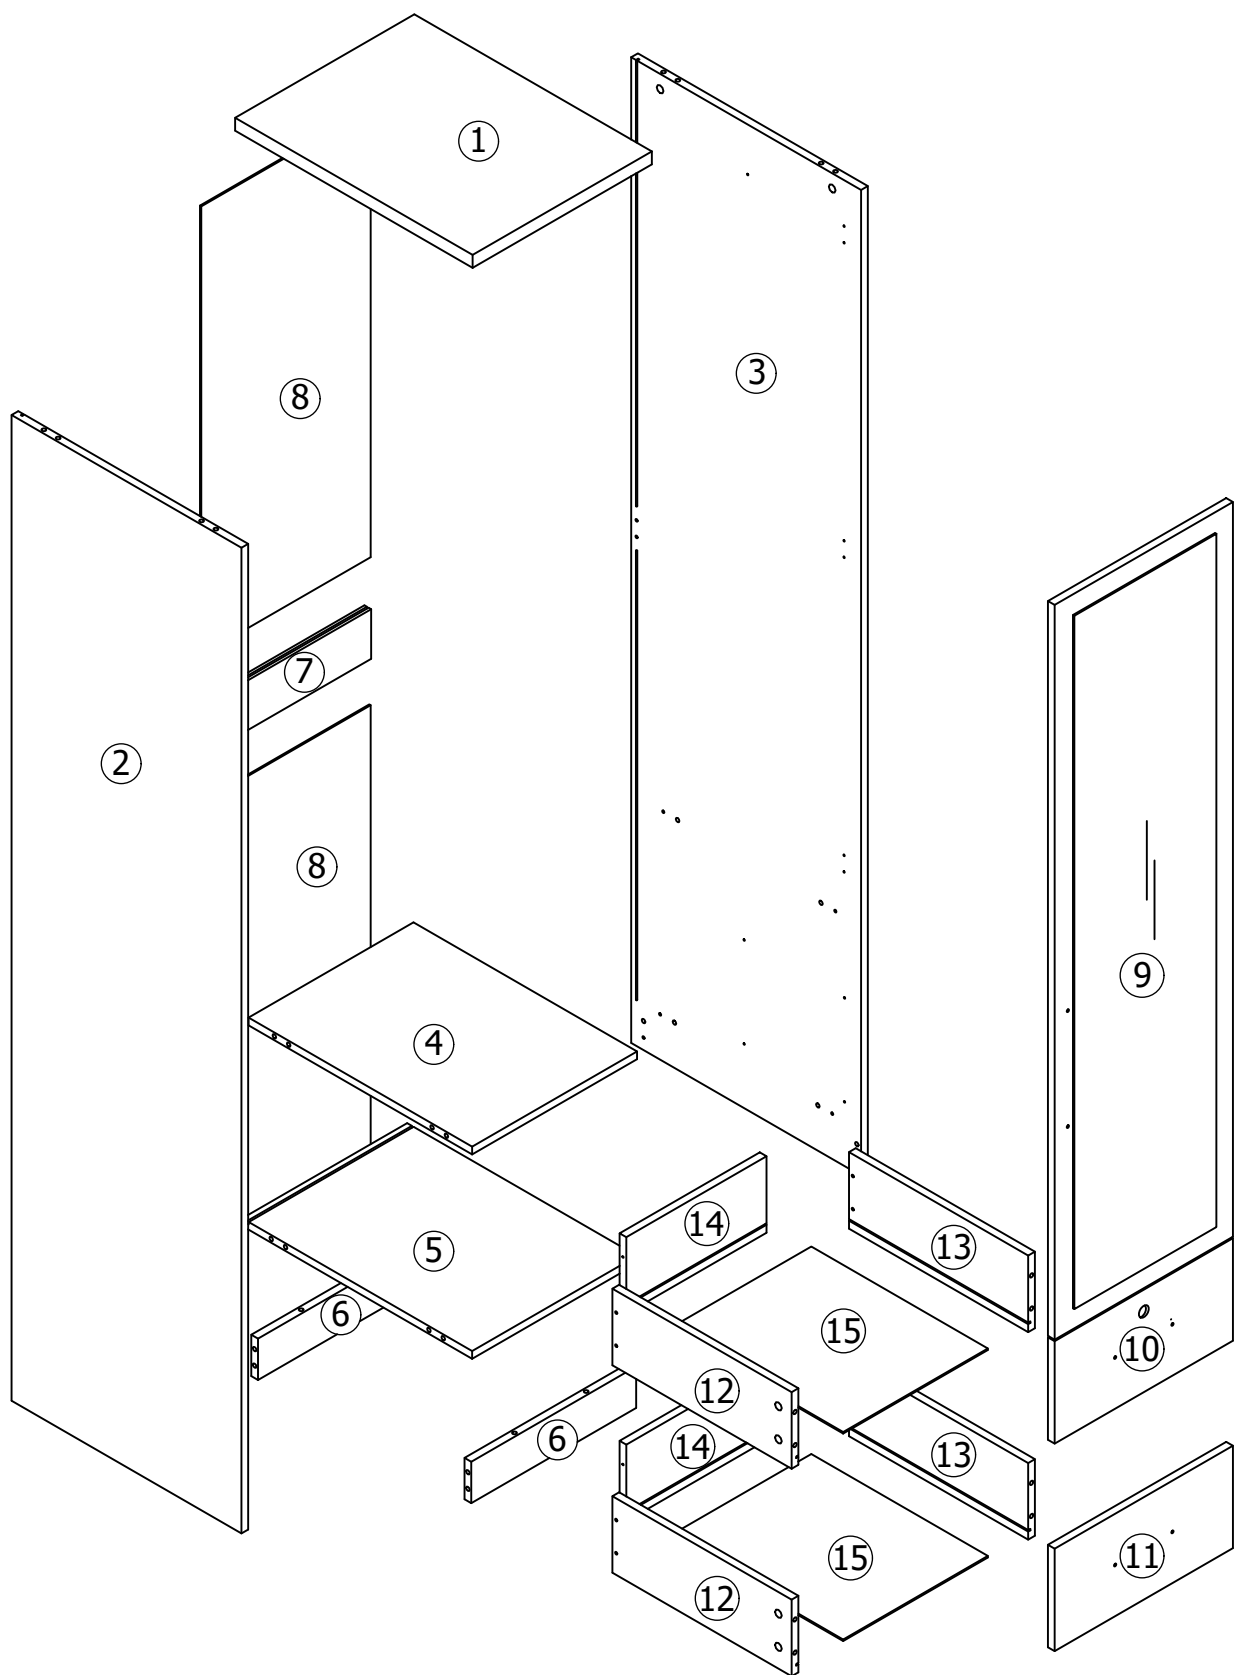


STEP 1

D x 12



CL x 2

CR x 2



REMARK:

When installing, please make sure the screws are flattened, Not crooked; Otherwise the drawers will not be installed perfectly.

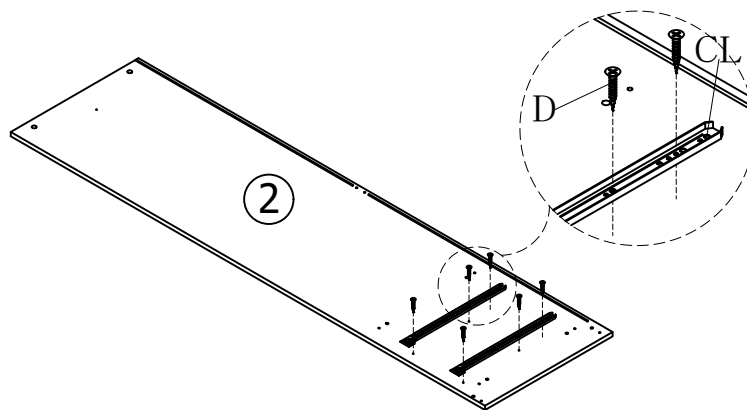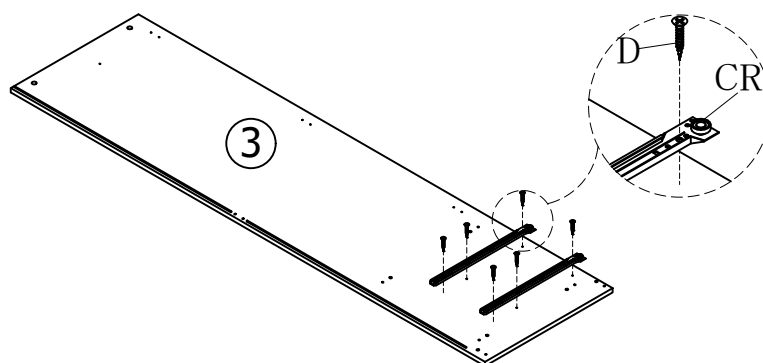

STEP 2




A x 12

B x 12

C x 6


D x 2

O x 1

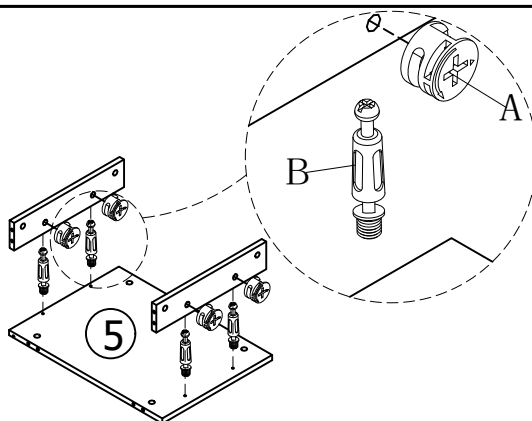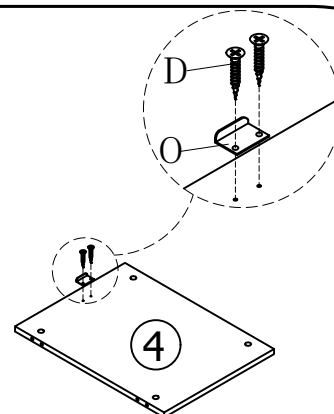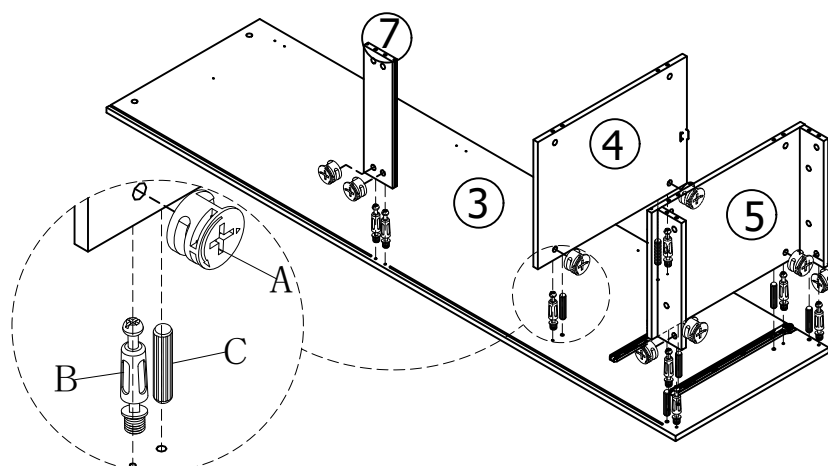


STEP 3

- A x 12
- B x 12
- C x 10

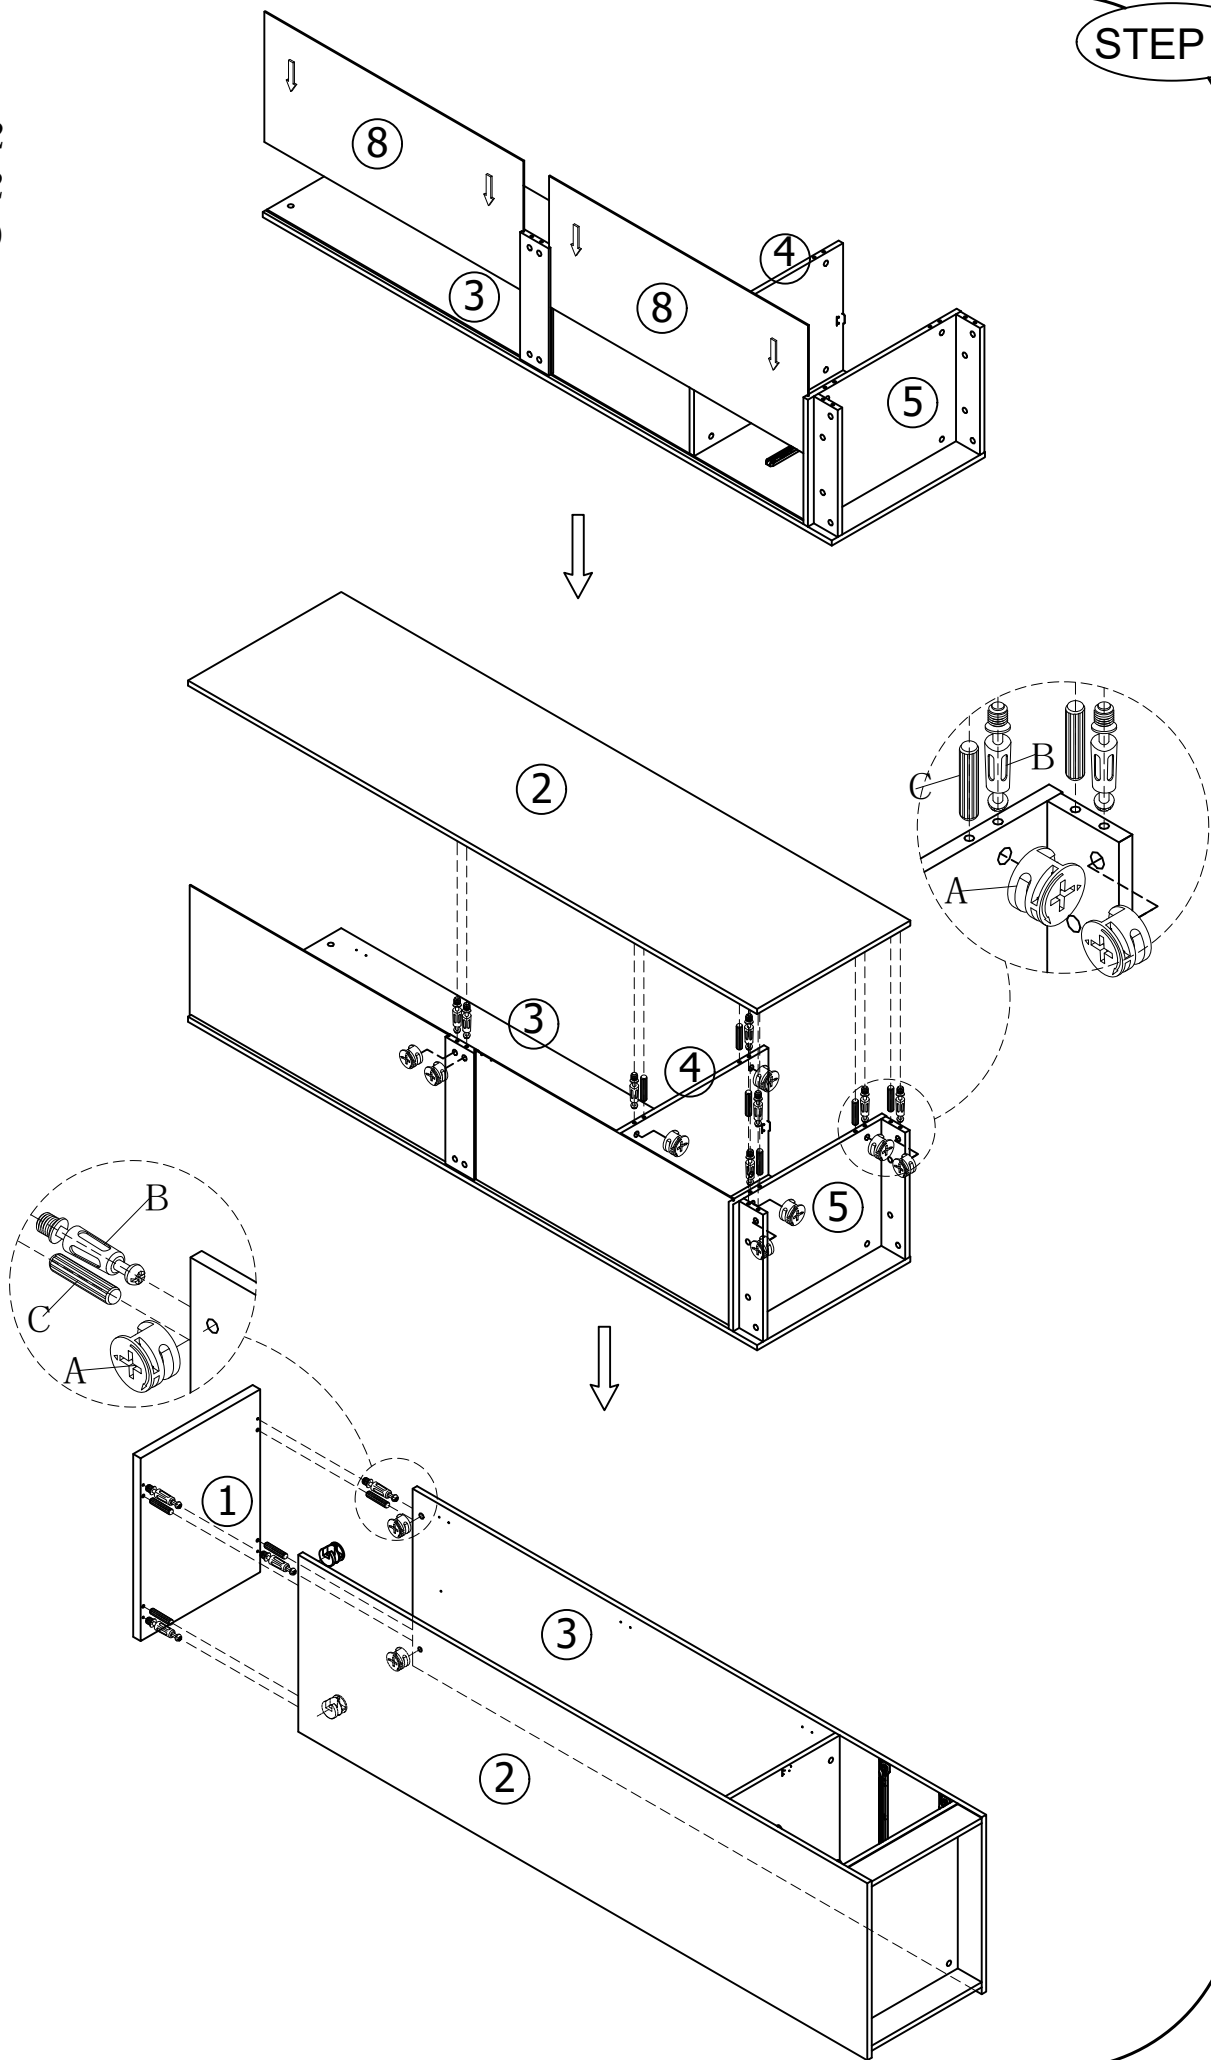


STEP 4

G x 6
L x 16
M x 16

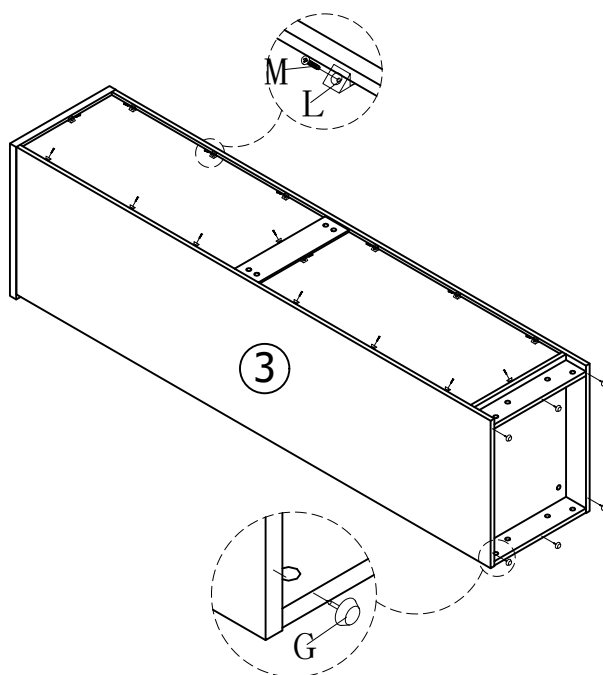


STEP 5

D x 4
N x 2
R x 1

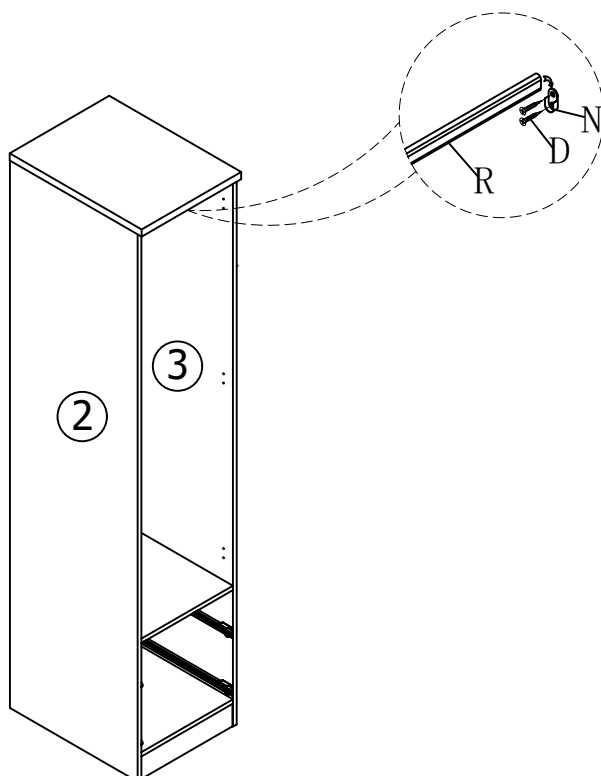


STEP 6

A x 8
B x 8
F x 8
P x 4
Q x 1

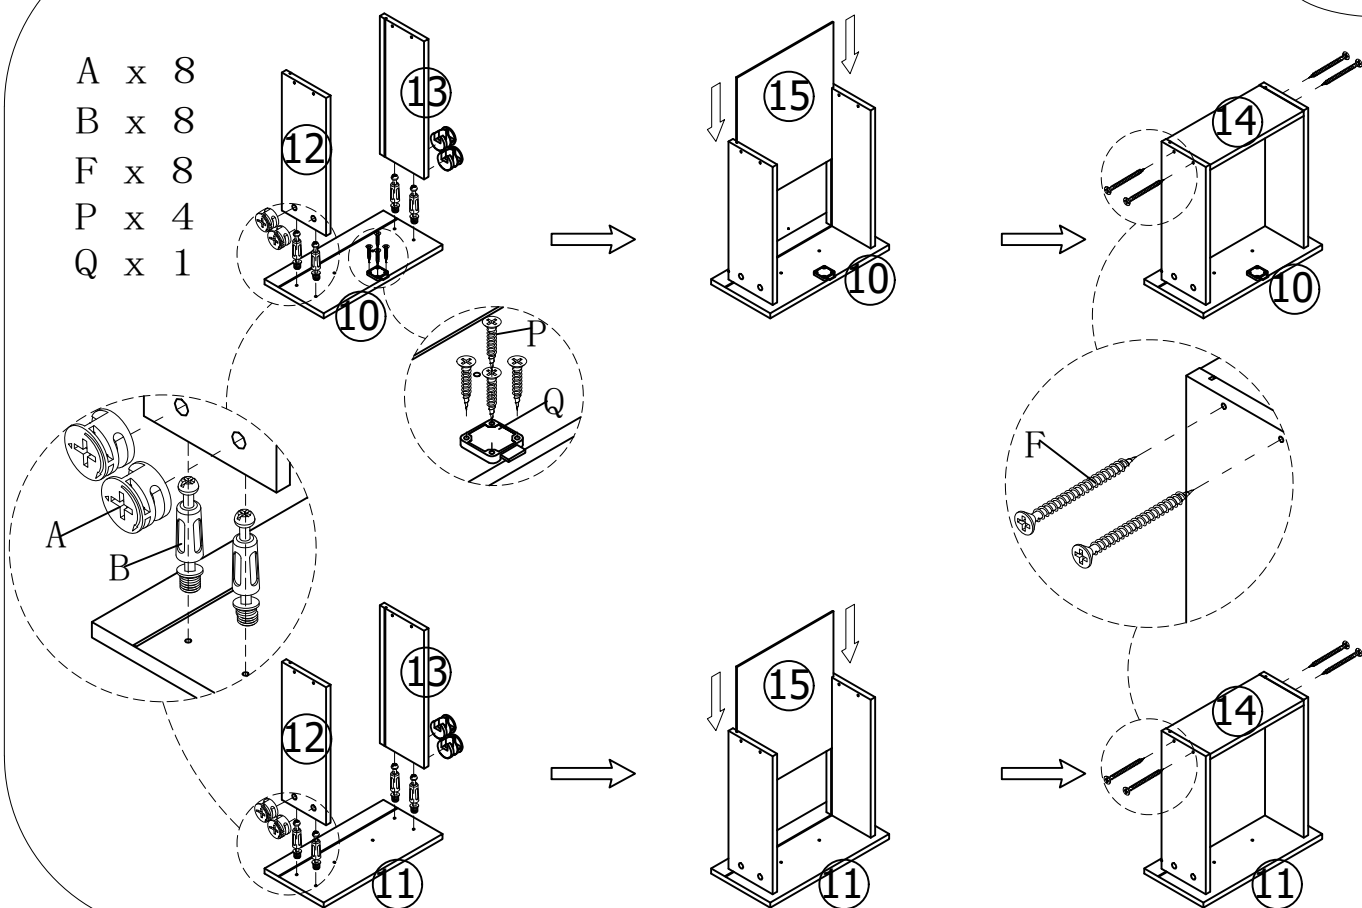


STEP 7

D x 12
H x 4
I x 2
DL x 2
DR x 2

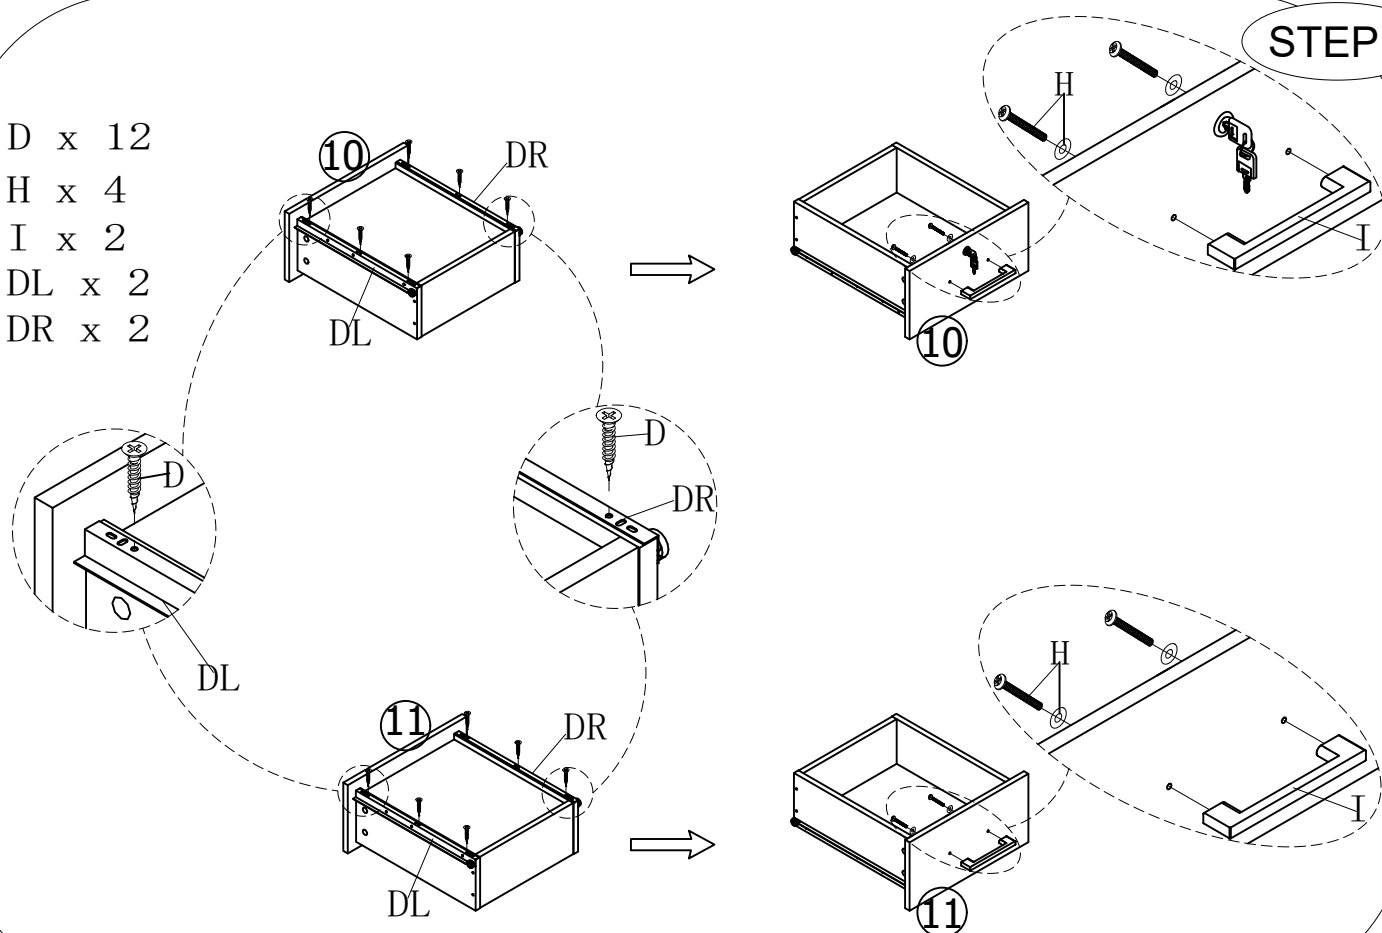


STEP 8

E x 18
H x 2
J x 1
K x 3

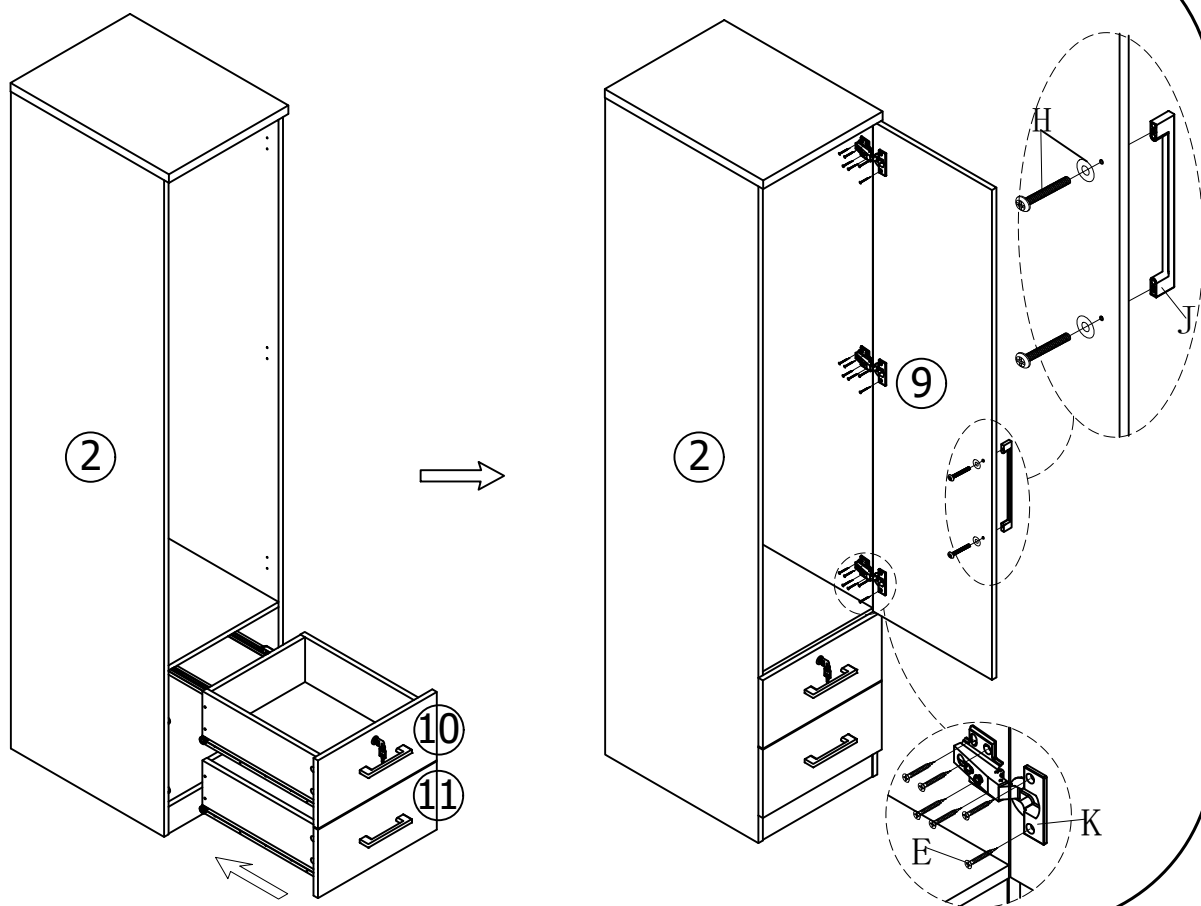

STEP 9

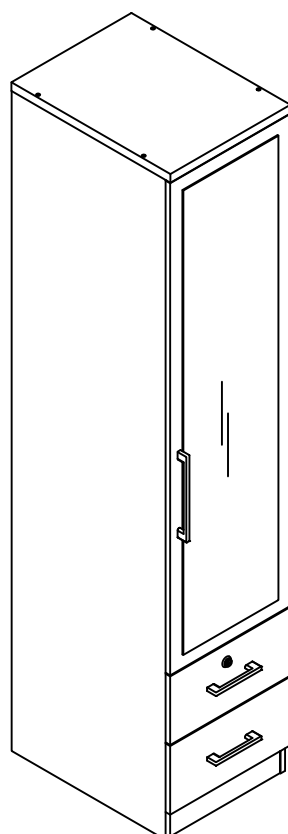

FINISH