
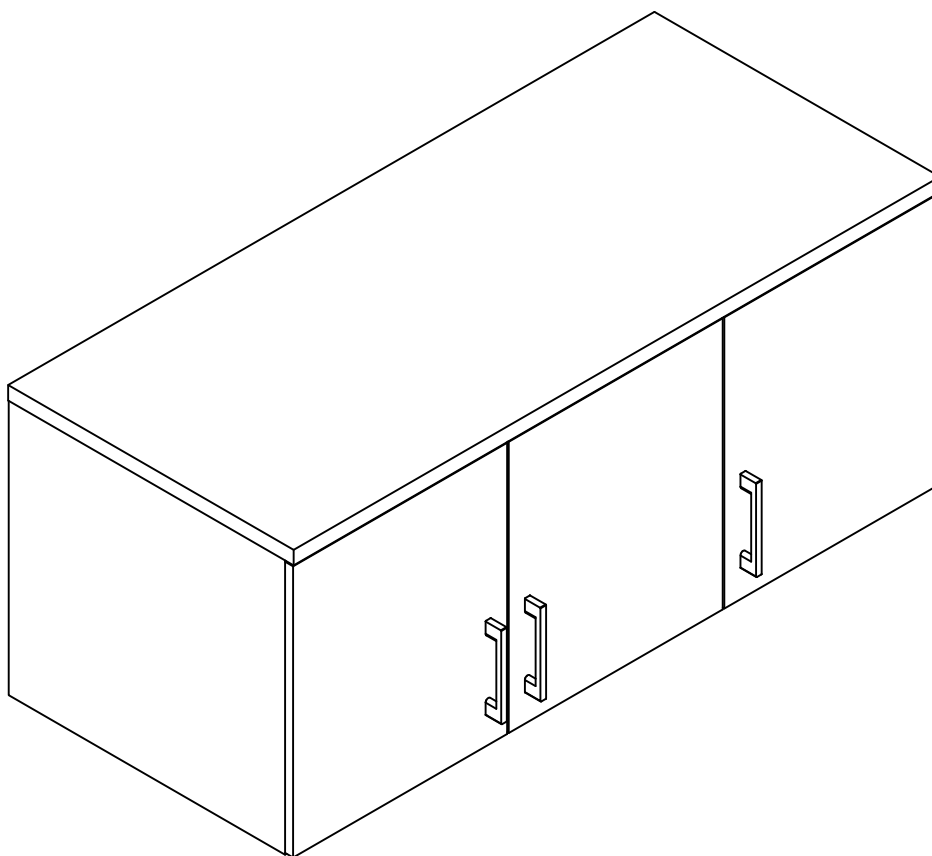
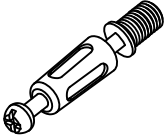








625-070, Wardrobe System 3-Door Top Cabinet*Oak

Assembly Instructions




Assembly Instructions

<p>Ø15x11</p>  <p>A x 16</p>	<p>Ø7.8x35</p>  <p>B x 16</p>	<p>Ø8x30</p>  <p>C x 12</p>	 <p>D x 6</p>
<p>Ø4x16</p>  <p>E x 38</p>	<p>152x30x9.5</p>  <p>F x 3</p>	<p>M4x20</p>  <p>G x 8</p>	 <p>H x 22</p>
<p>Ø3*16</p>  <p>I x 22</p>	<p>Ø4x40</p>  <p>J x 2</p>	<p>Ø7.8x38</p>  <p>K x 2</p>	<p>62x40x18</p>  <p>L x 2</p>

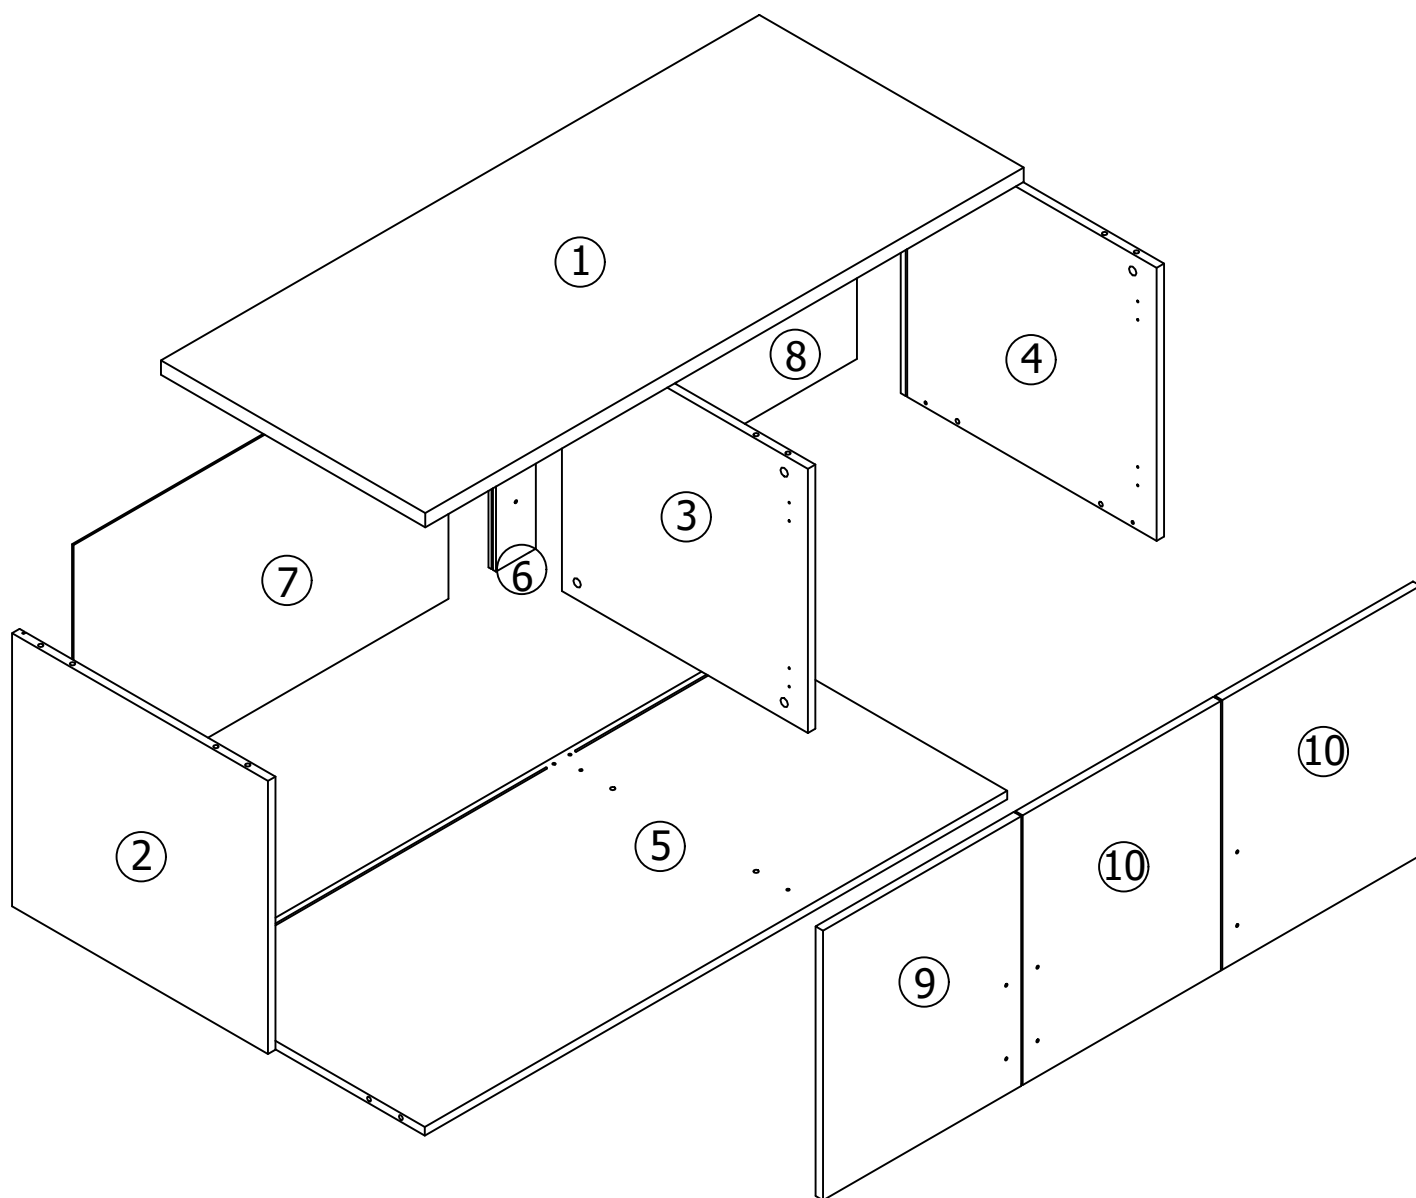


STEP 1

A x 4
B x 4
C x 2
J x 2

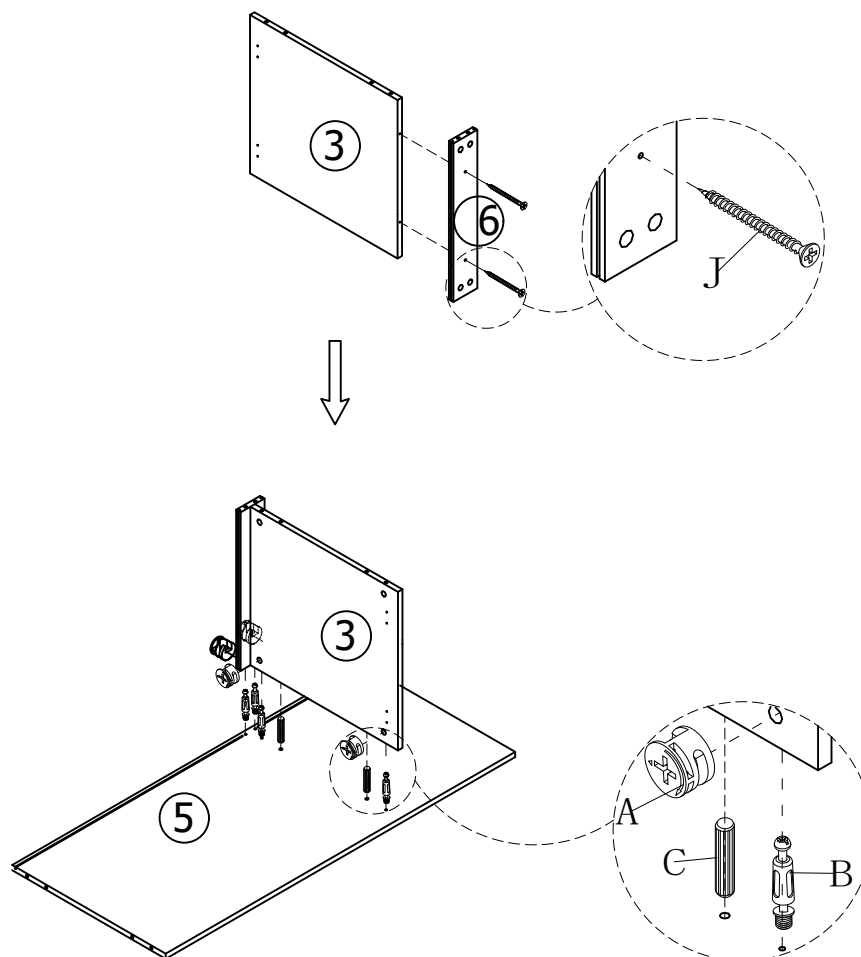


STEP 2

A x 4
B x 4
C x 4

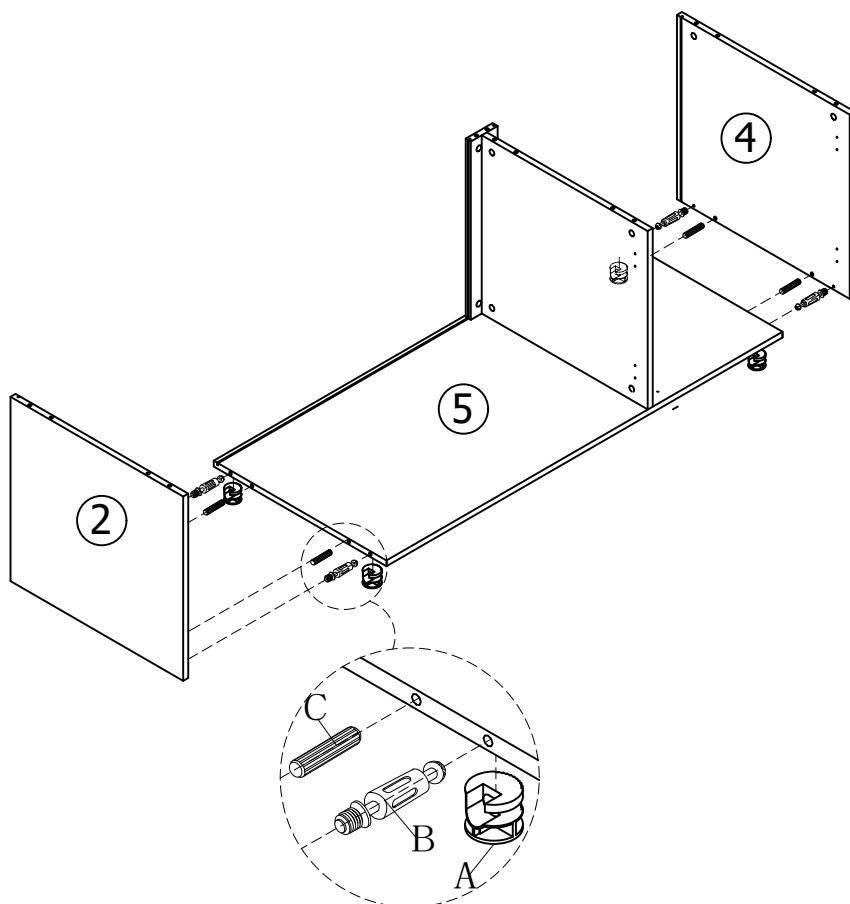


STEP 3

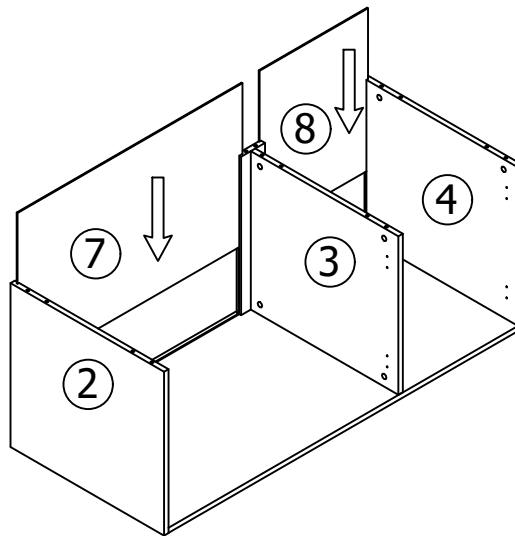

STEP 4


- A x 8
- B x 8
- C x 6

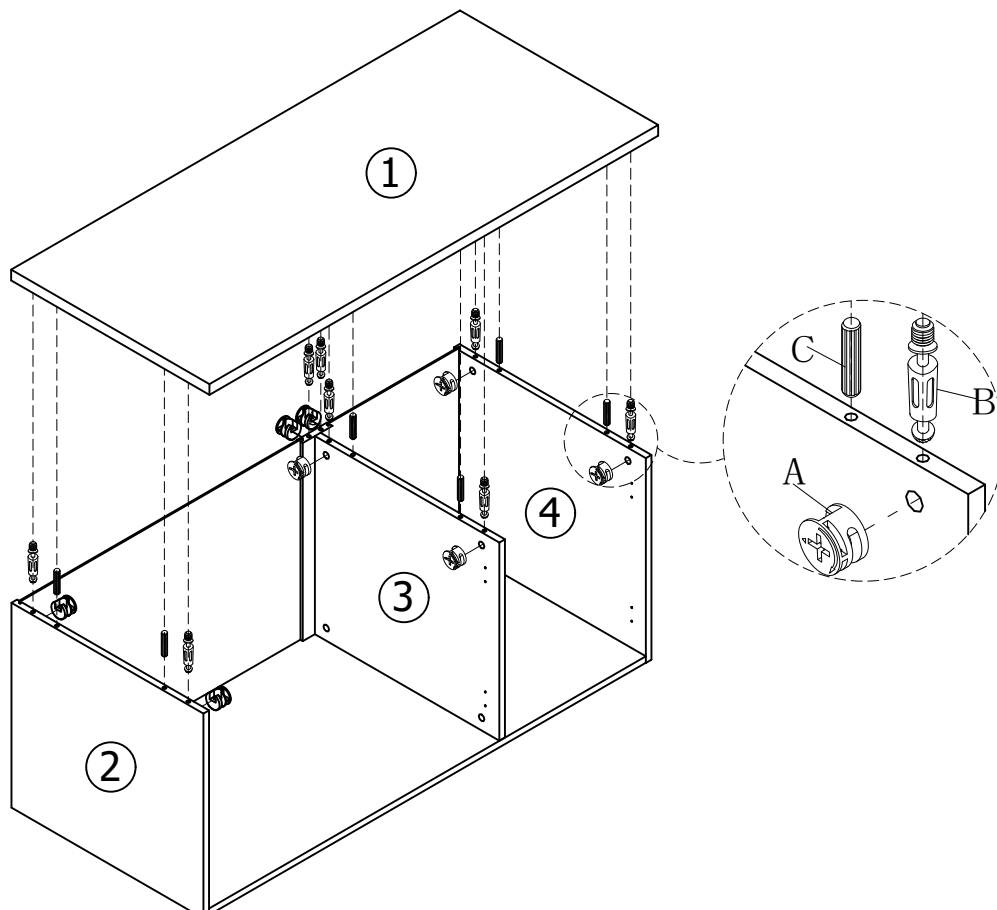

STEP 5

H x 22

I x 22

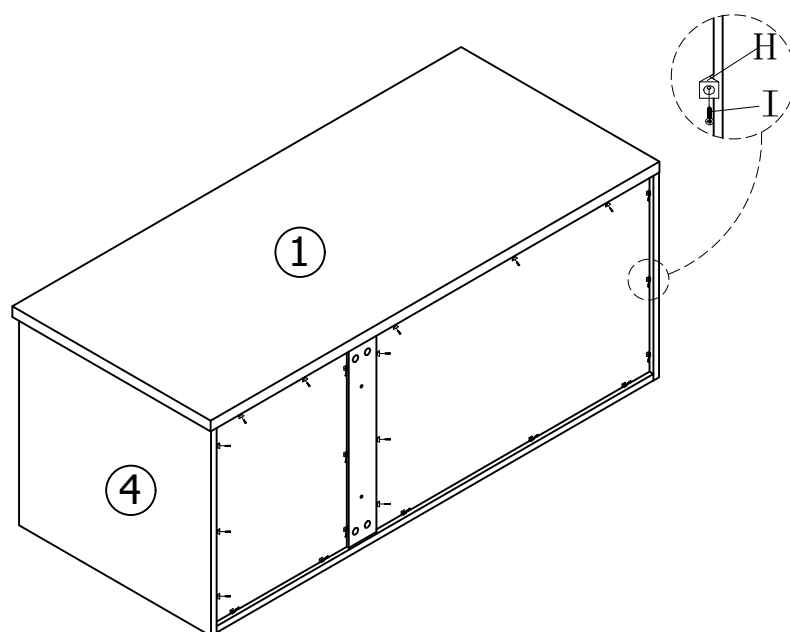

STEP 6

D x 6

E x 38


F x 3

G x 8


J x 2

K x 2

L x 2

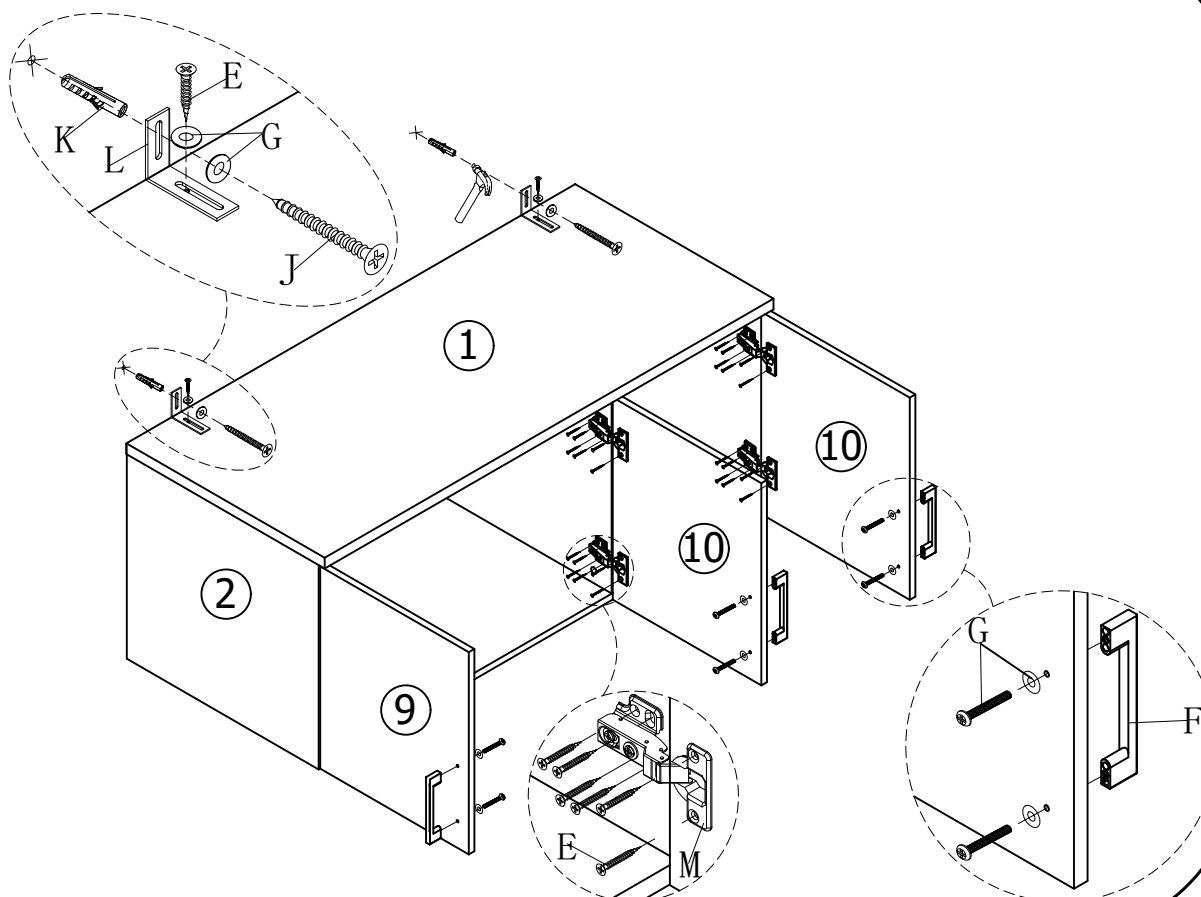

STEP 7

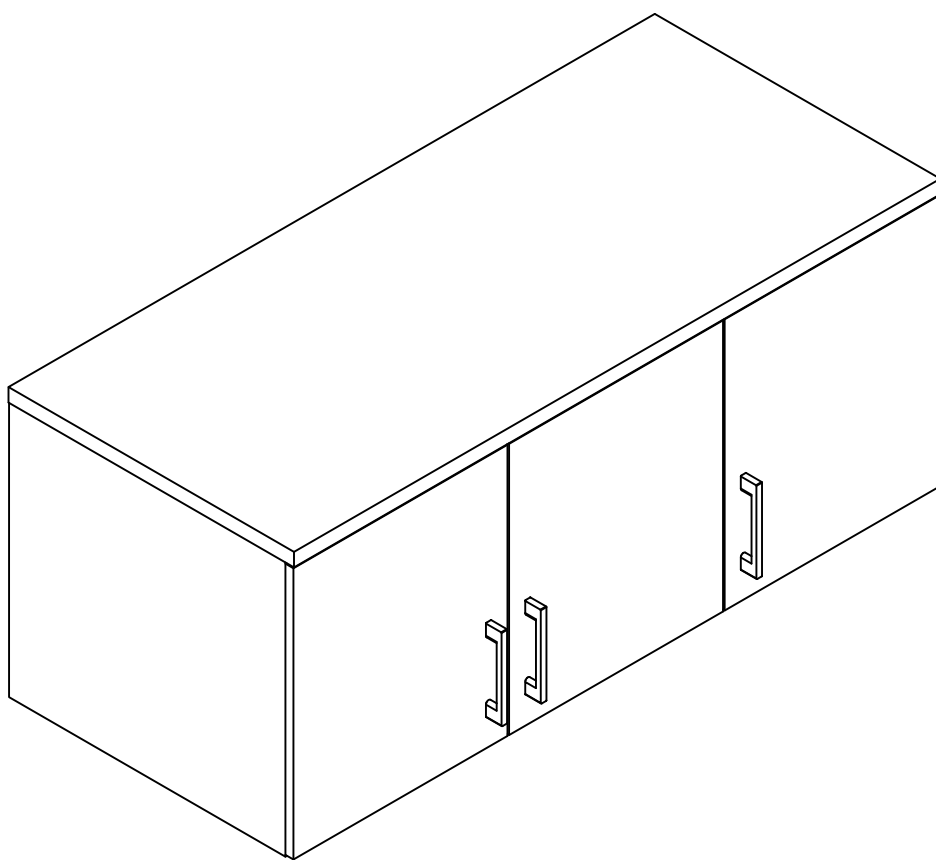

FINISH