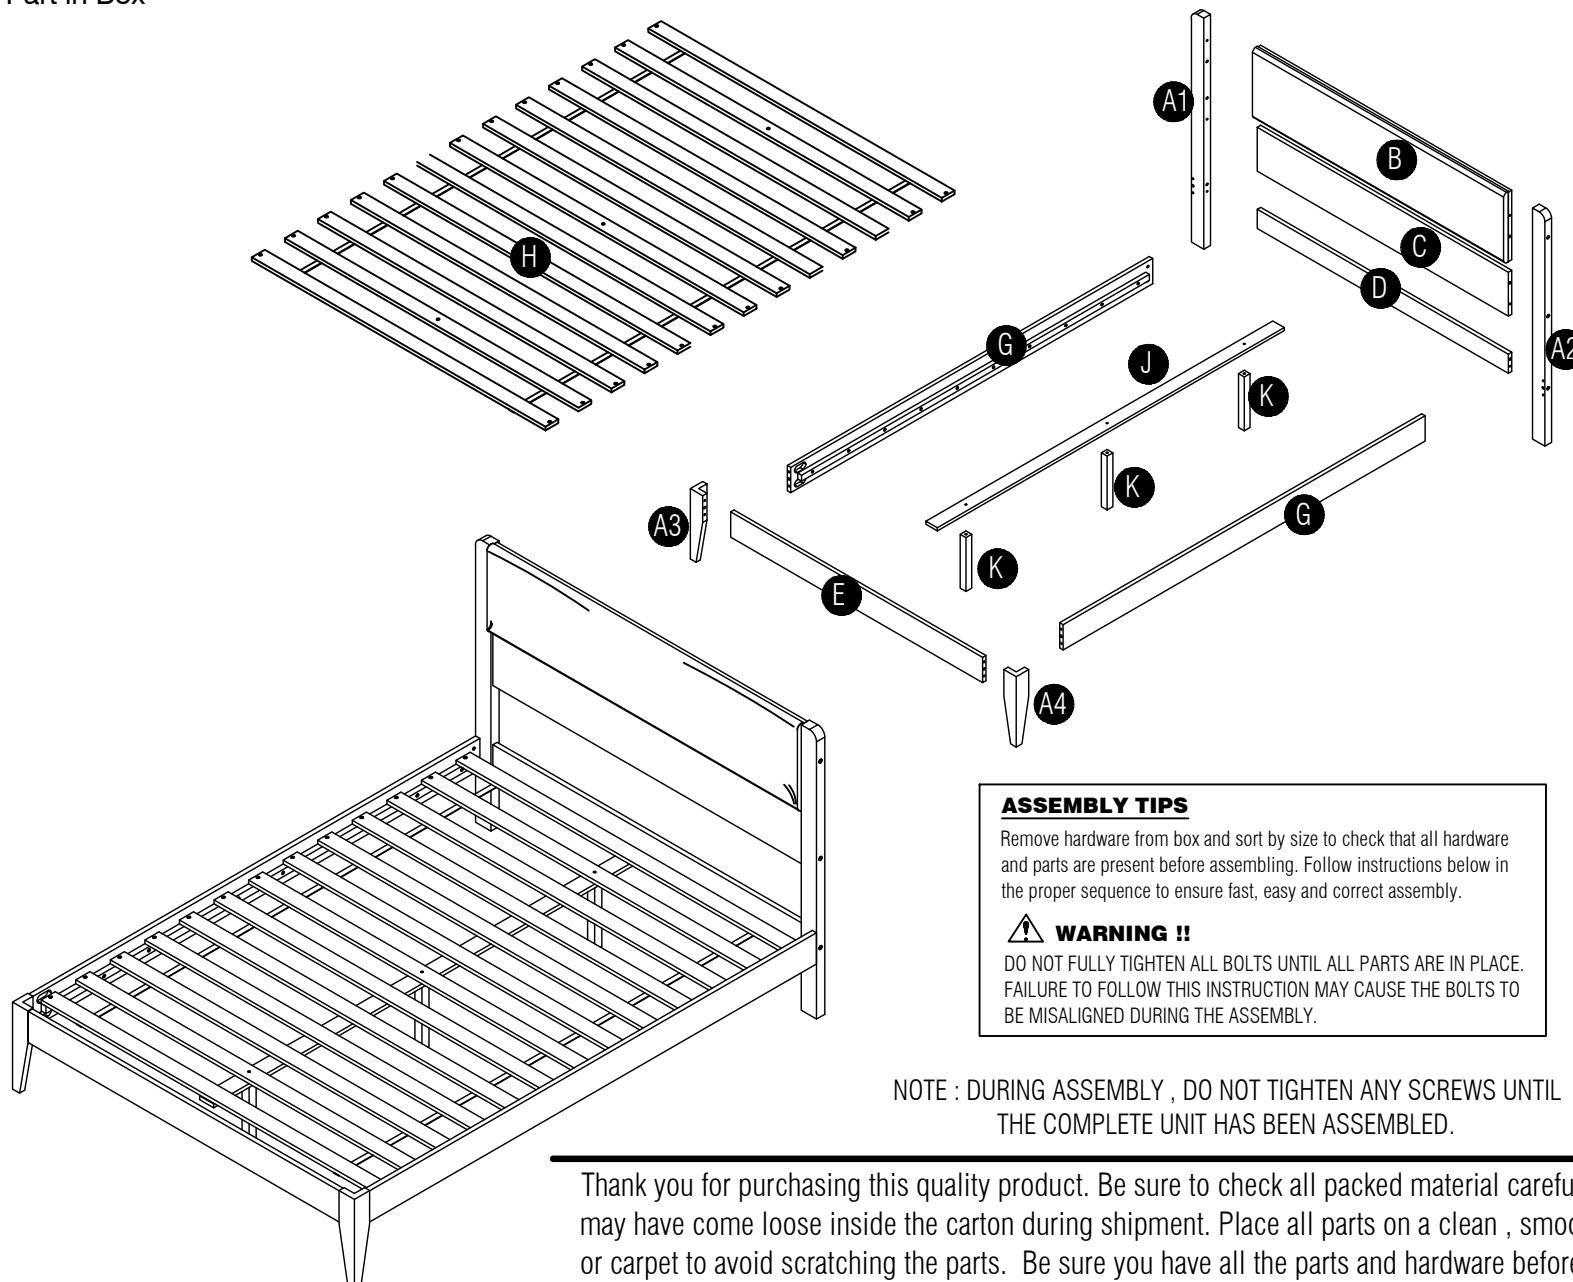


Assembly Instructions

816 - 005/816 - 006

1/3

Part in Box



ASSEMBLY TIPS





Remove hardware from box and sort by size to check that all hardware and parts are present before assembling. Follow instructions below in the proper sequence to ensure fast, easy and correct assembly.

WARNING !!

DO NOT FULLY TIGHTEN ALL BOLTS UNTIL ALL PARTS ARE IN PLACE. FAILURE TO FOLLOW THIS INSTRUCTION MAY CAUSE THE BOLTS TO BE MISALIGNED DURING THE ASSEMBLY.

NOTE : DURING ASSEMBLY , DO NOT TIGHTEN ANY SCREWS UNTIL THE COMPLETE UNIT HAS BEEN ASSEMBLED.

Hardware List

1.	JCBC M6 x 100mm		x 6
2.	Barrel Nut M6 x 15mm		x 10
3.	Wood Dowel M10 x 30mm		x 12
4.	JCBC M6 x 60mm		x 8
5.	M6 Half Moon		x 8
6.	M6 Flat Washer		x 8
7.	Split Lock Screw		x 8
8.	Adjustable Screw		x 3
9.	CSK Screw M4 x 25mm		x 26
10.	JCBC M6 x 80mm		x 4
11.	M8 Flat Screw		x 3
12.	JCBB M8 x 80mm		x 3
13.	M4 Allen Key		x 1
14.	M5 Allen Key		x 1

Tool required for assembly :

- * Allen Key (supplied)
- * Phillips Screwdriver (not supplied)

Thank you for purchasing this quality product. Be sure to check all packed material carefully for small parts which may have come loose inside the carton during shipment. Place all parts on a clean , smooth surface such as a rug or carpet to avoid scratching the parts. Be sure you have all the parts and hardware before you begin assembly.


Assembly Instructions

816 - 005/816 - 006


2/3


1 Assemble the Hb, Panel End Frames.

1.	JCBC M6 x 100mm		x 6
2.	M6 x 15mm Barrel Nut		x 6
3.	Wood Dowel M10 x 30mm		x 6

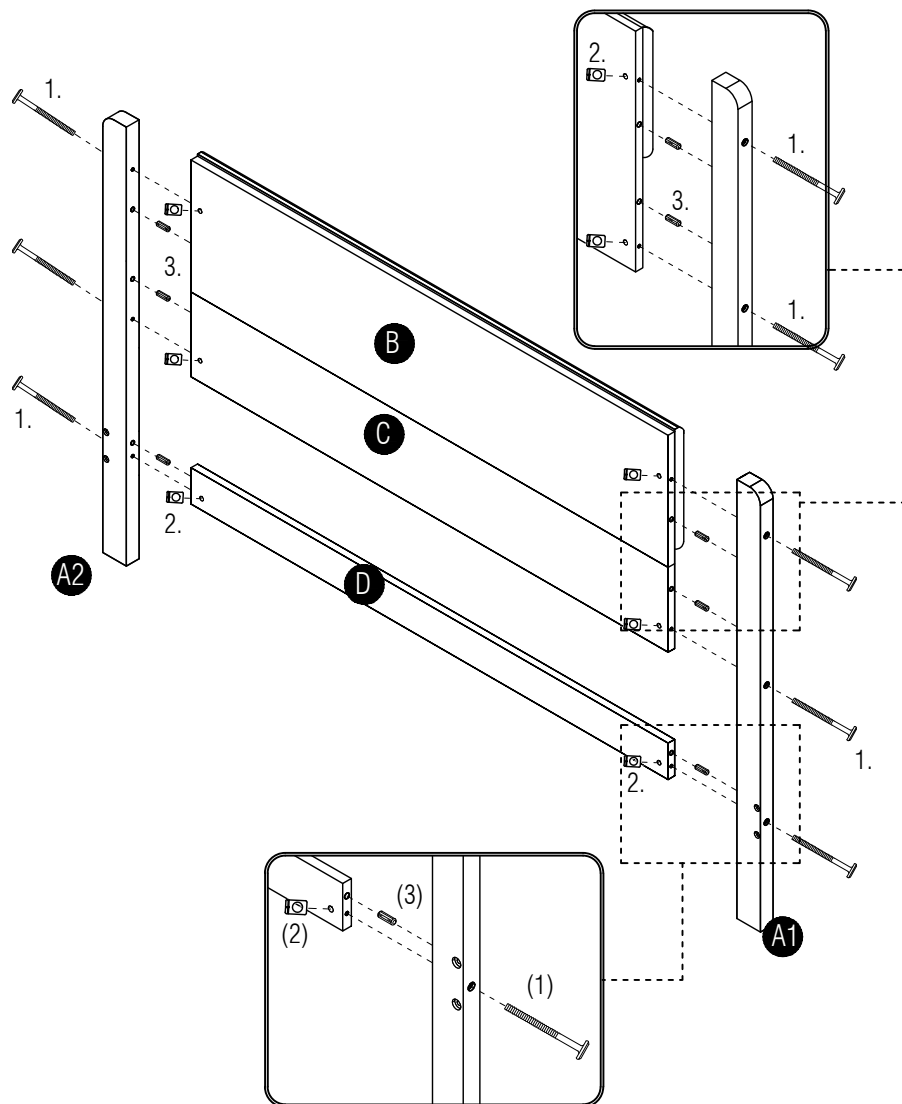

2 Assemble the F.Post (A3)(A4) with the Fb.Panel (E).

3.	Wood Dowel M10 x 30mm		x 2
4.	JCBC M6 x 60mm		x 4
5.	M6 Halfmoon		x 4
6.	M6 Flat Washer		x 4
7.	M6 Split Washer		x 4

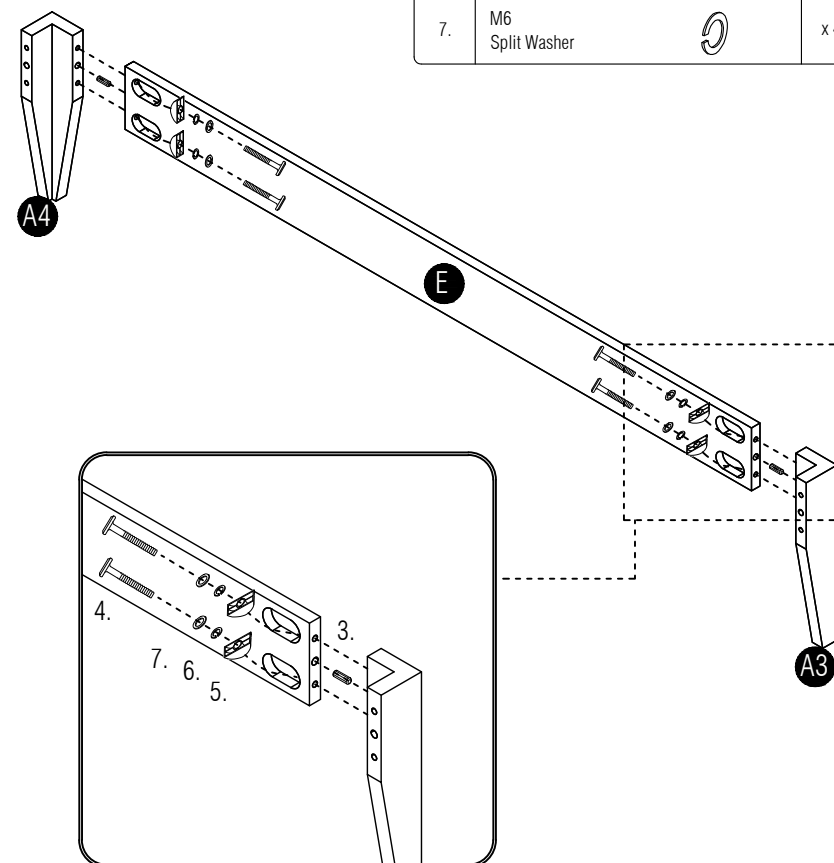


Assembly Instructions

816 - 005/816 - 006



3/3


3 Assemble the Side Rail (G) to End Frame Bed.

2.	M6 x 15mm Barrel Nut		x 4
3.	Wood Dowel M10 x 30mm		x 4
4.	JCBC M6 x 60mm		x 4
5.	M6 Halfmoon		x 4
6.	M6 Flat Washer		x 4
7.	M6 Split Washer		x 4
10.	JCBC M6 x 80mm		x 4

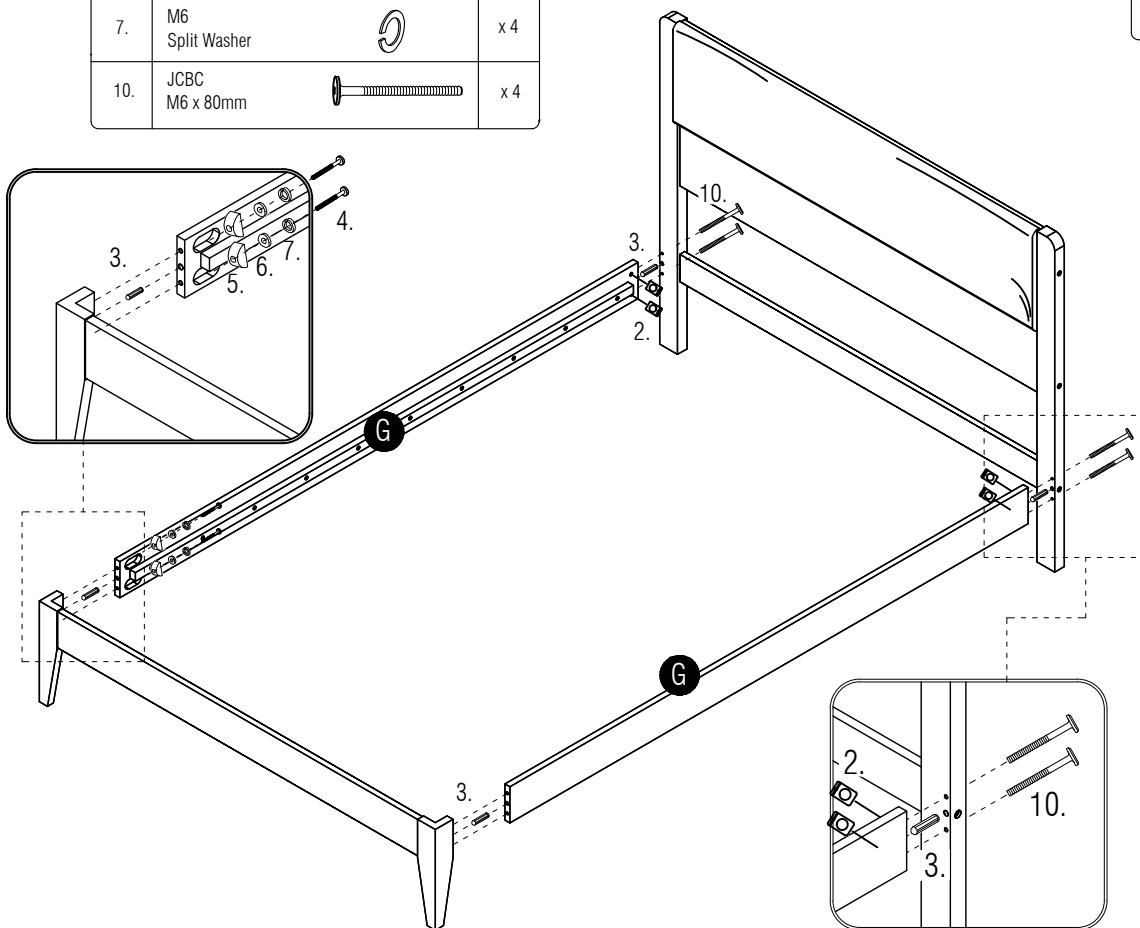

4 Lock the Support Legs (K) on Slats (H) & Center Rail (J). Please Note that the Hex Nut or Support Legs (K) have Adjuster at Bottom. Unscrew to Adjust if necessary. Fit the Slats (H) in the Place.

8.	Adjustable Screw		x 3
9.	CSK M4 x 25mm		x 26
11.	M8 Flat Washer		x 3
12.	JCBB M8 x 80mm		x 3

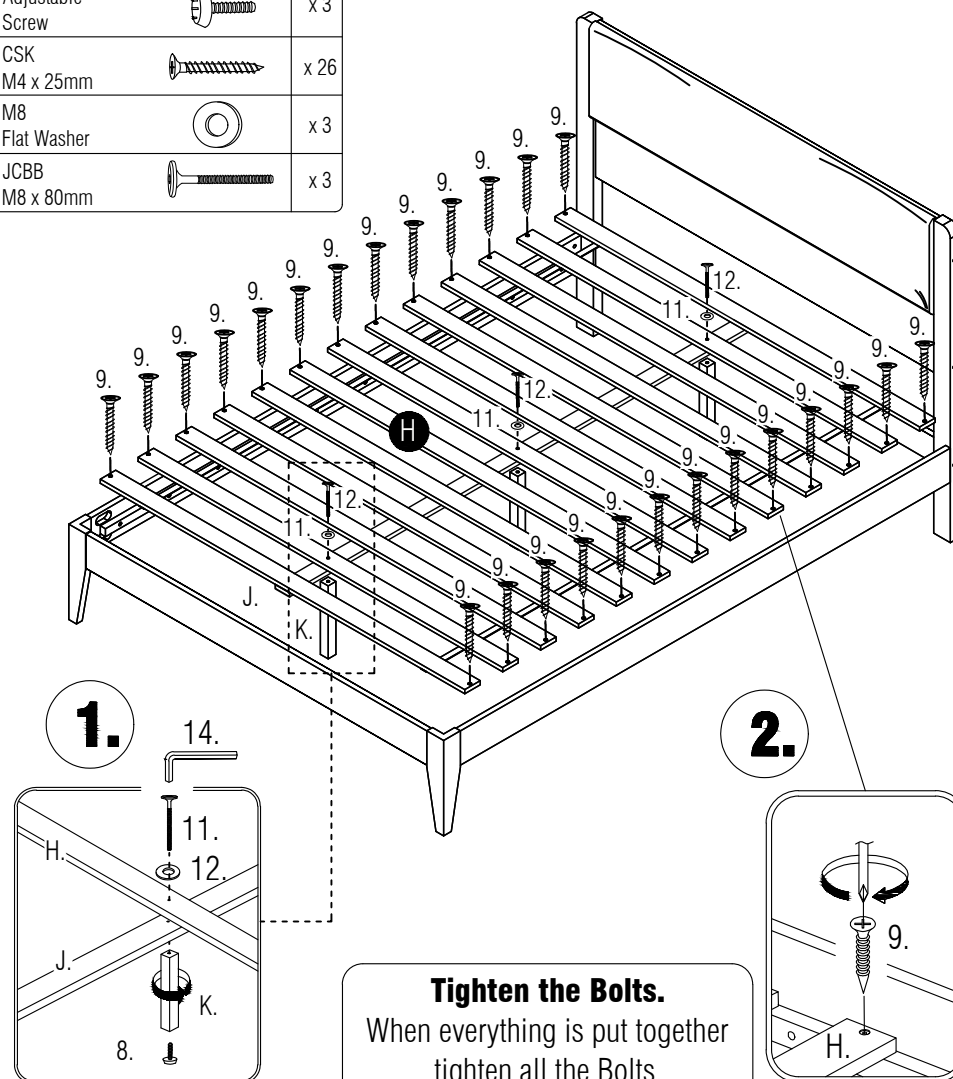

Tighten the Bolts.
When everything is put together
tighten all the Bolts.