

ASSEMBLY INSTRUCTIONS

MODEL:B6530-Q-HB/ B6530-NK-HB QUEEN/ NK HEADBOARD

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT.BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT.IDENTIFY AND COUNT ALL PARTS AND COMPARE WITH HARDWARE LIST AS BELOW:

(BOX 1) BOX OF HEADBOARD

ITEM	DRAWING	DESCRIPTION	QTY
A		HEAD BOARD	1
B		HB LEG POST (L/R)	2
C		BOTTOM RAIL	1

(BOX 1) BOX OF HEADBOARD (HARDWARE LIST)

ITEM	DRAWING	DESCRIPTION	DIMENSION	QTY
D		ALLEN KEY M4	4 X 35 X 55MM	1
E		CONNECTION BOLT (JCBC M6x90mm)(Nylok) W/SPRING WASHER & WASHER MEDIUM		6
F		CONNECTION BOLT (JCBC M6x35mm)(Nylok) W/SPRING WASHER & WASHER MEDIUM		2

STEP 1 :OPEN THE FABRIC COVER BEHIND THE HEAD BOARD.



STEP 2 :ATTACH AND TIGHTEN THE LEG POST (L/R) (B) TO THE HEADBOARD (A).INSERT CONNECTION BOLT (E) WITH WASHER TO AFFIX.

STEP 3 :AFFIX THE BOTTOM RAIL (C) TO THE HEADBOARD LEG (B) USING CONNECTION BOLT (F) WITH WASHER.


NOTE:PERIODICALLY CHECK TO ENSURE THAT ALL CONNECTORS (BOLTS, SCREW, ETC) ARE TIGHT.

CLEANING INSTRUCTION
AFTER ASSEMBLED,CLEAN & POLISH THE COMPLETE PARTS IF NECESSARY WITH SOFT CLOTH AND INDUSTRIAL RECOGNIZED FURNITURE POLISH.

STEP 1

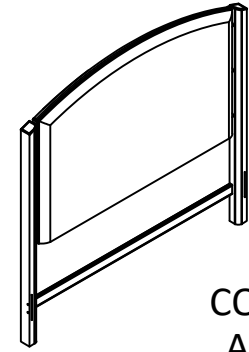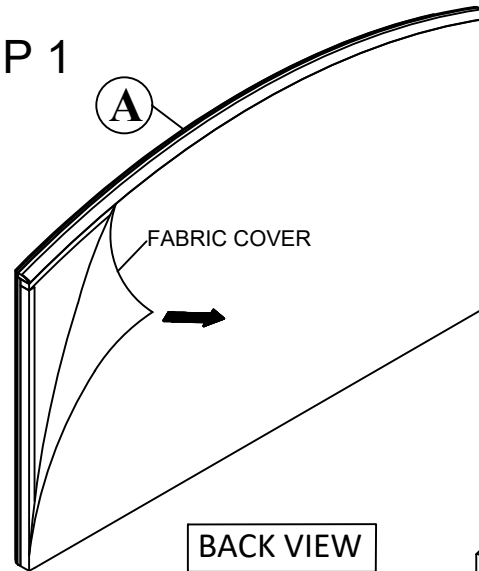

COMPLETED ASSEMBLY

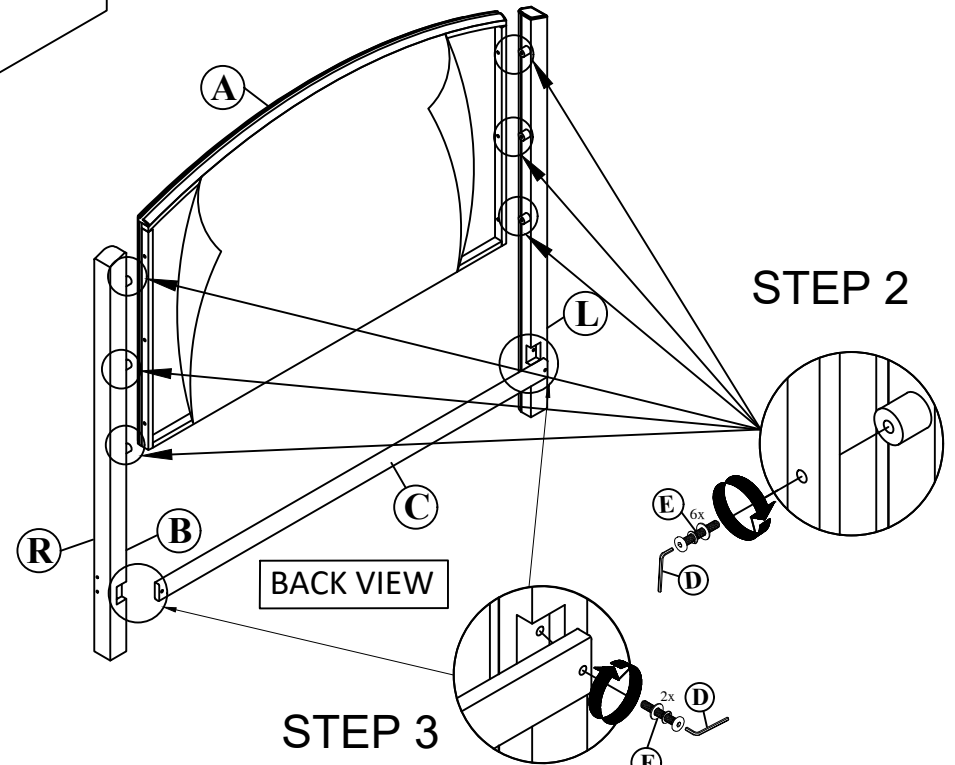

THE HARDWARE IS LOCATED IN THE PACKING ITEMS

MADE IN MALAYSIA

ASSEMBLY INSTRUCTIONS

MODEL:B6530-Q/NK-HB/B6530-Q/NK-FB/B6530-KQNK-RAIL QUEEN/NK BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with hardware list as below:

STEP 1

PART LIST			
(BOX 1) BOX OF HEADBOARD			
ITEM	DRAWING	DESCRIPTION	QTY
A		HEAD BOARD	1


(BOX 2) BOX OF FOOTBOARD			
ITEM	DRAWING	DESCRIPTION	QTY
B		FOOT BOARD	1
C		WOODEN SLAT	13
D		CENTER SLAT	1
E		SLATS SUPPORT	4

(BOX 3) BOX OF SIDE RAILS			
ITEM	DRAWING	DESCRIPTION	QTY
F		SIDE RAILS	2

(BOX 2) BOX OF FOOTBOARD HARDWARE LIST				
ITEM	DRAWING	DESCRIPTION	DIMENSION	QTY
G		C.S.K SCREW (M4)	4 x 32MM	9

THE HARDWARE IS LOCATED IN THE PACKING ITEMS


Screw Driver is not included

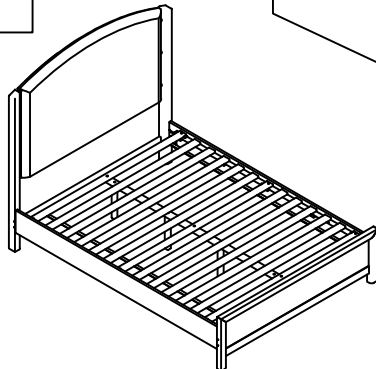


COMPLETED ASSEMBLY

NOTE: PERIODICALLY CHECK TO ENSURE THAT ALL CONNECTORS (BOLTS, SCREW, ETC) ARE TIGHT.

CLEANING INSTRUCTION
AFTER ASSEMBLED, CLEAN & POLISH THE COMPLETE PARTS IF NECESSARY WITH SOFT CLOTHES AND INDUSTRIAL RECOGNIZED FURNITURE POLISH.

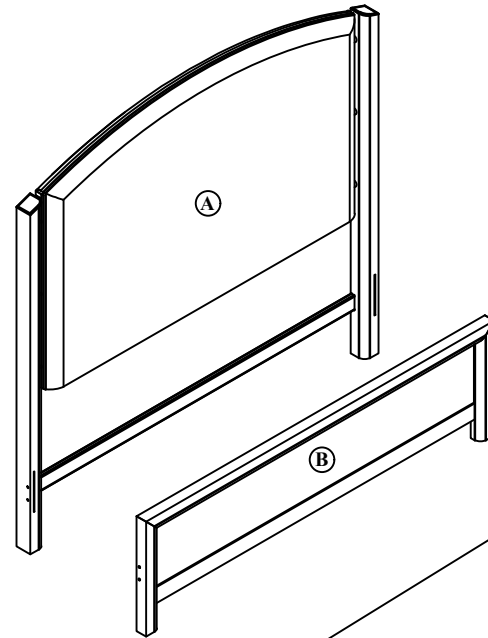


STEP 2
Fix both side rails to the Headboard and Footboard as below

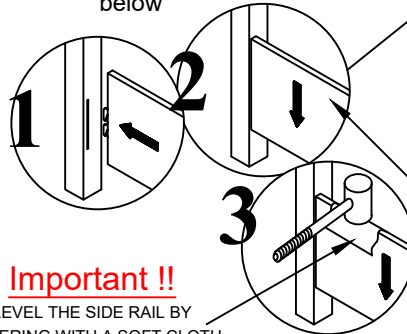

Important !!

LEVEL THE SIDE RAIL BY COVERING WITH A SOFT CLOTH AND TAPPING WITH A HAMMER.

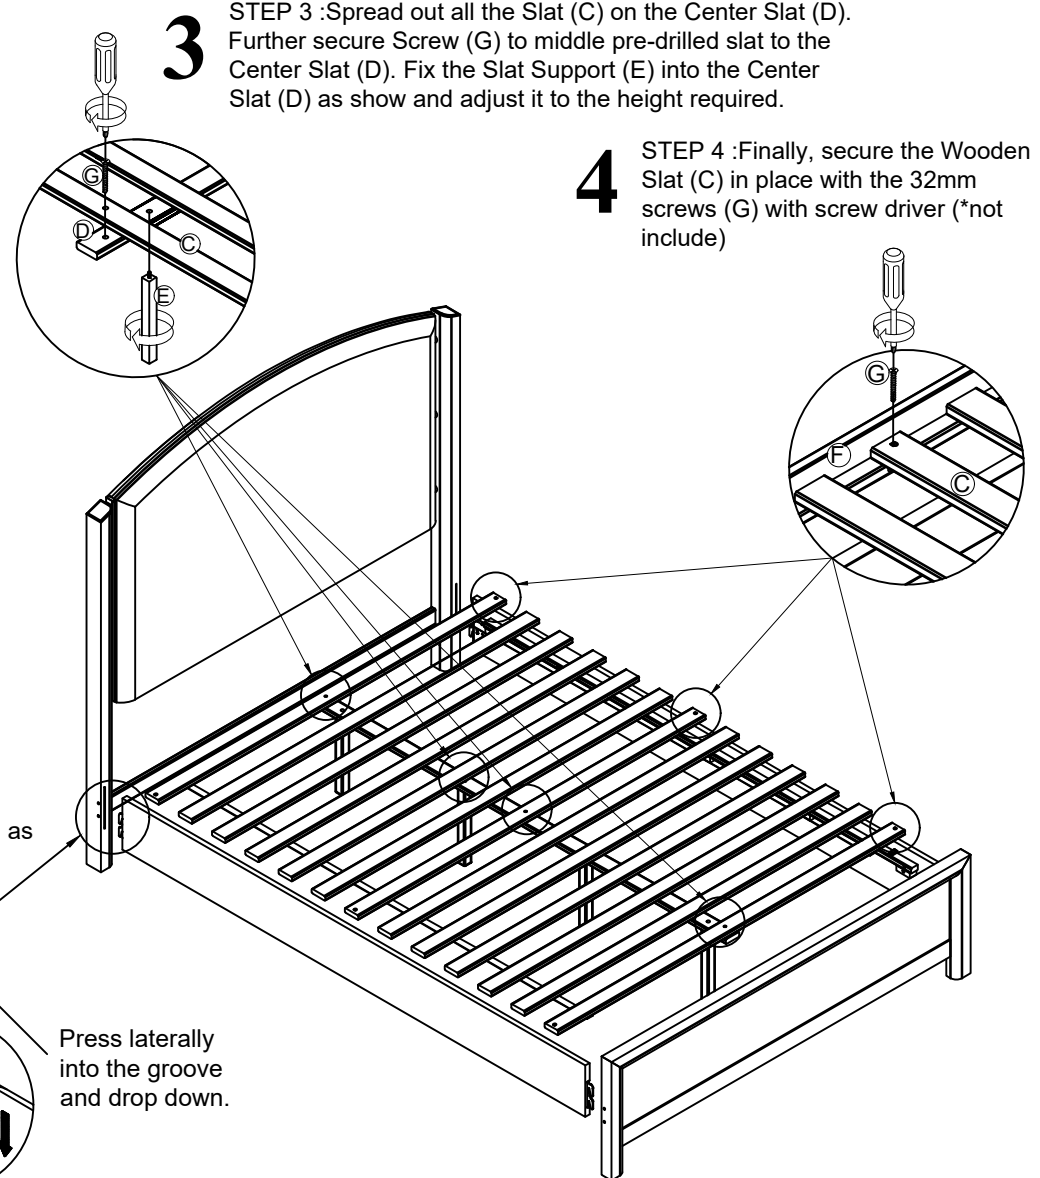

3

STEP 3 : Spread out all the Slat (C) on the Center Slat (D). Further secure Screw (G) to middle pre-drilled slat to the Center Slat (D). Fix the Slat Support (E) into the Center Slat (D) as show and adjust it to the height required.

4

STEP 4 : Finally, secure the Wooden Slat (C) in place with the 32mm screws (G) with screw driver (*not include)

Press laterally into the groove and drop down.

MADE IN MALAYSIA

THE HARDWARE IS LOCATED IN THE PACKING ITEMS