

PARTS LIST

PLEASE ALWAYS CHECK EVERY PART BEFORE ASSEMBLY

A


1 PCE

B

4 PCS

Chair Body

Legs

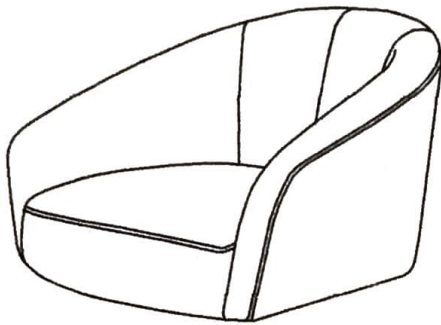

①



16PCS

②

1 PCE

Allen Bolts 1/4x3/4"

Allen Wrench

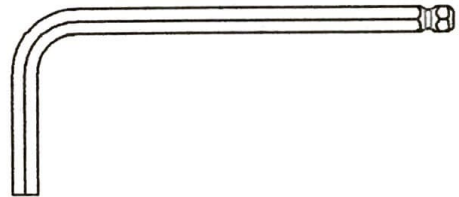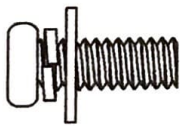

Tips:

1. For ensuring the entire unit will properly align, secure all bolts 80% tight, adjust the unit to be evenly aligned, then secure all the bolts completely and tightly.

Step 1: Fasten the Legs (B) to the bottom of Chair Body (A).

