
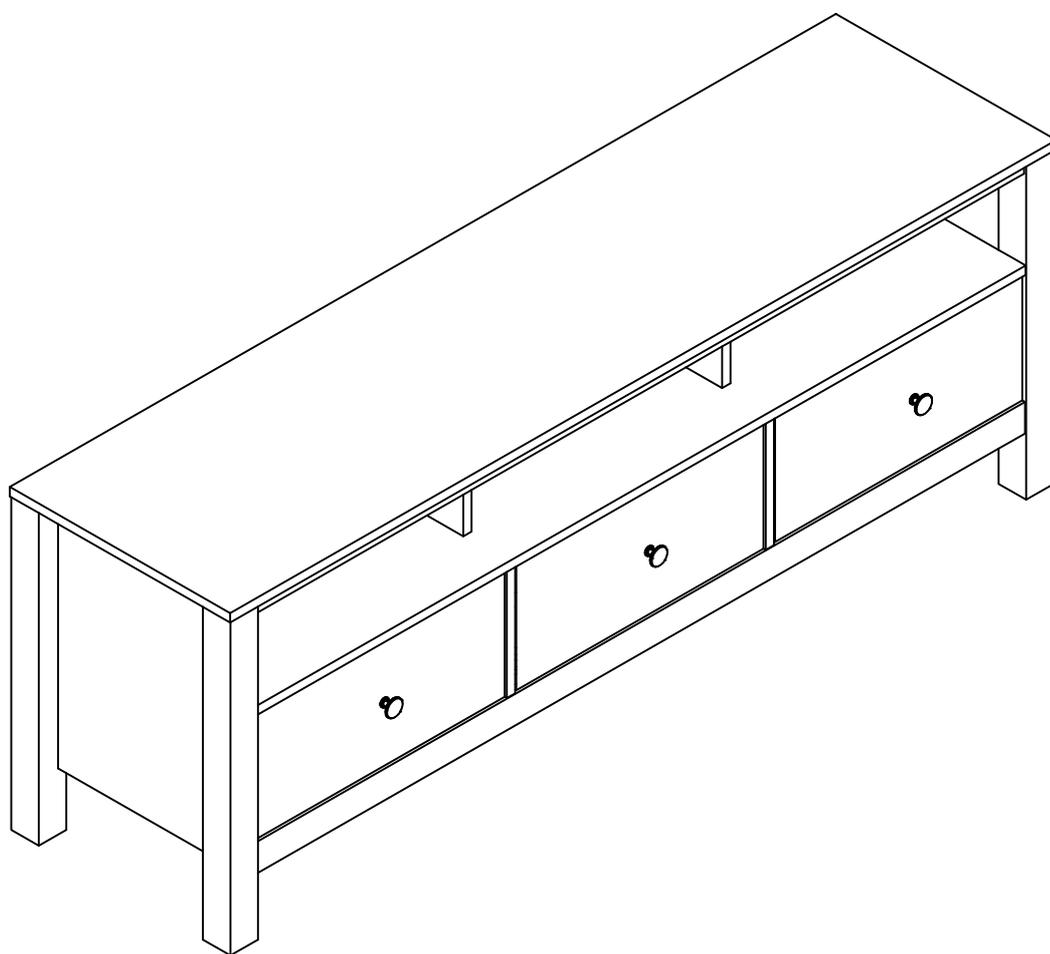





625-041 Cabinet with 3 drawers

Assembly Instructions

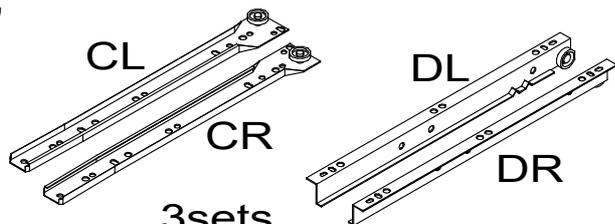



Assembly Instructions

<p>Ø15x11</p>  <p>A x 48</p>	<p>Ø7.8x35</p>  <p>B x 48</p>	<p>Ø8x30</p>  <p>C x 34</p>	<p>Ø8x40</p>  <p>D x 8</p>
<p>Ø3.5x14</p>  <p>E x 24</p>	<p>Ø4x25</p>  <p>F x 3</p>	<p>Ø4x40</p>  <p>G x 20</p>	 <p>H x 4</p>
<p>Ø28xØ12x20H</p>  <p>I x 3</p>	<p>Ø4x16</p>  <p>J x 8</p>	<p>M4x20</p>  <p>K x 3</p>	 <p>L x 12</p>
<p>Ø3x16</p>  <p>M x 12</p>	<p>14"</p>  <p>CL CR DL DR 3sets</p>		

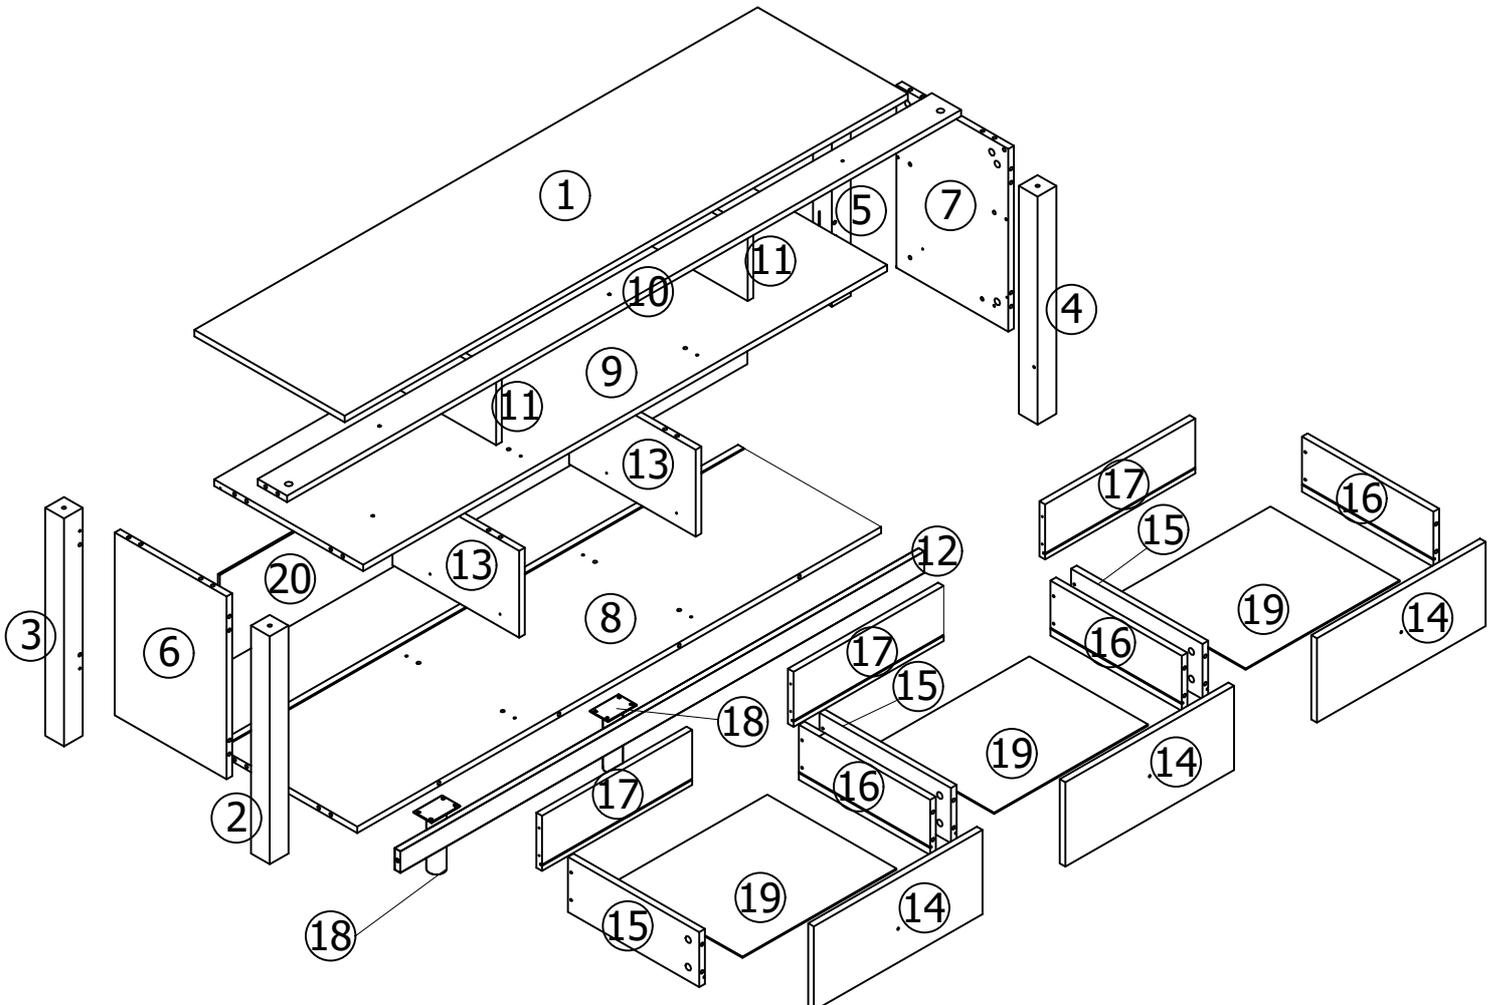

STEP 1



- A x 8
- B x 8
- D x 8
- E x 4
- CL x 1
- CR x 1

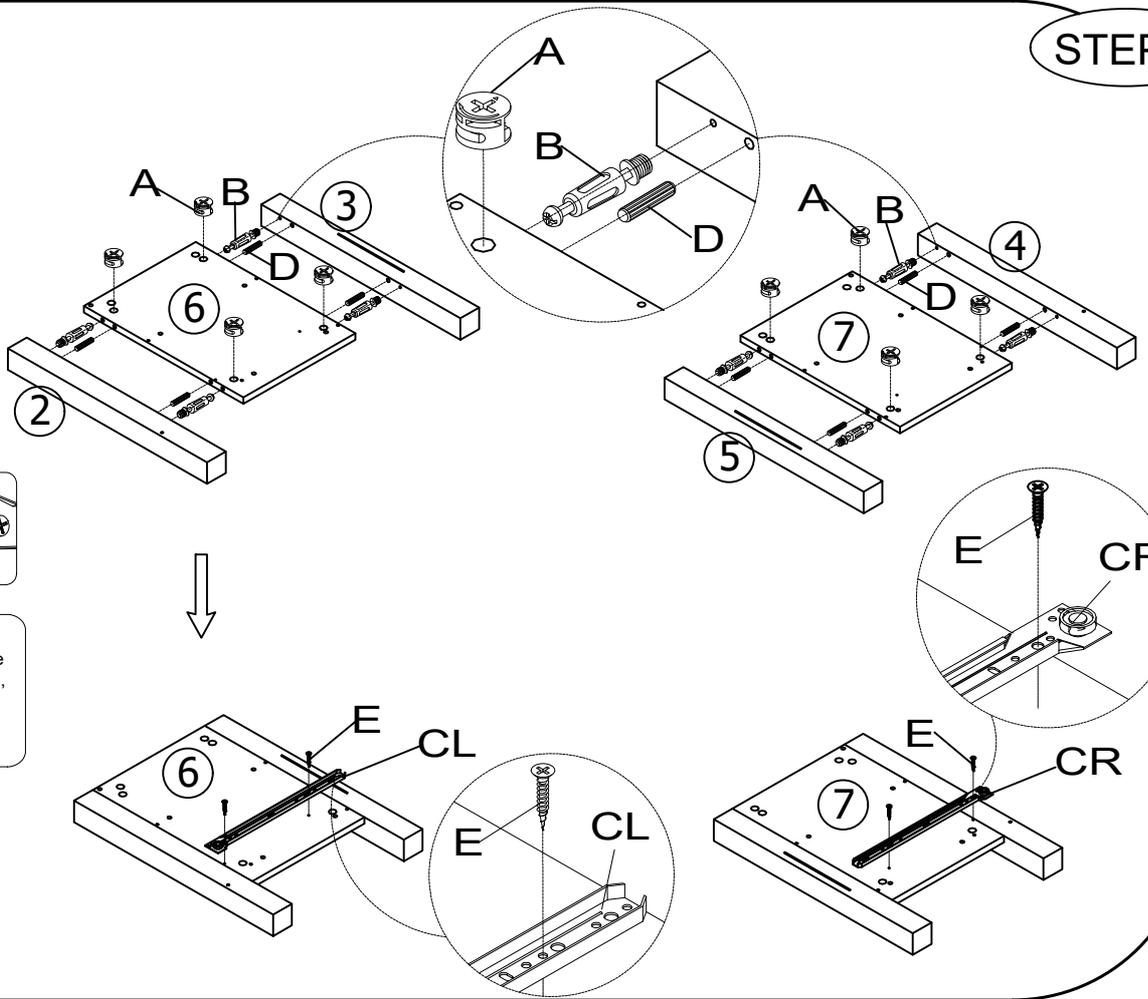

REMARK:
When installing, please make sure the screws are flattened, Not crooked; Otherwise the drawers will not be installed perfectly.

STEP 2

- E x 8
- CL x 2
- CR x 2

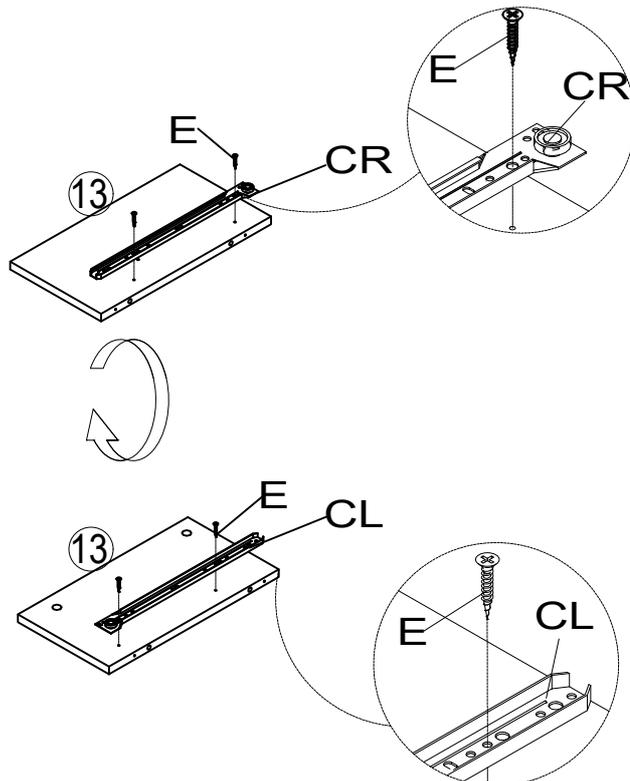


REMARK:
When installing, please make sure the screws are flattened, Not crooked; Otherwise the drawers will not be installed perfectly.

x2


STEP 3

A x 4
B x 4

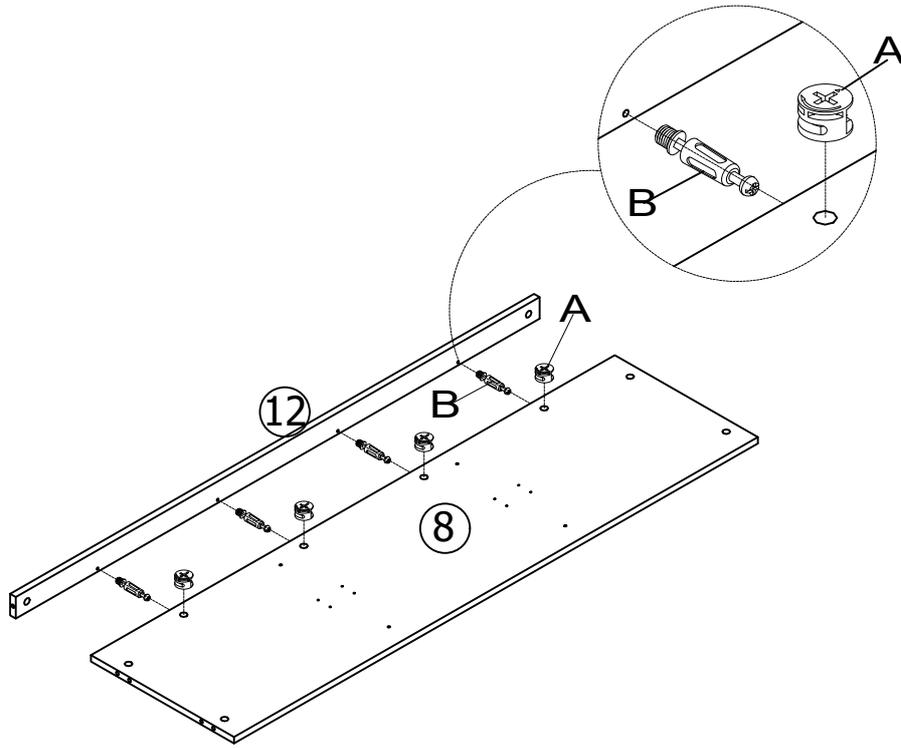


STEP 4

A x 4
B x 4
C x 12
G x 8

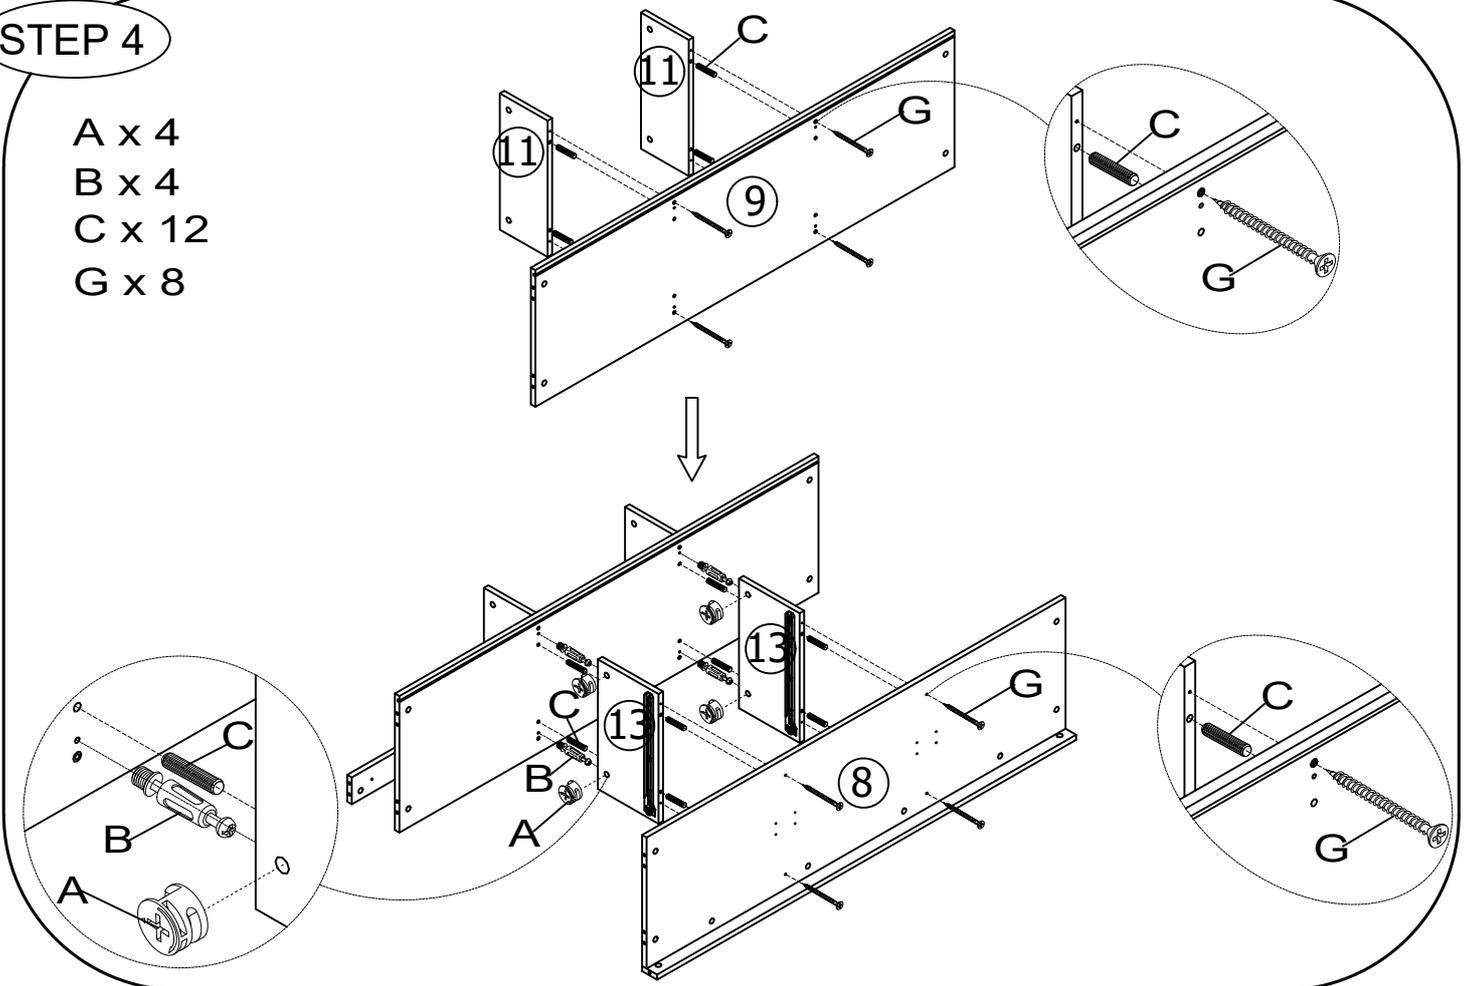


STEP 5

A x 6
B x 6
C x 5

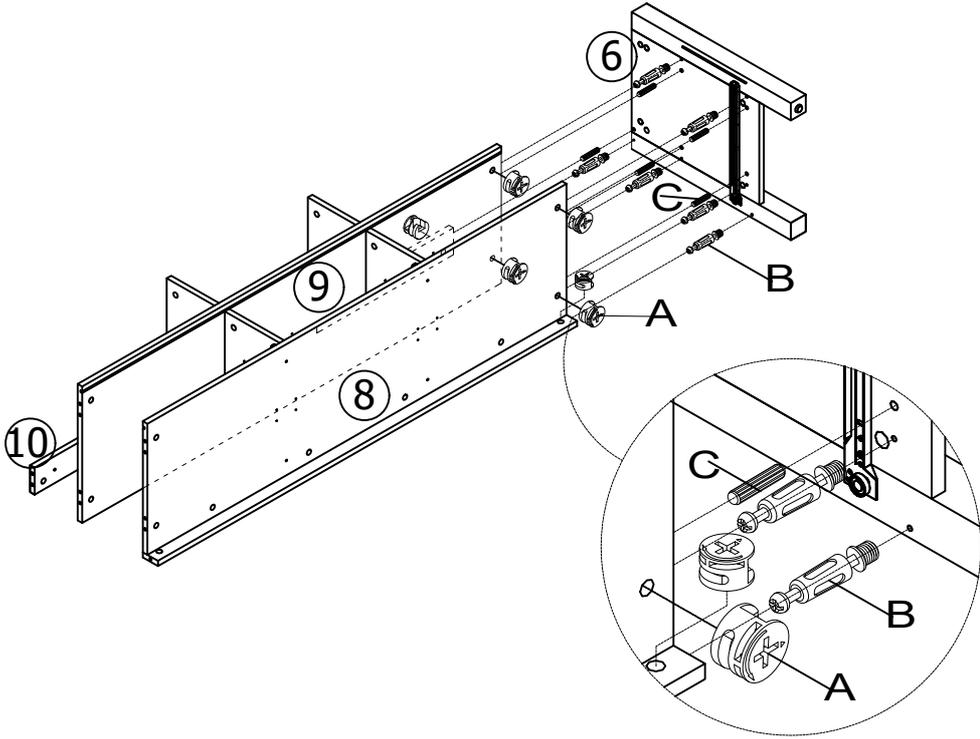


STEP 6

A x 6
B x 6
C x 5

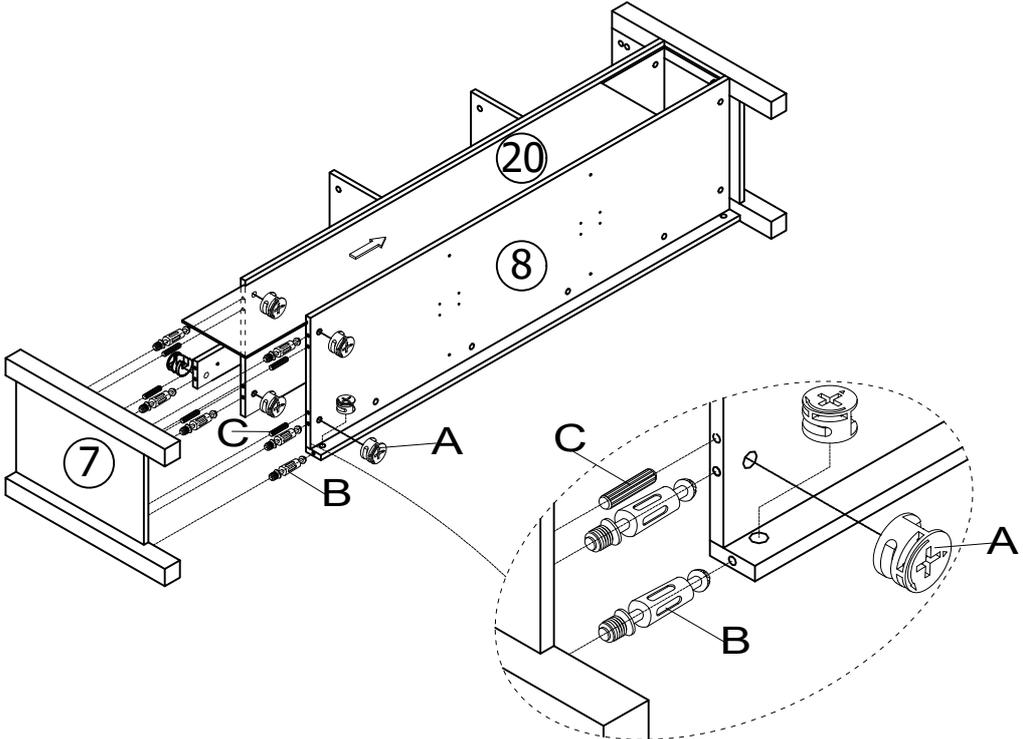


STEP 7

- H x 4
- J x 8
- L x 12
- M x 12

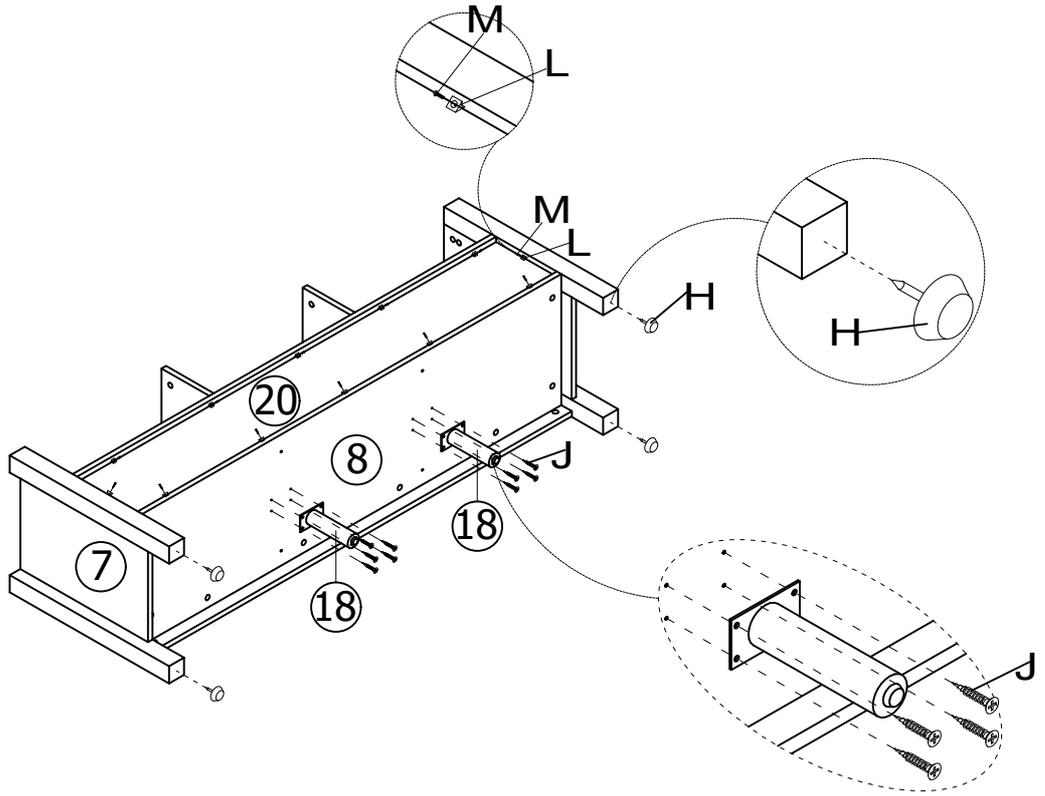


STEP 8

- A x 8
- B x 8
- C x 12
- F x 3

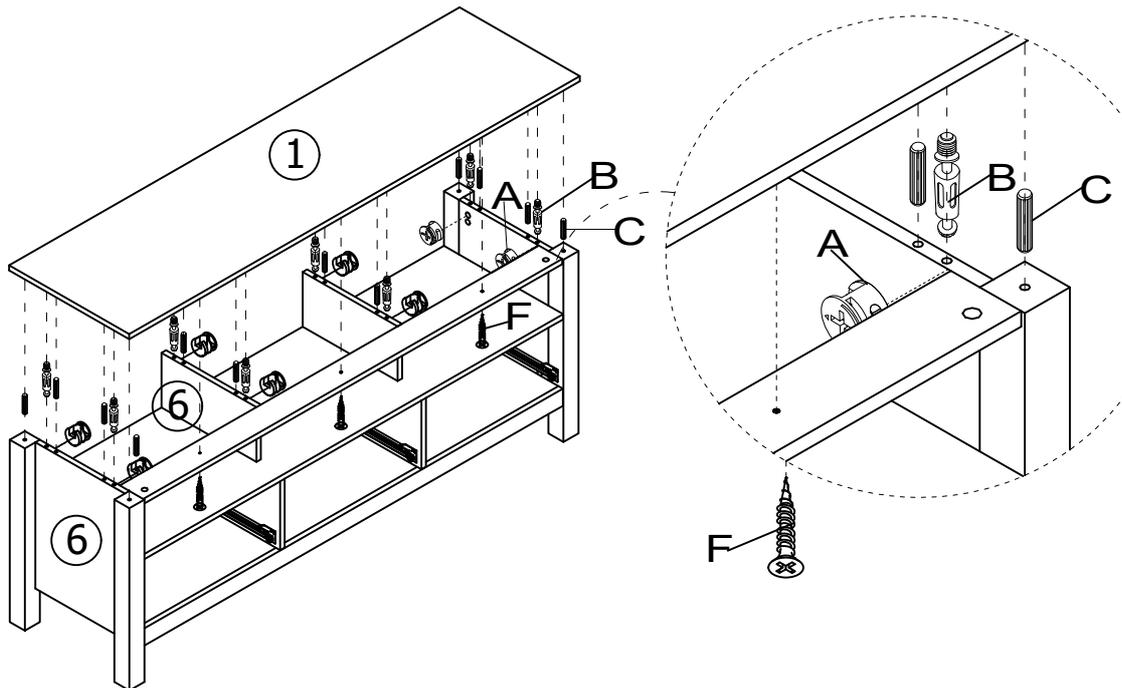

STEP 9


- A x 12
- B x 12
- G x 12

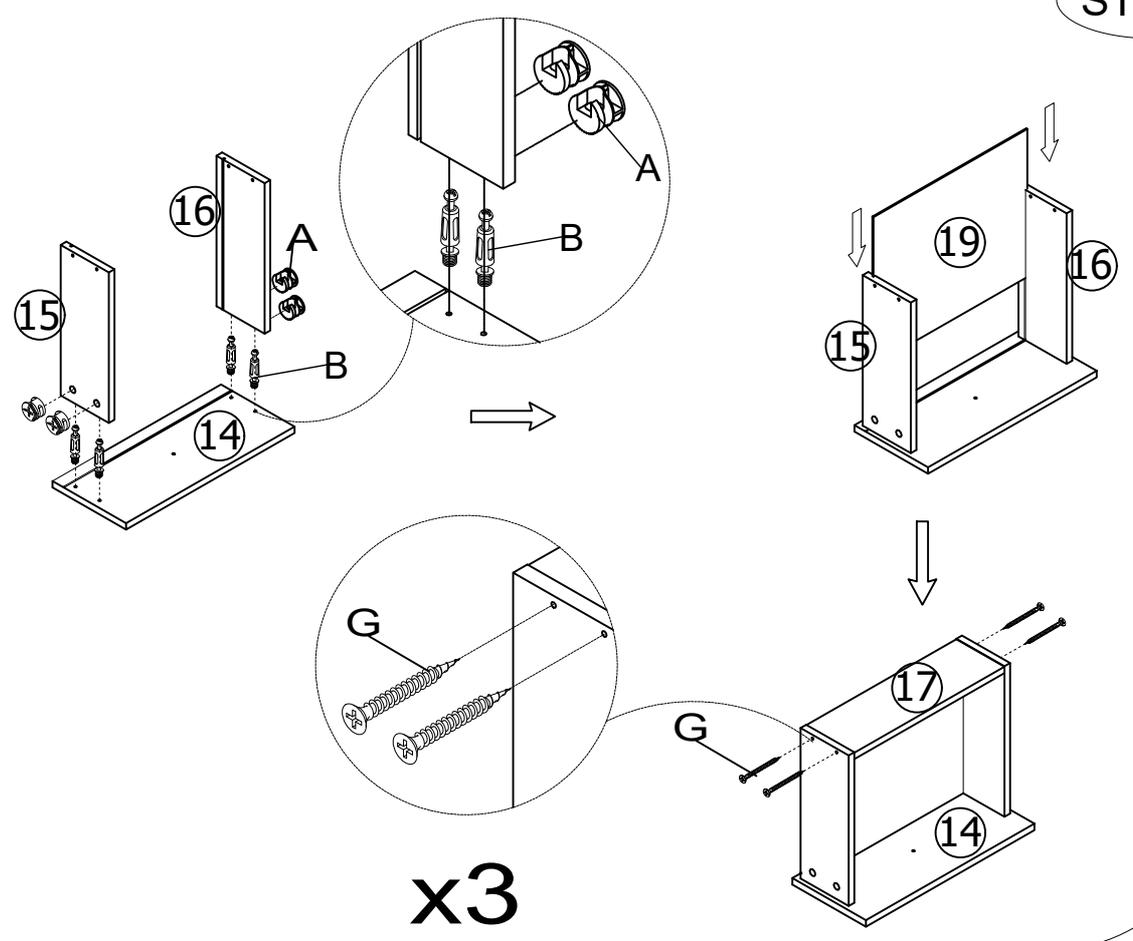

x3


STEP 10

- E x 12
- I x 3
- K x 3
- DL x 3
- DR x 3

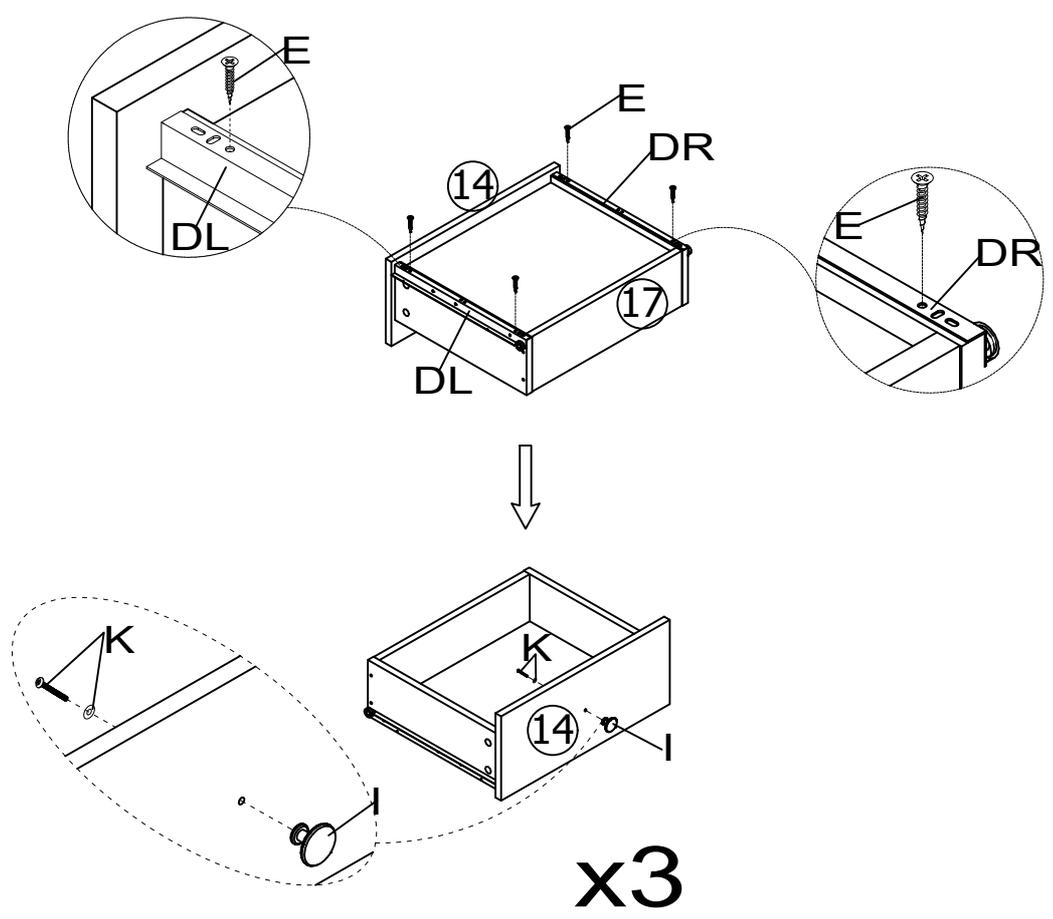


x3

STEP 11

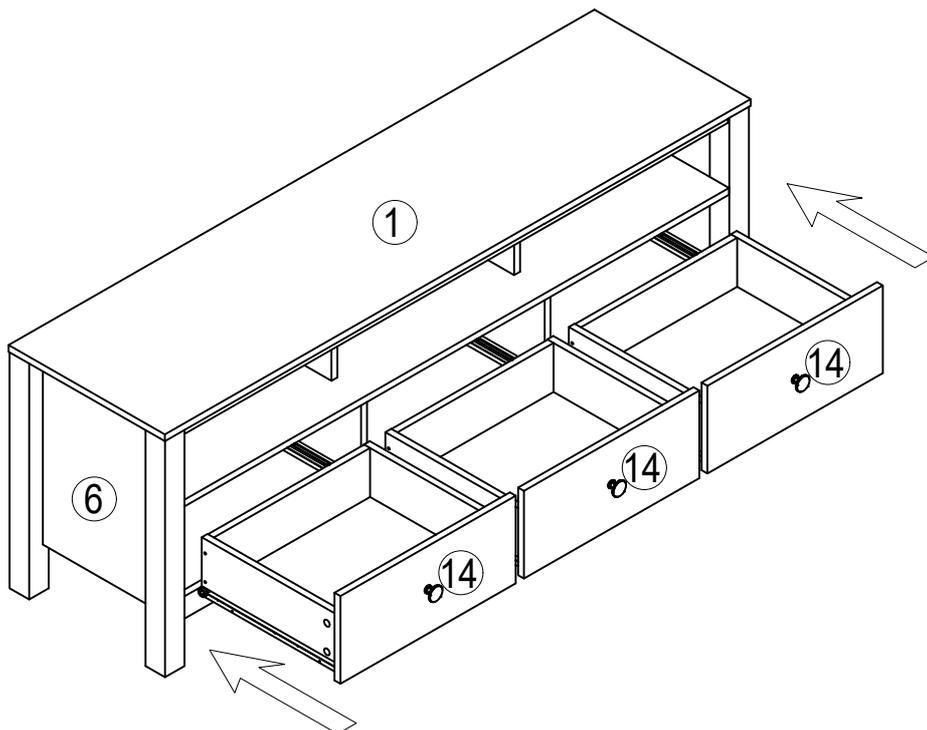

STEP 12

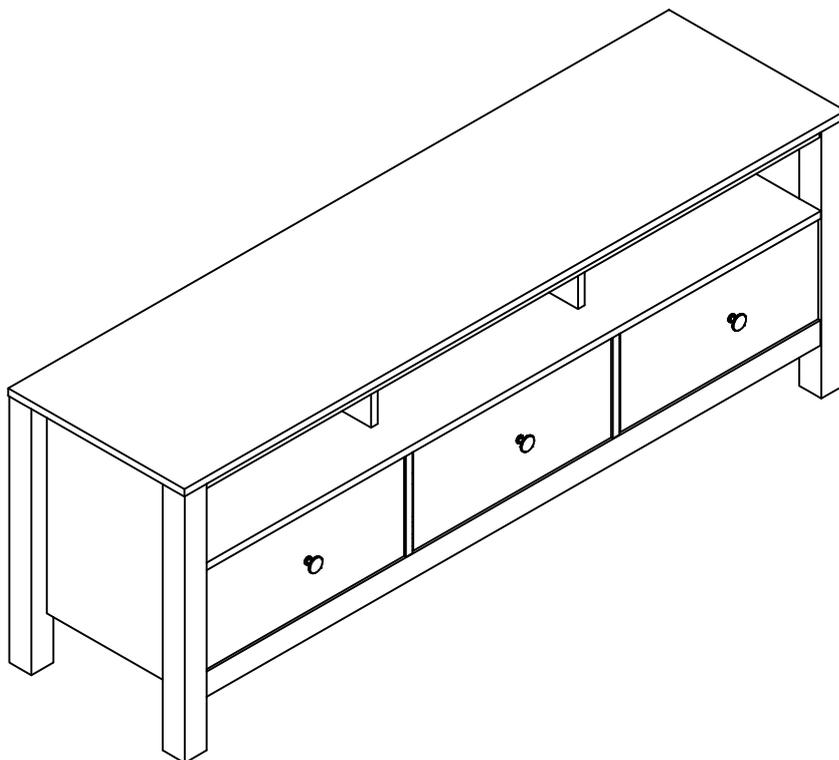

FINISH