
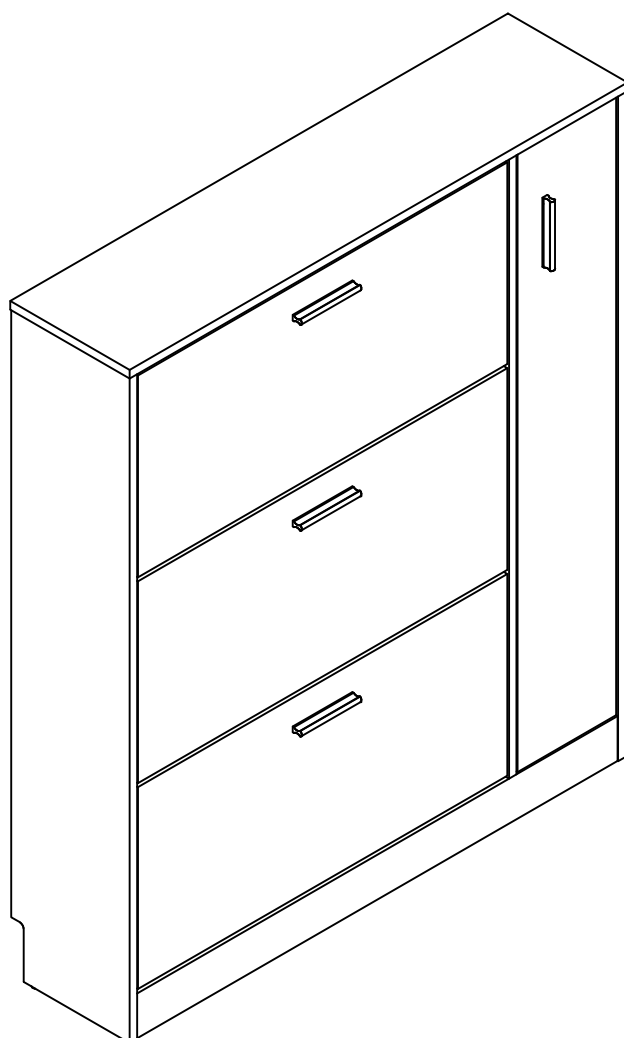










625-043 Shoe cabinet with 1 door and 3 drawers

Assembly Instructions




Assembly Instructions

Ø15x11  A x 23	Ø7.8x35  B x 23	Ø8x30  C x 14	Ø4x16  D x 36
Ø3.5x14  E x 24	F x 3  F x 3	G x 6  G x 6	M4x20  H x 8
Ø5x16  I x 8	105x15x7  J x 4	K x 3  K x 3	Ø12  L x 6
Ø18  M x 6	Ø25x17x9  N x 6	O x 22  O x 22	Ø3x16  P x 22
Ø7.8x38  Q x 2	Ø5*60  R x 2	Ø4x40  S x 2	900mm  U x 2

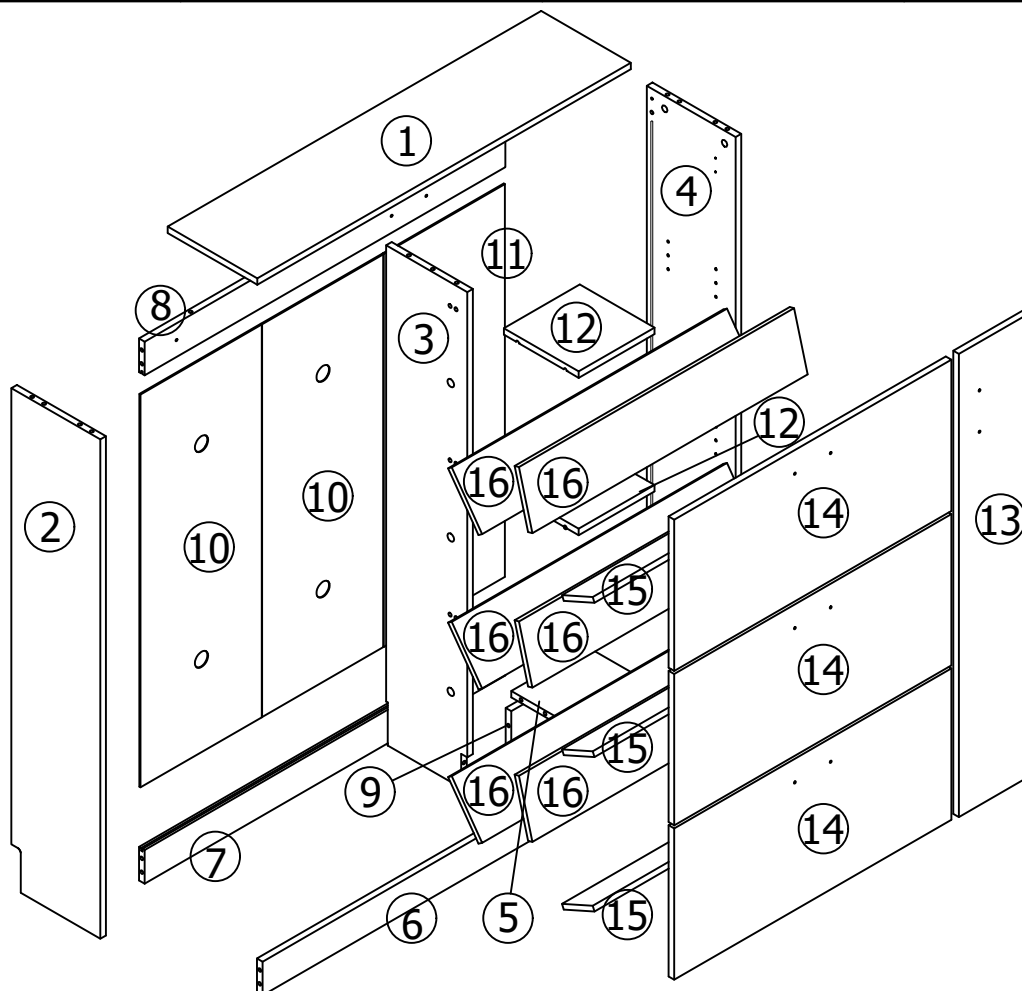


STEP 1

M x 6
N x 6

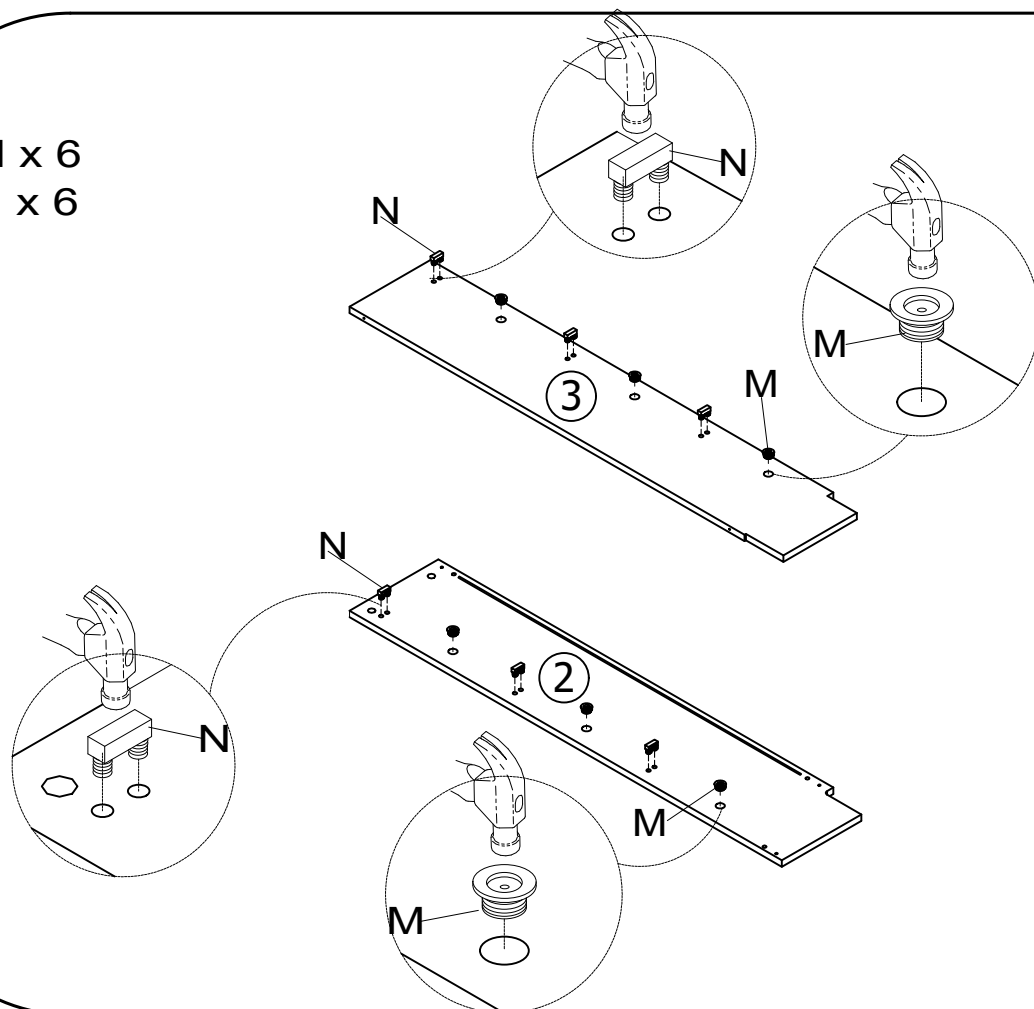


STEP 2

A x 4
B x 4
C x 2

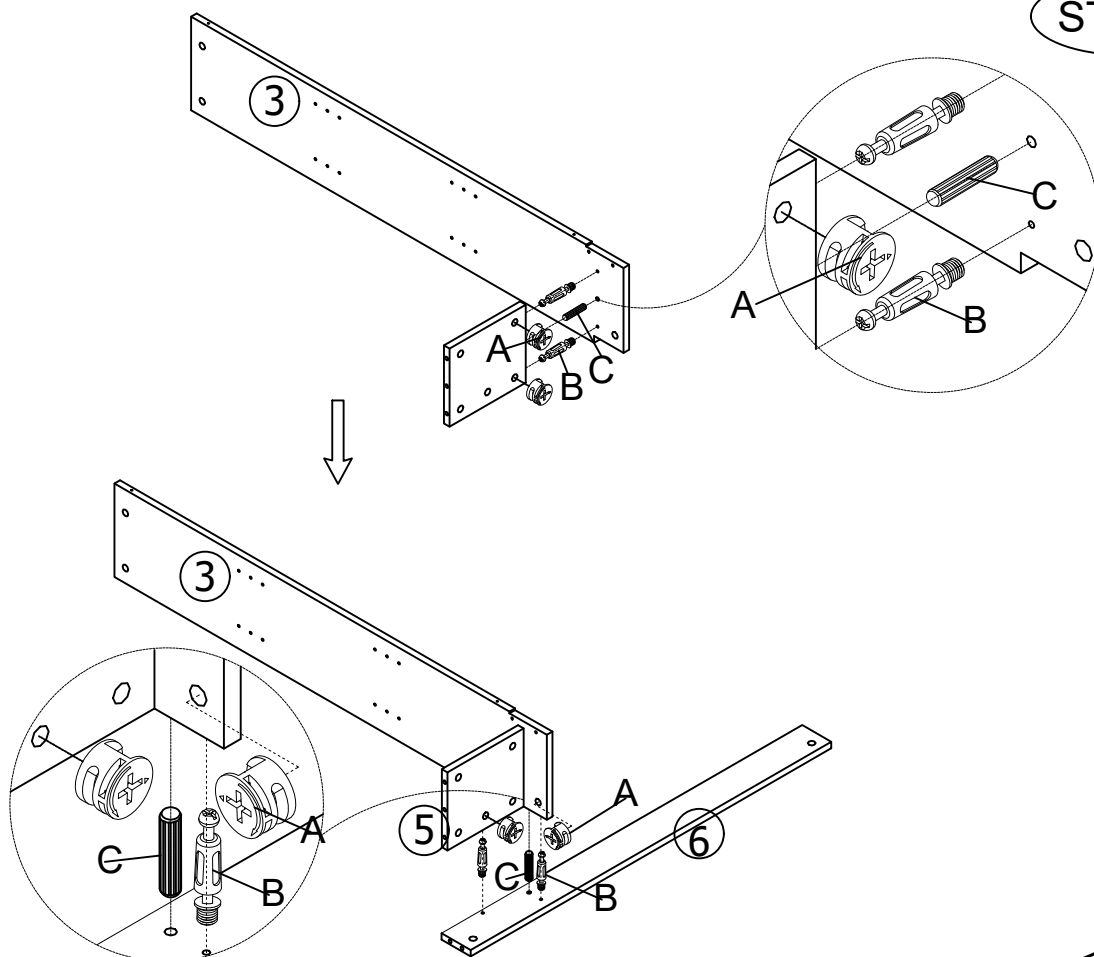


STEP 3

A x 3
B x 3
C x 3
S x 2
U x 2

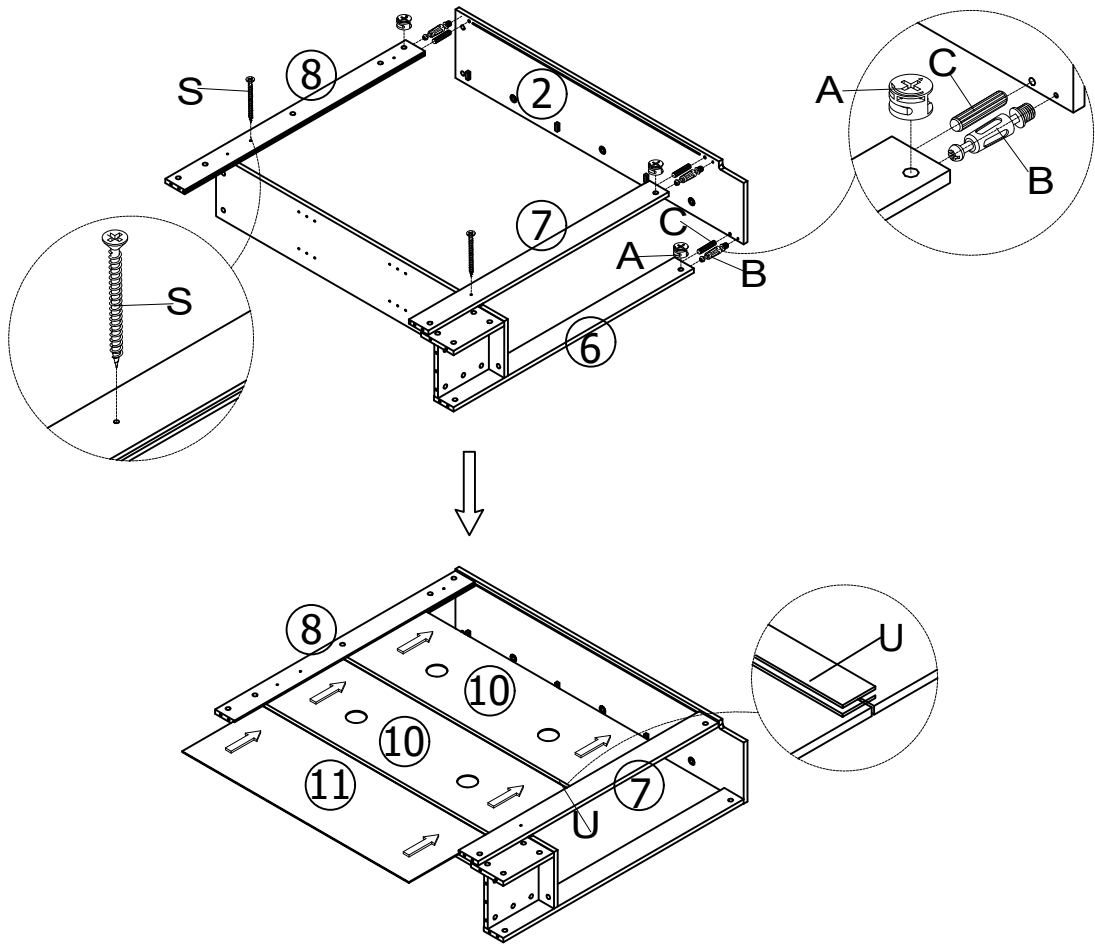


STEP 4

A x 7
B x 7
C x 4
G x 6
O x 22
P x 22

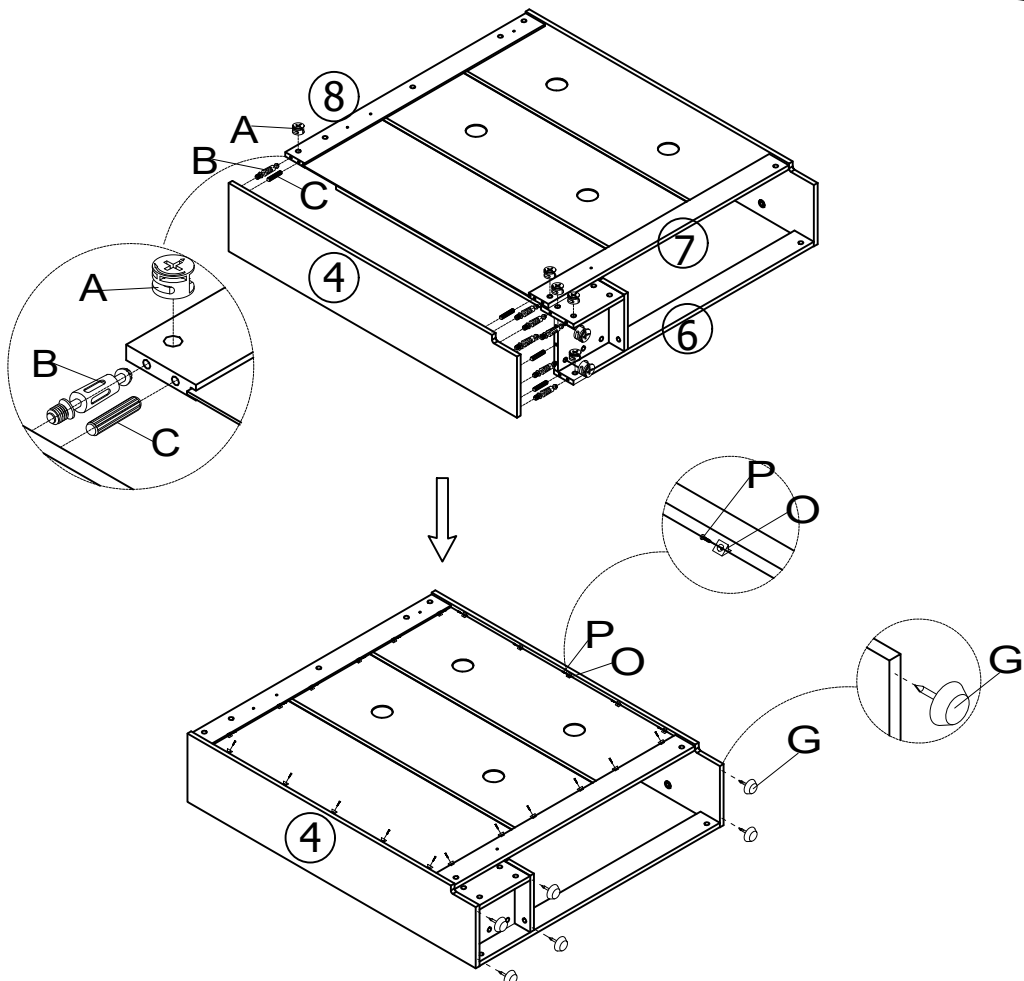


STEP 5

A x 9
B x 9
C x 5

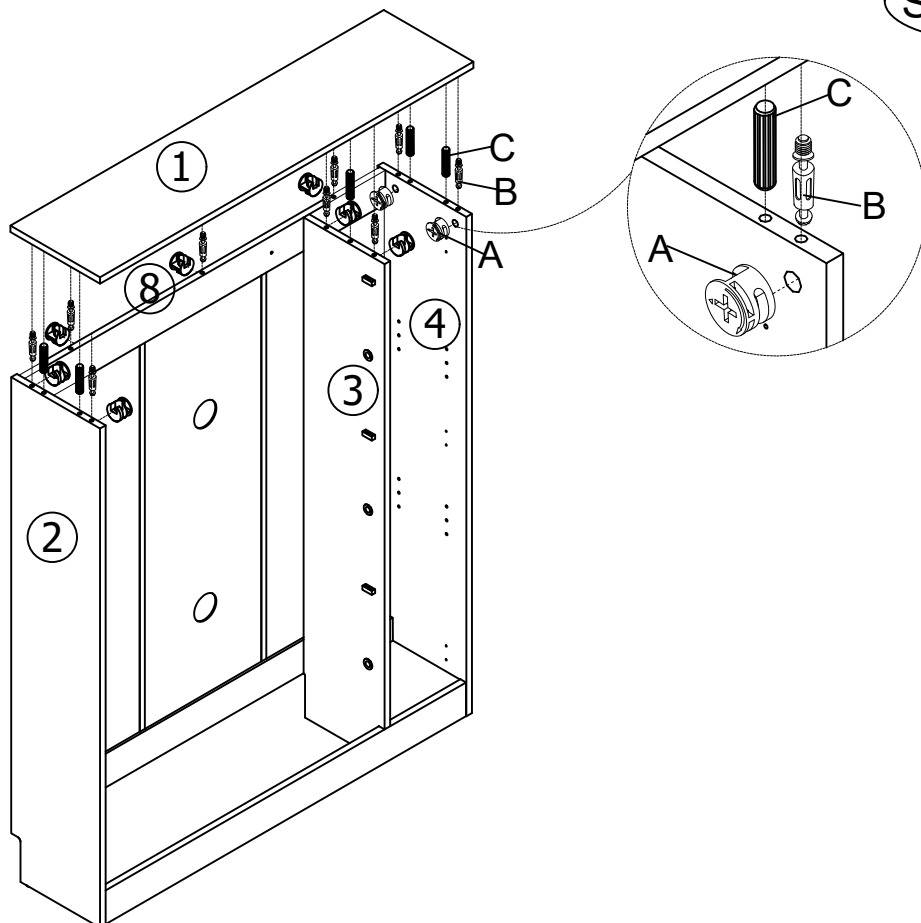

STEP 6

Q x 2
R x 2

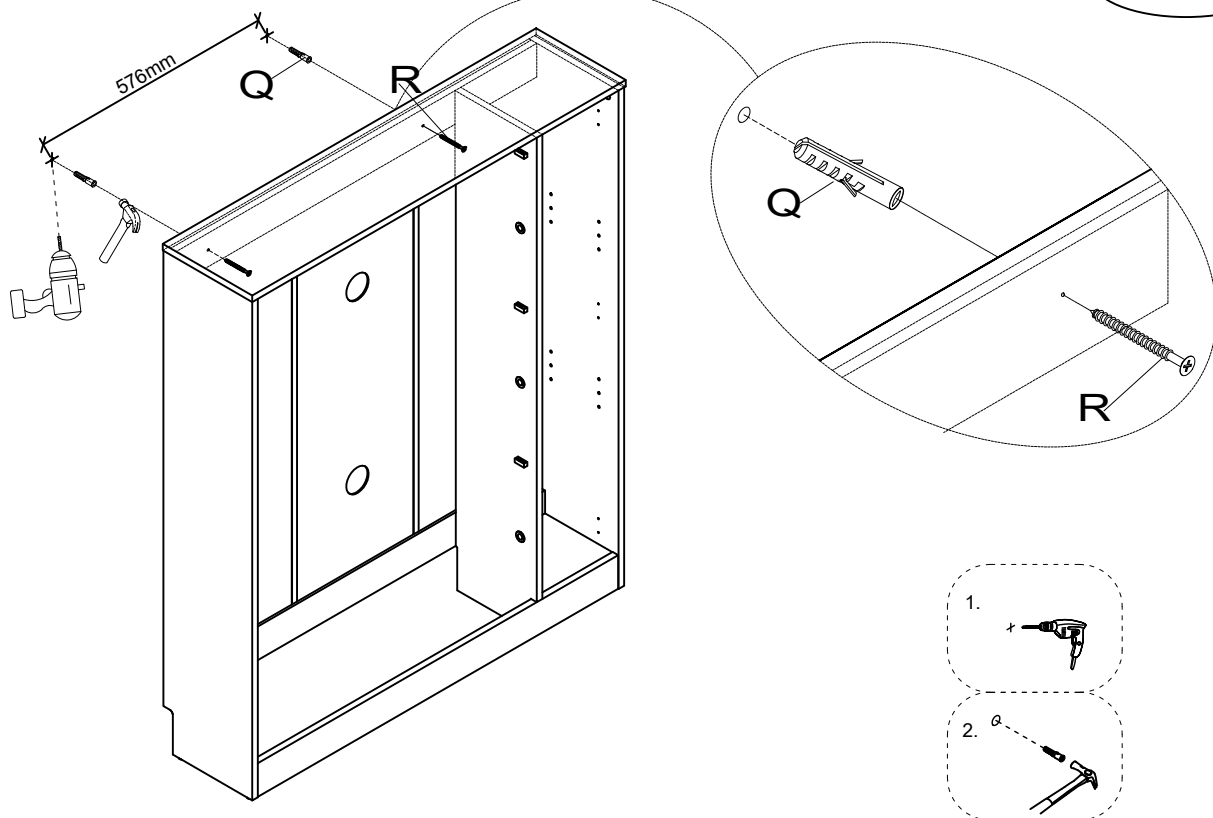

STEP 7


D x 18

E x 12

H x 6

J x 3


K x 3

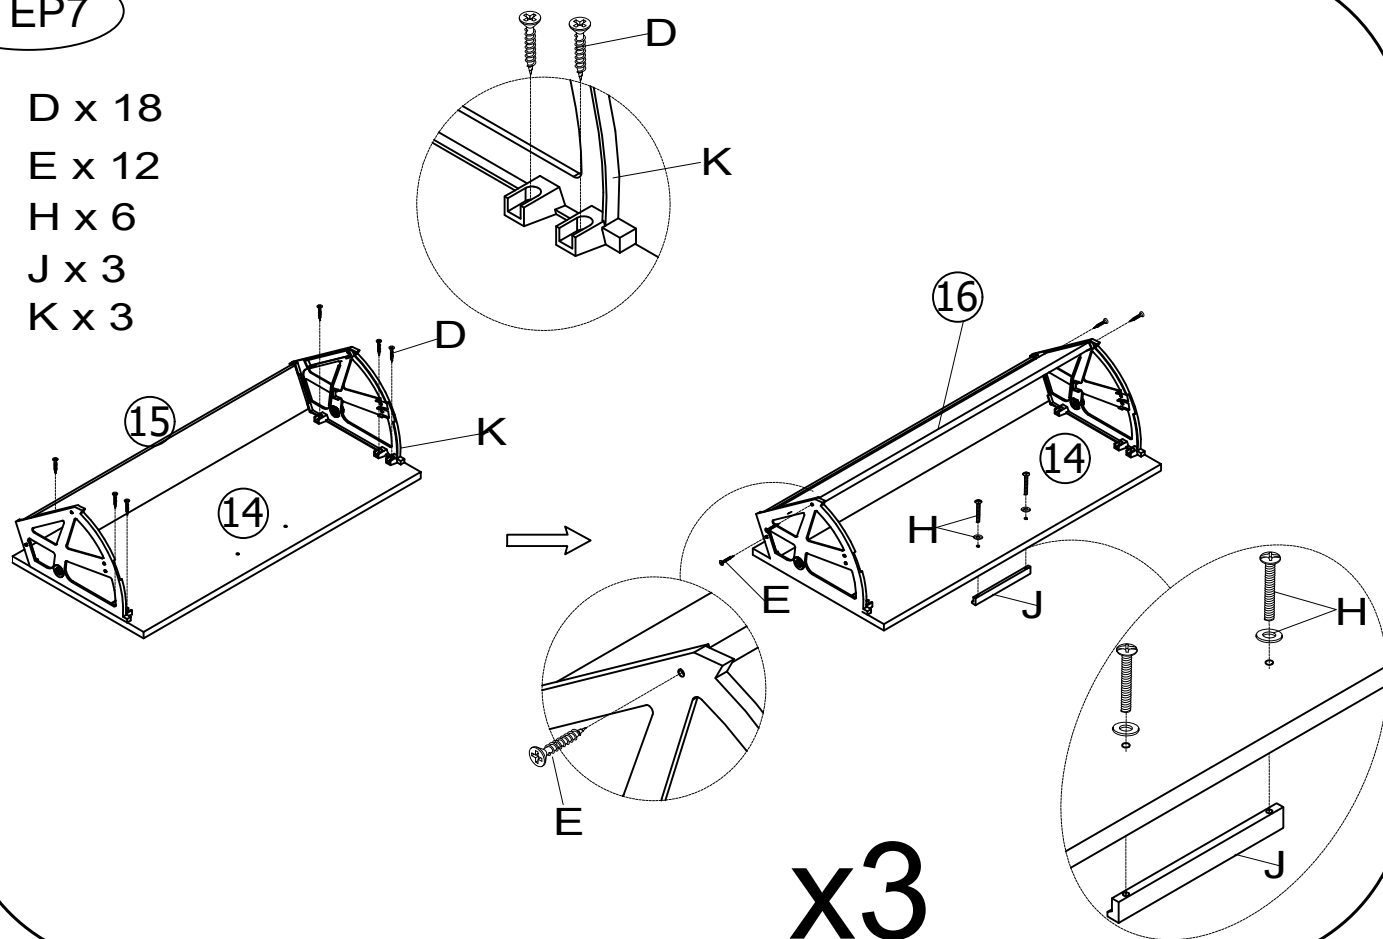

STEP 8


E x 6

L x 6

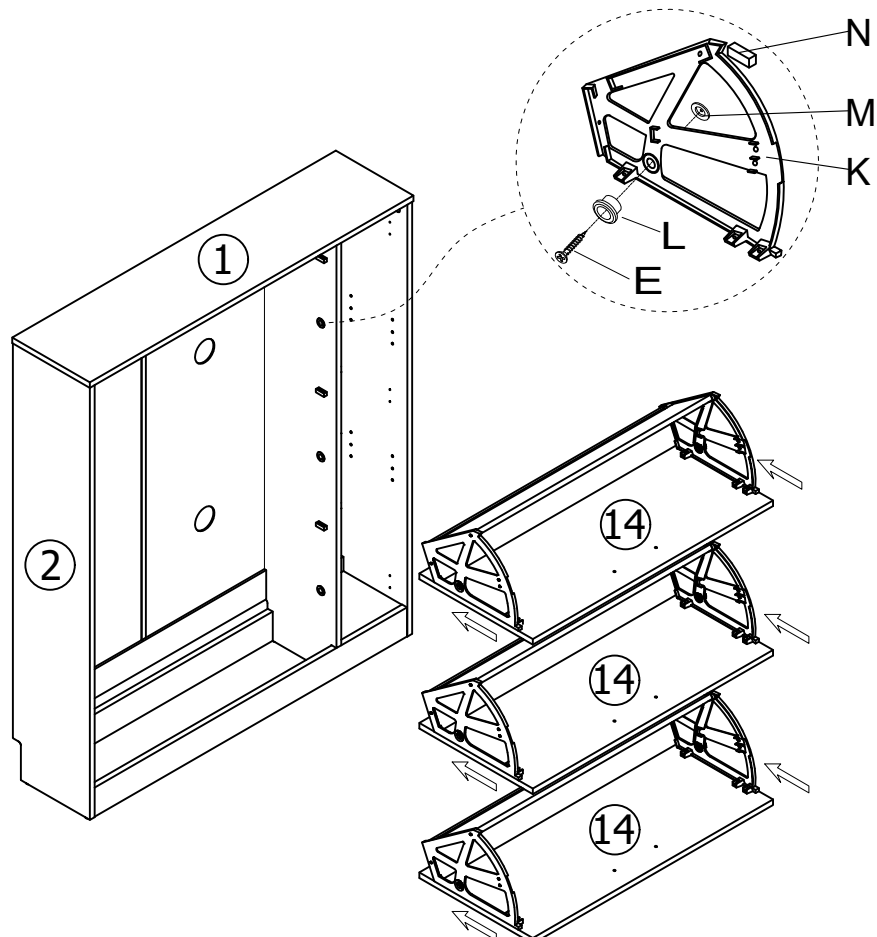


STEP 9

E x 6

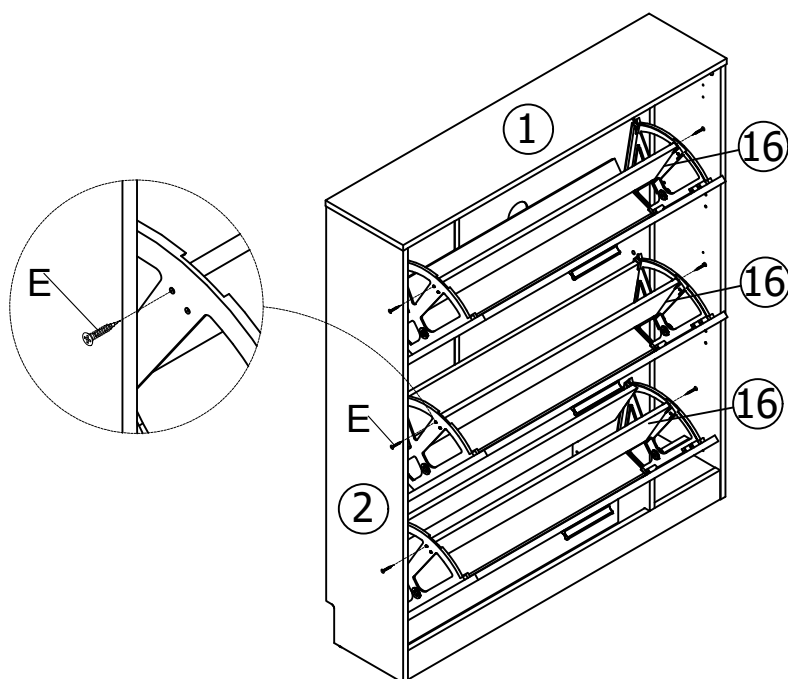


STEP 10

I x 8

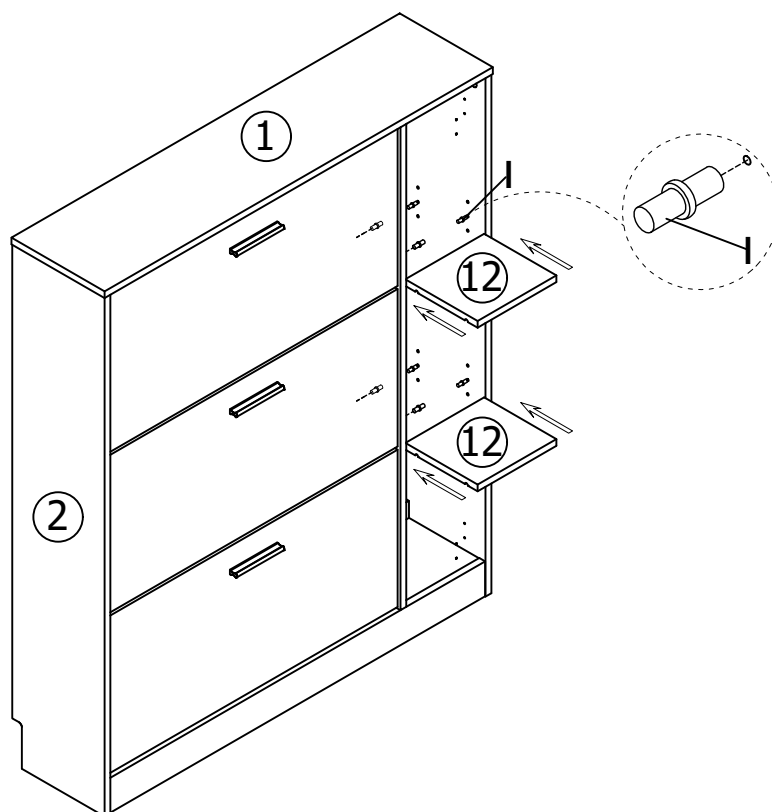


STEP 11

D x 18
F x 3
H x 2
J x 1

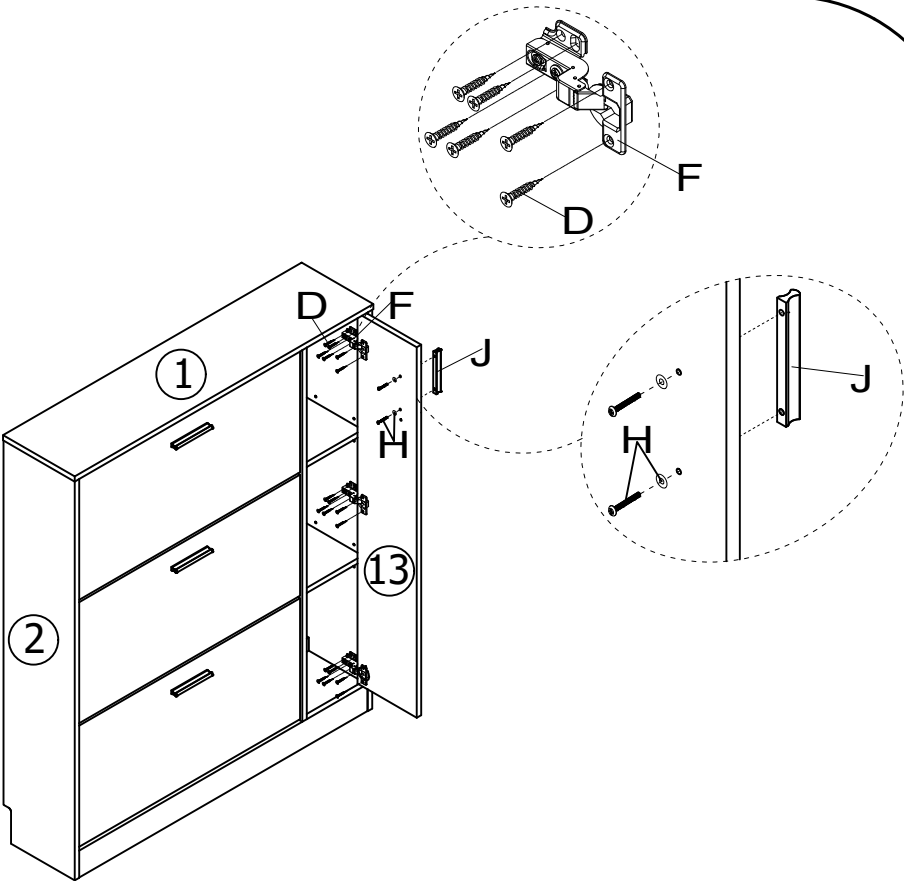

STEP 12

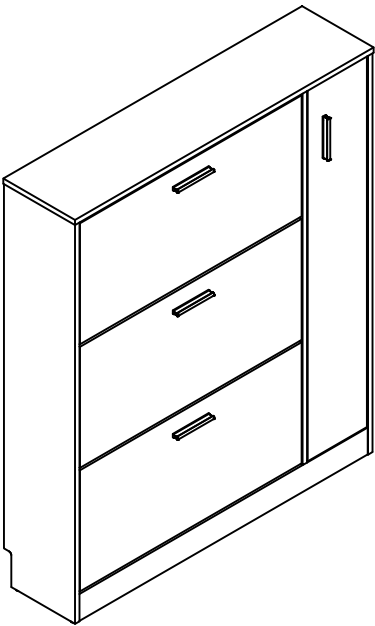

FINISH