


# Assembling Instruction

Generating Drawings

Item #: PDYX8052

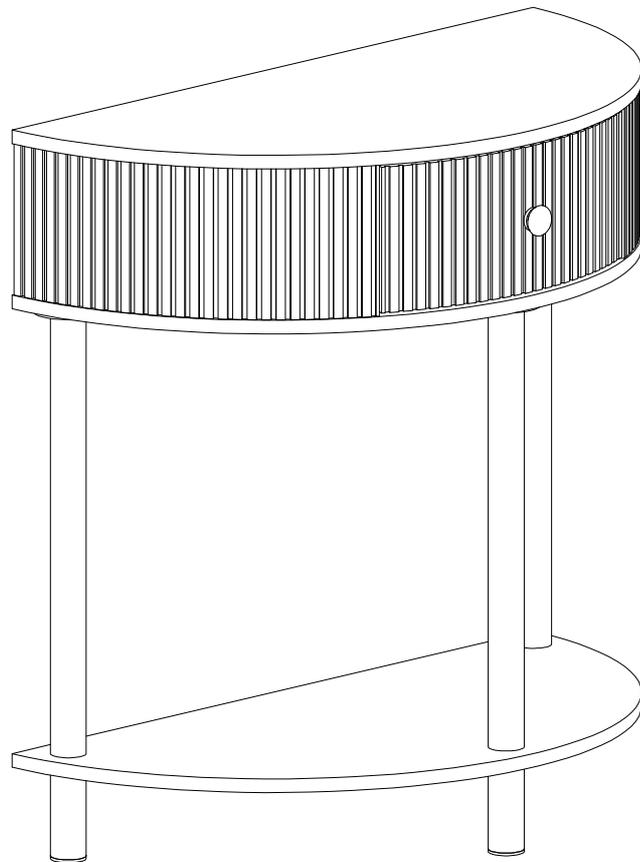

ATTENTION

If there is any missing, please kindly send us messages to let us know the name of missing part regarding to the first page of instructions.

Please also provide us your full address so we can send replacement to you as soon as possible

We are concerned about each customer's experience, if there is any loss or damage, please contact us at any time, we will provide effective solutions.


Customer service E-mail: [cservice7@yeah.net](mailto:cservice7@yeah.net)

Please attach your Order ID so that we can assist you better




# General Assembly Guidelines



- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- VI . A Phillips head screwdriver is required for the assembly of this product .

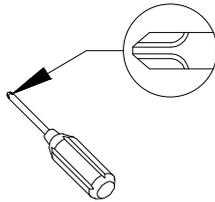


- VII . Power tools should not be used to assemble this product .

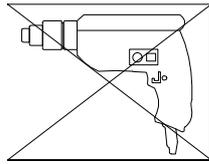

## CAM LOCK/BOLT FASTENING INTRODUCTION (You will use it during assembly)

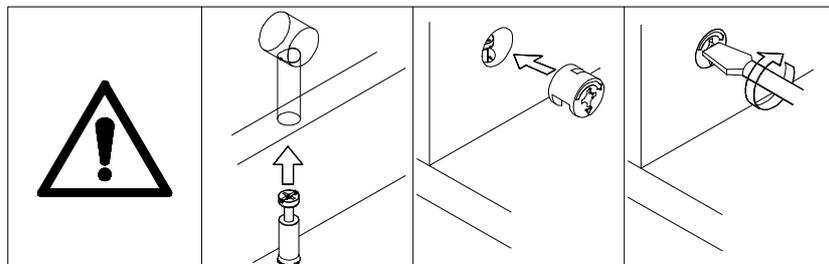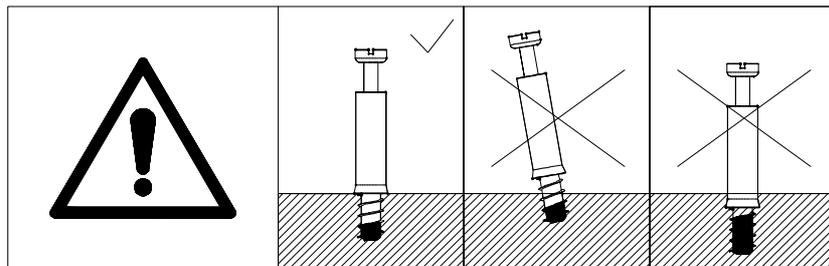

# Parts List

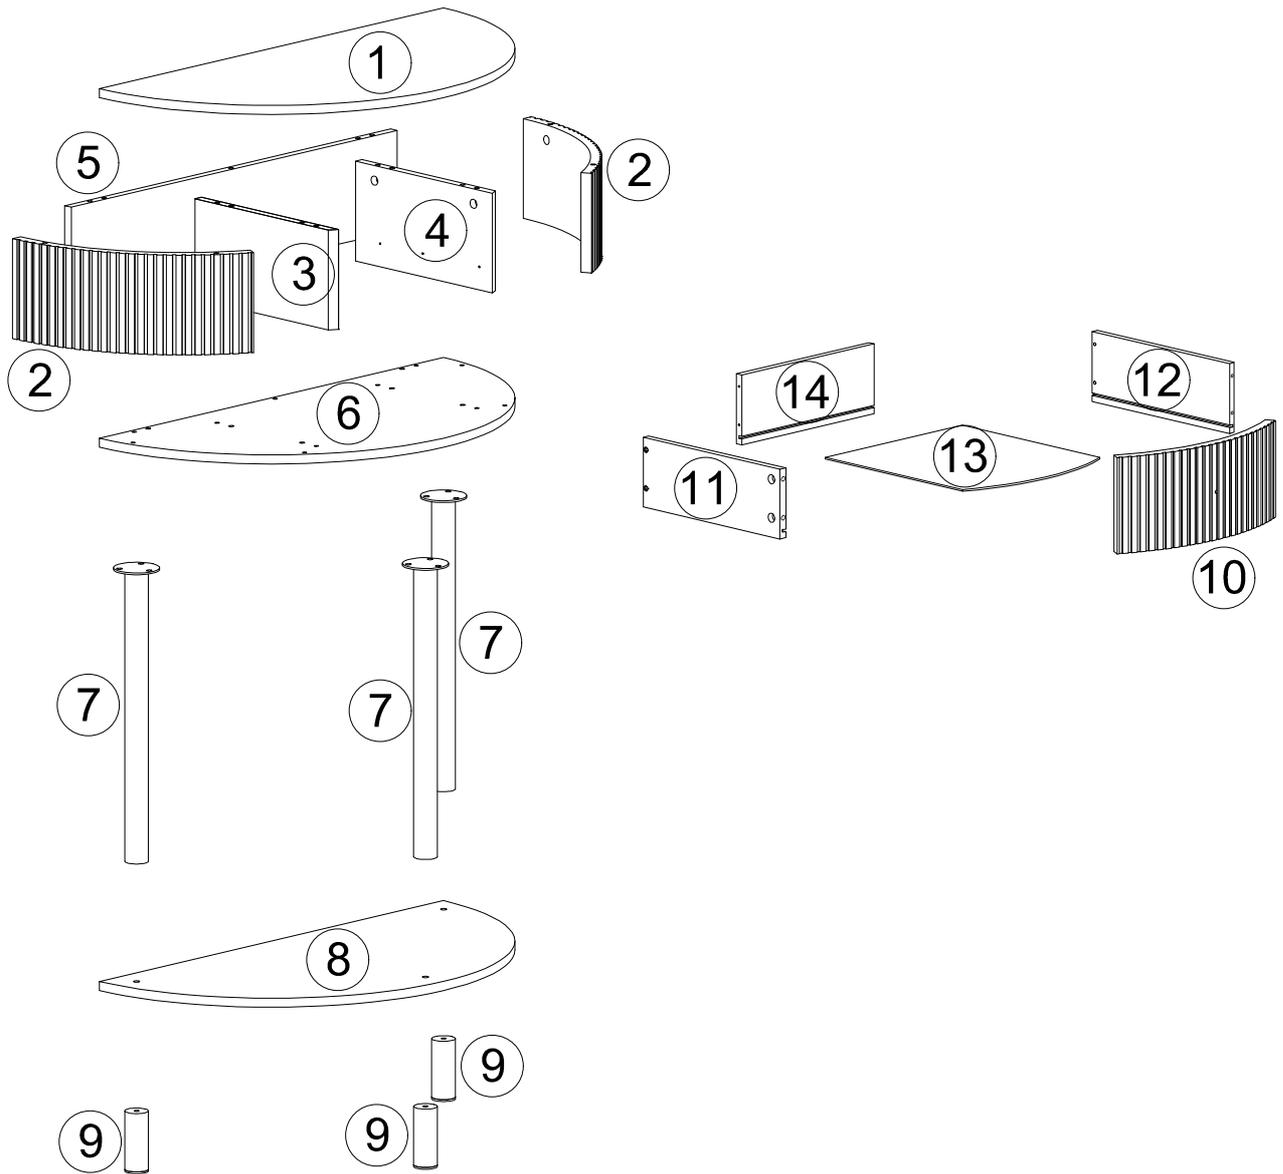

# HARDWARE PACK CONTENT

**A**



Ø6\*35mm

15X+ 1

**B**



Ø15\*11mm

11X+ 1


**C**



Ø8\*30mm

12X+ 1

**D**

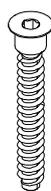

Ø6\*48mm

11X+ 1


**E**



Ø4\*30mm

4X

**F**

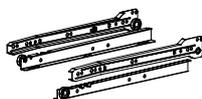

300mm

1X

**G**



Ø3.5\*12mm

12X+2


**H**



M4\*22mm

1X

**I**

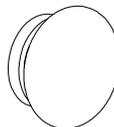

1X


**J**



M6\*12mm

9X+1

**K**

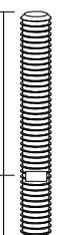


50MM  
15MM

M8\*65mm

3X

**L**

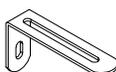

1X

**M**



Ø8\*40mm

1X

**N**



Ø4\*14mm

1X


**O**



Ø4\*38mm

1X

**P**

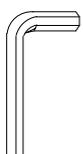

4mm

1X



**Q**




Ø15\*9mm

4X+1

Please use [B] and [Q] CAM LOCKS as shown in the illustrations.

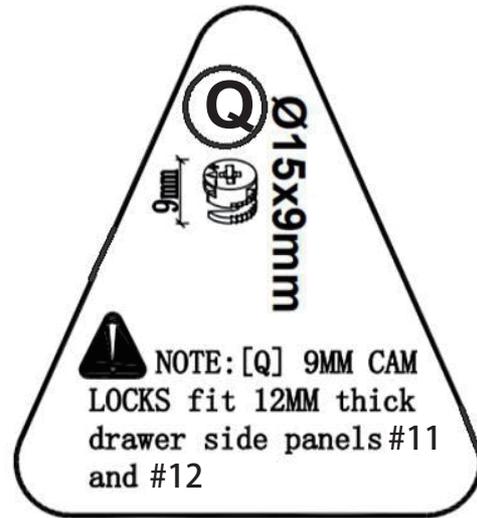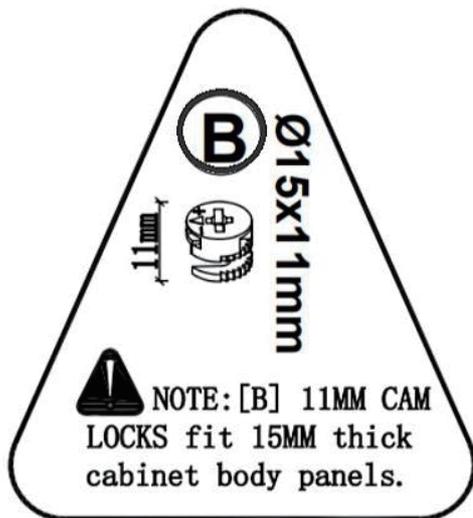


## SLIDE INTRODUCTION (You will use it during assembly)

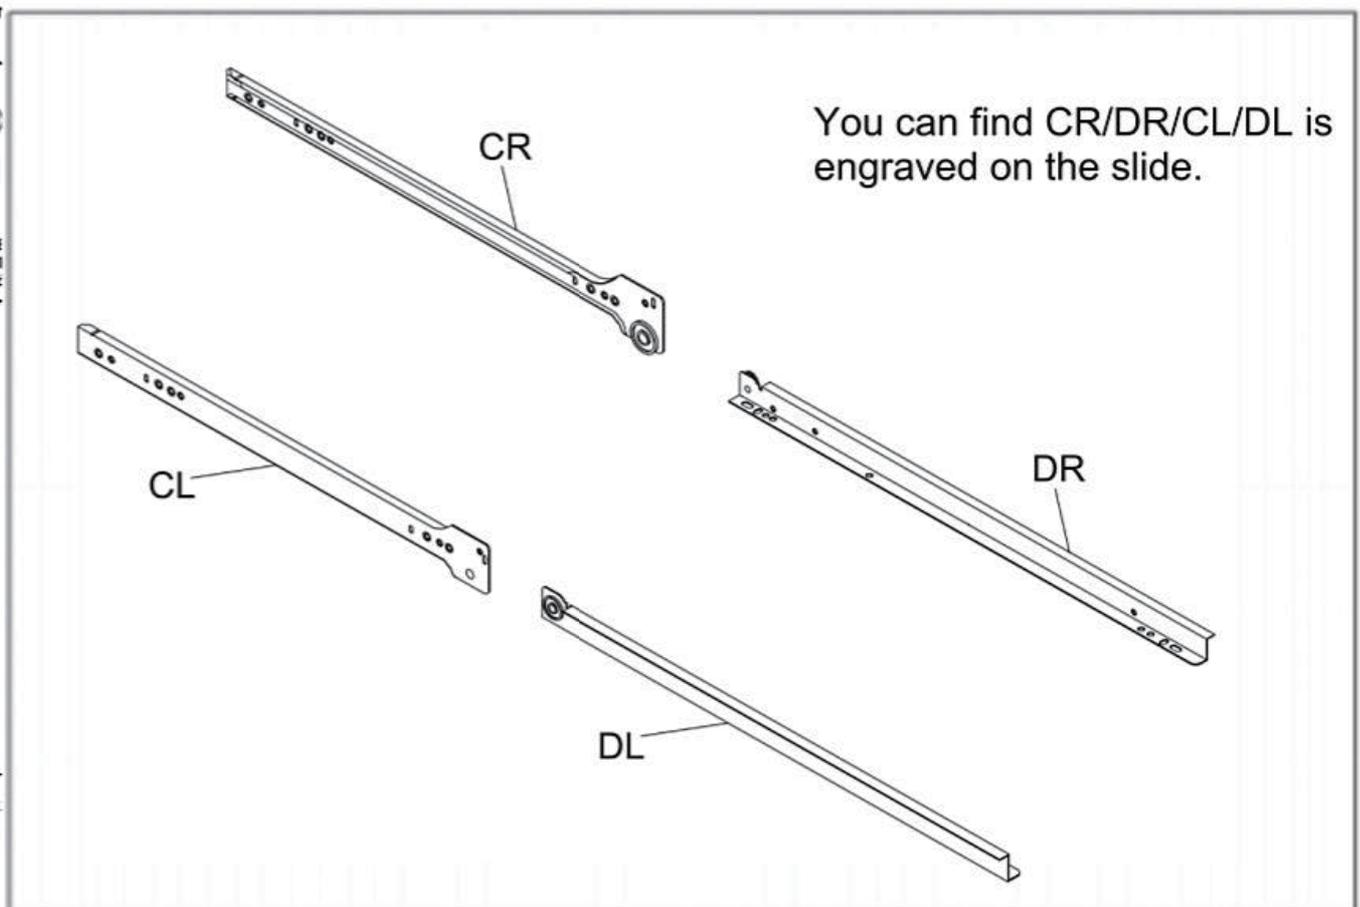


# Step 1



## Step 1-1

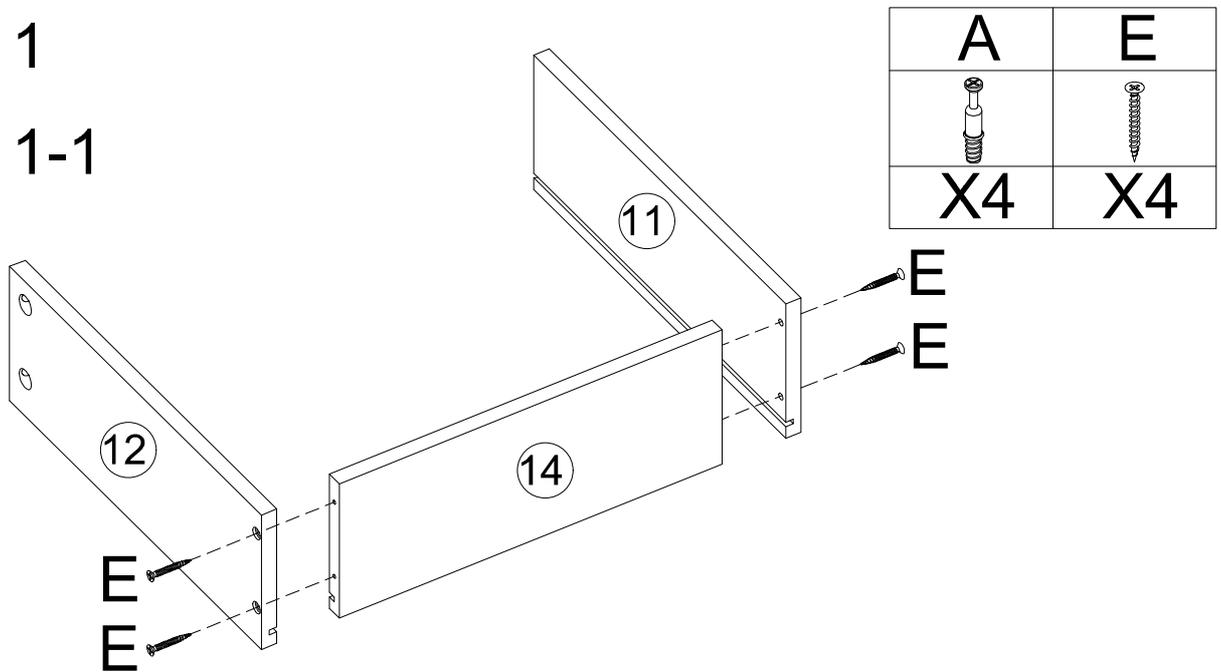

## Step 1-2

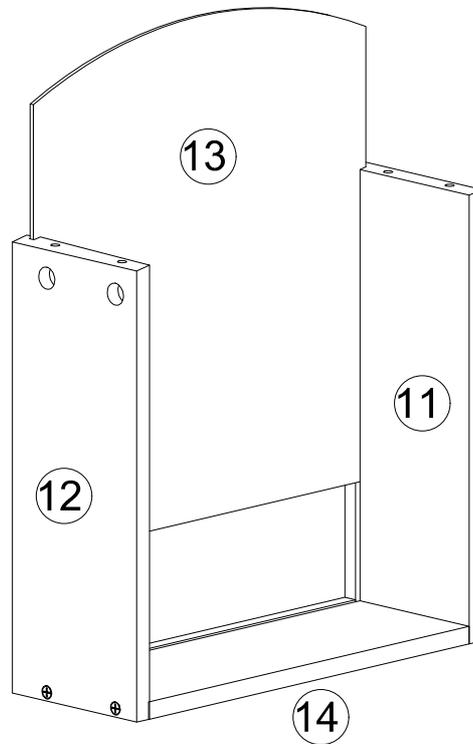

## Step 1-3

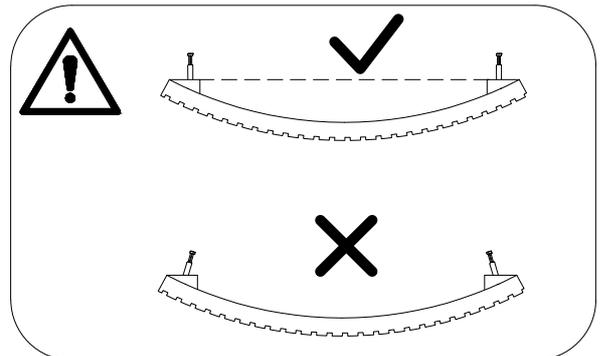
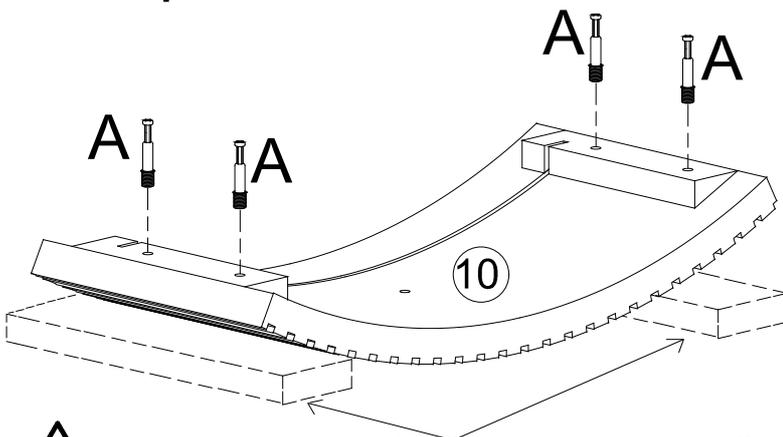


 Use packaging foam to keep part #10 level to tighten #A vertically.


## Step 2

H	I	Q
		
X1	X1	X4

### Step 2-1

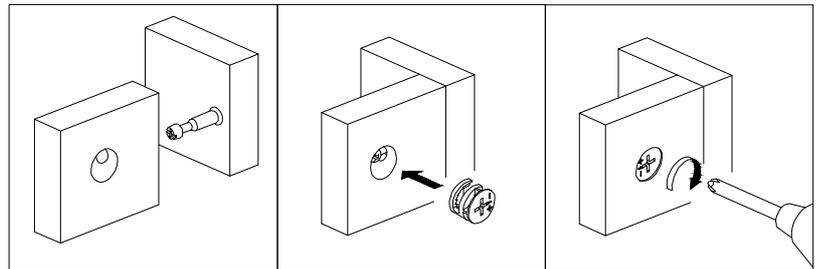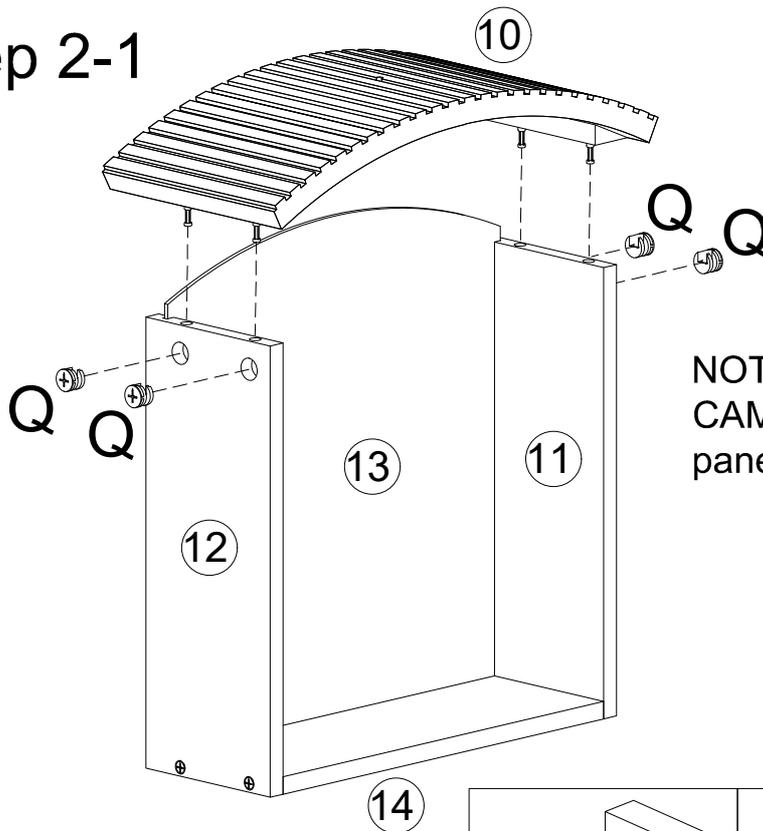


### Step 2-2

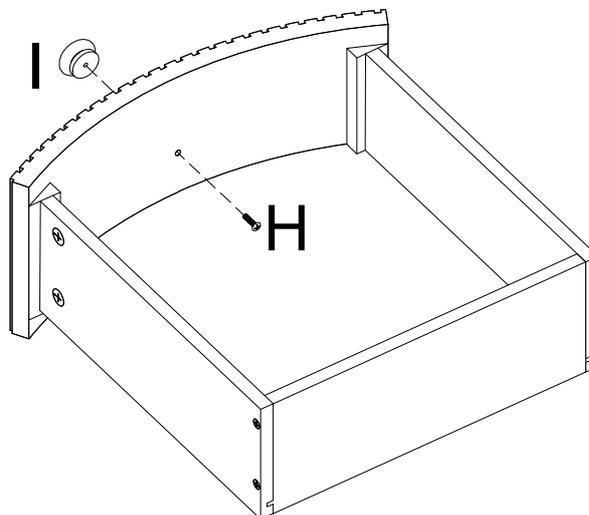

# Step 3

G	F
	
X6	X1


NOTE: Refer to the images to identify F-DL (Left) and F-DR (Right).

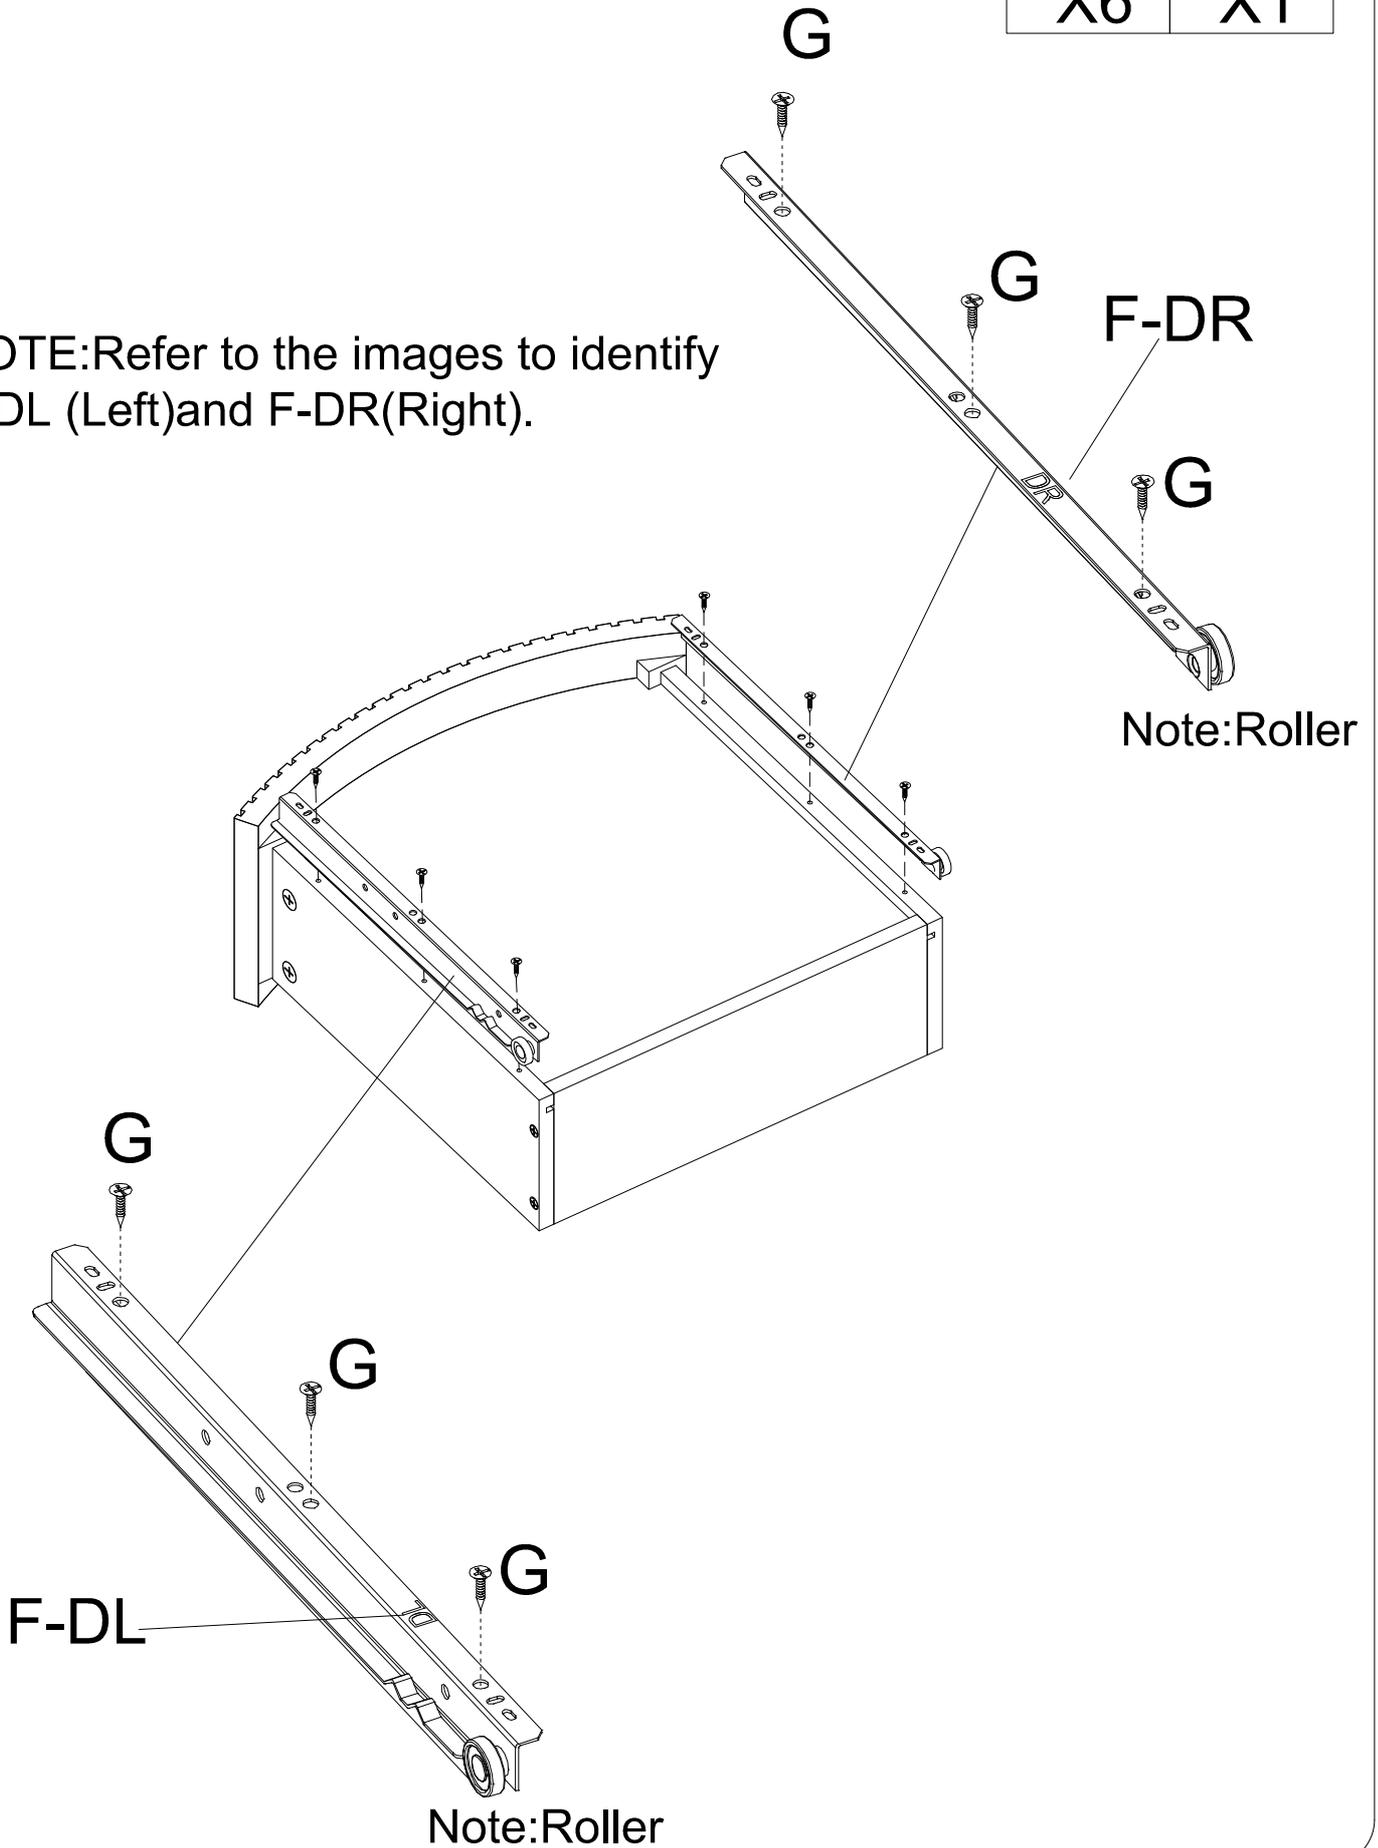


# Step 4

NOTE: Refer to the images to identify F-CL (Left) and F-CR (Right).

G	F
	
X6	X1

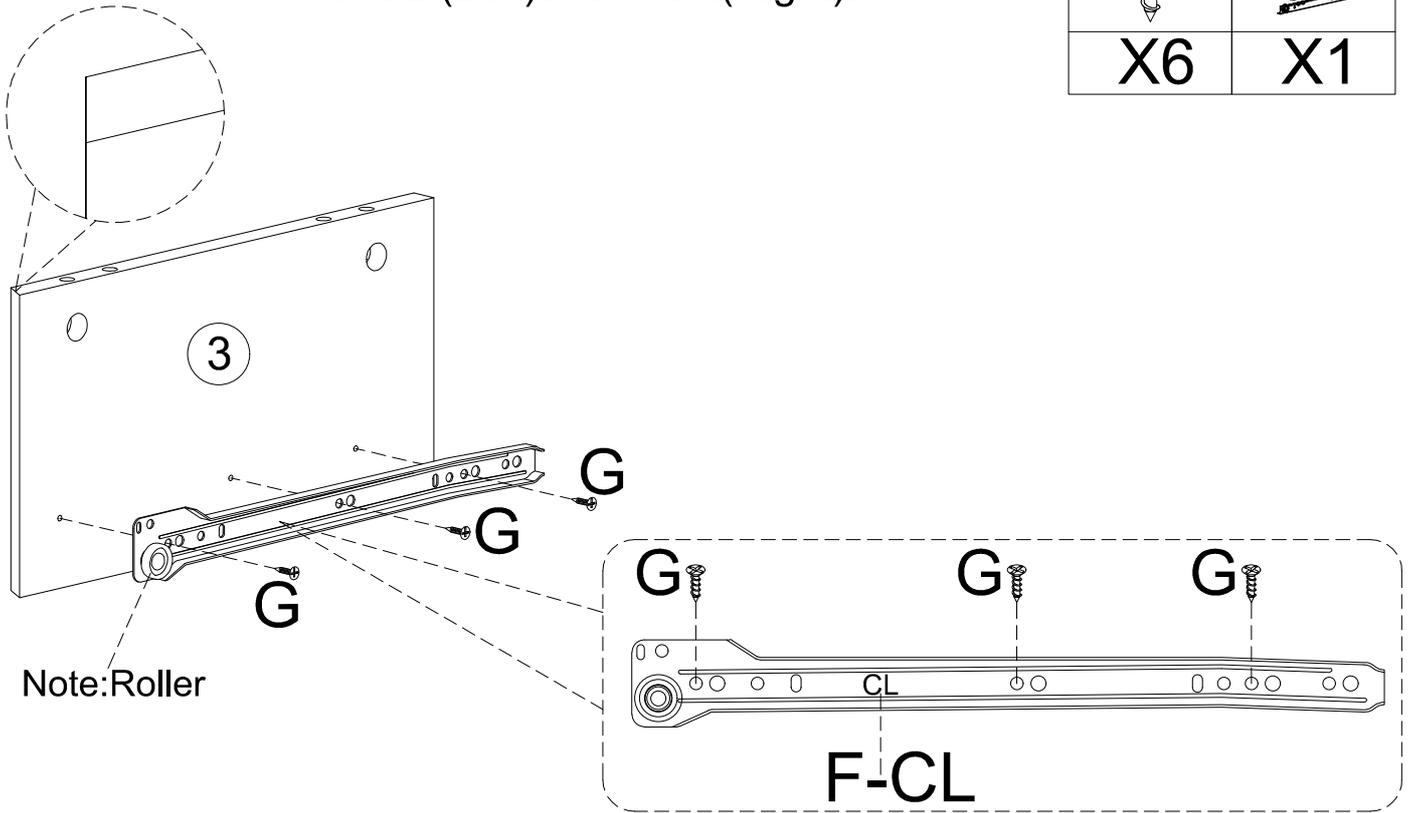

Attach F-CL to #3 panel , [G]screws must go in the exact spots shown

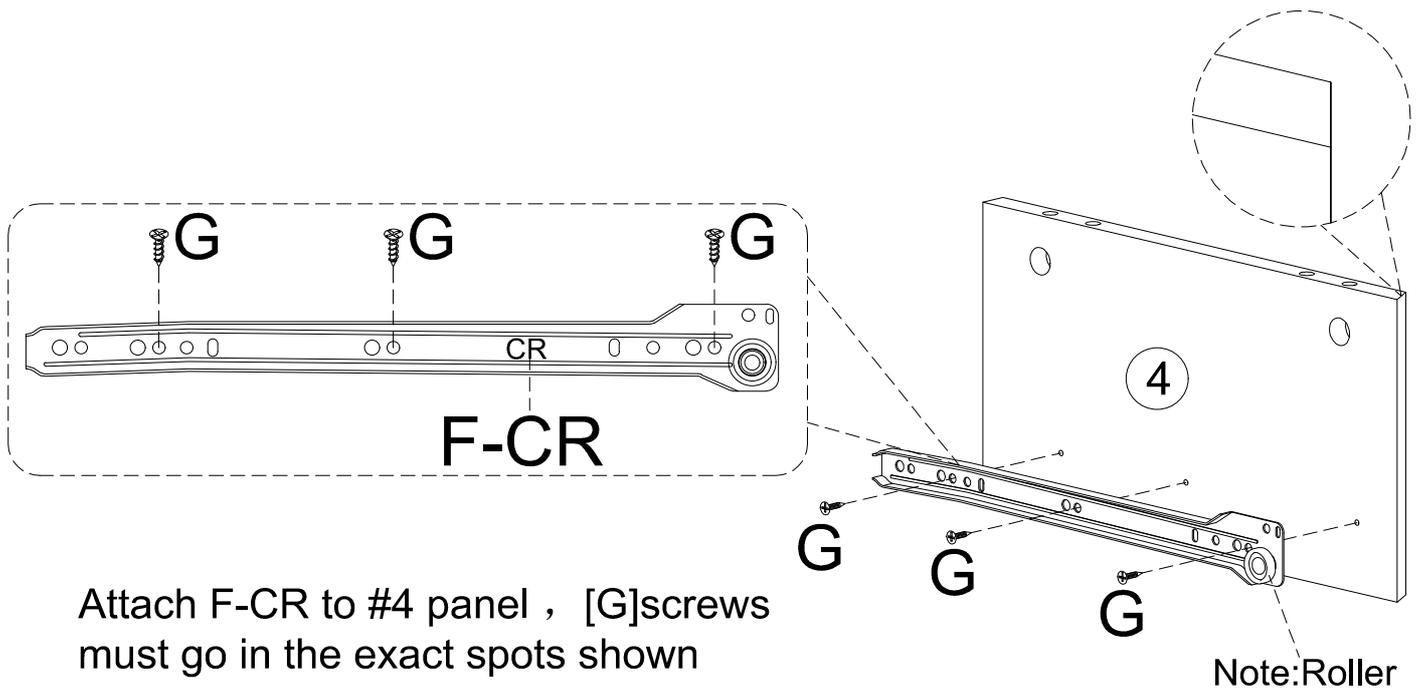


Attach F-CR to #4 panel , [G]screws must go in the exact spots shown



# Step 5

A	B	C
		
X11	X3	X2



## Step 5-1

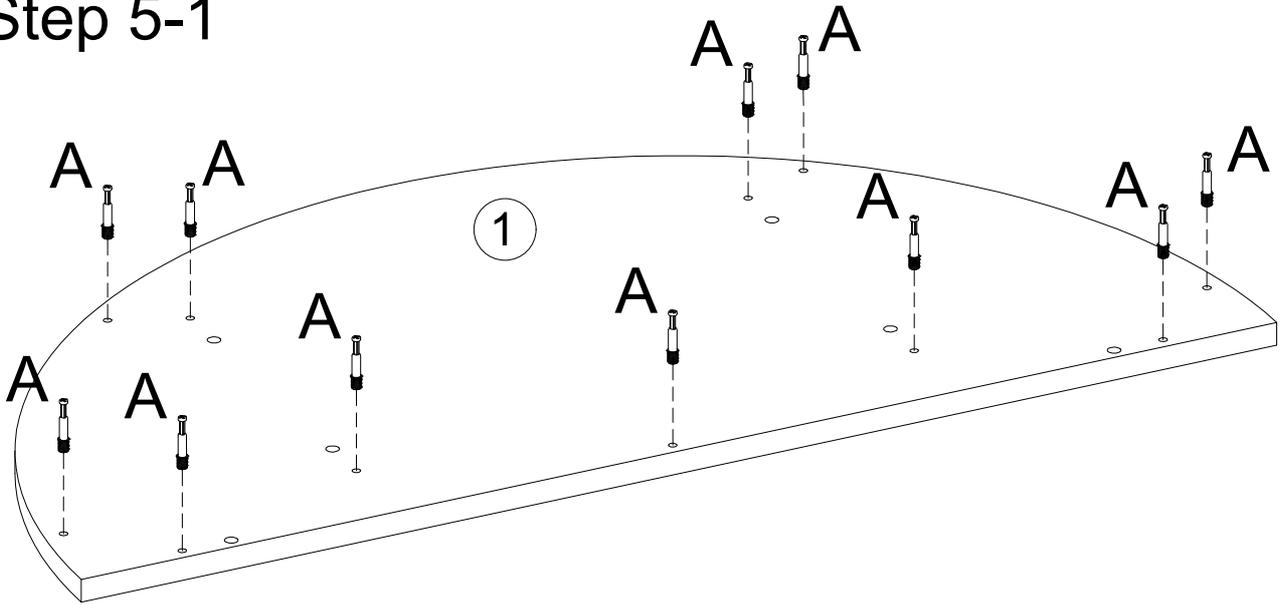


## Step 5-2

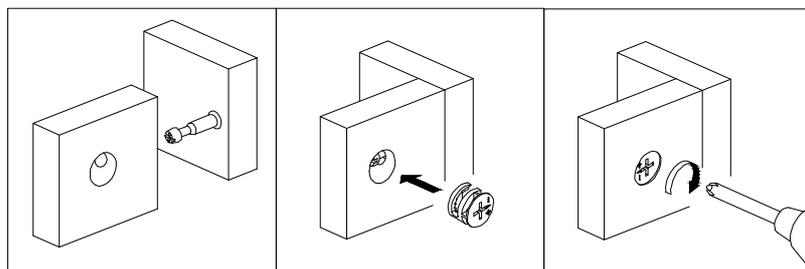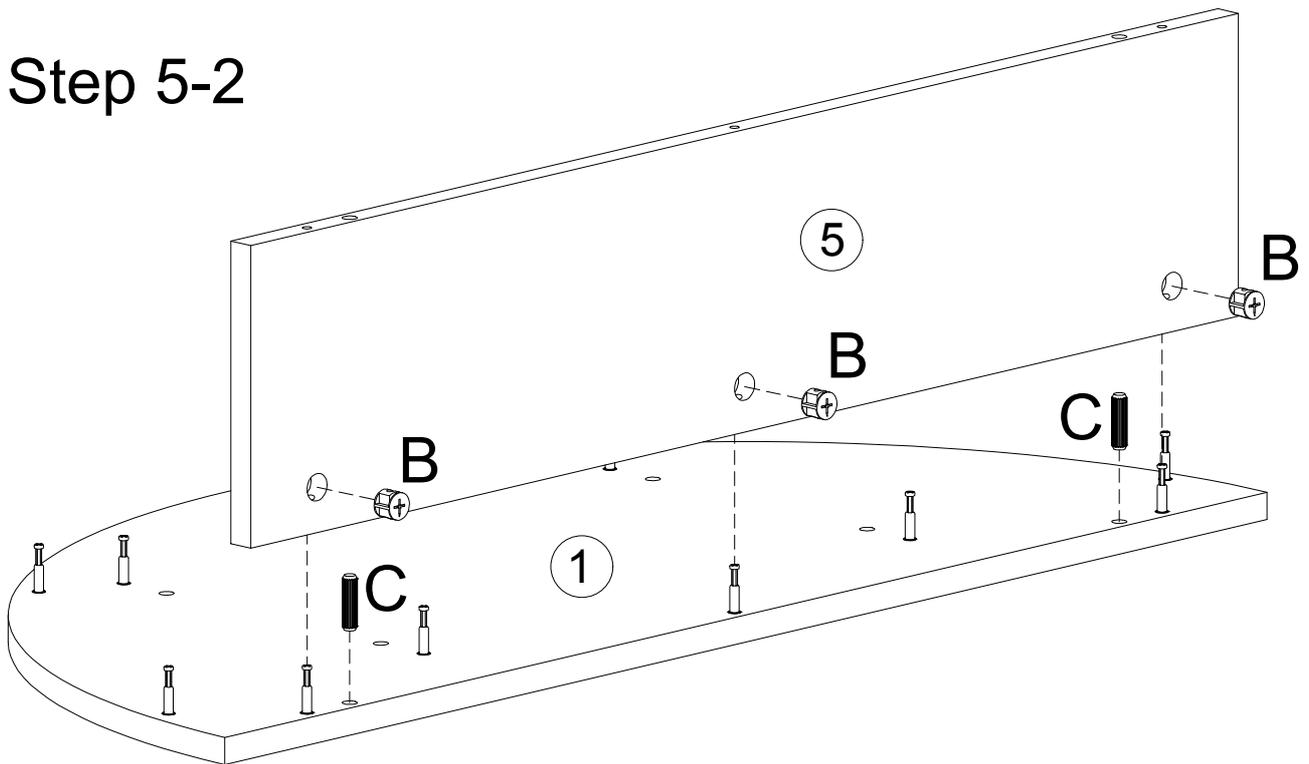


## Step 6

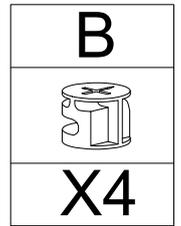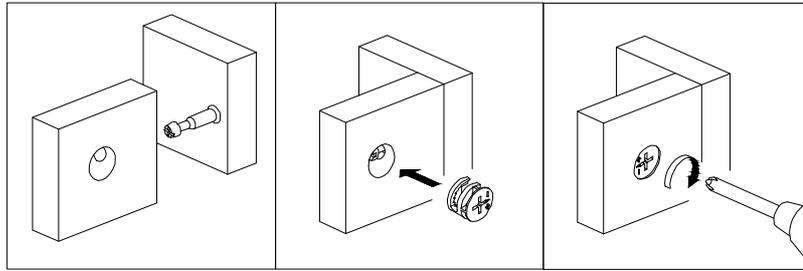


## Step 6-1

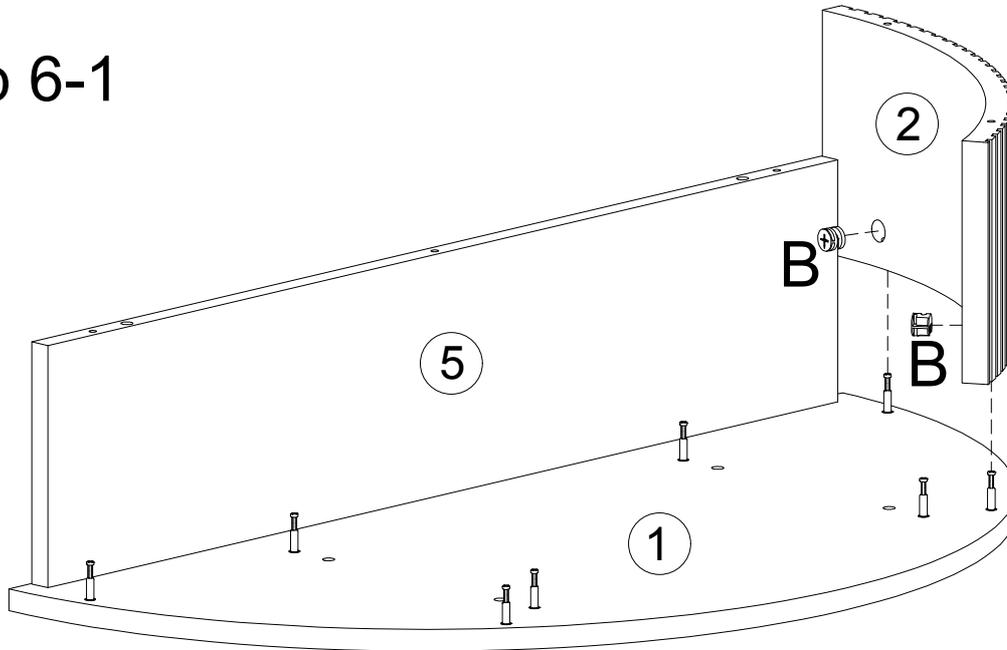

## Step 6-2

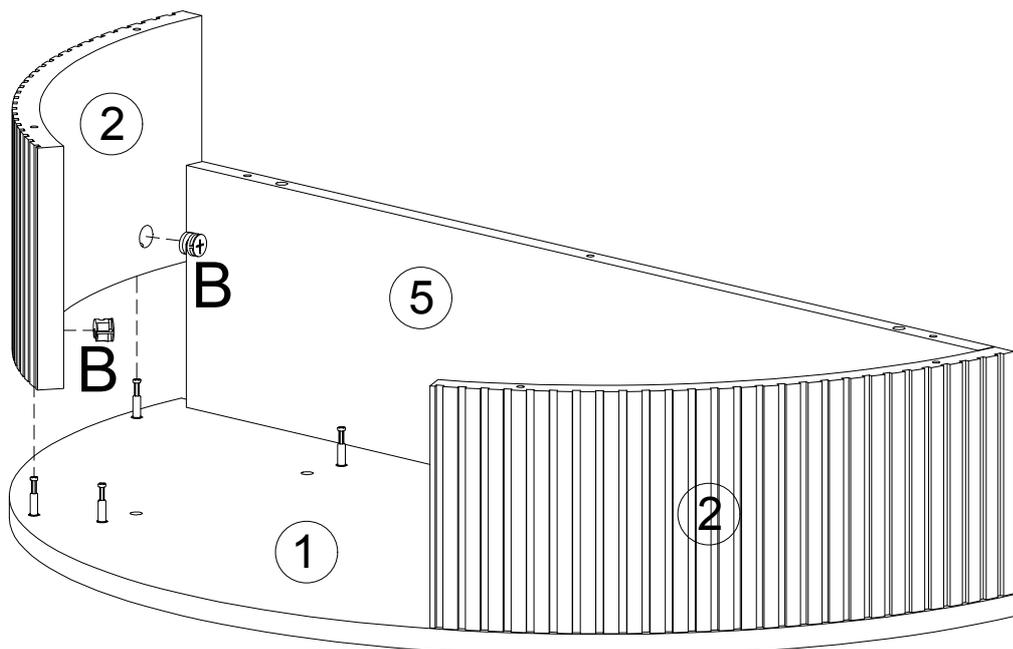


# Step 7

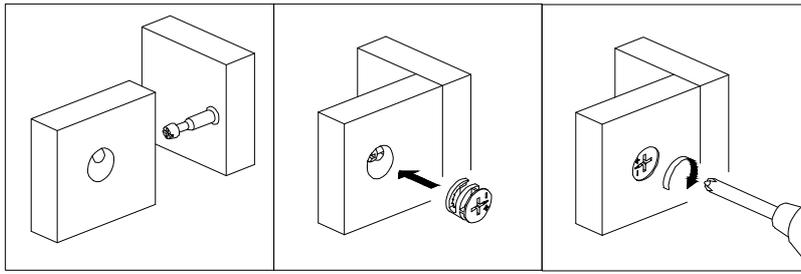


<b>B</b>	<b>C</b>
	
<b>X4</b>	<b>X4</b>

NOTE: Pay attention to the position of #4 board and #3 board

## Step 7-1

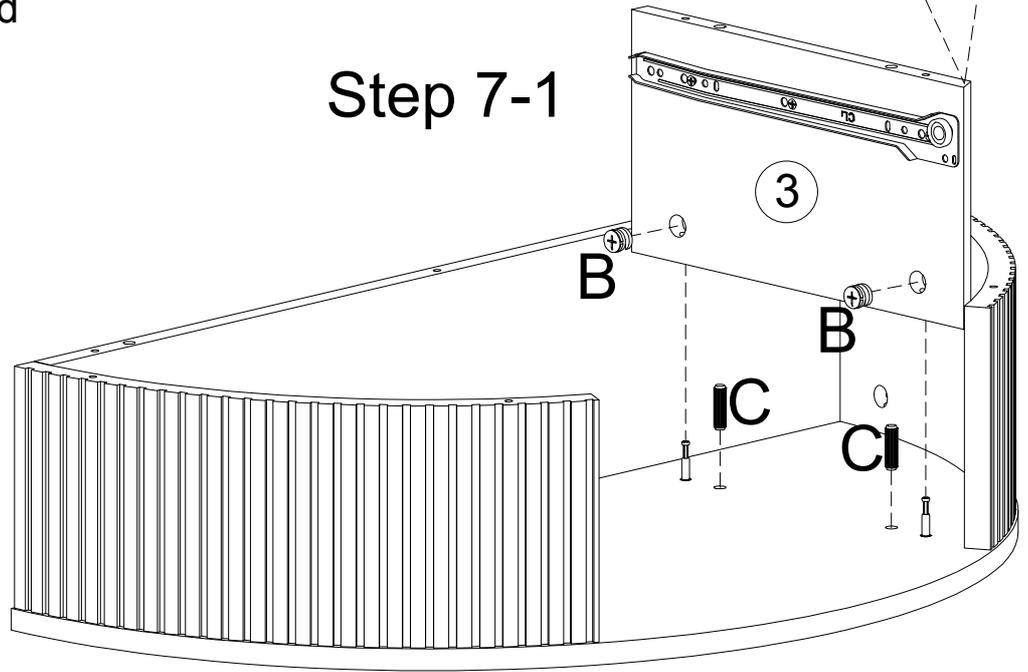


## Step 7-2

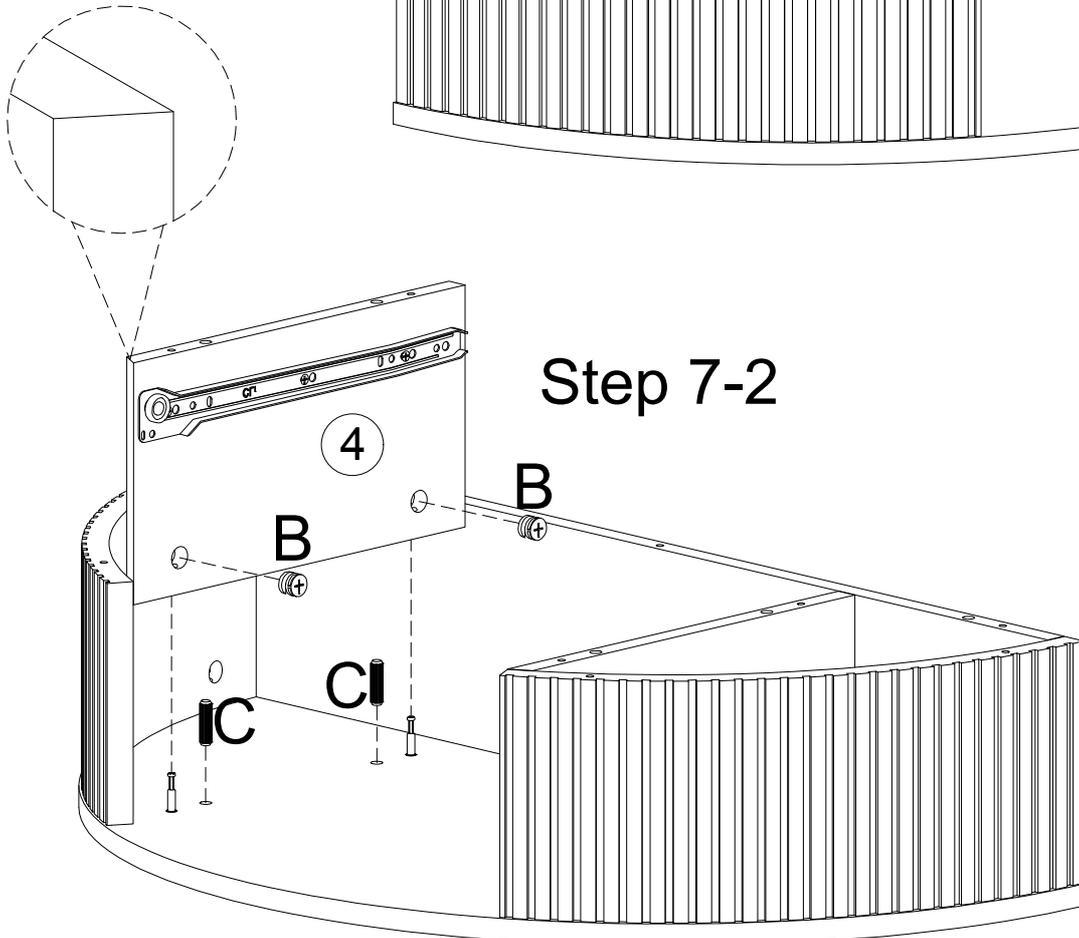

# Step 8


C

X6

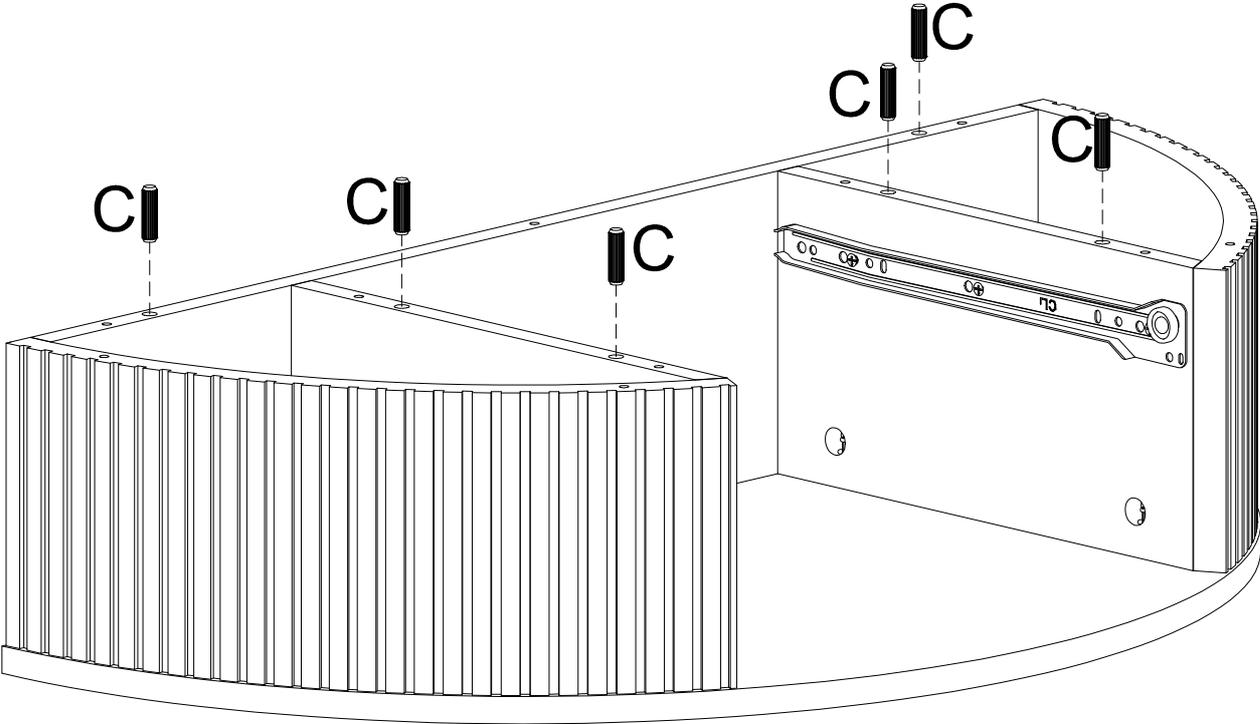


# Step 9

D	P
	
X11	X1

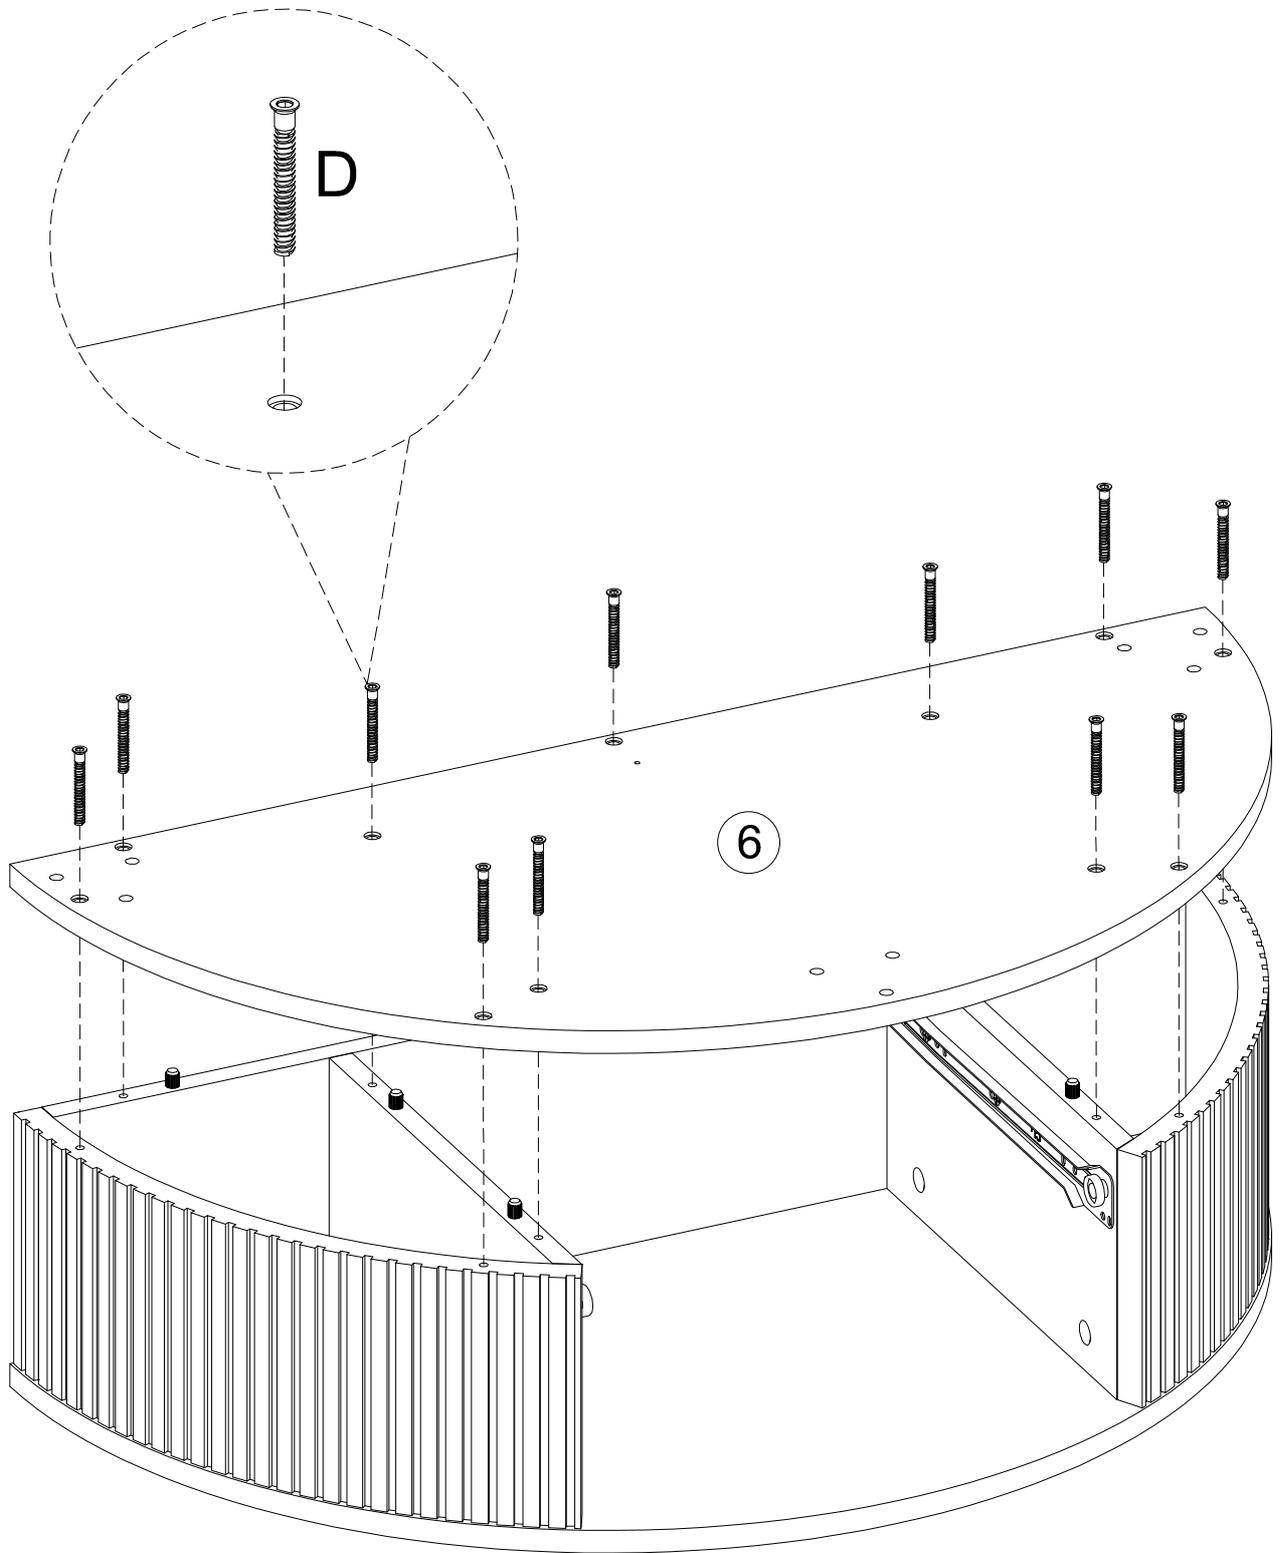



# Step 10

J	P
	
X9	X1

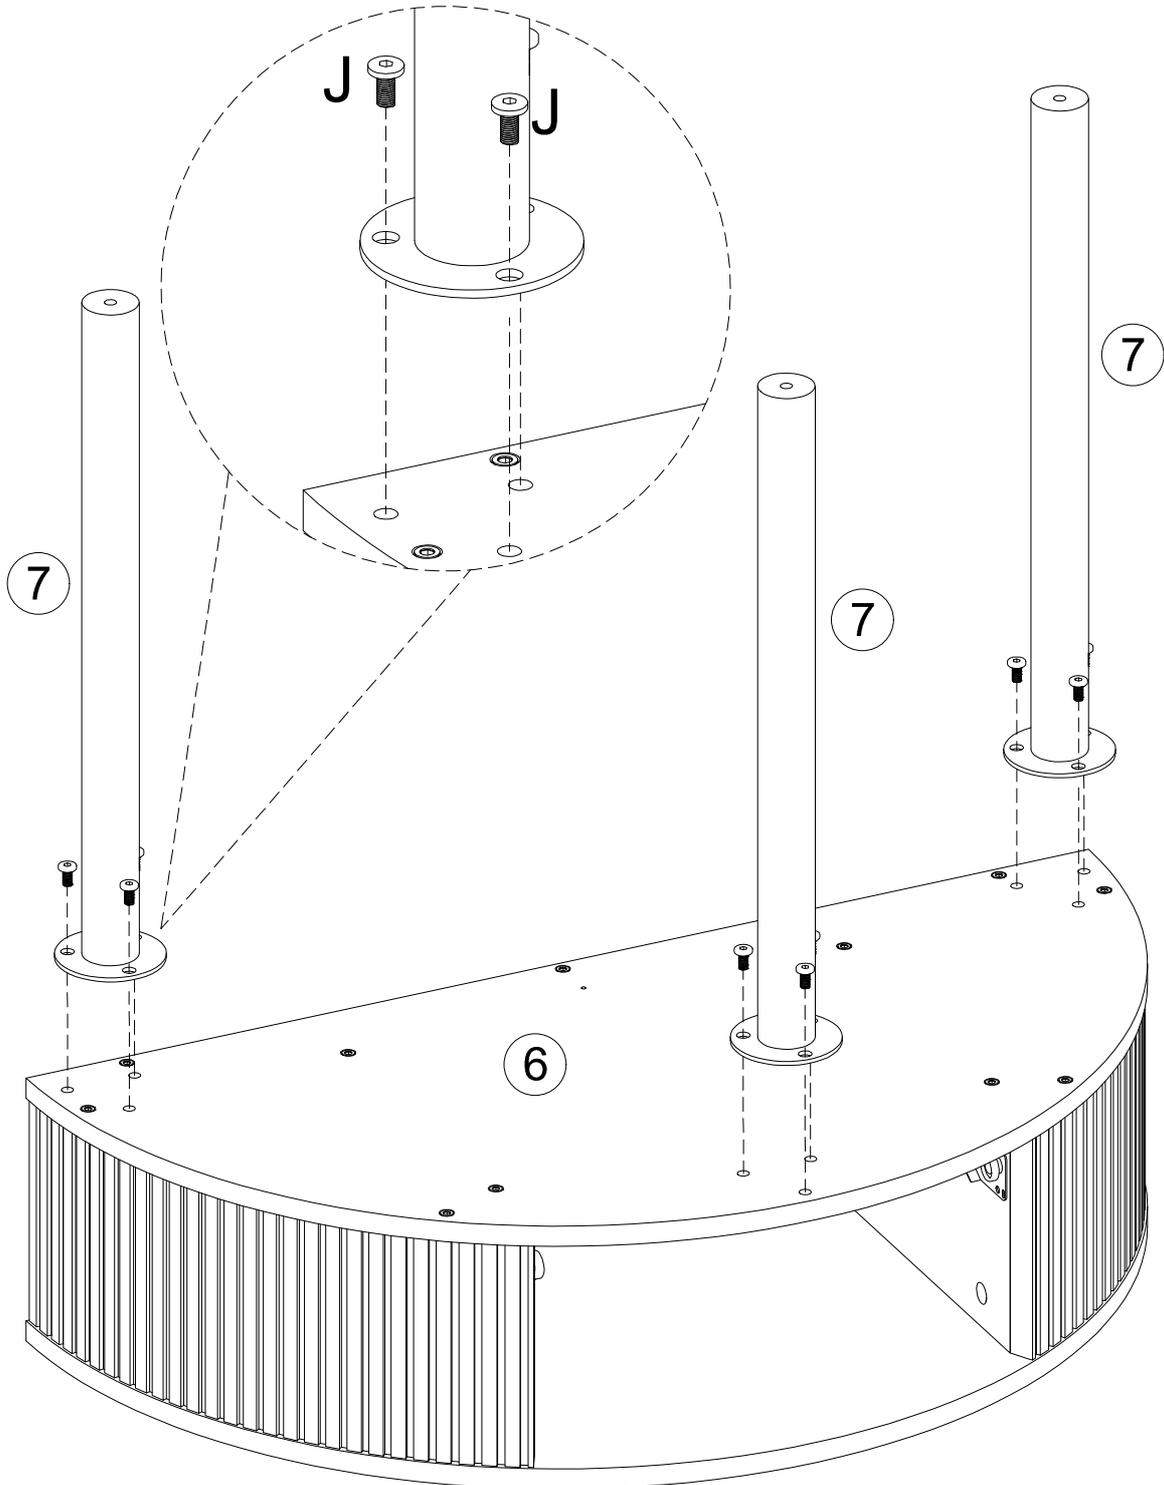

# Step 11

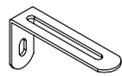L	N
	
X1	X1

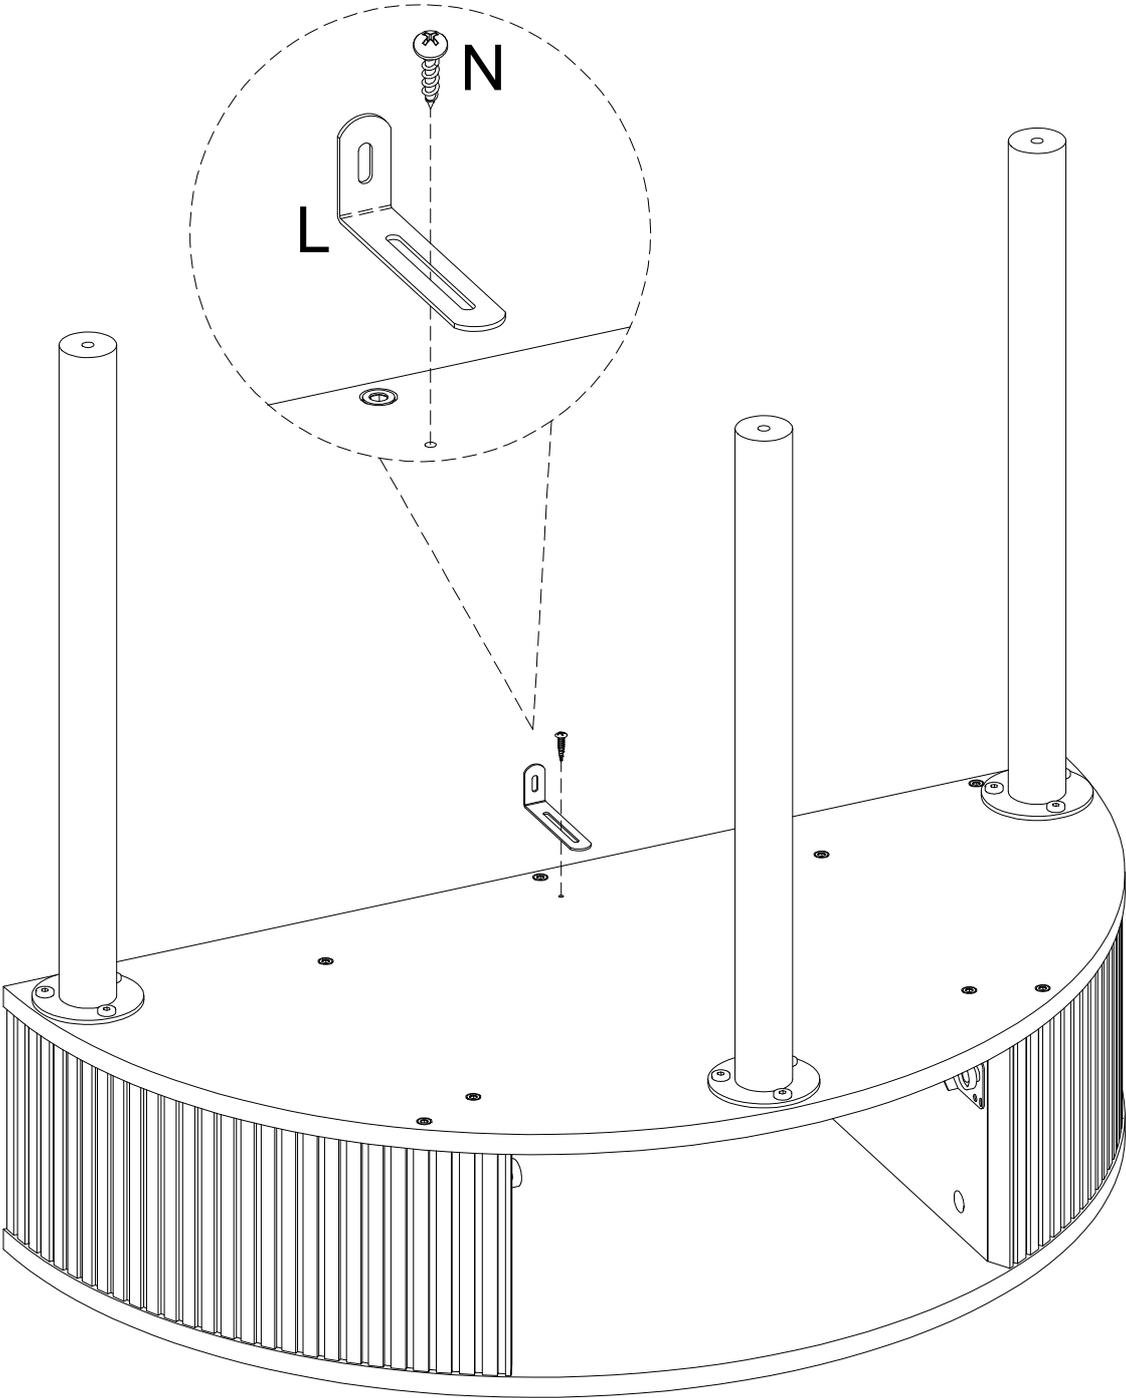


# Step 12

Note: Thread the short end of bolt K into leg #9 and tighten

K




X3

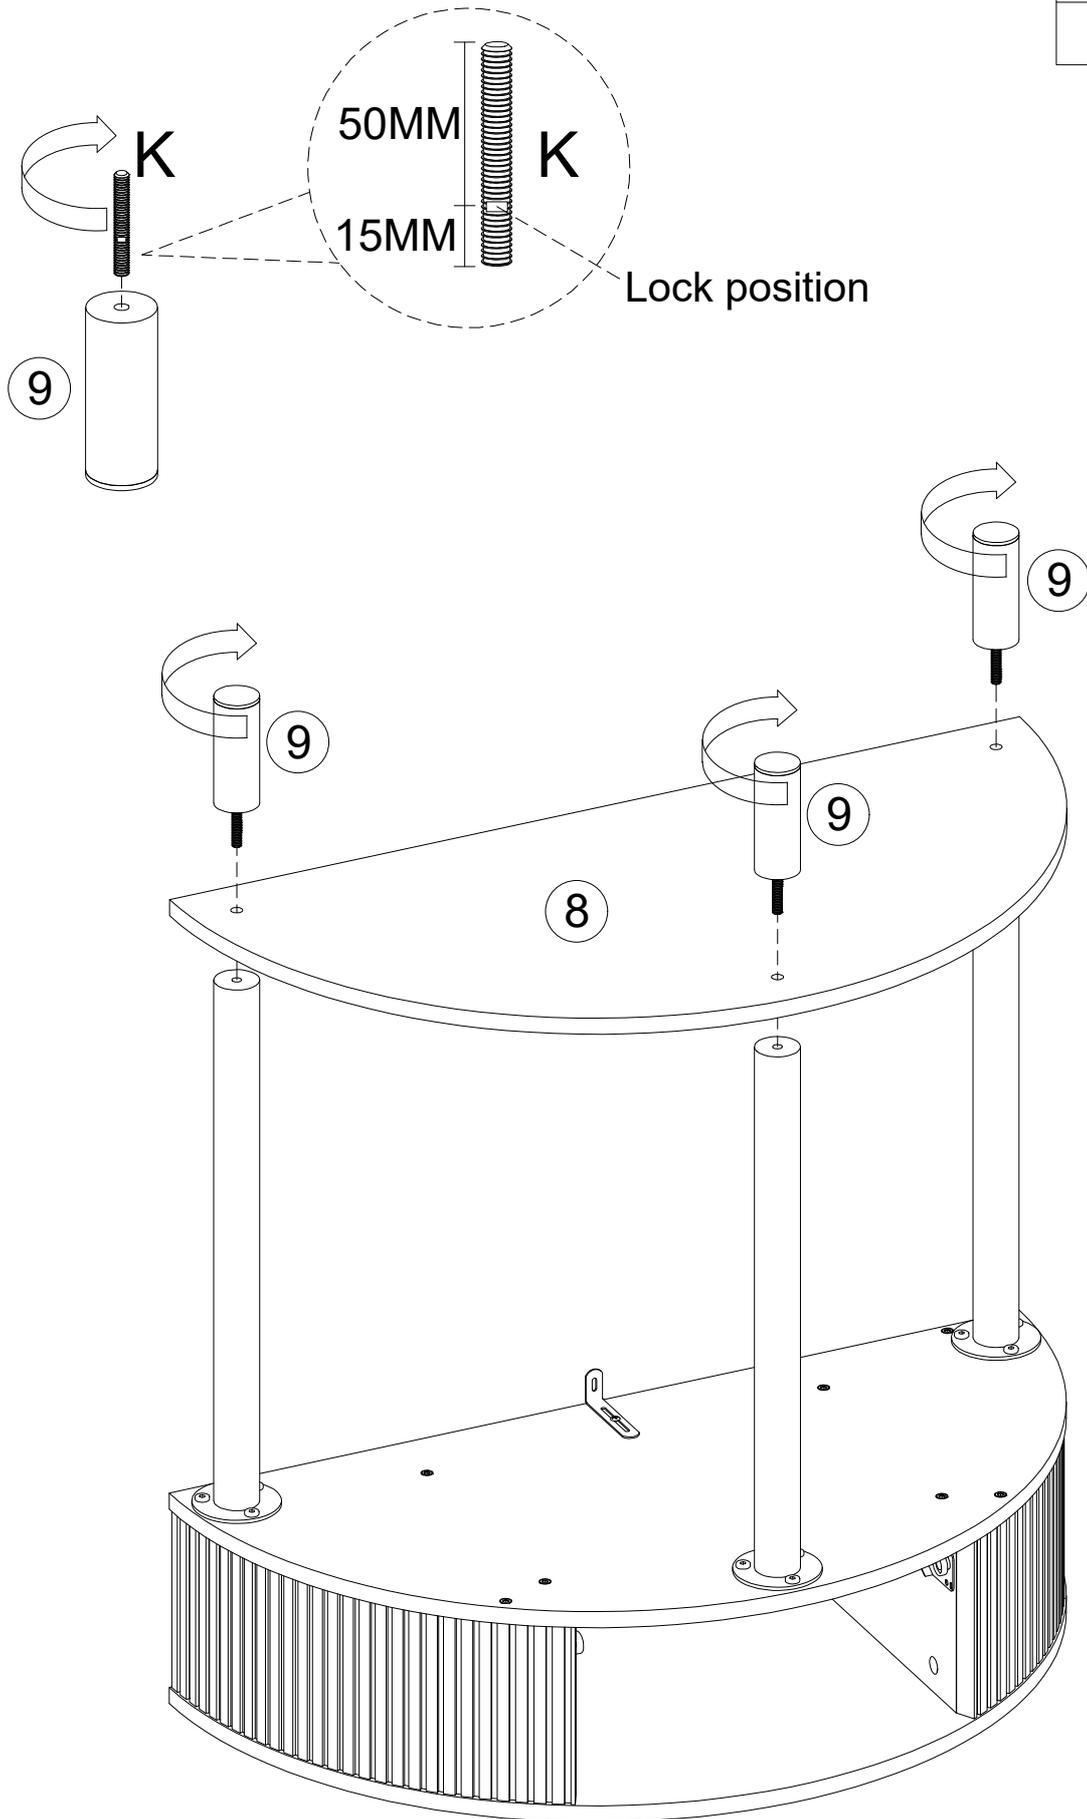



# Step 13

NOTE: To reduce the risk of furniture tipover.  
ALWAYS install tipover restraint provided.

M	O
	
X1	X1

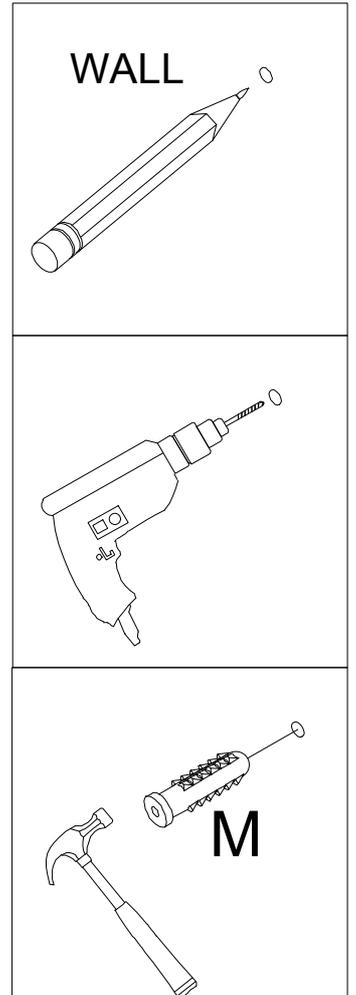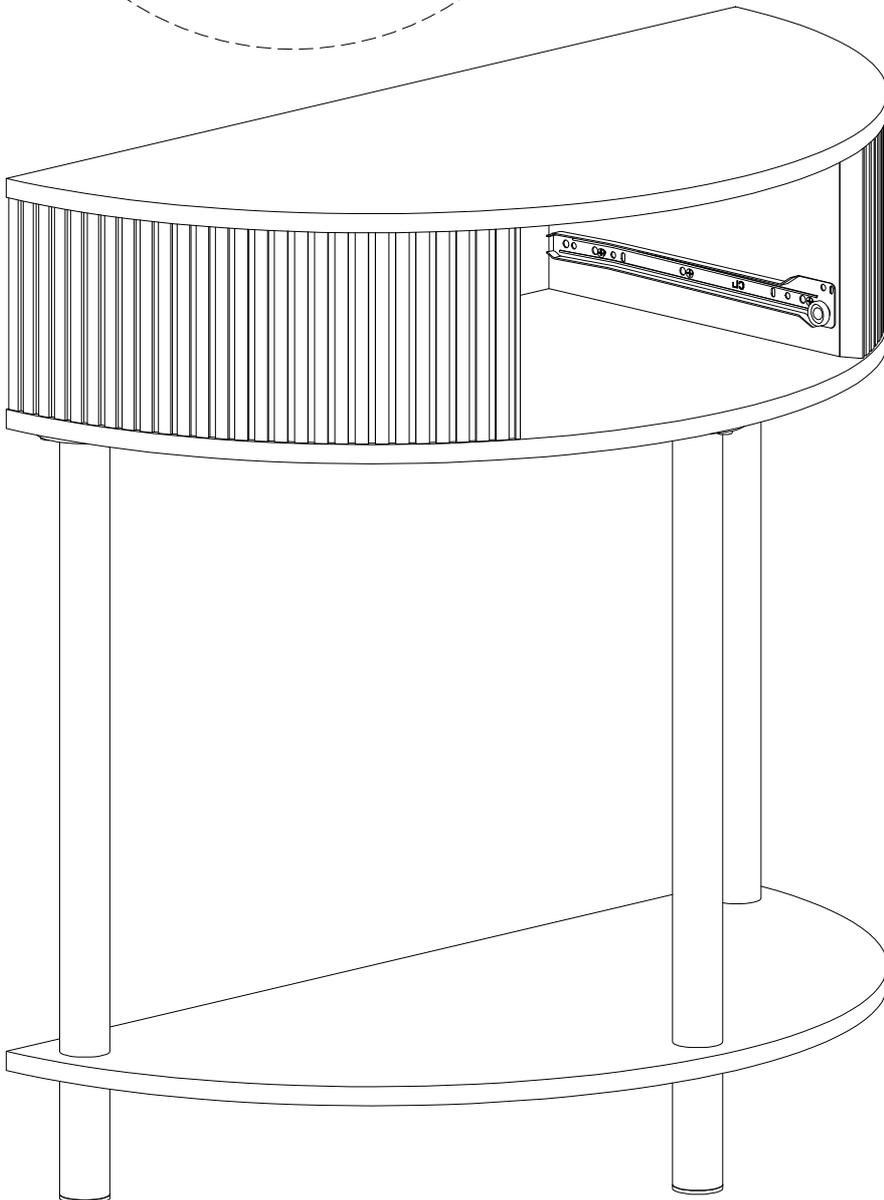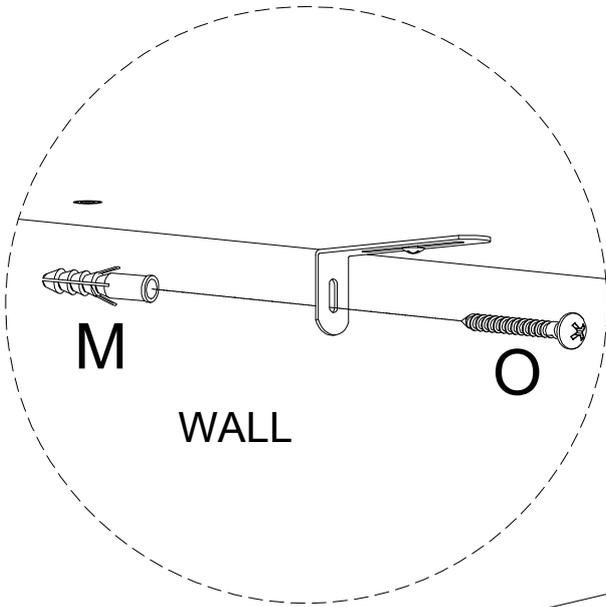

# Step 14

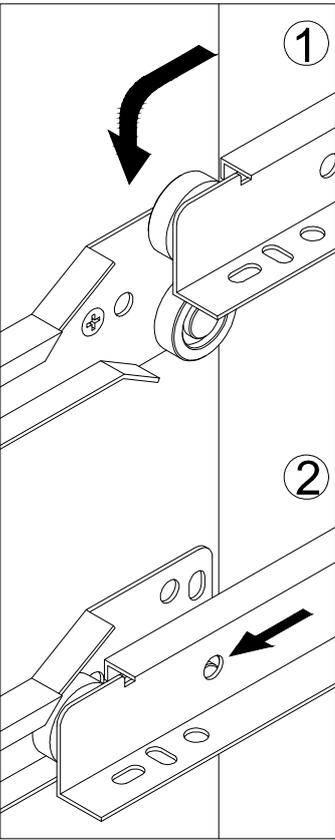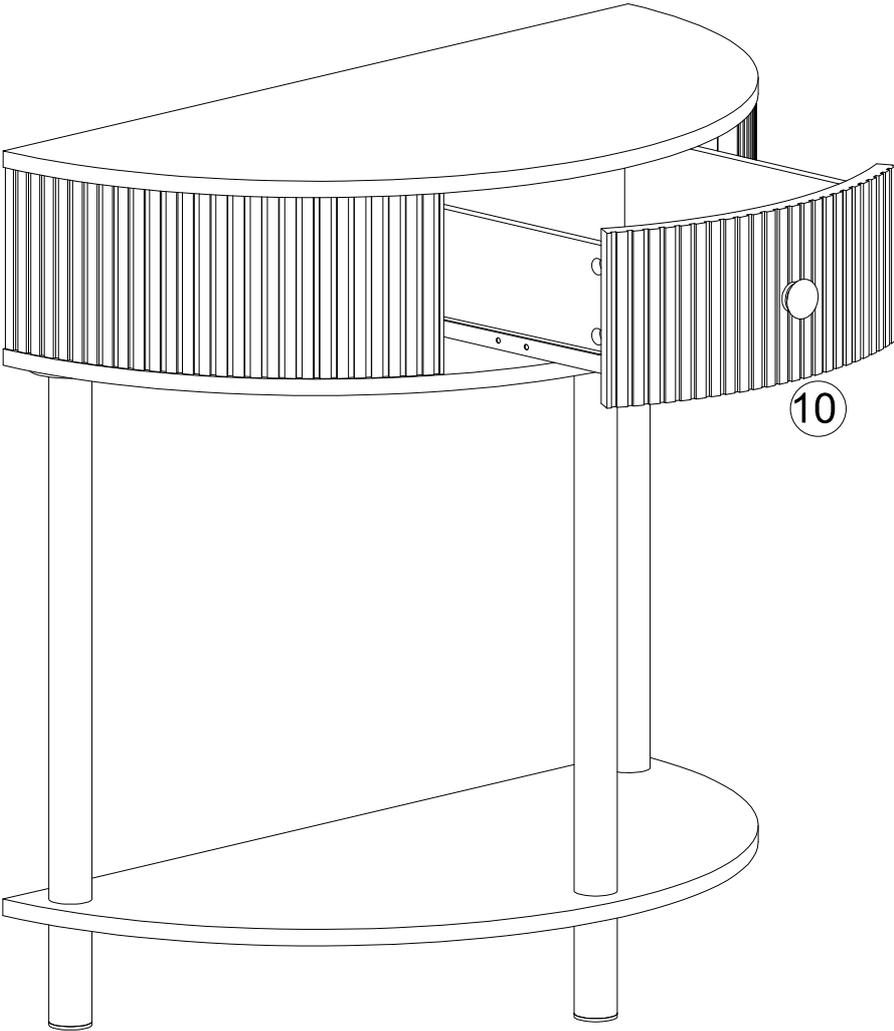

Step 15

