
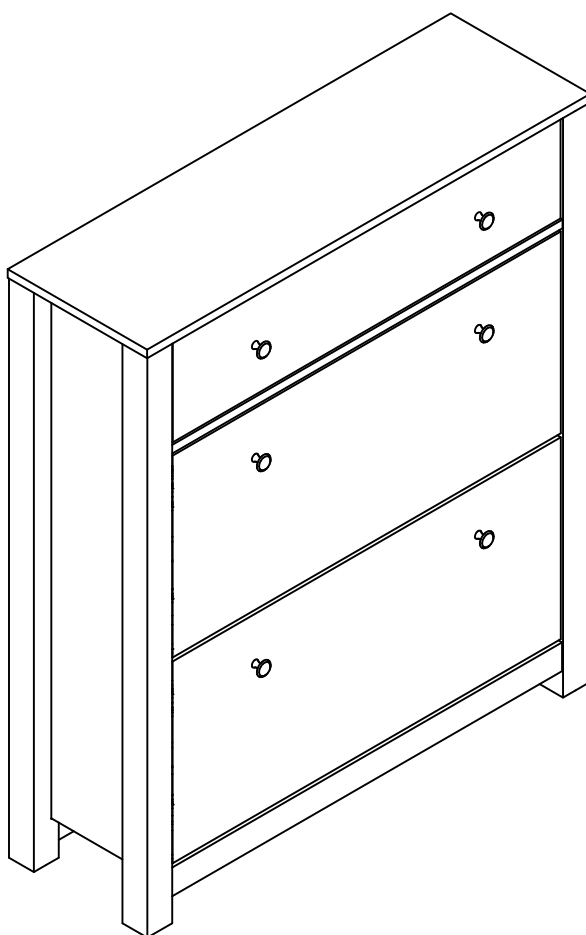








625-042 Shoe cabinet with 3 drawers

Assembly Instructions




Assembly Instructions

Ø15x11  A x 27	Ø7.8x35  B x 27	Ø8x30  C x 12	Ø4x16  D x 12
Ø3.5x14  E x 26	Ø4x40  F x 20	 G x 4	M4x18  H x 6
Ø28xØ12x20  I x 6	 J x 2	Ø12  K x 4	Ø18  L x 4
Ø25x17x9  M x 4	 N x 12	Ø3x16  O x 12	783mm  P x 1
184*15*15  Q x 1	L200mm  R x 1	Ø7.8x38  S x 2	Ø5*60  T x 2

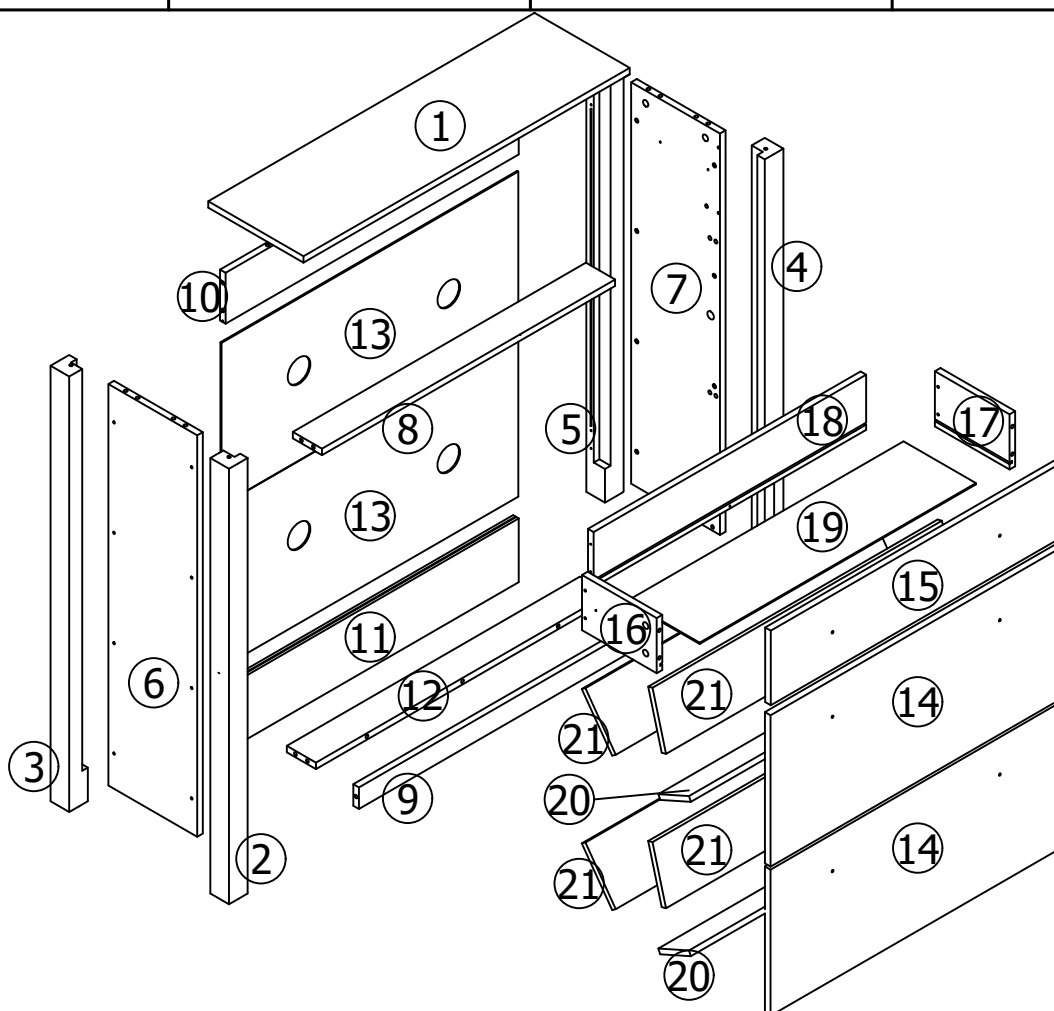


STEP 1

Ex 4
F x 16
L x 4
M x 4
R1 x 1

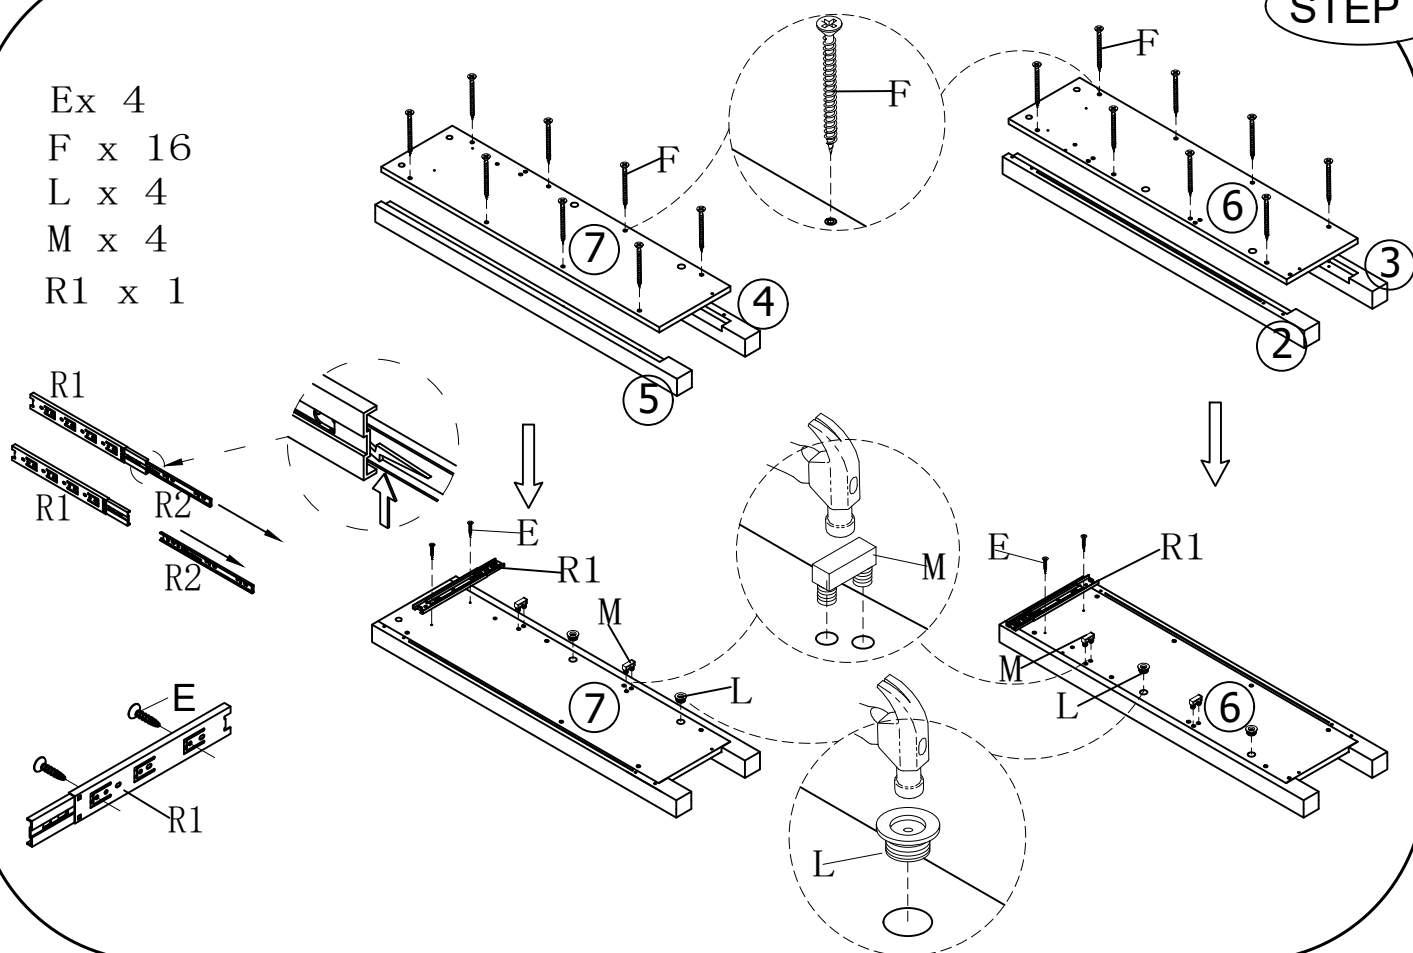


STEP 2

A x 10
B x 10
C x 2

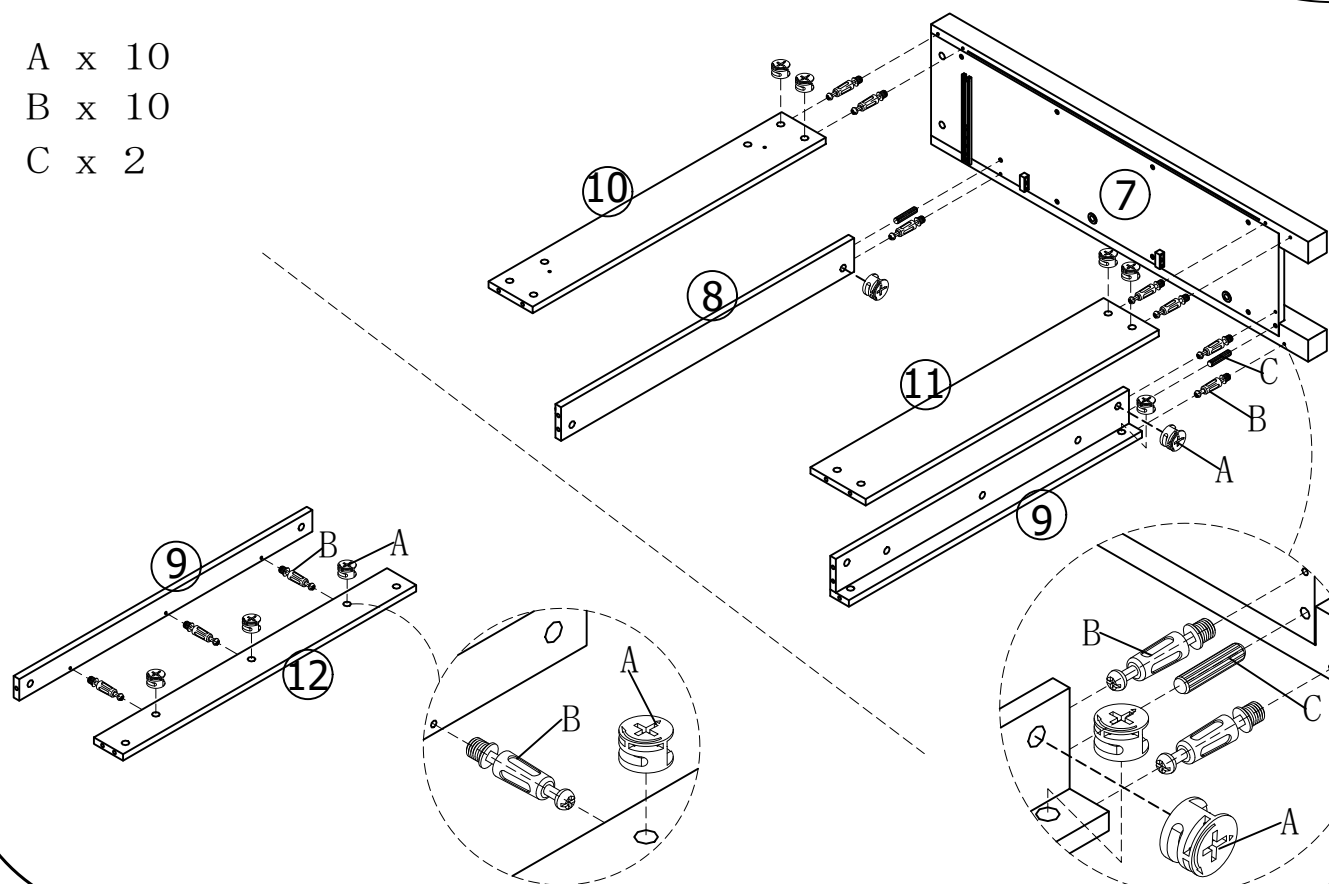


STEP 3

A x 7
B x 7
C x 2
G x 4
P x 1

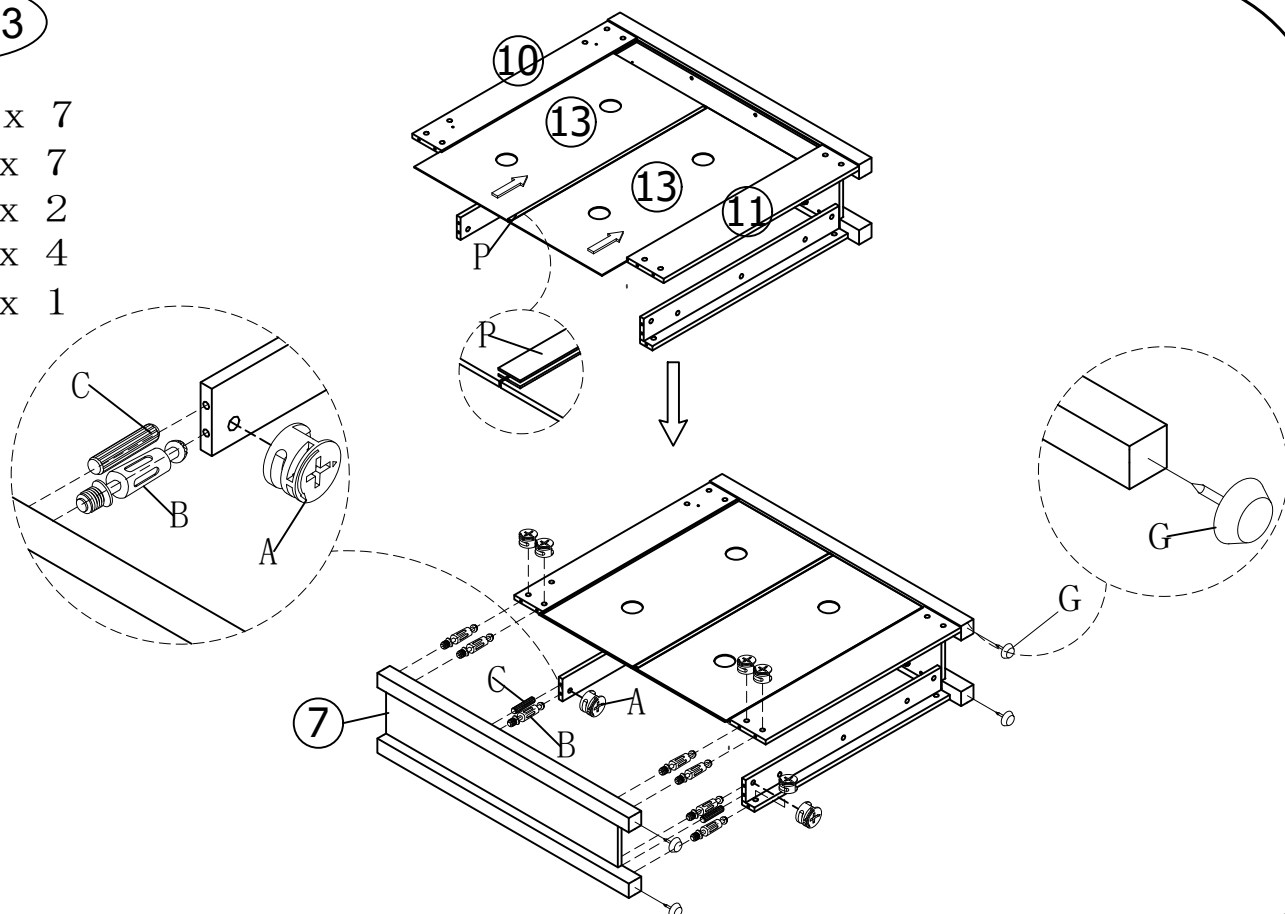



STEP 4

A x 6
B x 6
C x 8
N x 12
O x 12

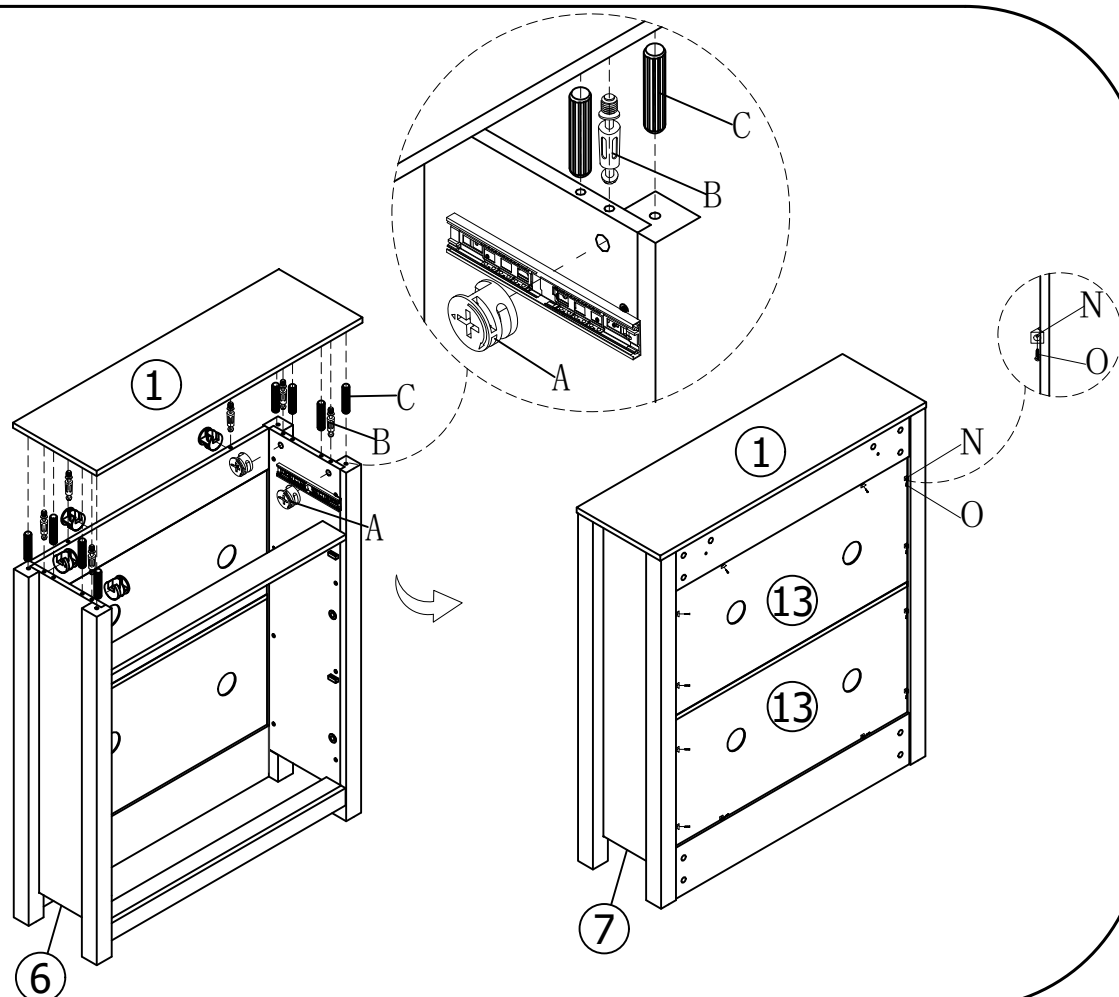

STEP 5




S x 2
T x 2

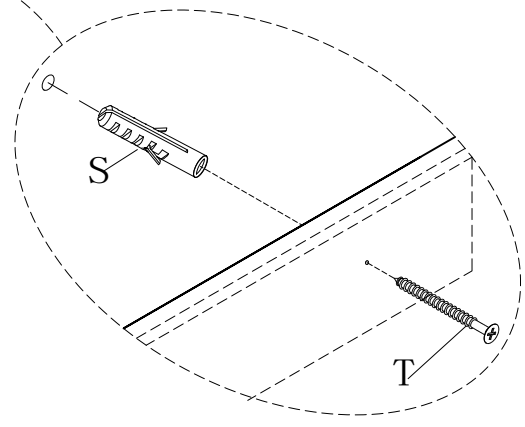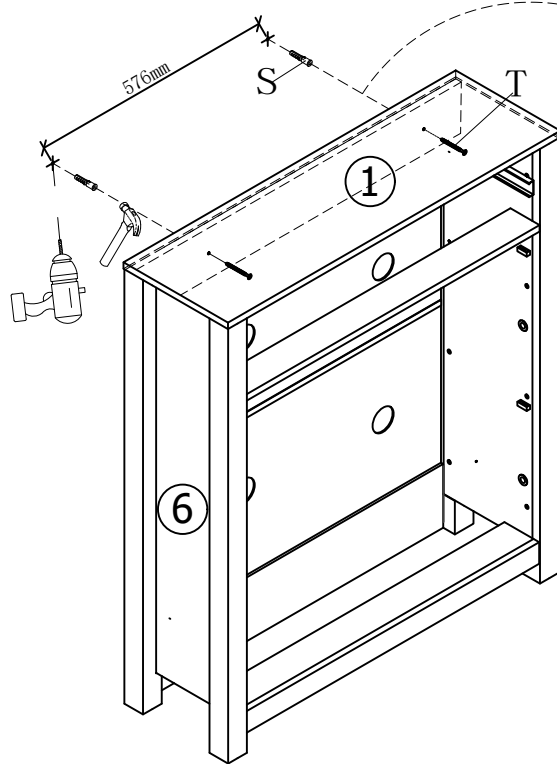

- 1.
- 2.

STEP 6


E x 8
D x 12
J x 2
H x 4
I x 4

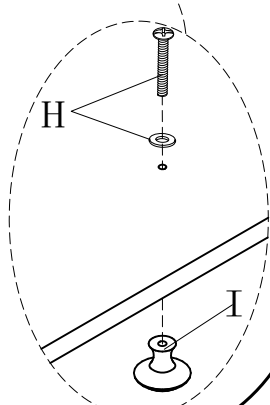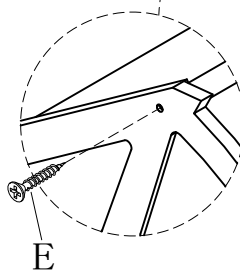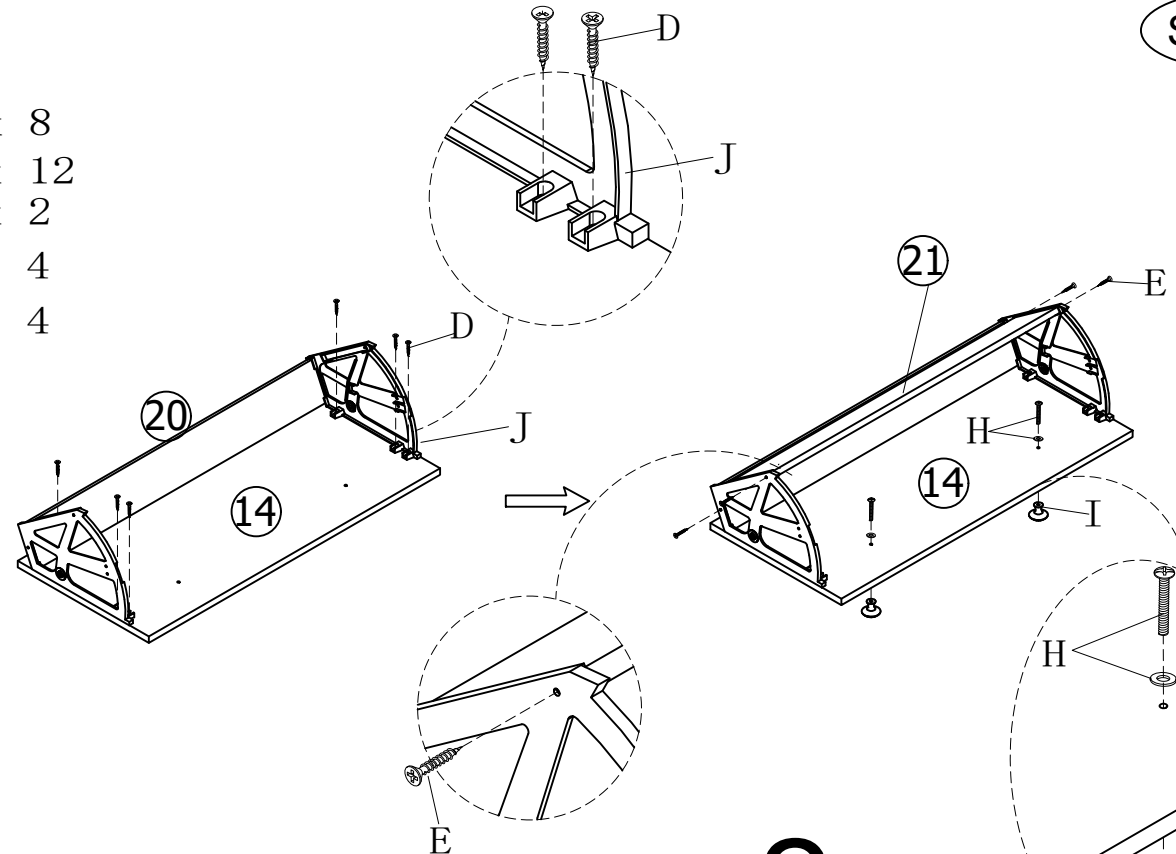

x2


STEP 7

E x 4
K x 4

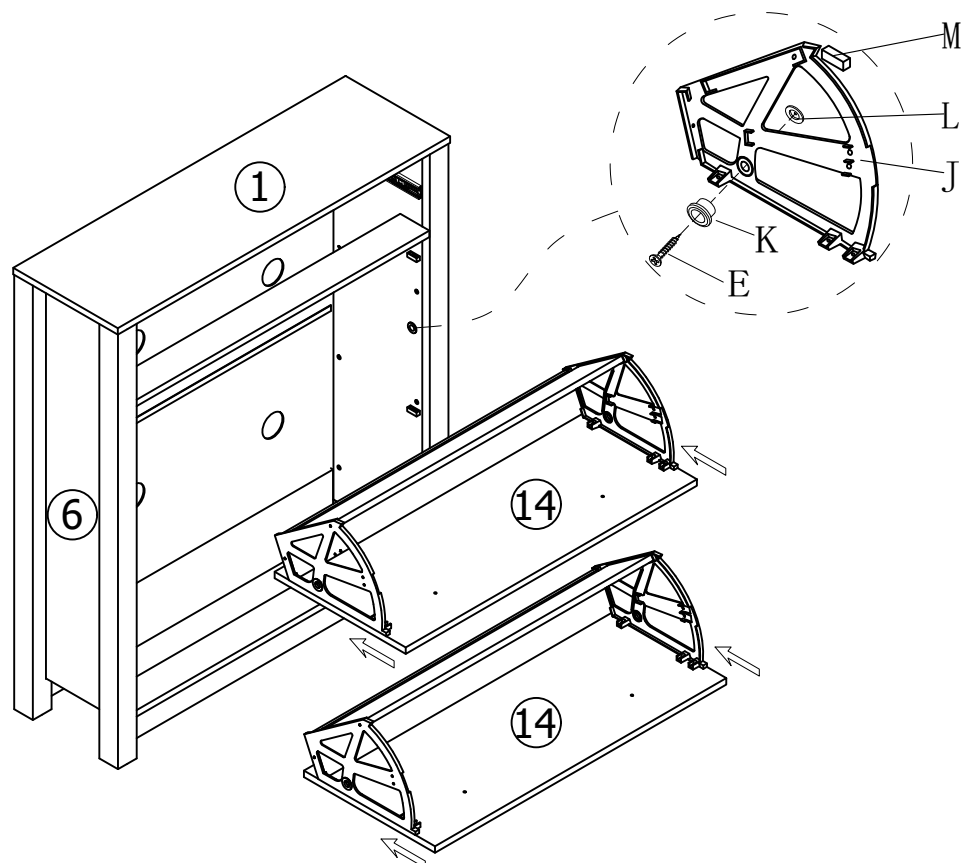


STEP 8

E x 4

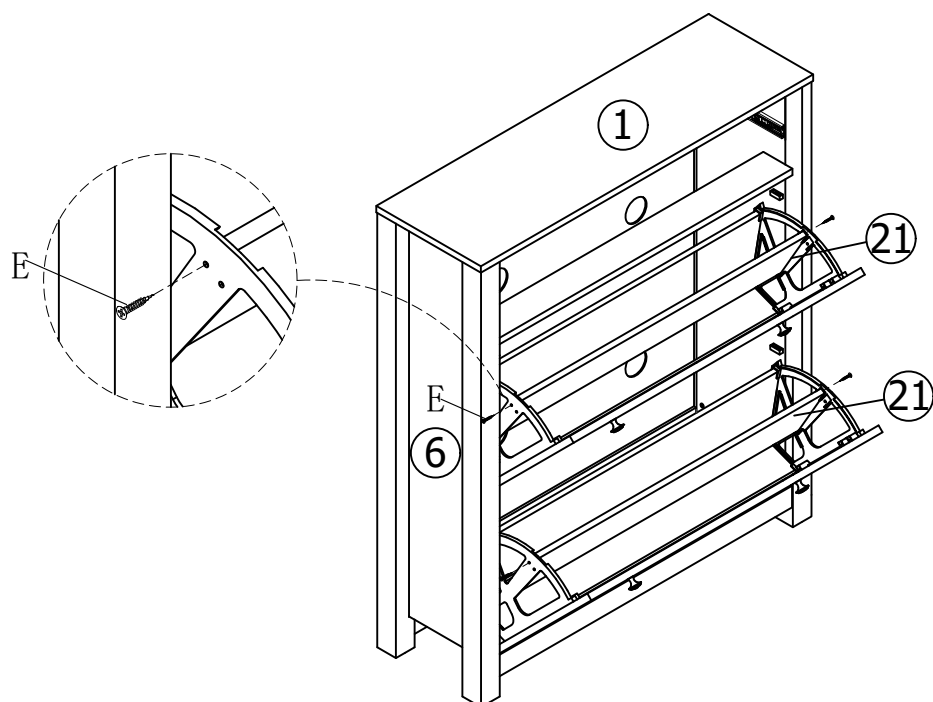


STEP 9

A x 4
B x 4
F x 4

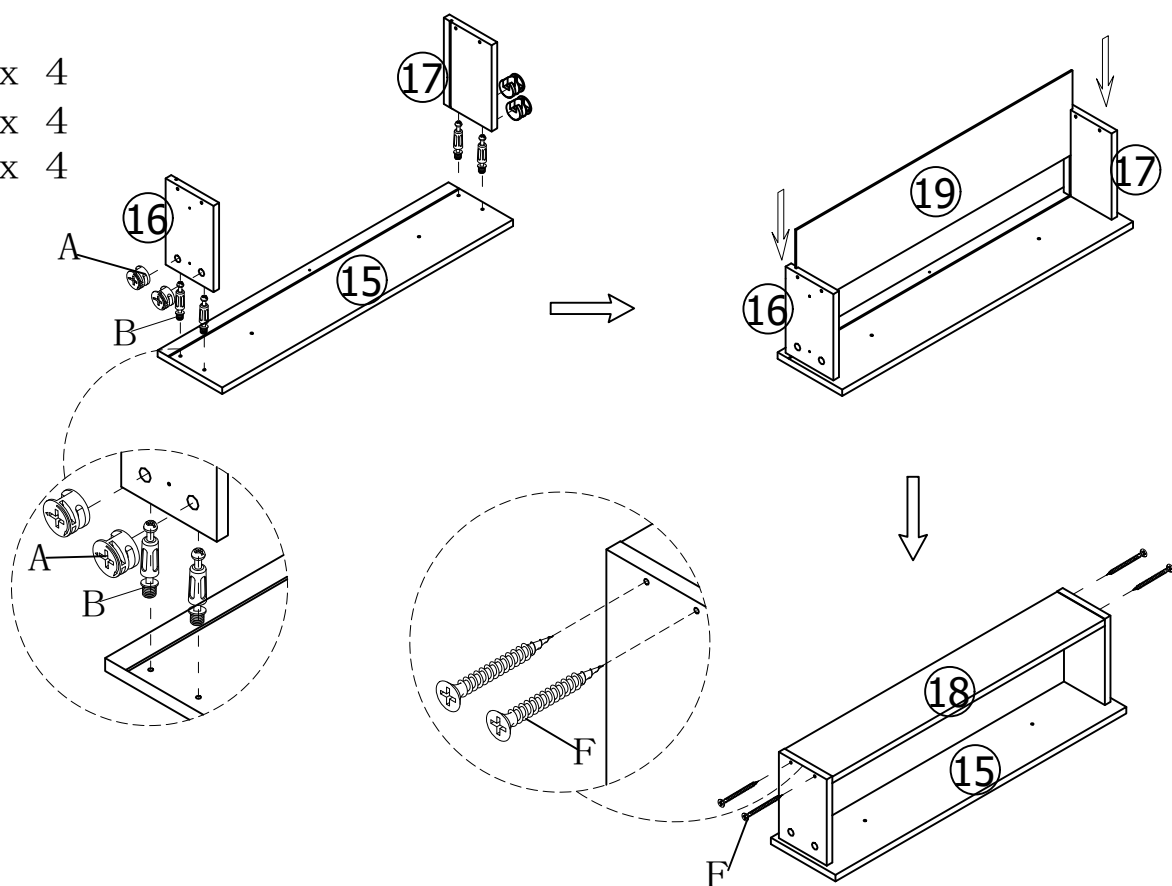


STEP 10


E x 6
H x 2
I x 2
Q x 1
R2 x 1

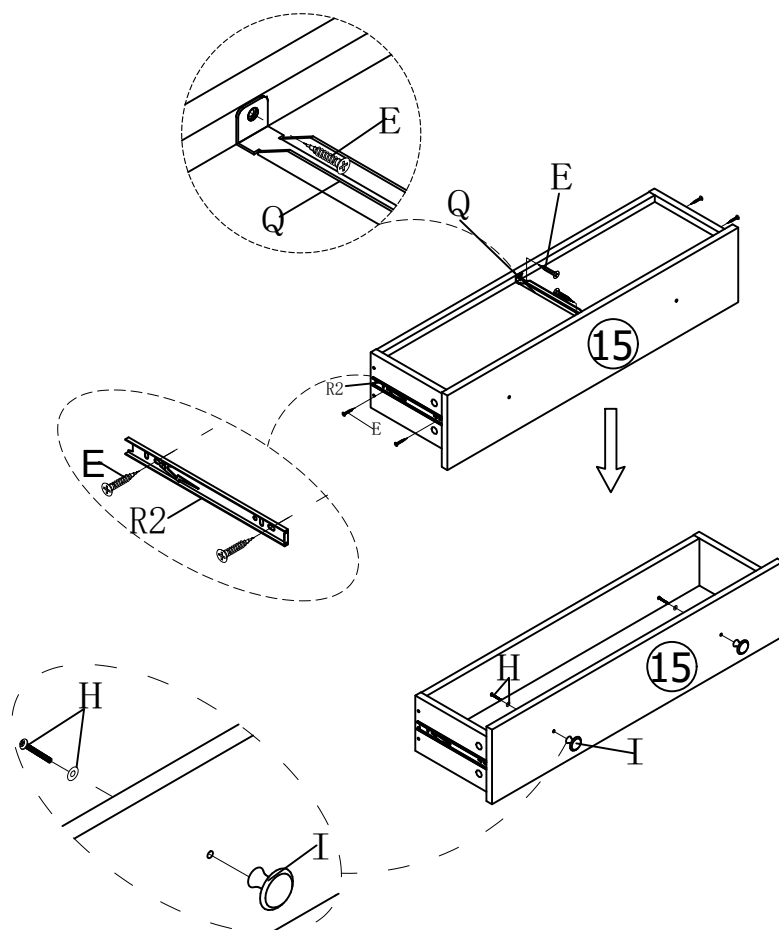

STEP 11

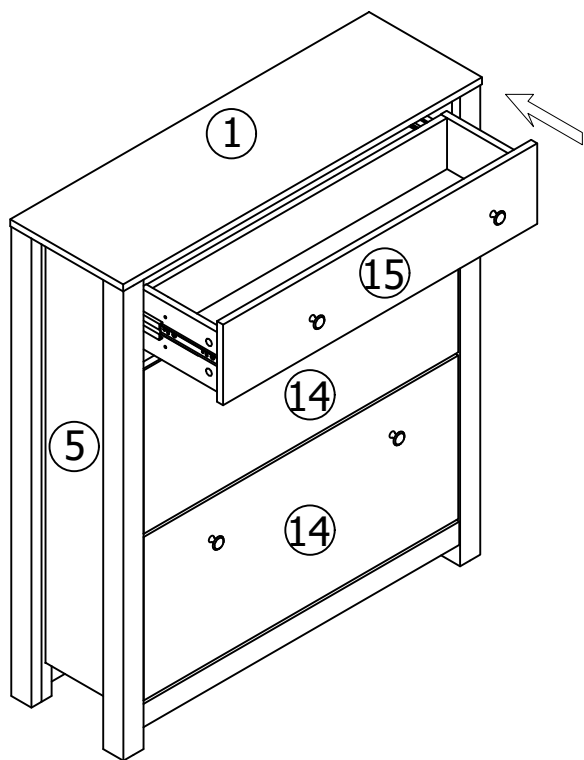

STEP 12

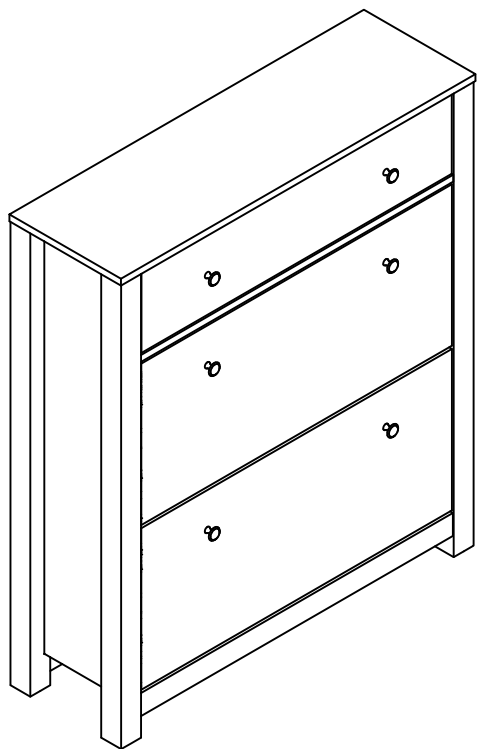

FINISH