
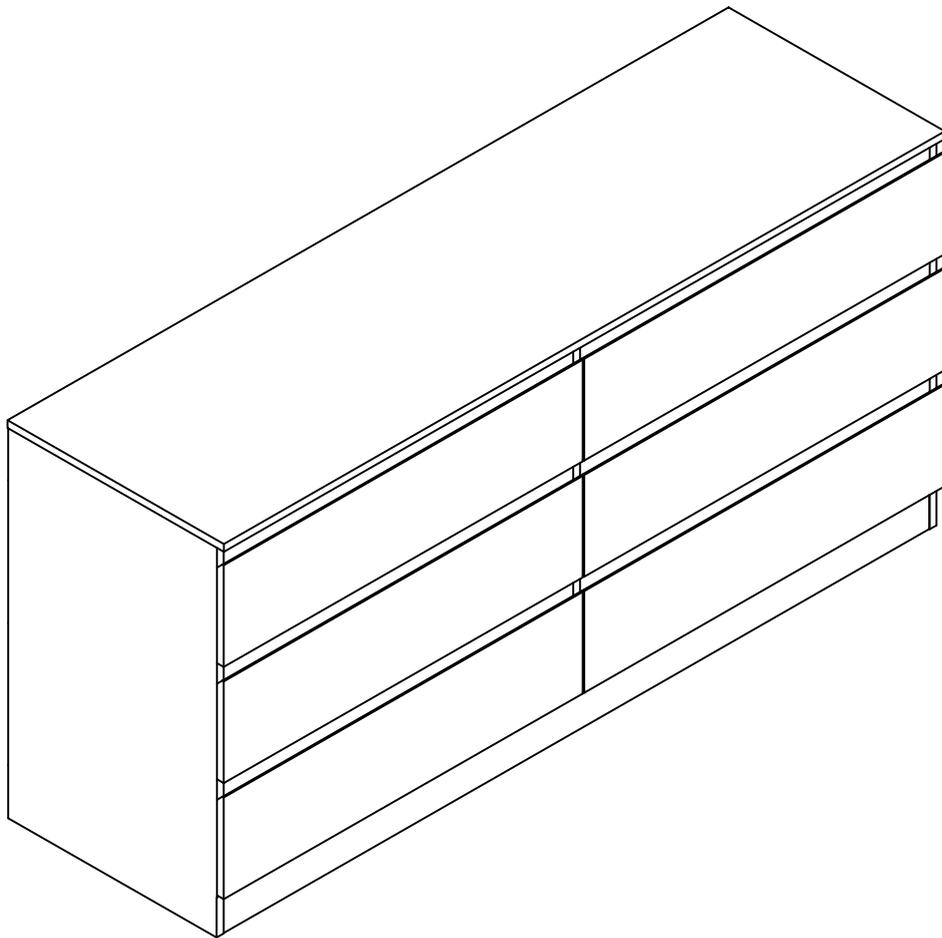

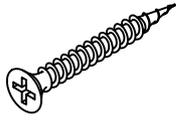
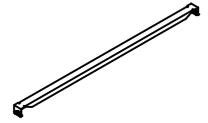



625-044 Cabinet with 6 drawers

Assembly Instructions

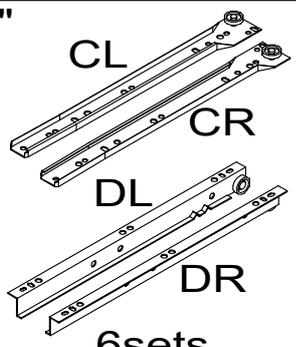


Assembly Instructions

<p>Ø15x11</p>  <p>A x 64</p>	<p>Ø7.8x35</p>  <p>B x 56</p>	<p>Ø8x30</p>  <p>C x 24</p>	<p>Ø3.5x14</p>  <p>D x 84</p>
<p>E x 10</p> 	<p>Ø7.8x32</p>  <p>F x 8</p>	<p>Ø4x40</p>  <p>G x 24</p>	<p>H x 12</p> 
<p>Ø3x16</p>  <p>I x 12</p>	<p>7.8x38</p>  <p>J x 2</p>	<p>Ø5x60</p>  <p>K x 2</p>	<p>384*15*15</p>  <p>L x 6</p>
<p>1566mm</p>  <p>M x 1</p>	<p>Ø7*48</p>  <p>N x 2</p>	<p>4MM</p>  <p>O x 1</p>	<p>16"</p>  <p>CL CR DL DR 6sets</p>

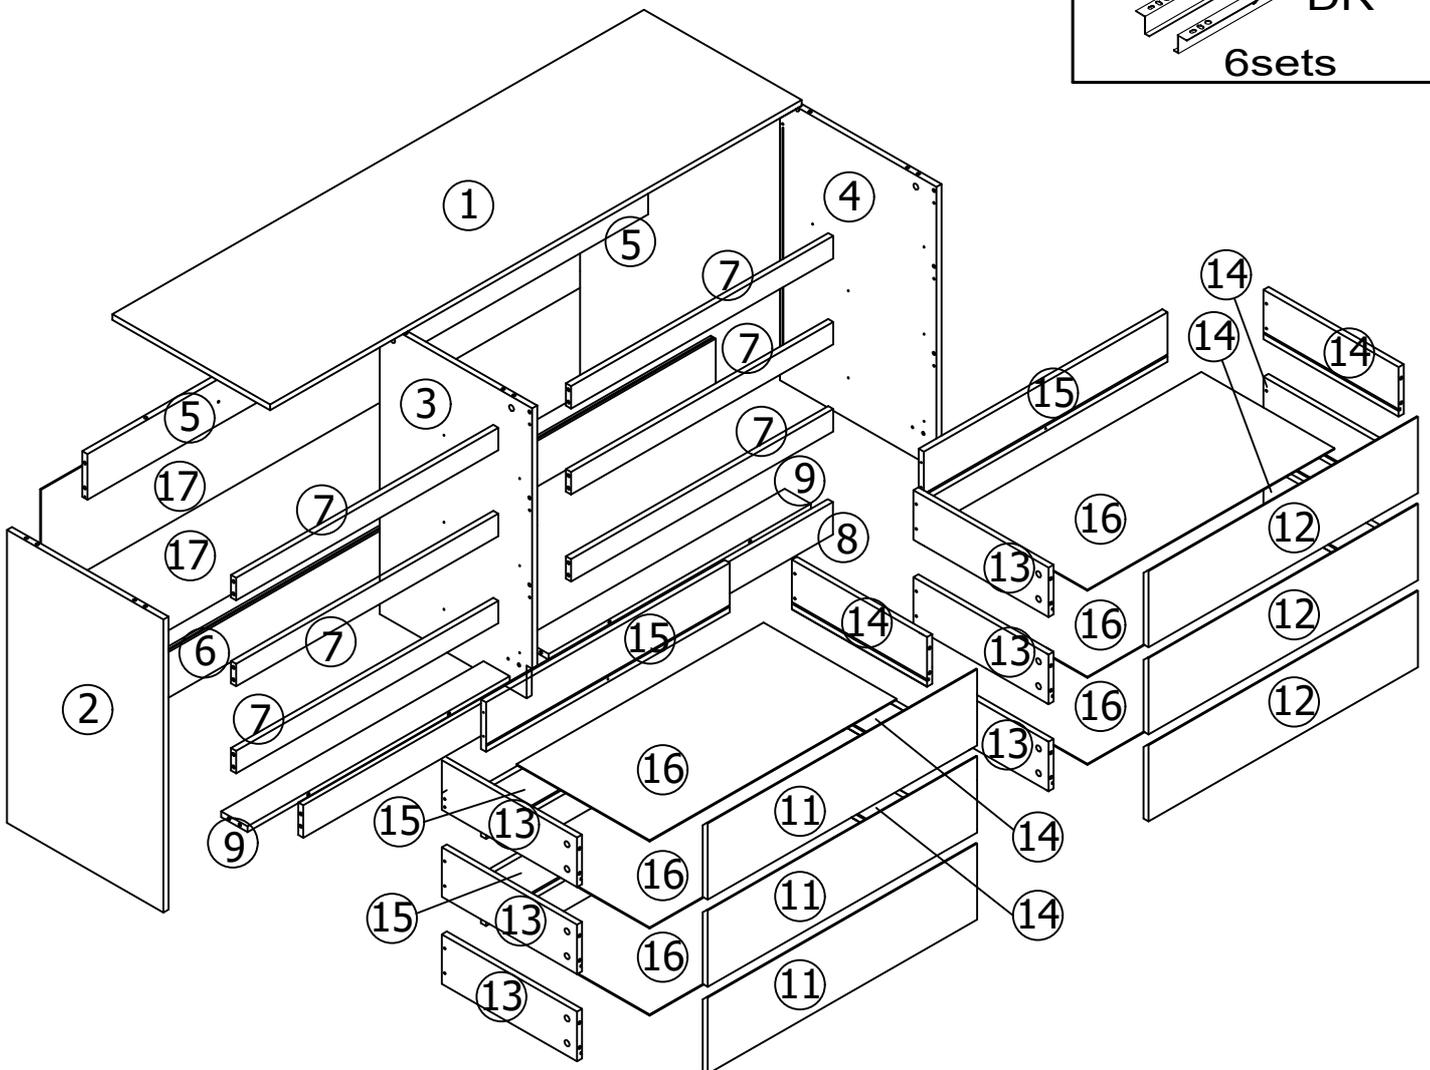

STEP 1


D x 18
CL x 3
CR x 3

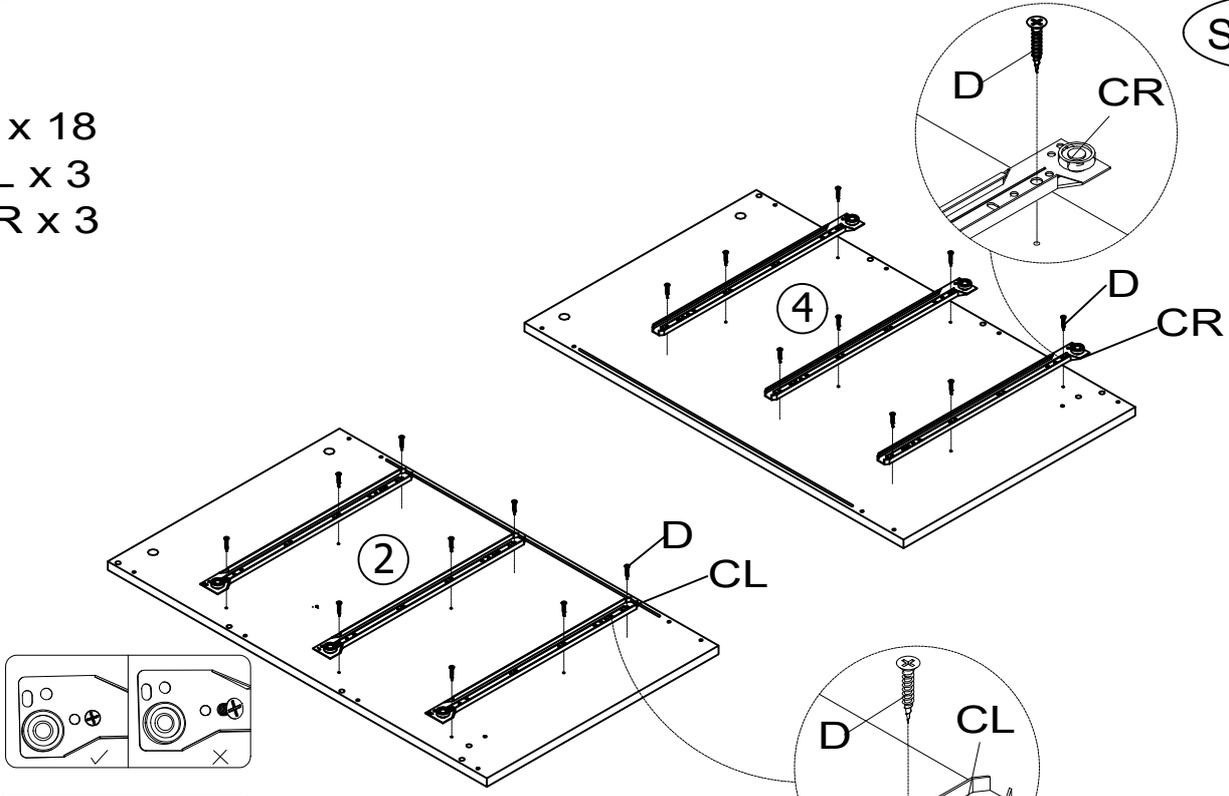

REMARK:
When installing, please make
sure the screws are flattened,
Not crooked; Otherwise the
drawers will not be installed
perfectly.

STEP 2



D x 18
CL x 3
CR x 3

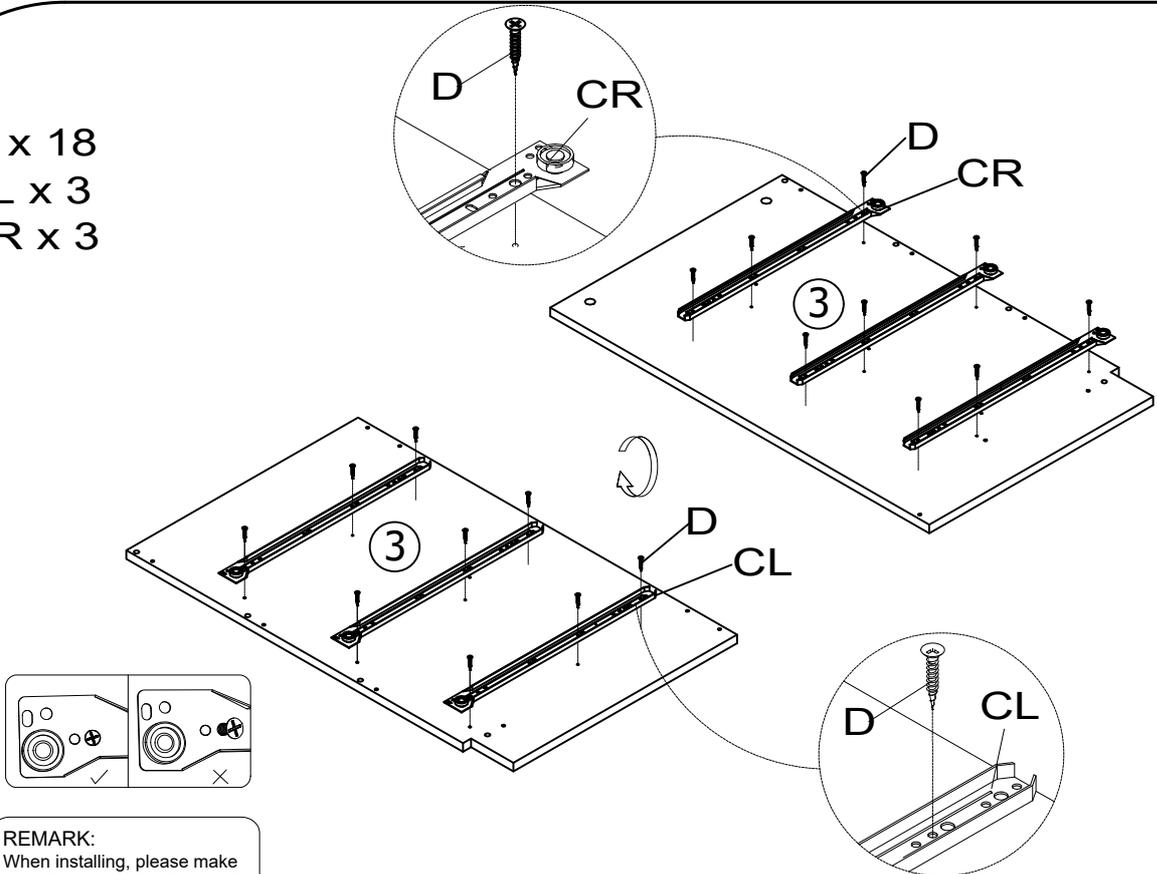

REMARK:
When installing, please make
sure the screws are flattened,
Not crooked; Otherwise the
drawers will not be installed
perfectly.




STEP 3

- A x 8
- F x 8
- C x 8
- N x 2
- O x 1

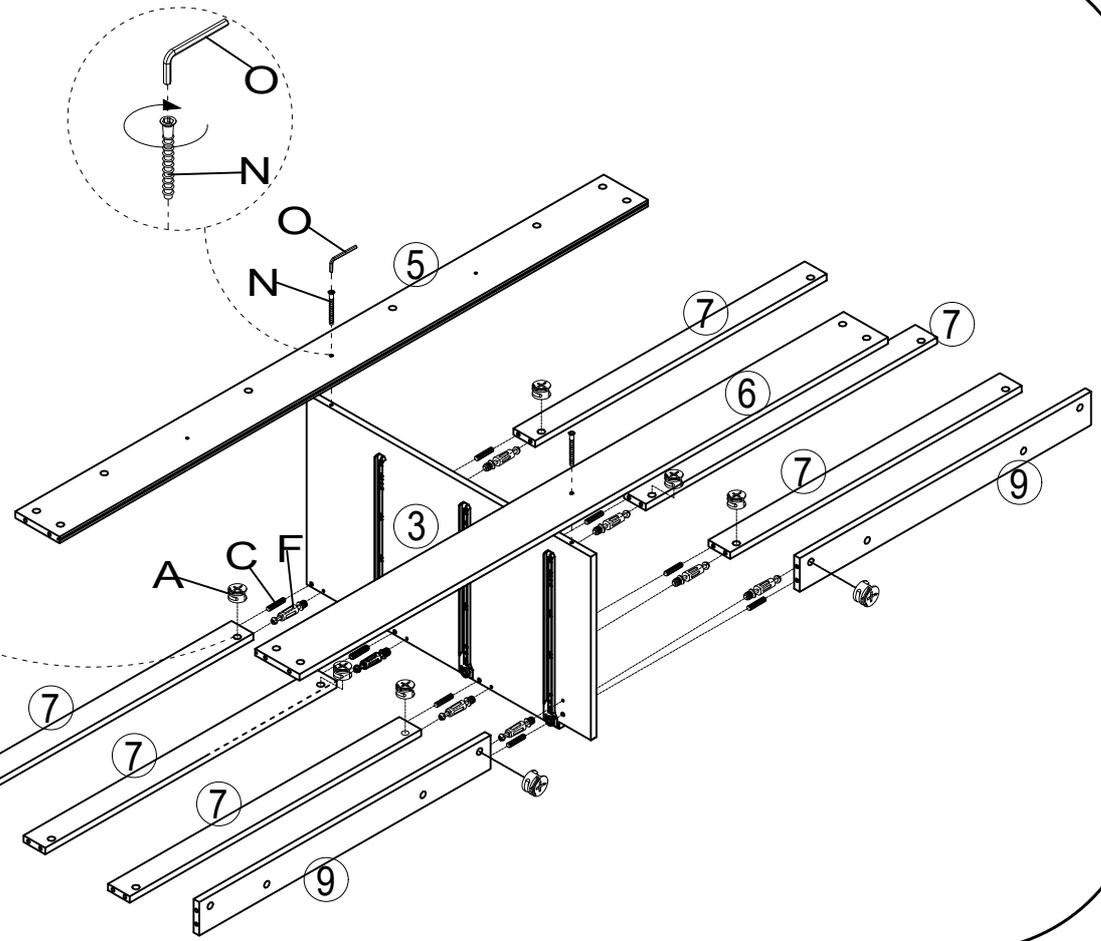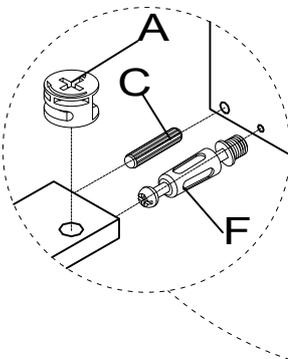


STEP 4

- A x 4
- B x 4
- M x 1

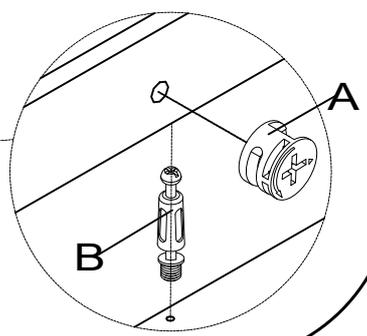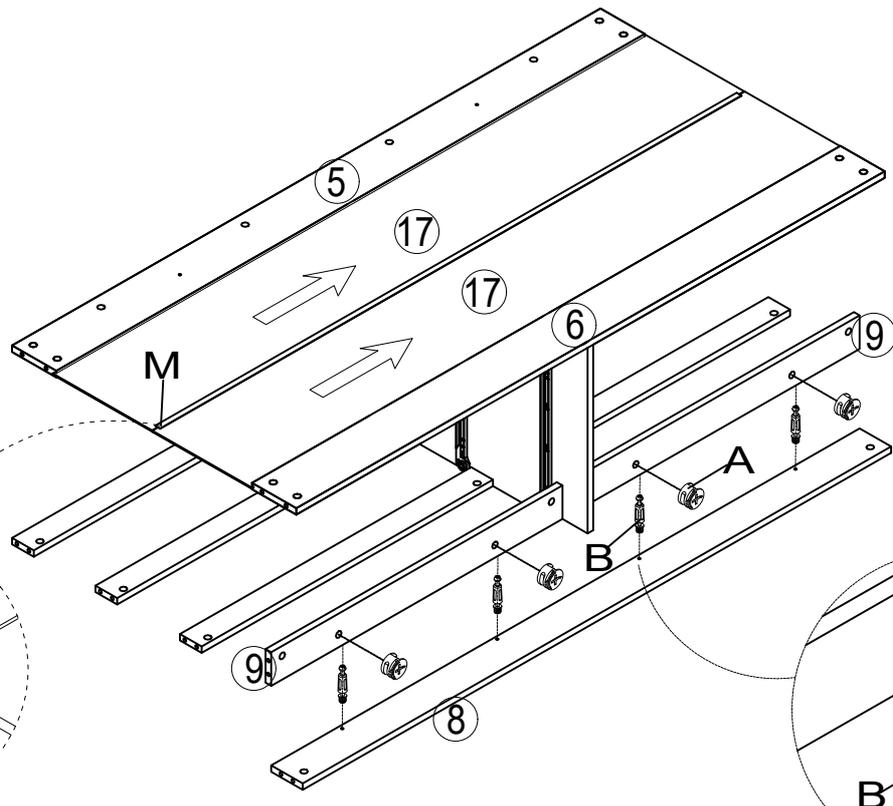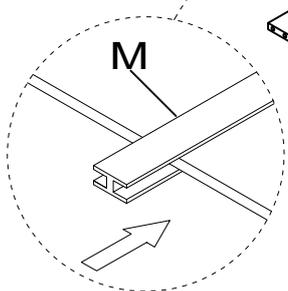


STEP 5

A x 18
B x 18
C x 10

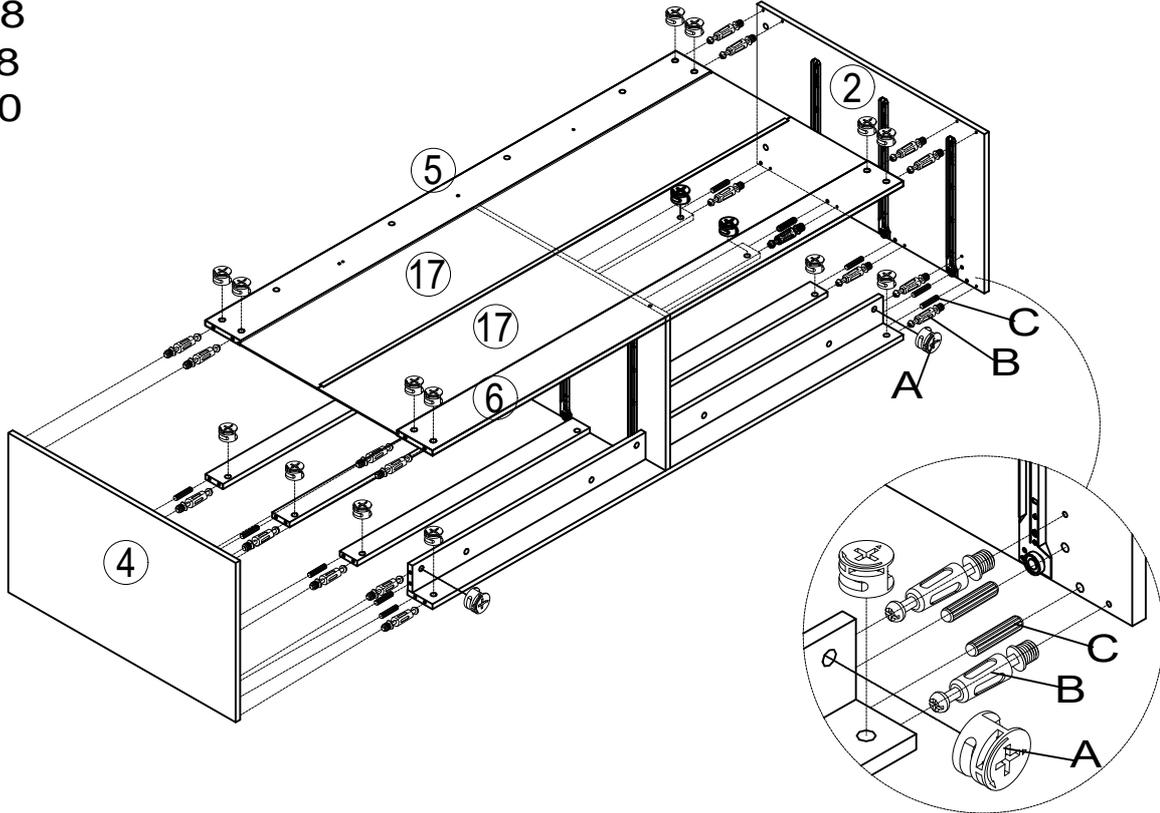


STEP 6

E x 10
H x 12
I x 12

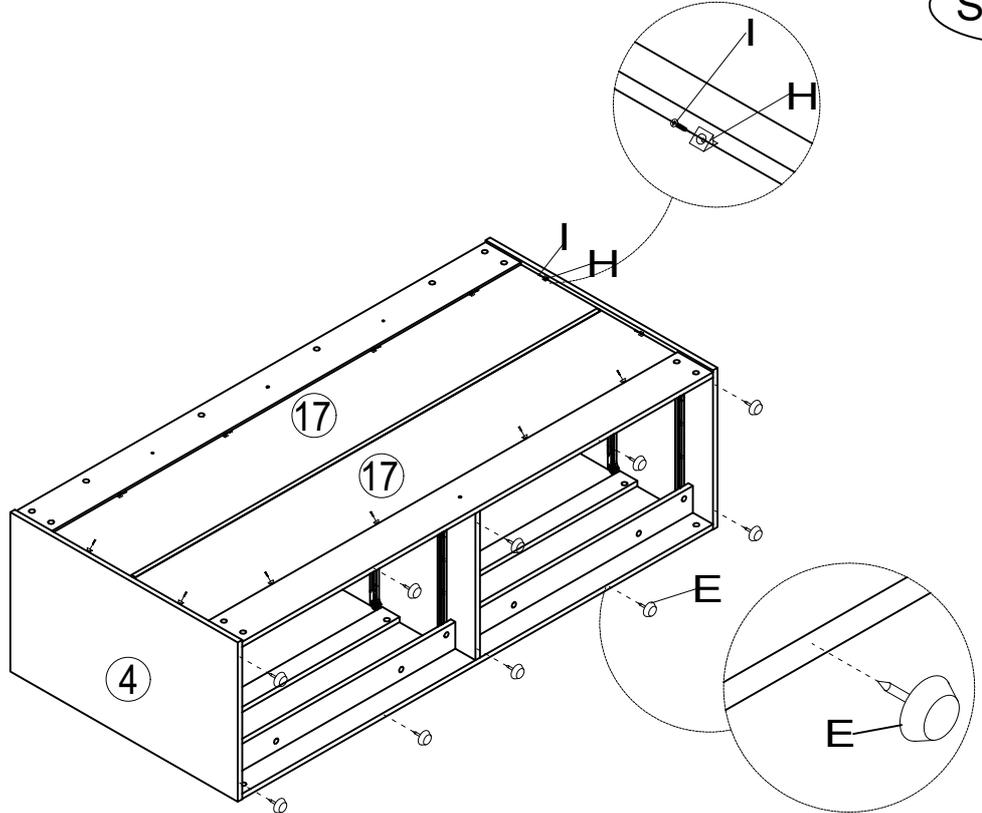


STEP 7

A x 10
B x 10
C x 6

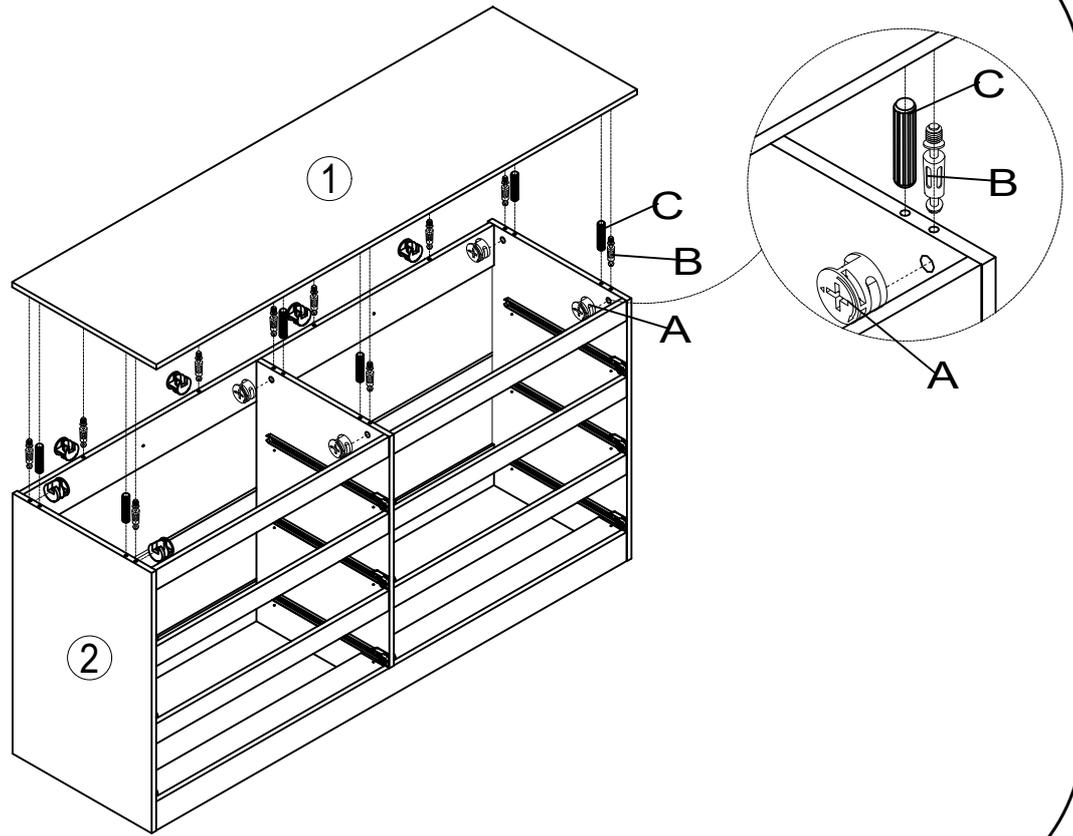


STEP 8

J x 2
K x 2

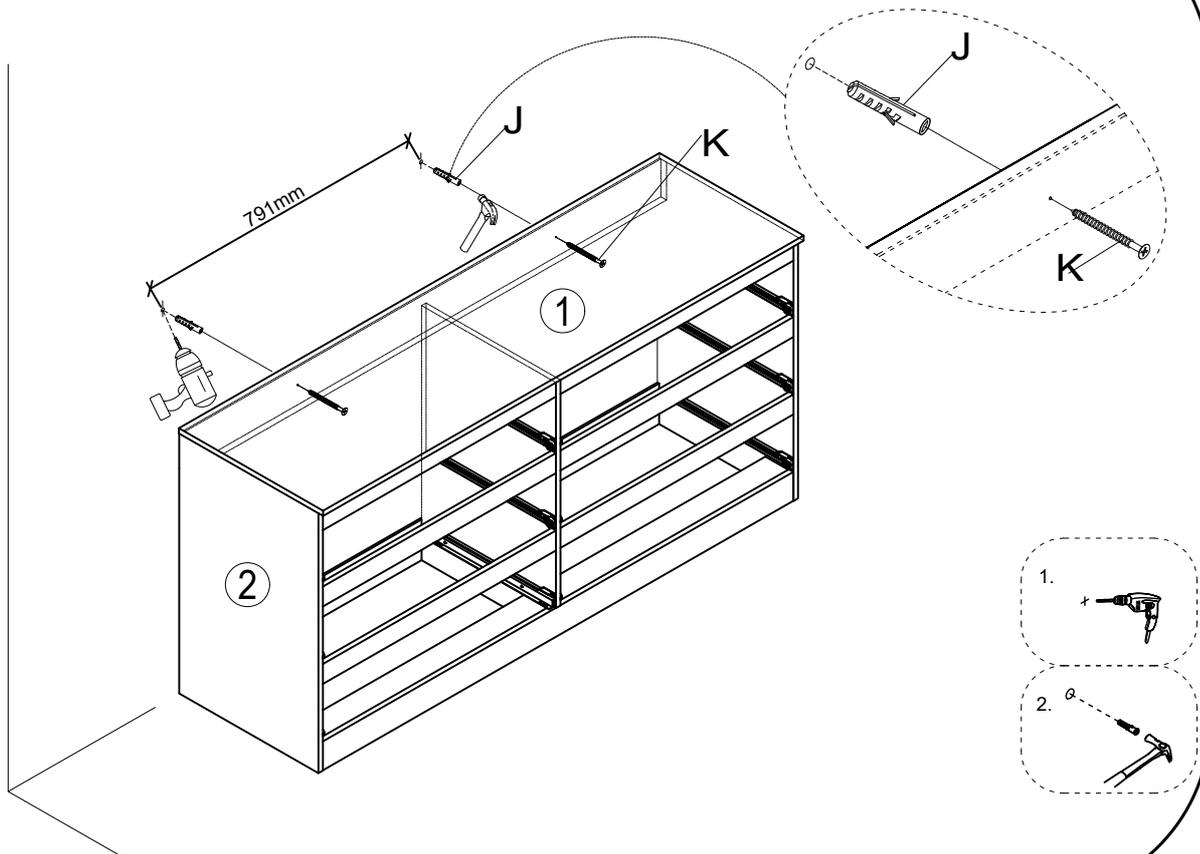


STEP 9

- A x 24
- B x 24
- G x 24

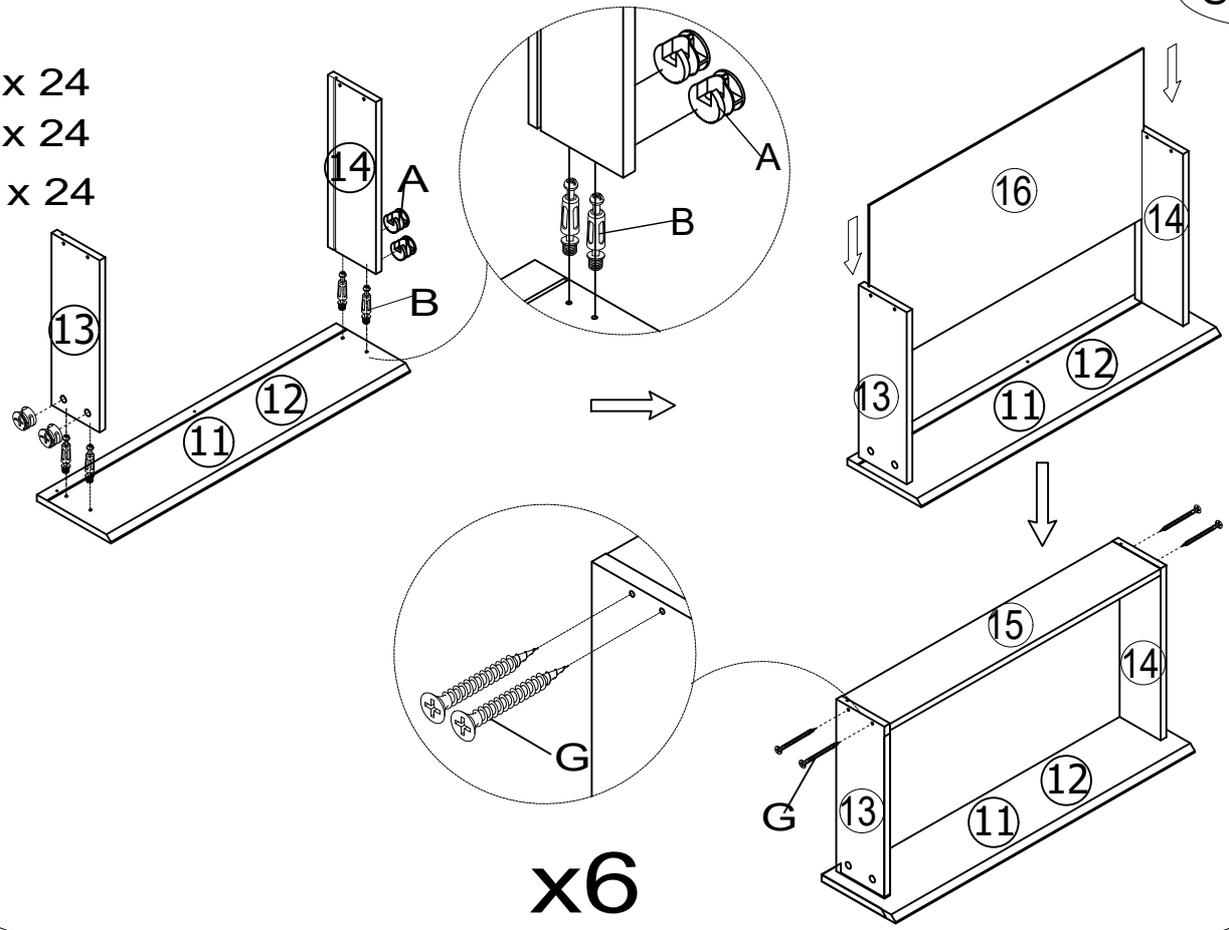


STEP 10


- D x 48
- L x 6
- DL x 6
- DR x 6

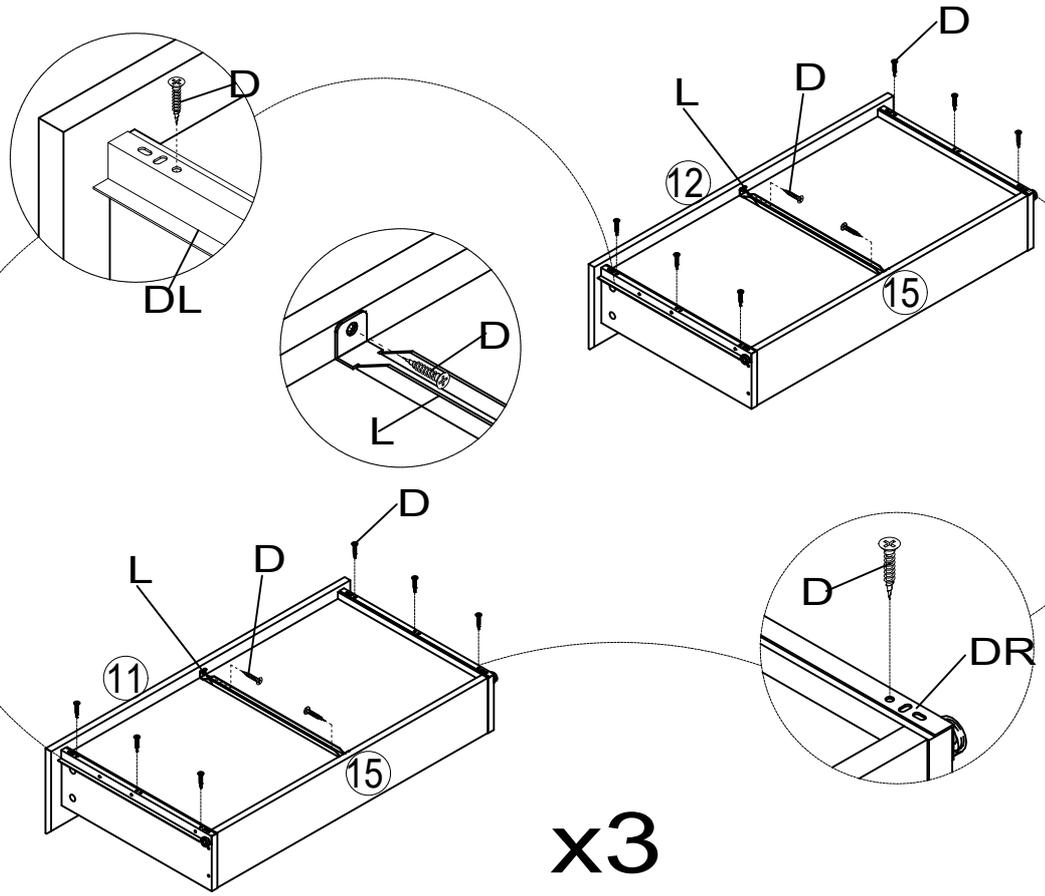

STEP 11

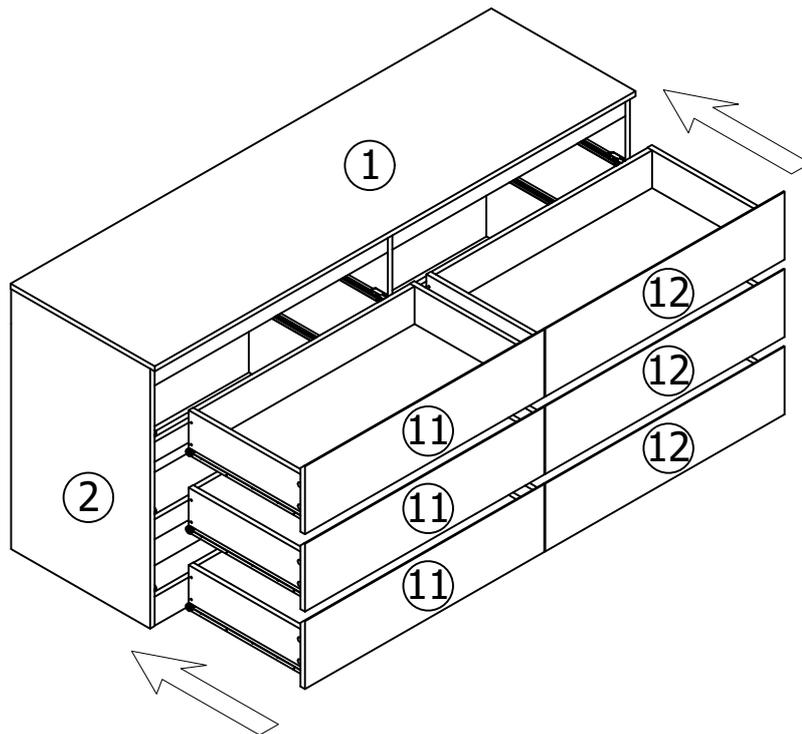

STEP 12

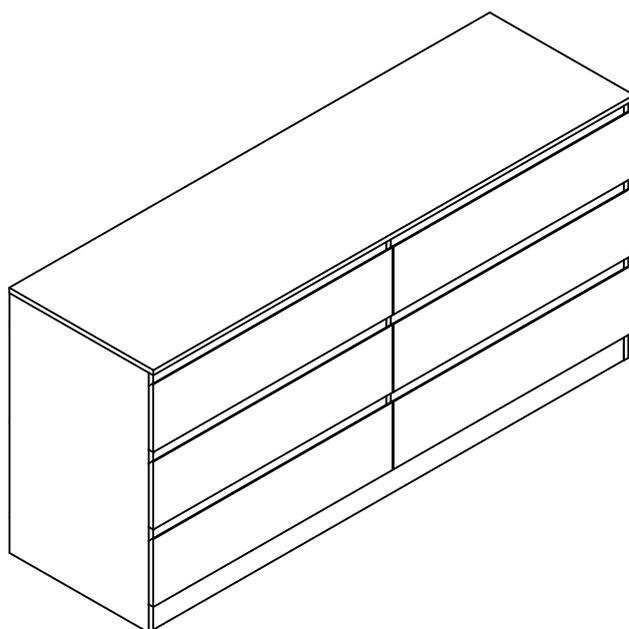

FINISH