



625-049 Cabinet with shelf, 1 door and 2 drawers

Assembly Instructions




L


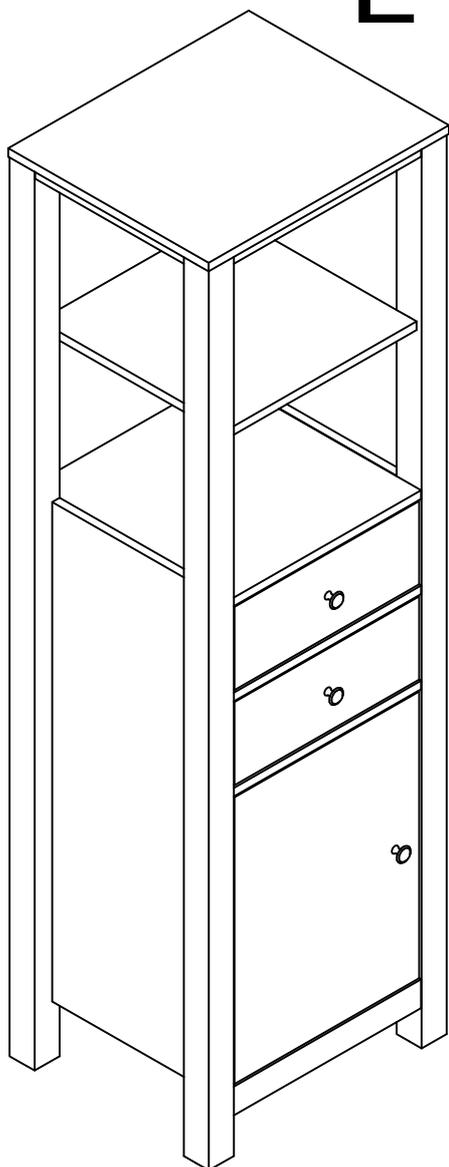


R

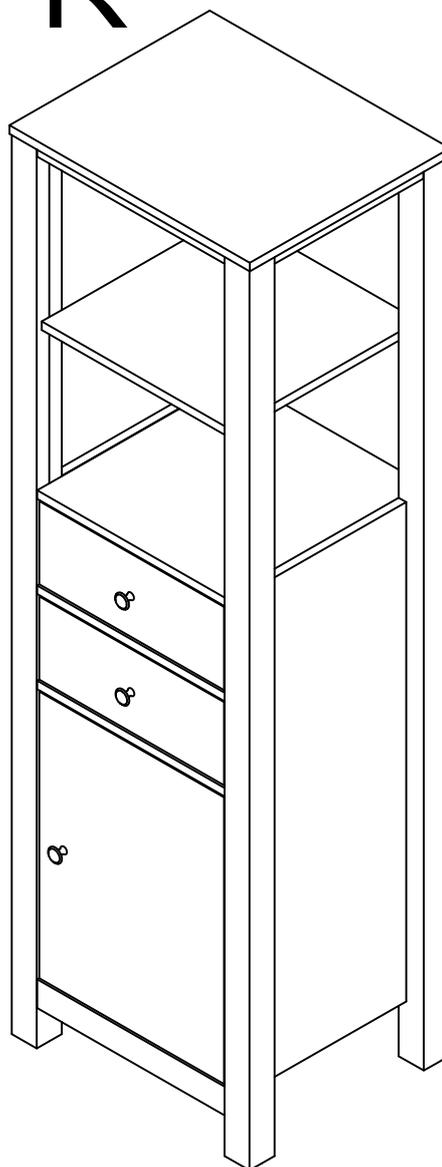


Assembly Instructions
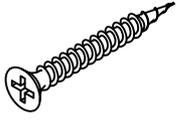
<p>Ø15x11</p>  <p>A x 48</p>	<p>Ø7.8x35</p>  <p>48</p>	<p>Ø8x30</p>  <p>C x 26</p>	<p>Ø4x16</p>  <p>D x 13</p>
<p>Ø3.5x14</p>  <p>E x 16</p>	<p>Ø4x40</p>  <p>F x 9</p>	<p>G x 2</p> 	<p>H x 4</p> 
<p>M4x20</p>  <p>I x 4</p>	<p>Ø 28x12x20</p>  <p>J x 3</p>	<p>Ø4x25</p>  <p>K x 10</p>	<p>L x 12</p> 
<p>Ø3x16</p>  <p>M x 12</p>	<p>N x 1</p> 	<p>62x40x18</p>  <p>O x 1</p>	

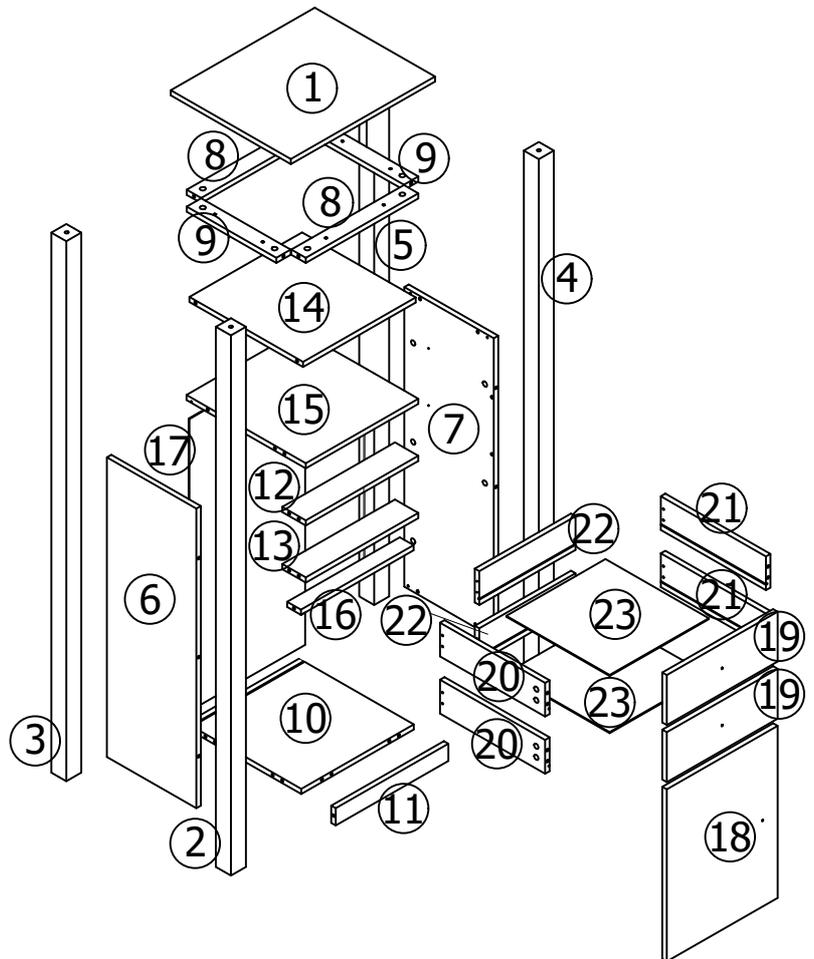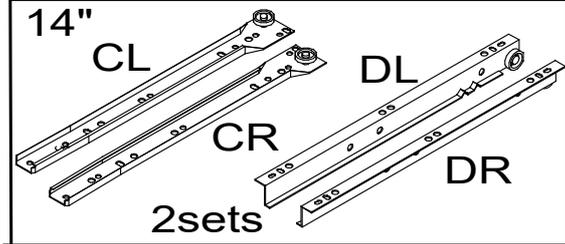


STEP 1

A x 16
B x 16
C x 8

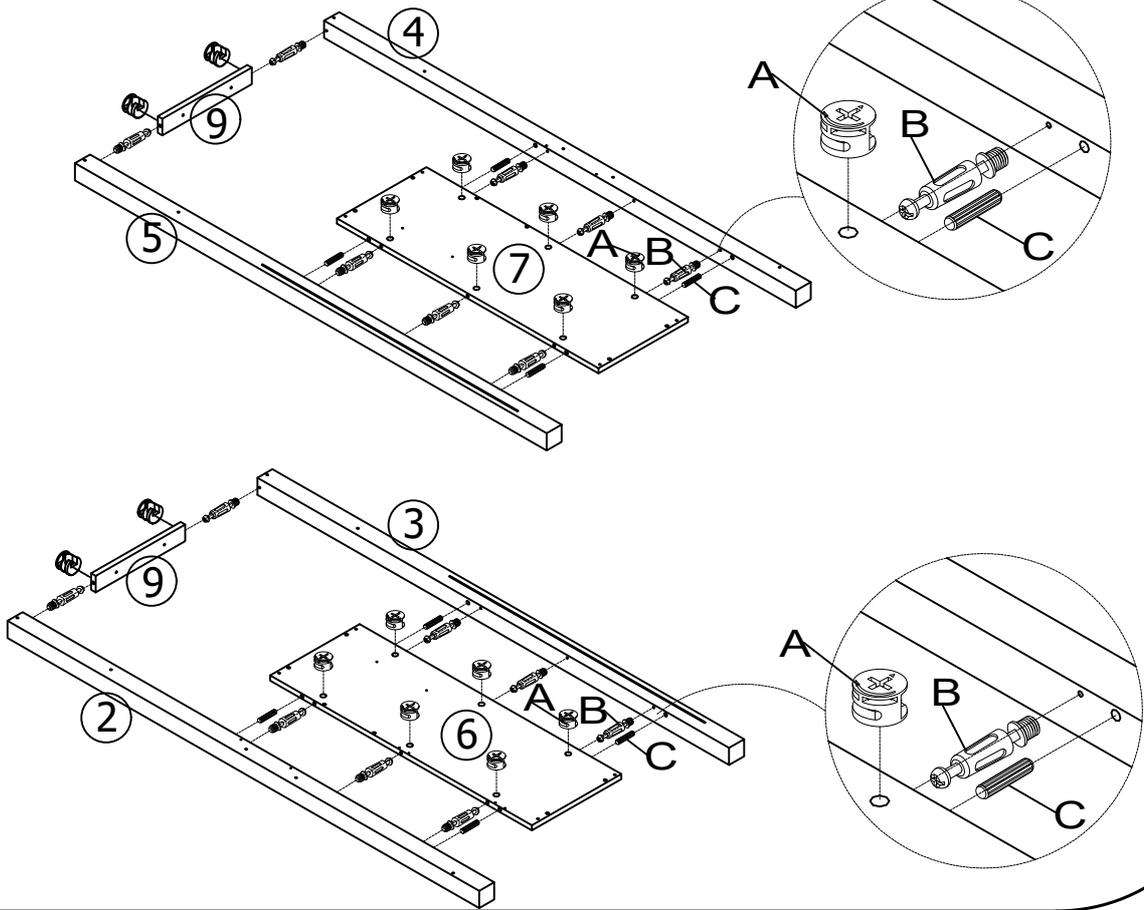


STEP 2

E x 8
CL x 2
CR x 2




REMARK:
When installing, please make sure the screws are flattened, Not crooked; Otherwise the drawers will not be installed perfectly.

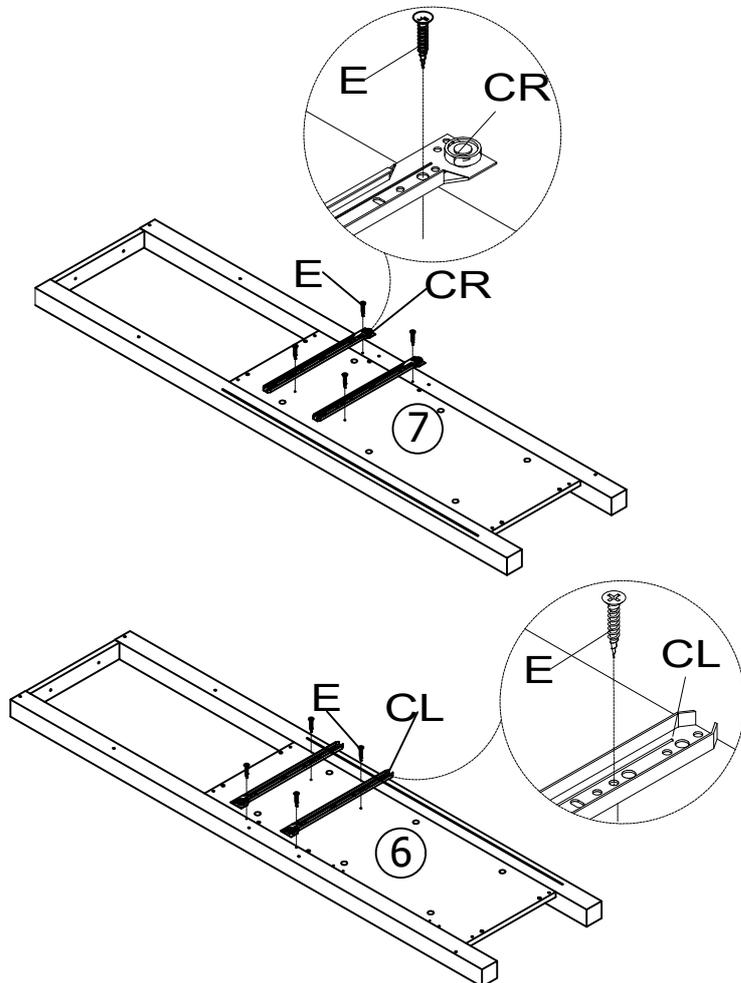


STEP 3

- A x 13
- B x 13
- C x 8
- D x 1
- O x 1

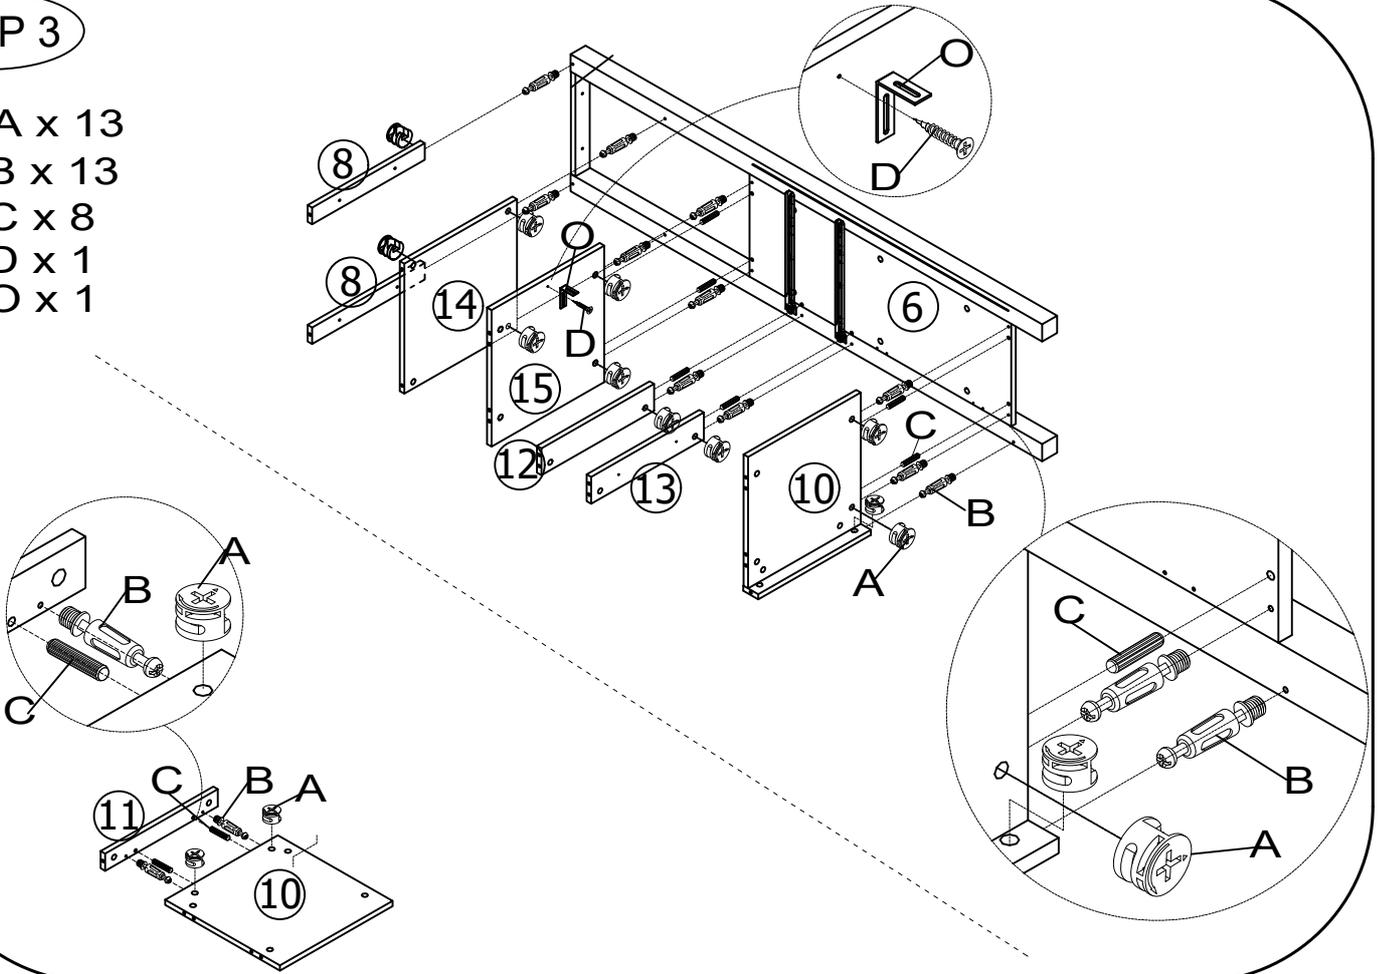


STEP 4

- A x 11
- B x 11
- C x 6

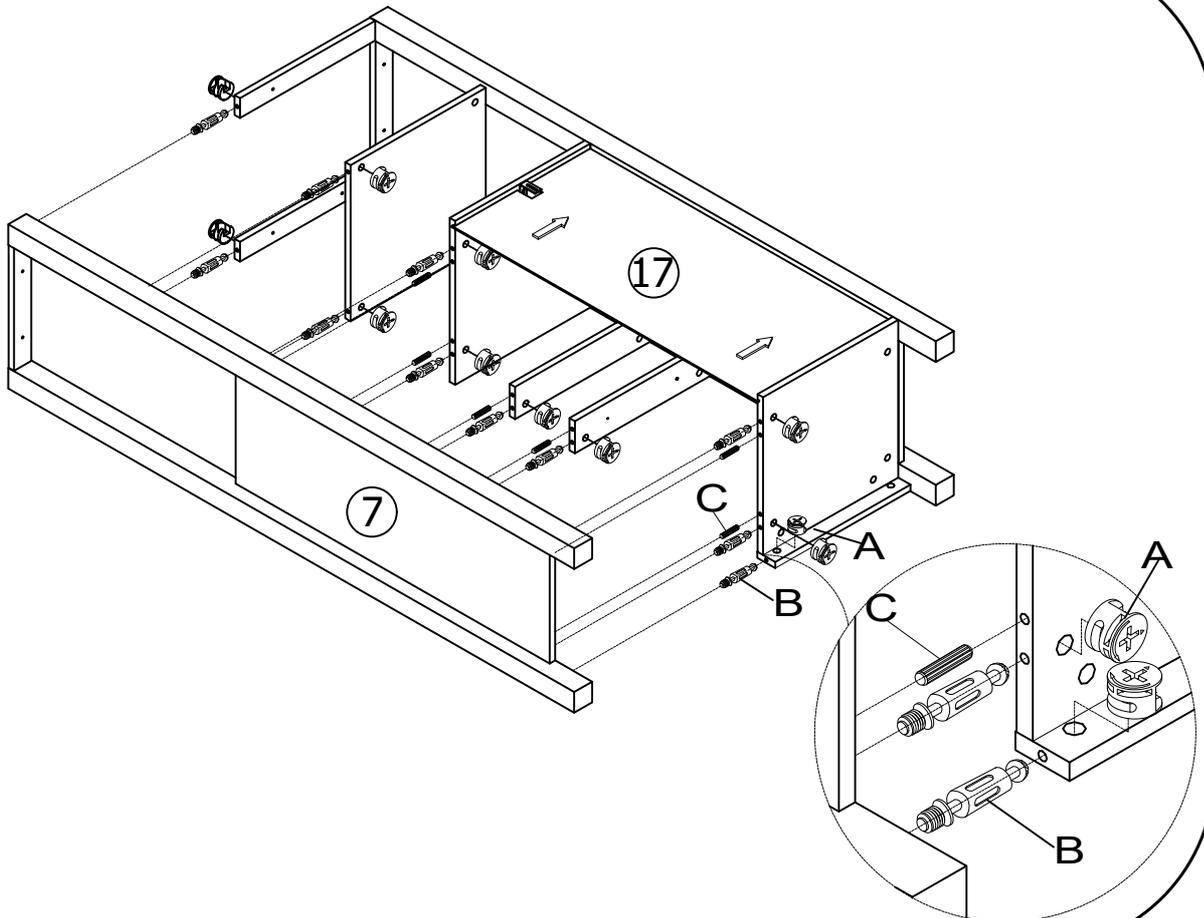


STEP 5

H x 4
L x 12
M x 12

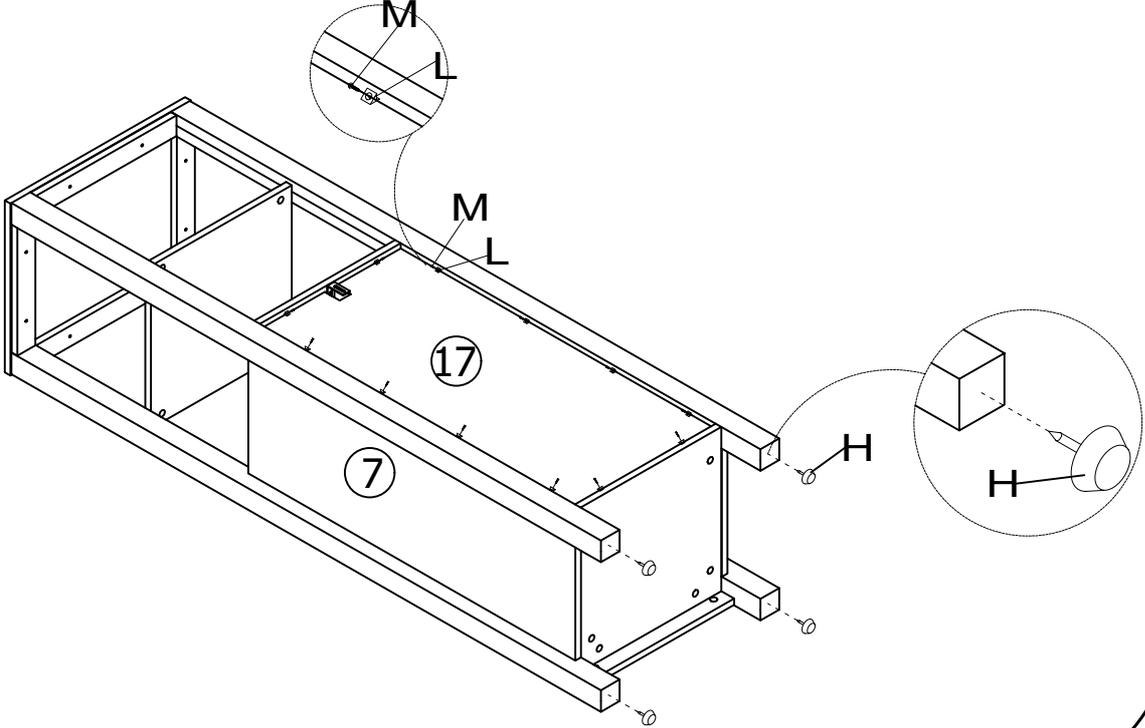

STEP 6

C x 4
K x 10

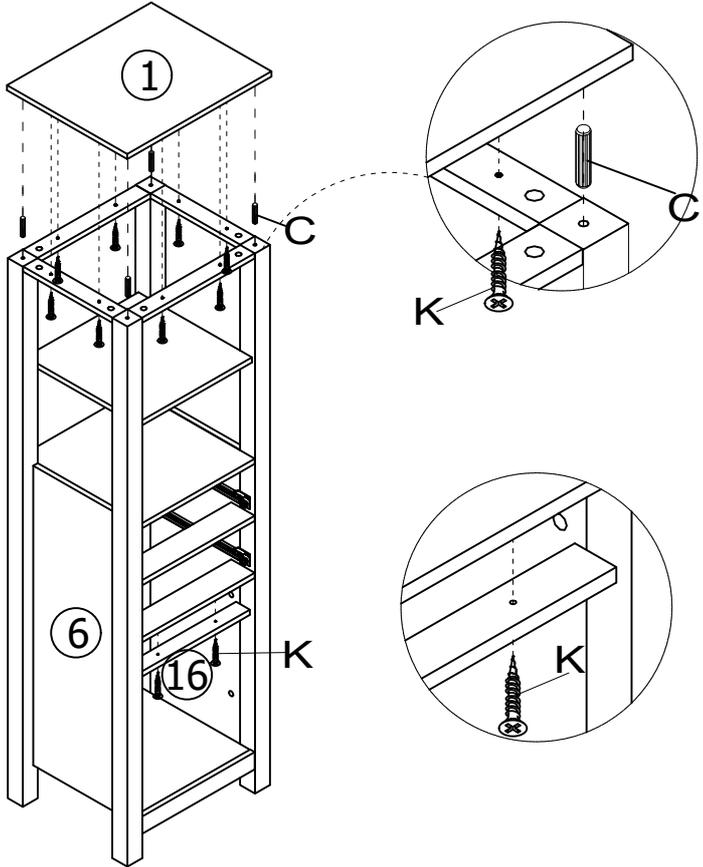


STEP 7

F x 1

I x 1

N x 1

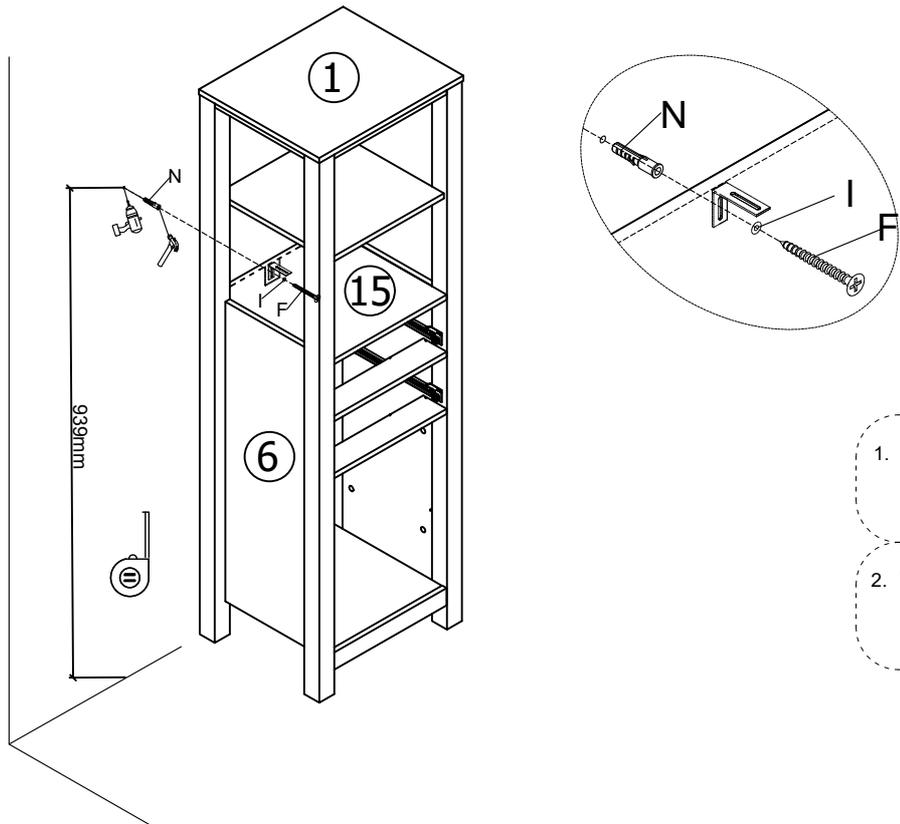


STEP 8

D x 12

G x 2


I x 1

J x 1

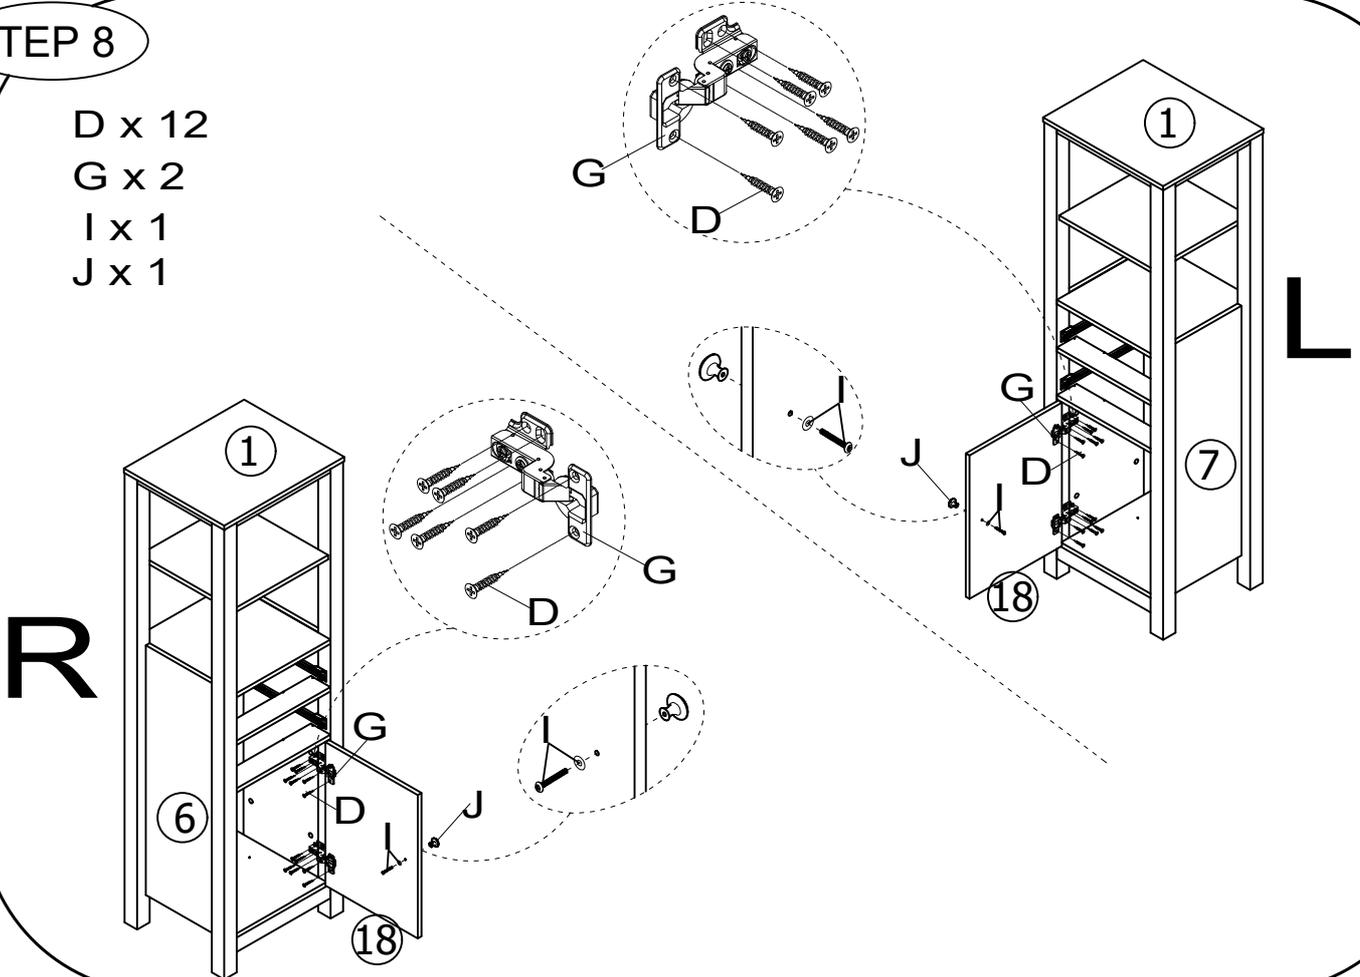

STEP 9


A x 8
B x 8
F x 8

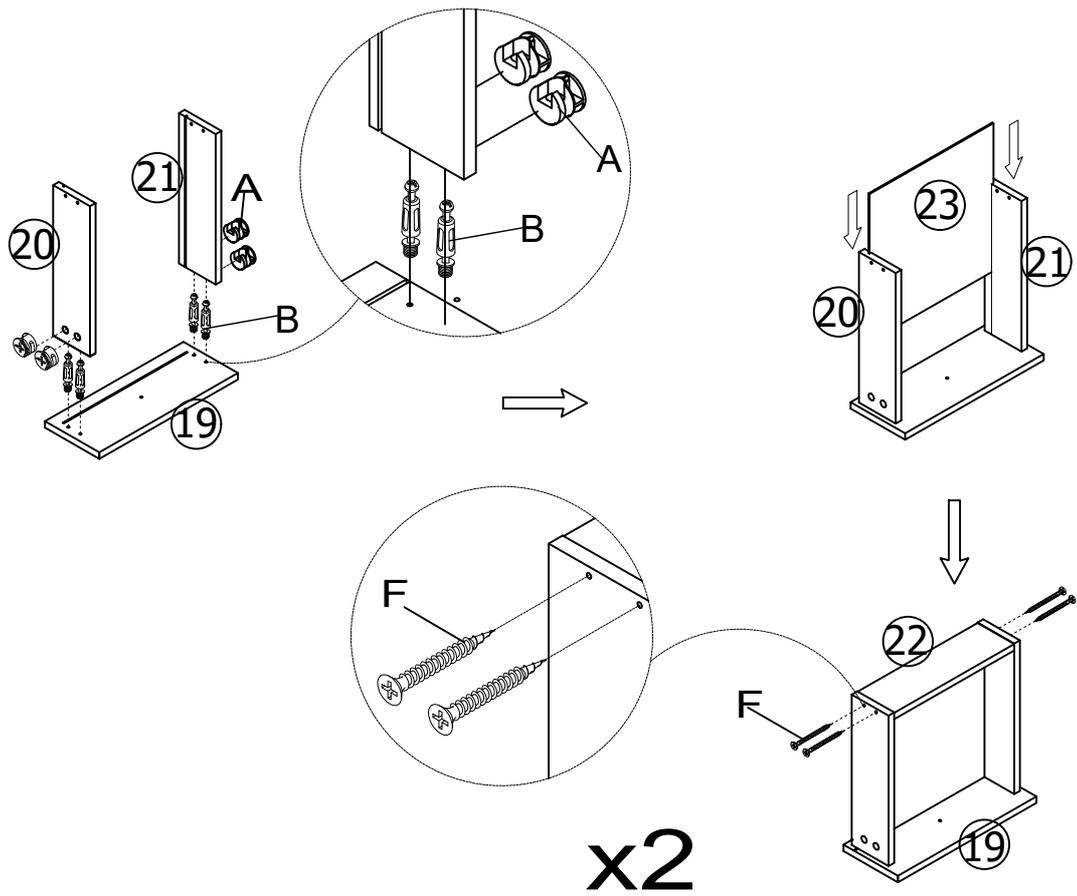

x2


STEP 10

E x 8
I x 2
J x 2
DL x 2
DR x 2

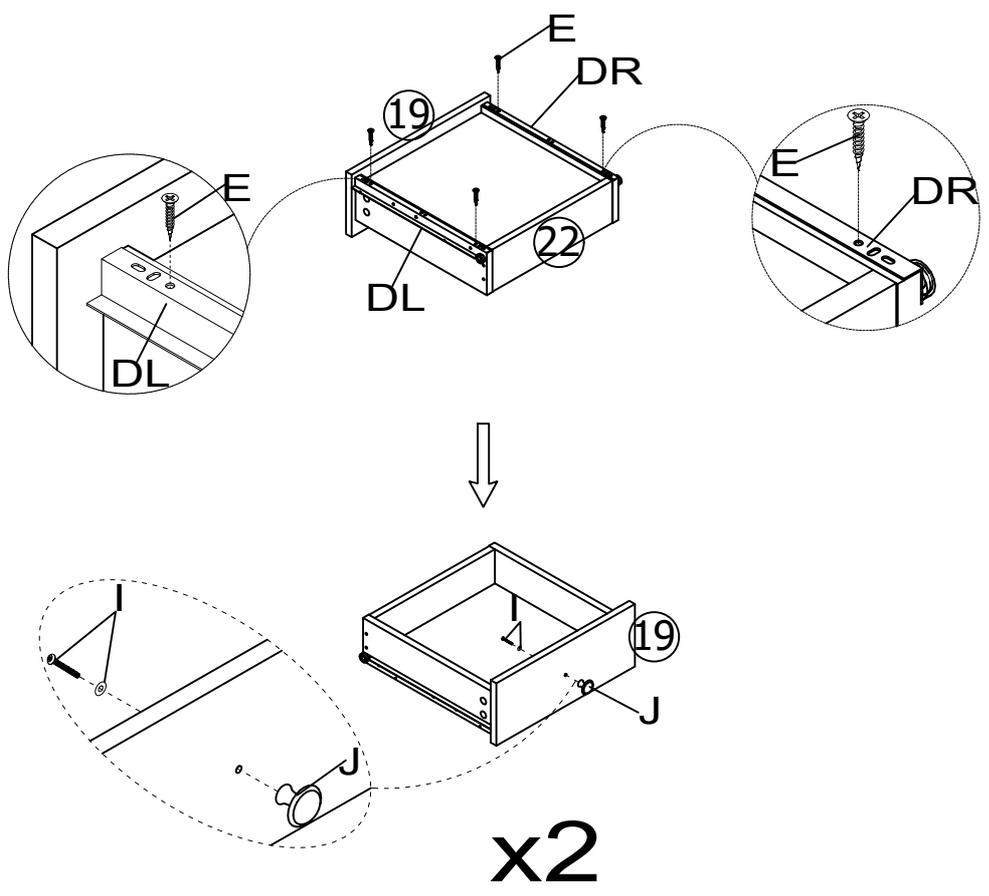


x2

STEP 11

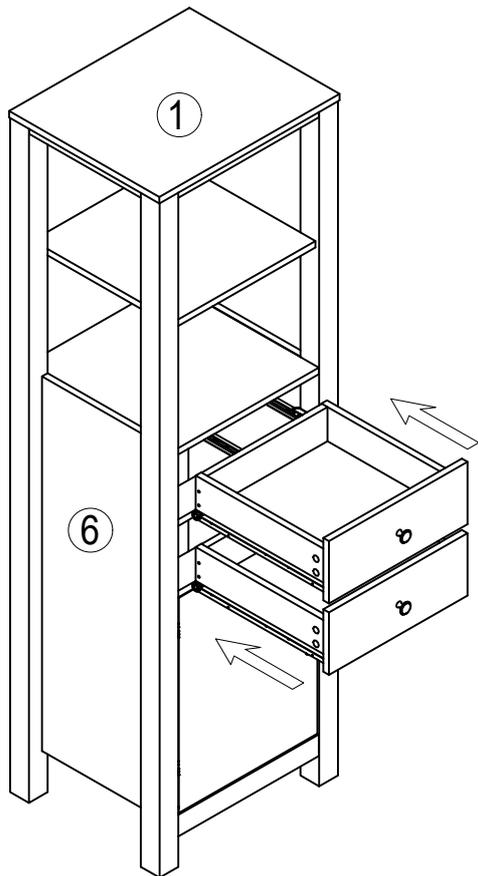

STEP 12

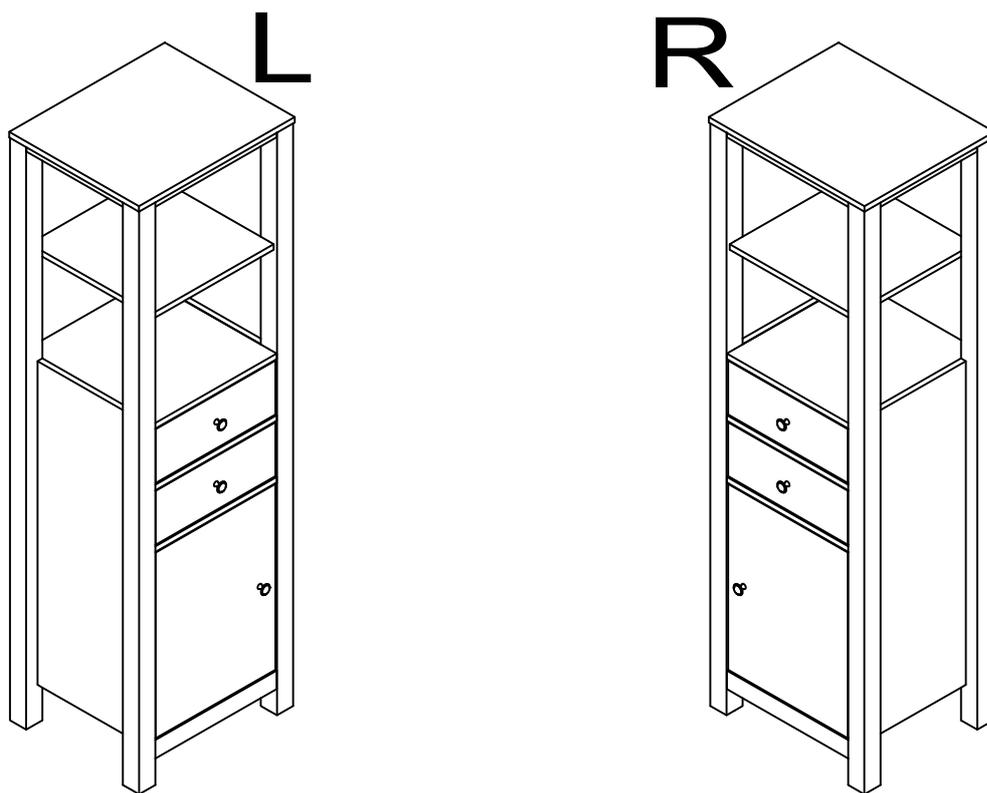

FINISH