

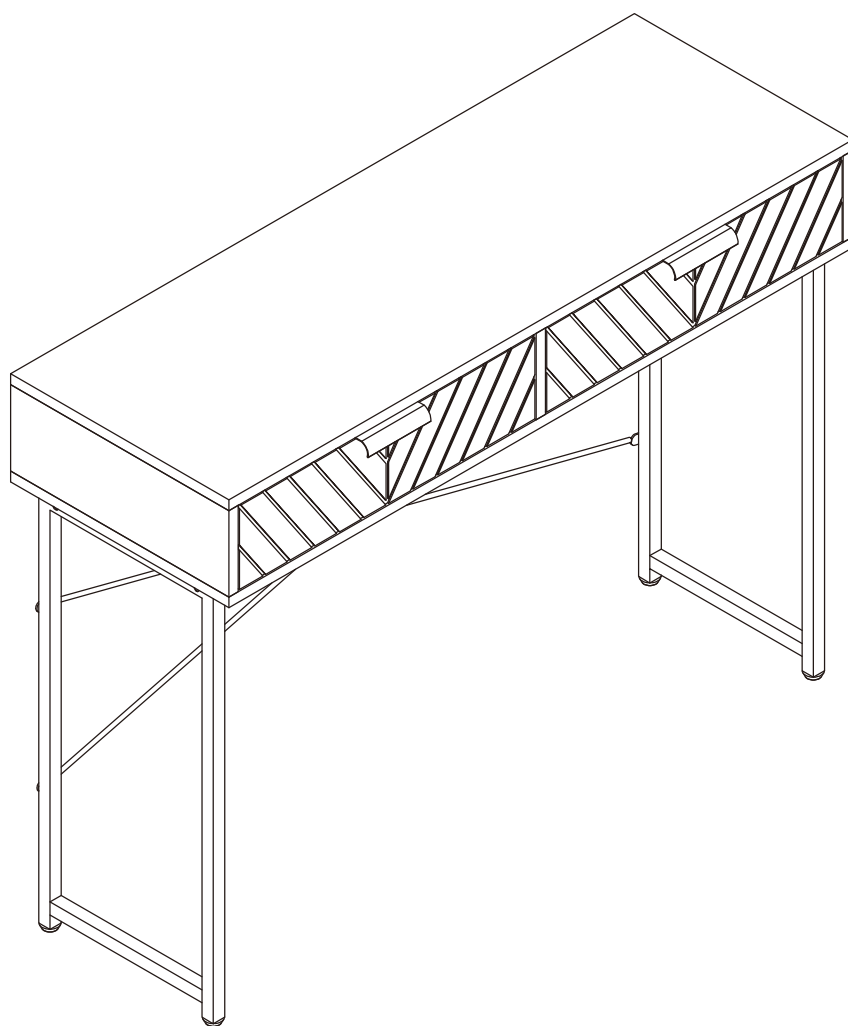



EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

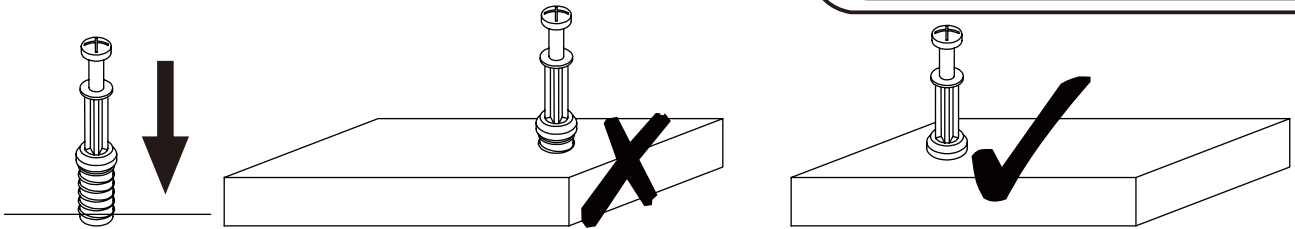


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

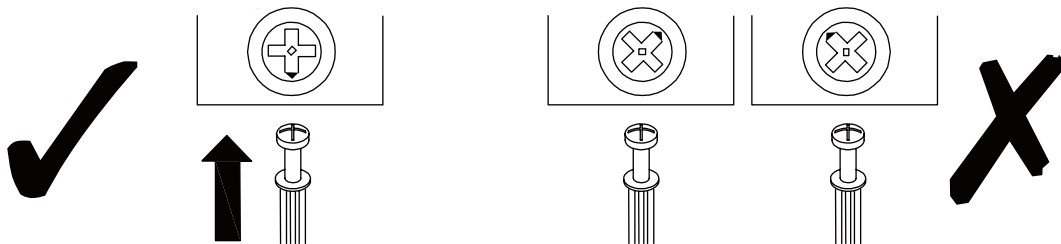



EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

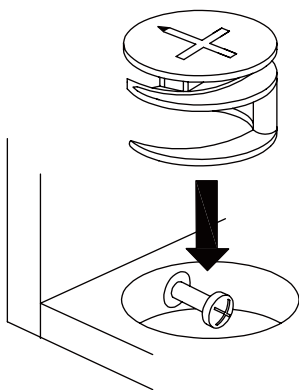













EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

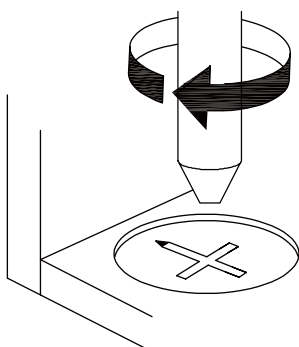



EN_Turn cam lock clockwise to tighten.

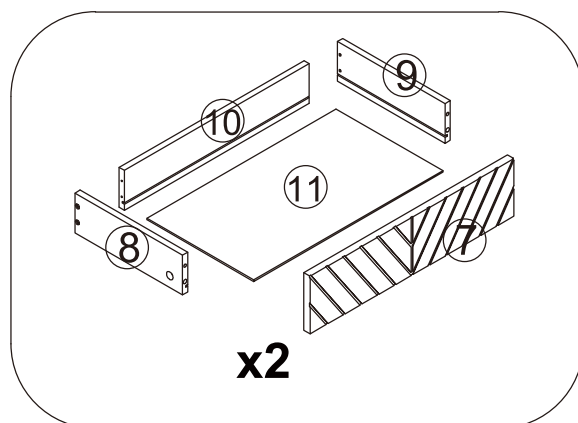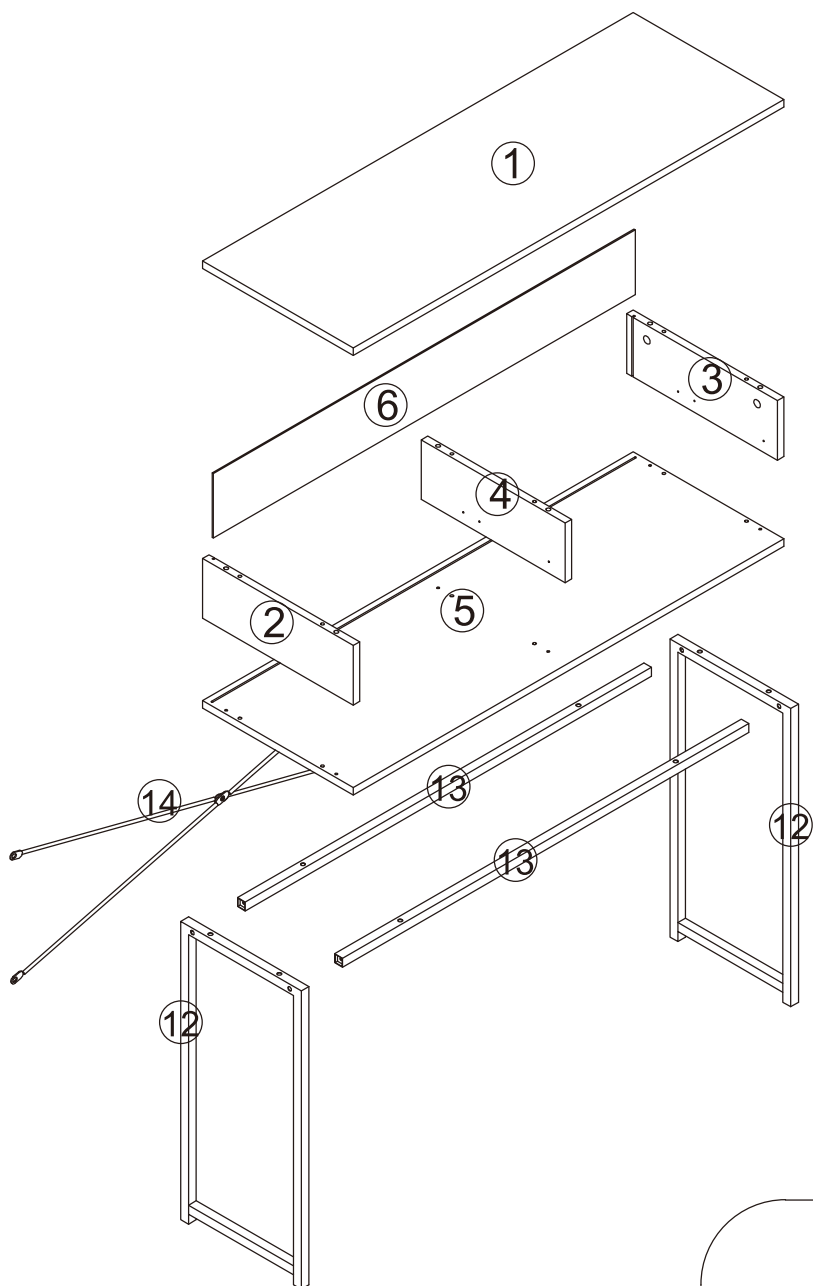

PARTS

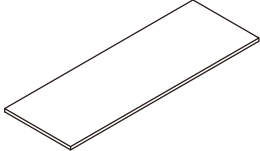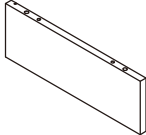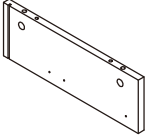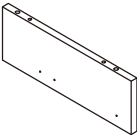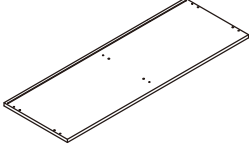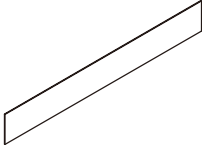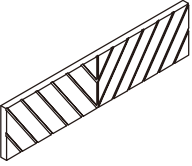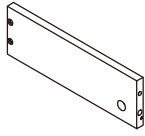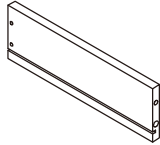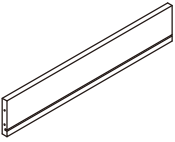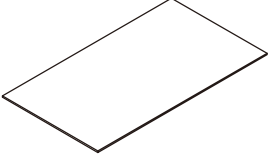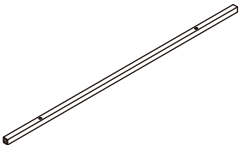 ① ×1	 ② ×1	 ③ ×1
 ④ ×1	 ⑤ ×1	 ⑥ ×1
 ⑦ ×2	 ⑧ ×2	 ⑨ ×2
 ⑩ ×2	 ⑪ ×2	 ⑫ ×2
 ⑬ ×2		

HARDWARE

 A x10 Ø6x35mm +1(spare)	 B x10 Ø15x9mm +1(spare)	 C x16 Ø6x30mm +1(spare)	 D x16 Ø4x35mm +1(spare)	 E x16 Ø3x12mm +1(spare)	 F x4 Ø6x30mm
 G x1 4mm	 H x2 Ø3x12mm	 I x6 Ø3x16mm	 J x2 Ø6x30mm	 K x2	 L x2 Ø4x12mm
 M x4	 N x5 Ø6x12mm	 O x8 Ø6x25mm	 P x1 6mm	 CL x2 L250mm	 CR x2 L250mm
 DL x2 L250mm	 DR x2 L250mm				

A x4



B x4



C x4




D x8



E x8



H x2




DL x2




DR x2




7 x2




8 x2





9 x2



10 x2



11 x2

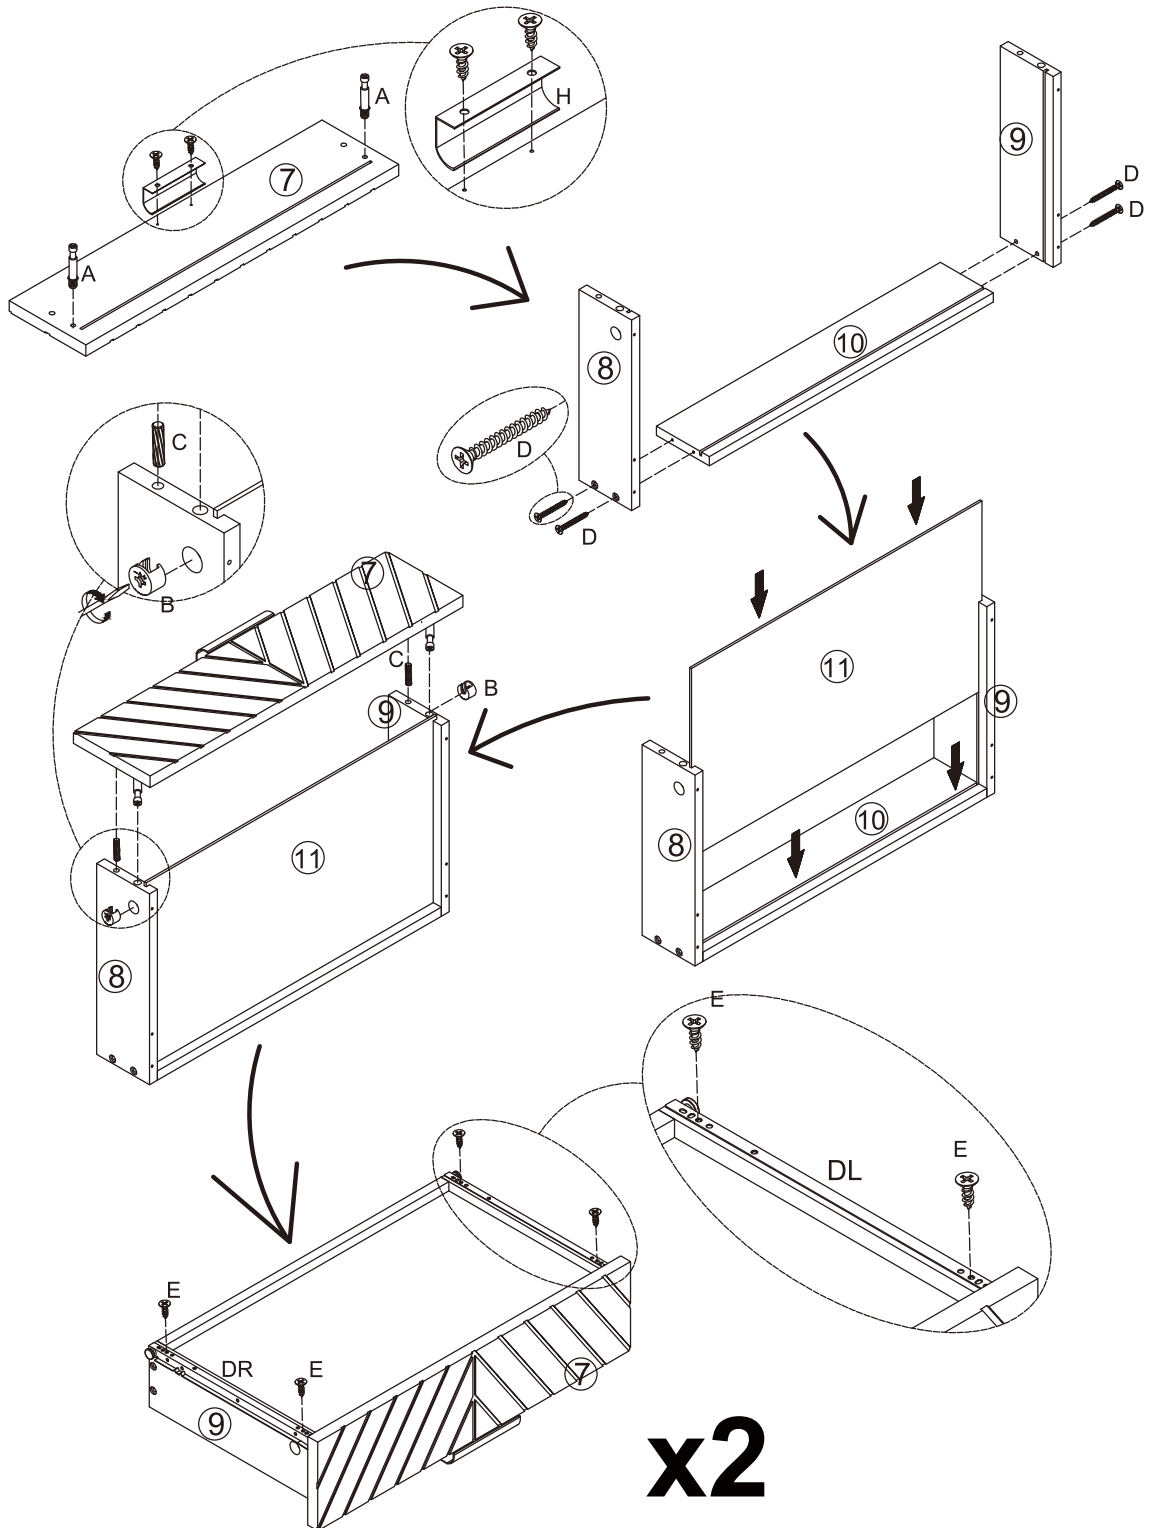

E x4



CL x1








CR x1



② x1



③ x1

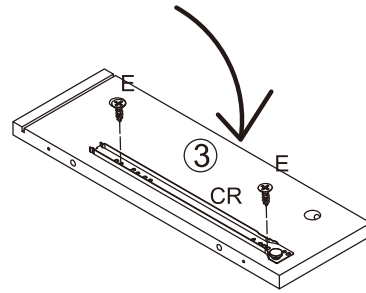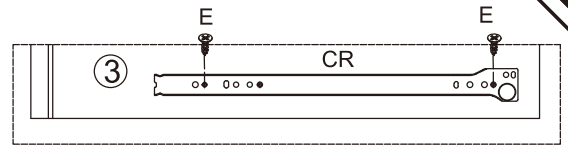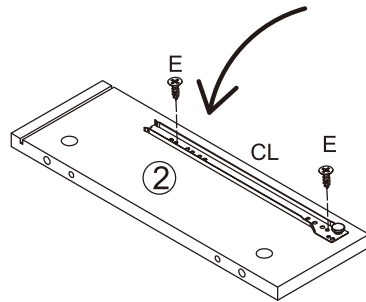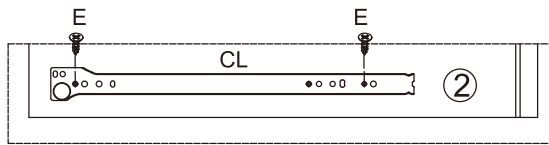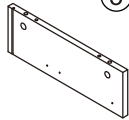

EN Please find the exact hole for installation, otherwise it will be misaligned. The screws on the drawer slide must be leveled, otherwise it will affect the smoothness of the drawer.

E x4








CL x1



CR x1



④ x1

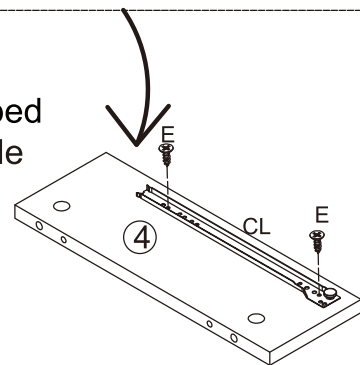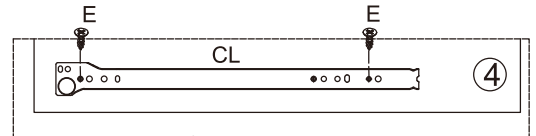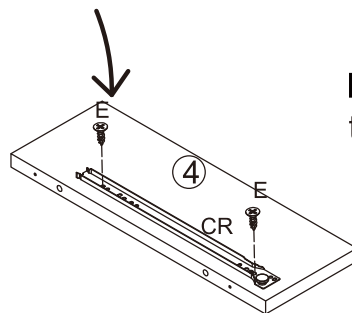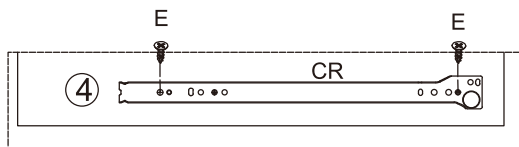

Panel four flipped
to the other side

EN Please find the exact hole for installation, otherwise it will be misaligned. The screws on the drawer slide must be leveled, otherwise it will affect the smoothness of the drawer.



C x6



D x6



⑤ x1

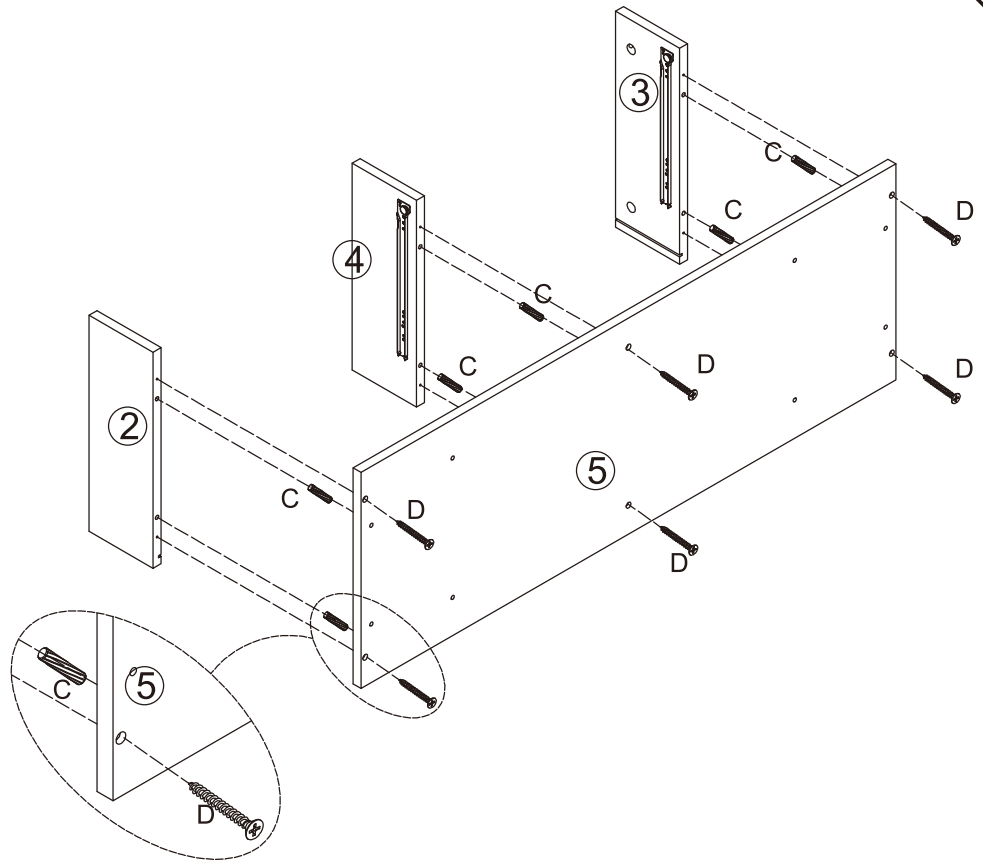


A x6





C x6




① x1



⑥ x1

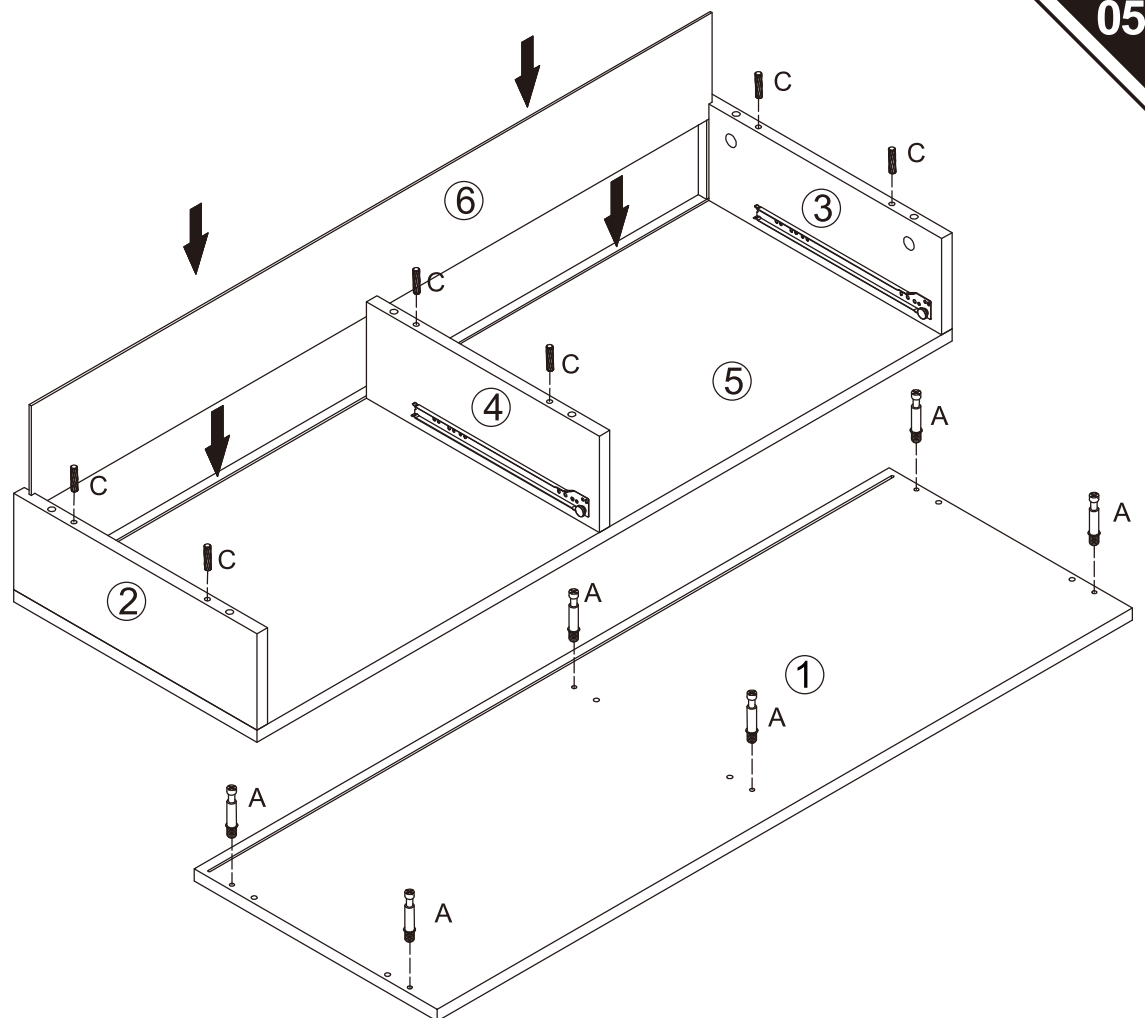

B x 6

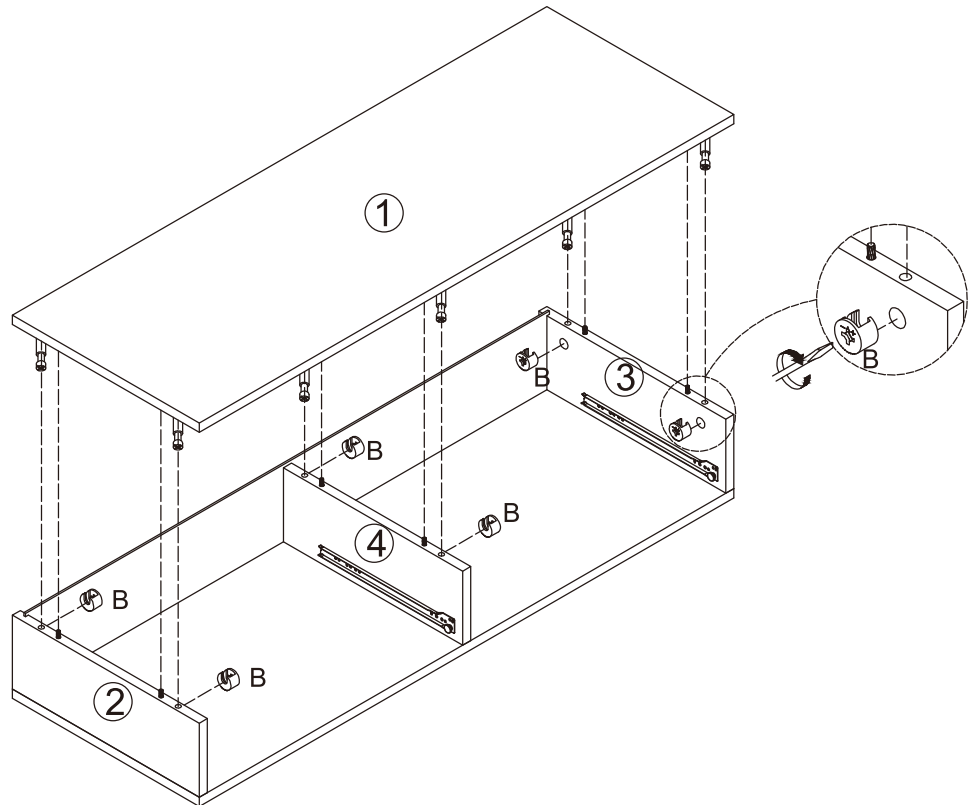


F x 4




G x 1




12 x 2



13 x 2

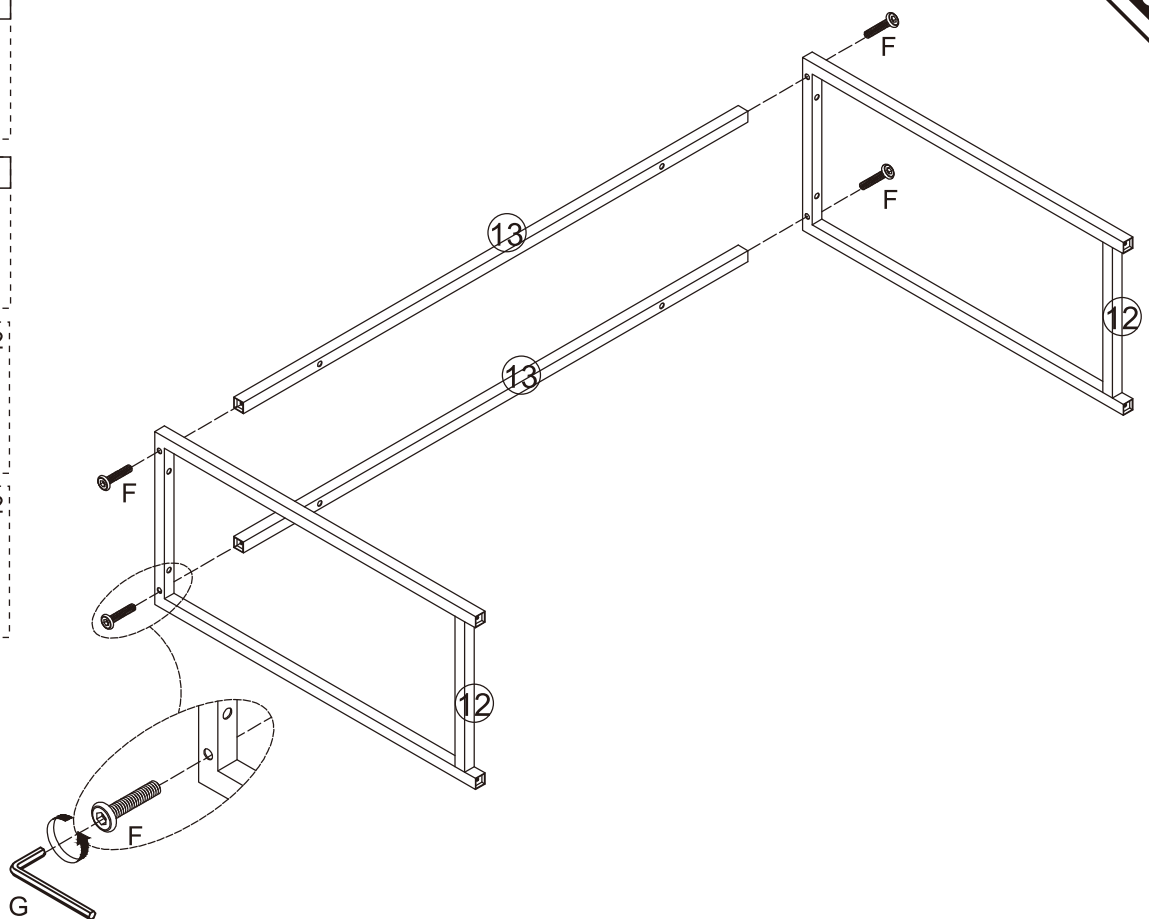

M x 4

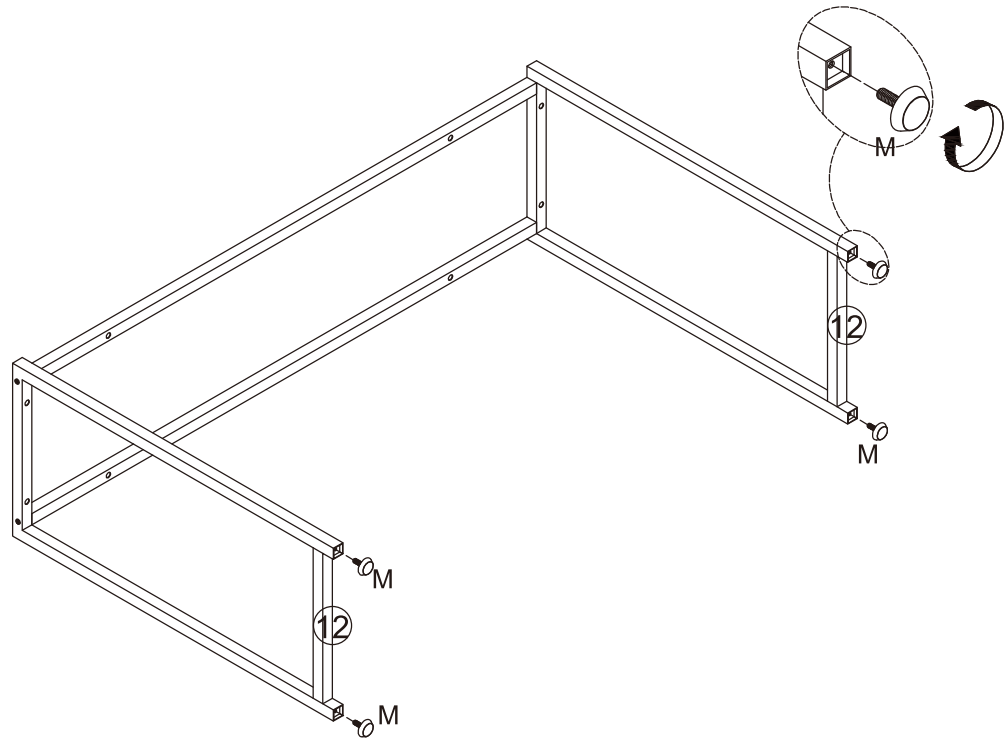



O x 8



G x 1



Please note which side of the foot column square tube has the lead hole is the back end

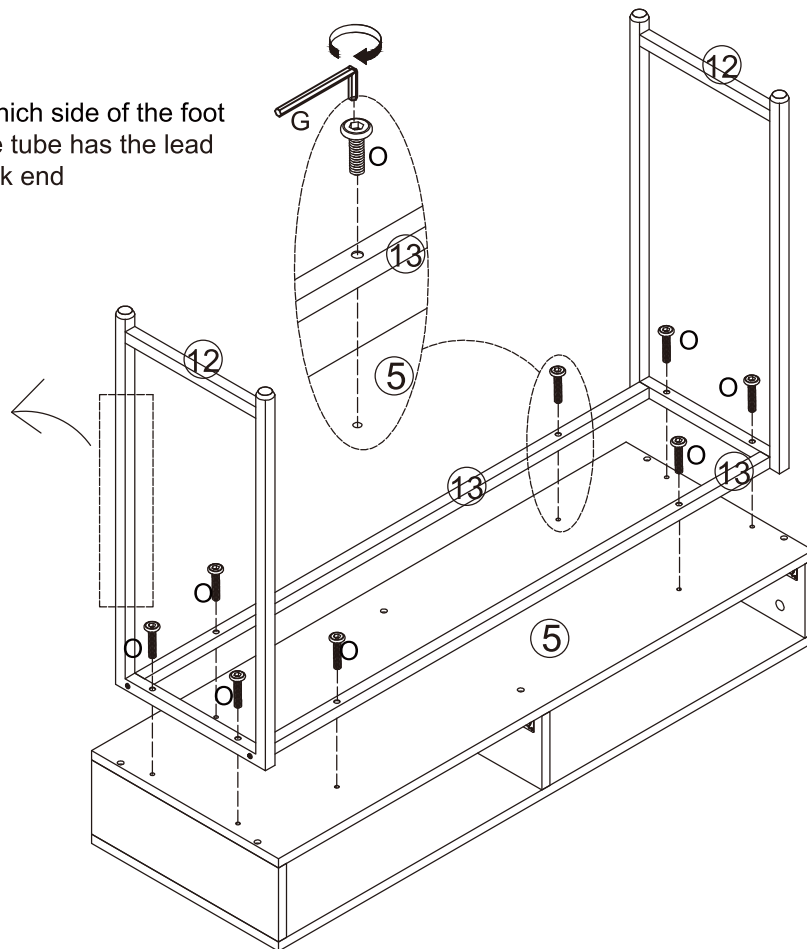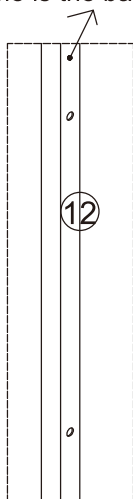

G x1



I x6



K x2




L x2





N x5



P x1


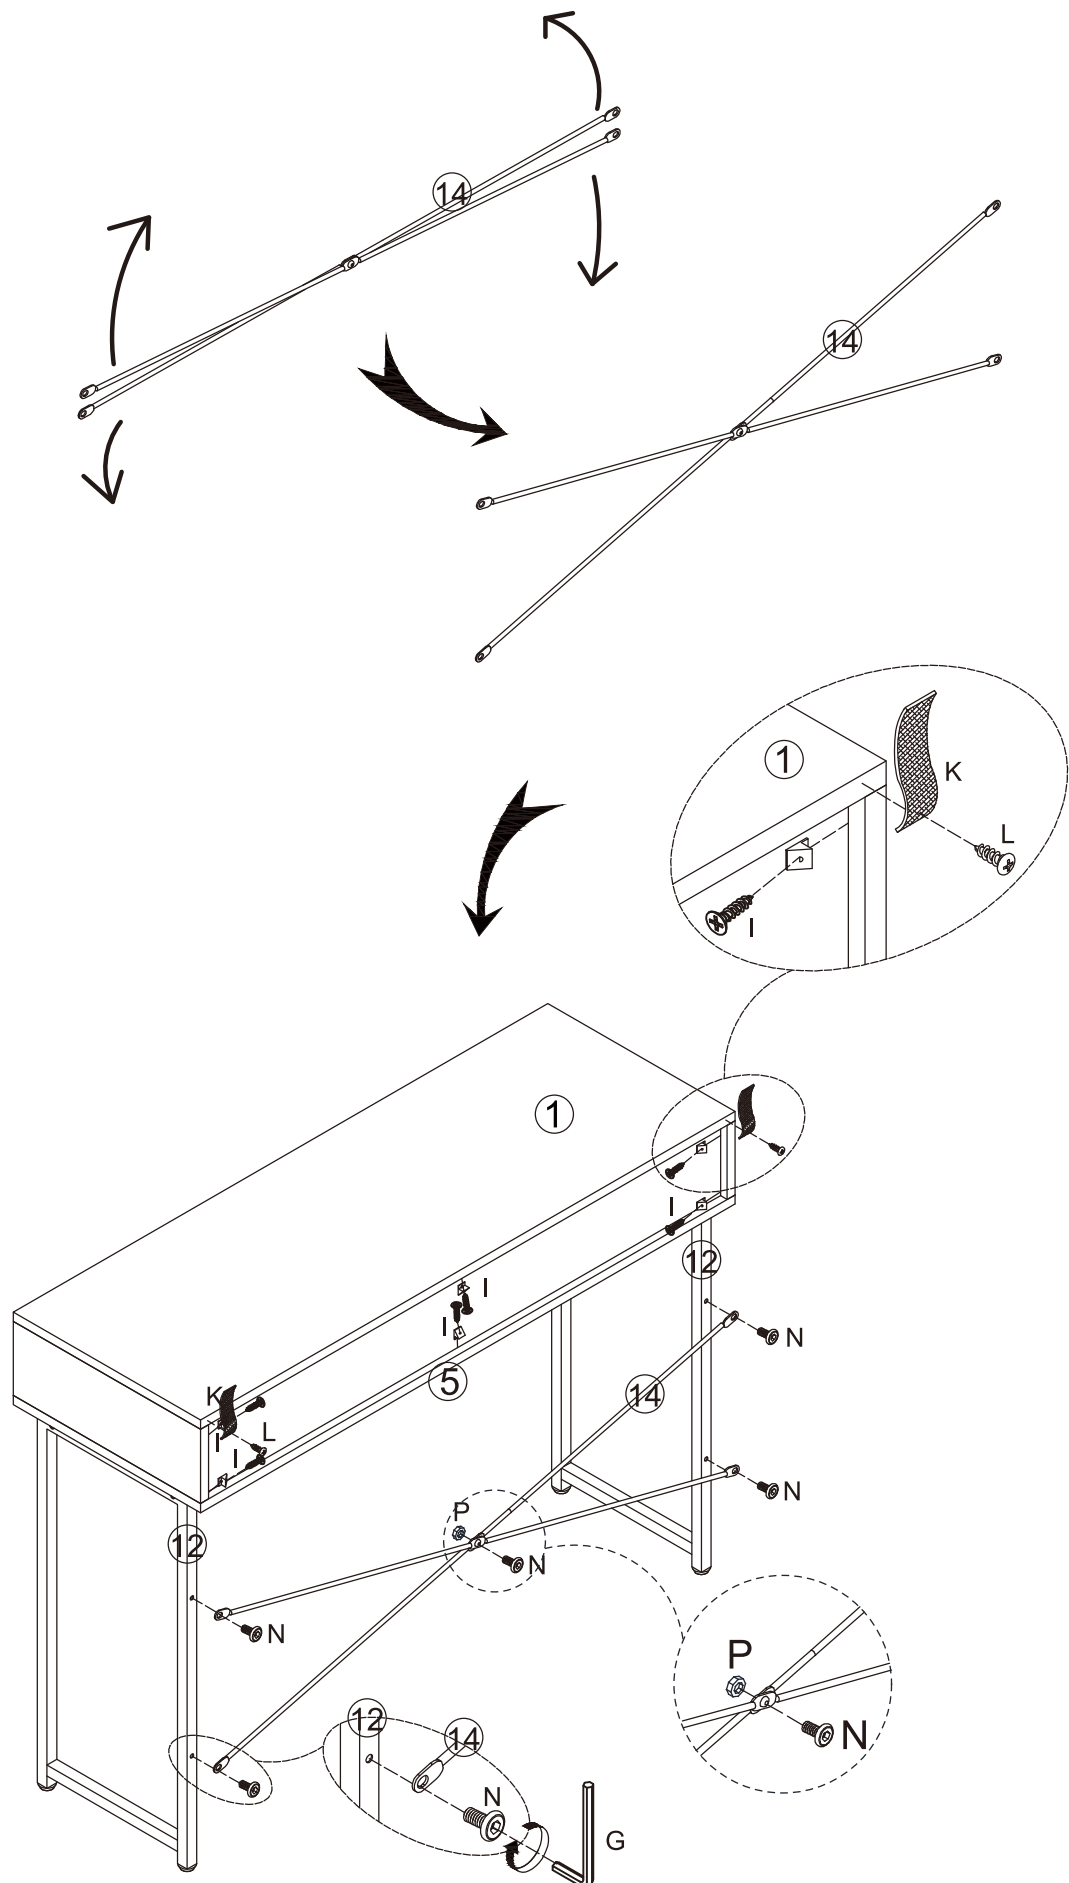


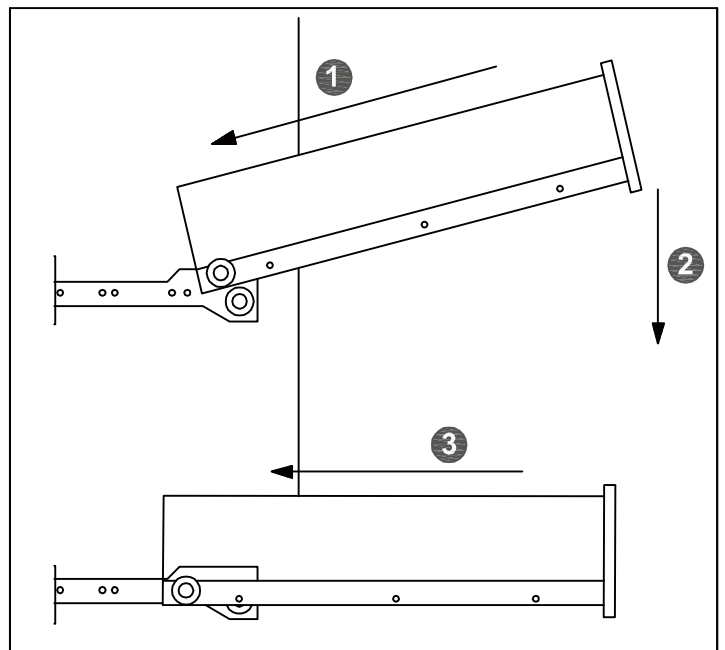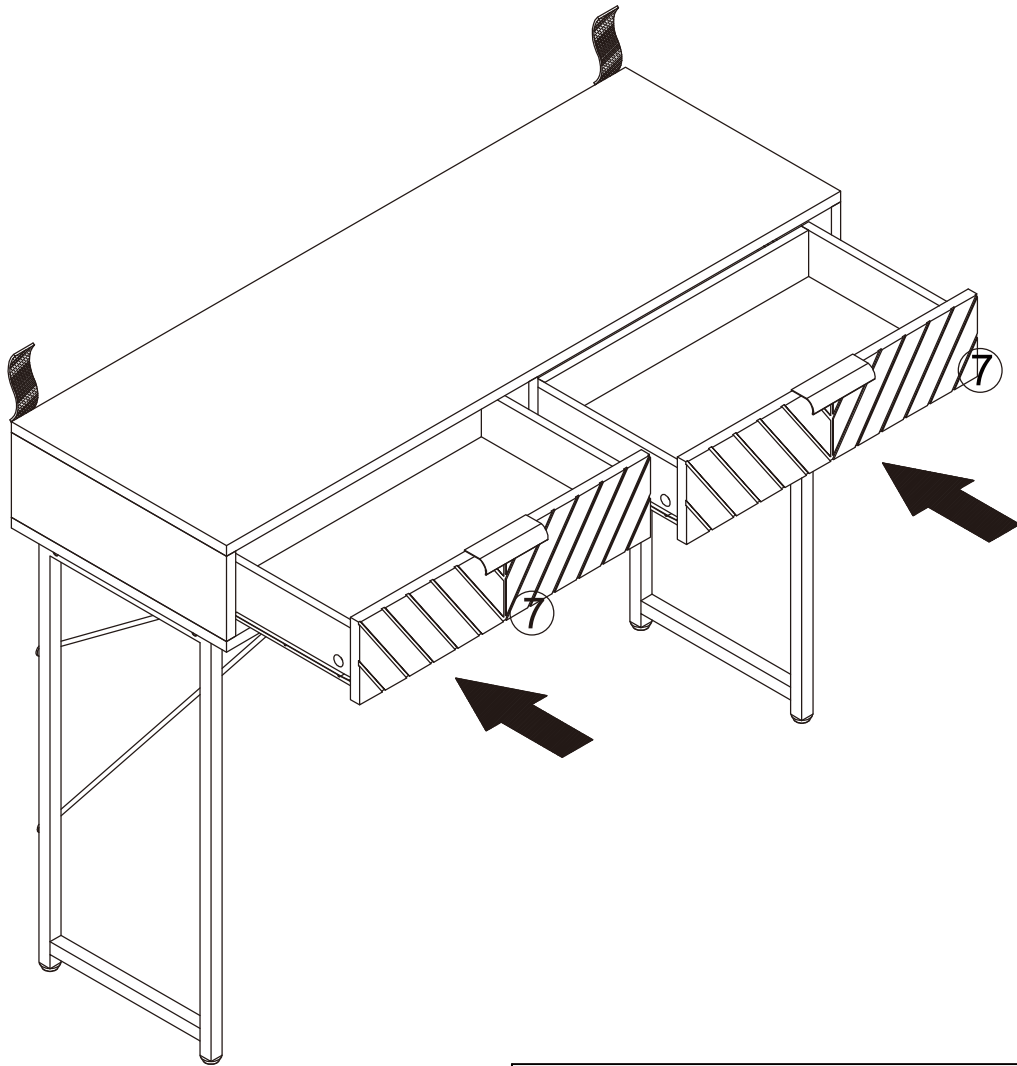

EN_Be careful to push in the board when the both sides slide way been aligned.

D x2**J** x2

EN_ This is anti-dumping belt that fix the product to the wall and it can be used or not follow your needs.

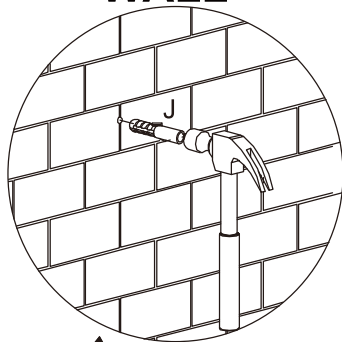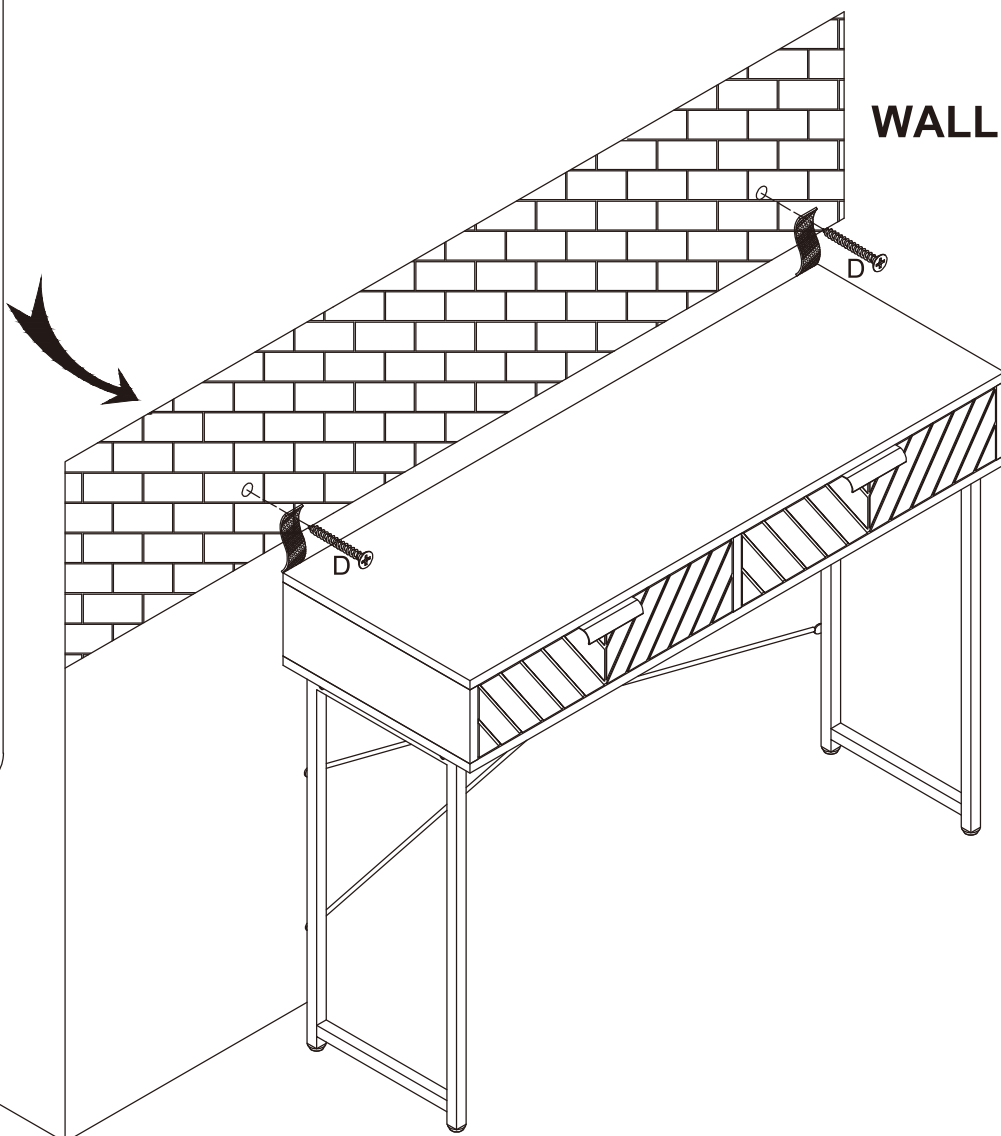WALL**WALL****x2**

EN_ If it is a solid wall, please use expansion and self-tapping screws, if it is a wooden wall, only use self-tapping screws, please do not overtighten the screws