




EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

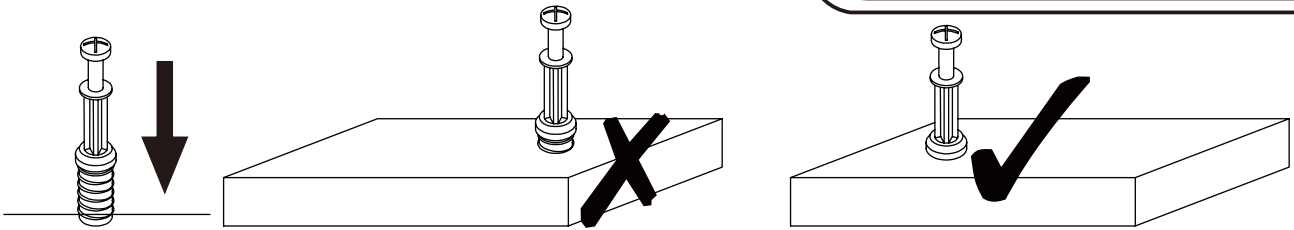


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

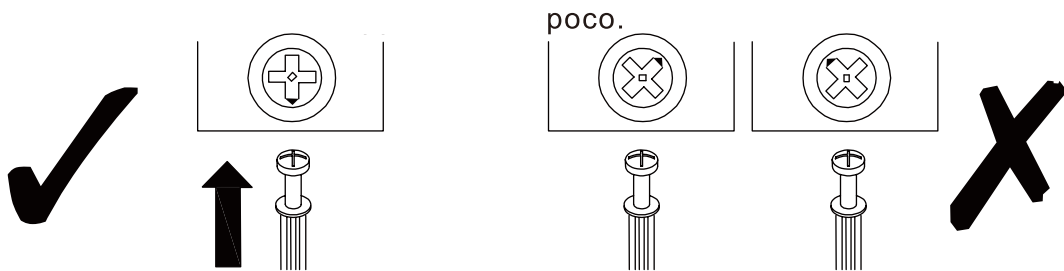


EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

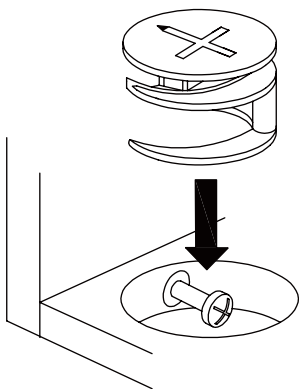


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

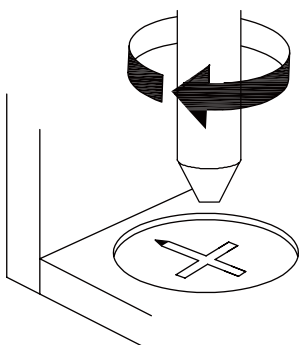


EN_Turn cam lock clockwise to tighten.

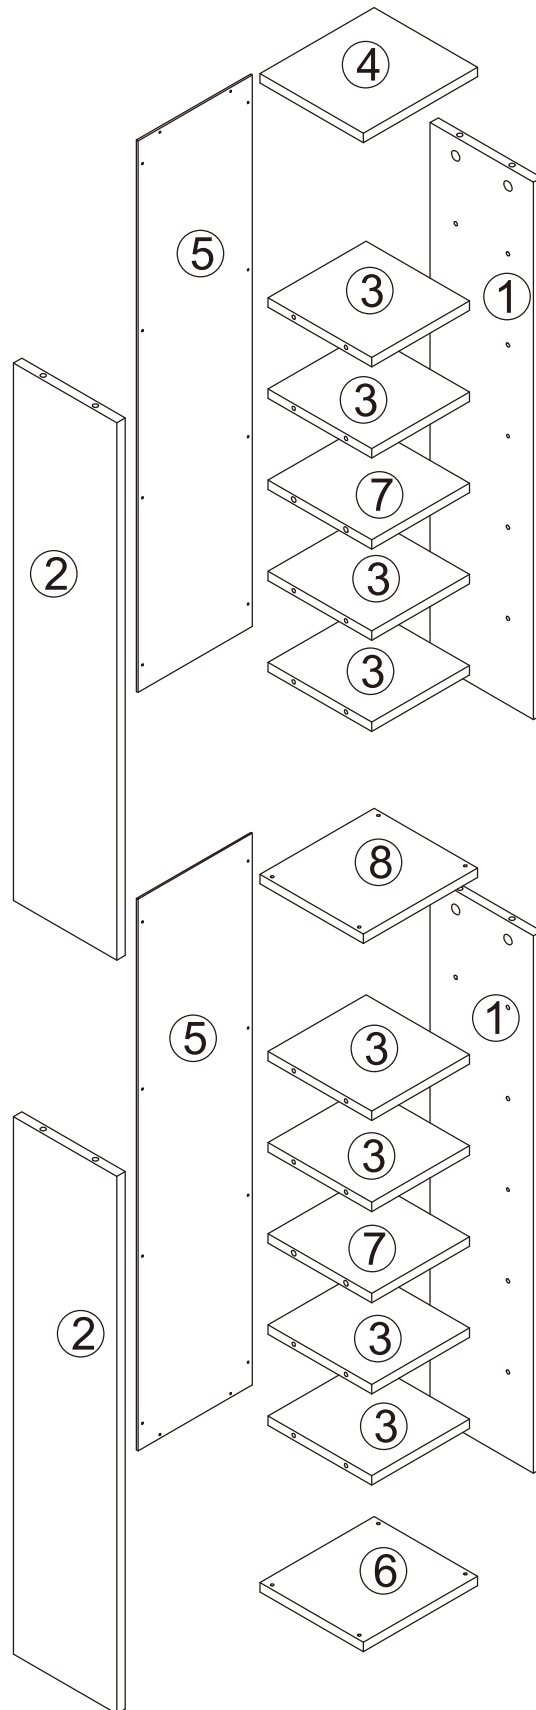

PARTS

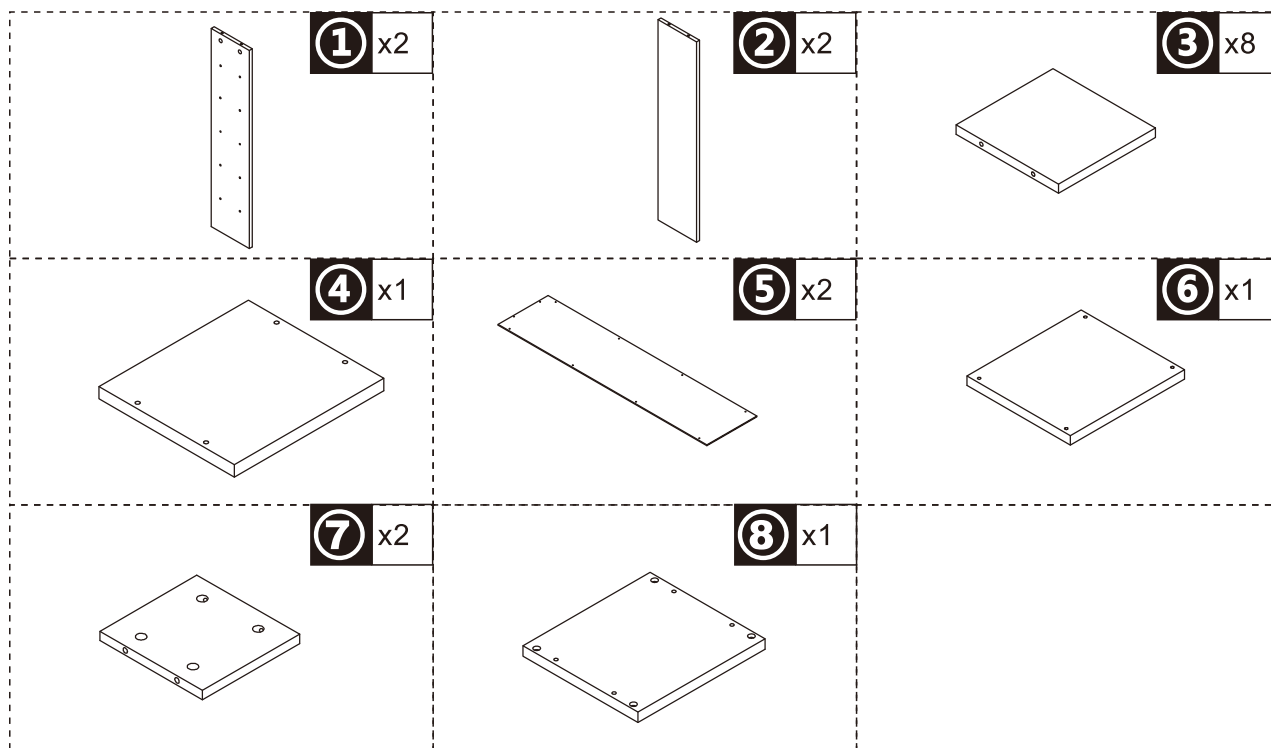


HARDWARE

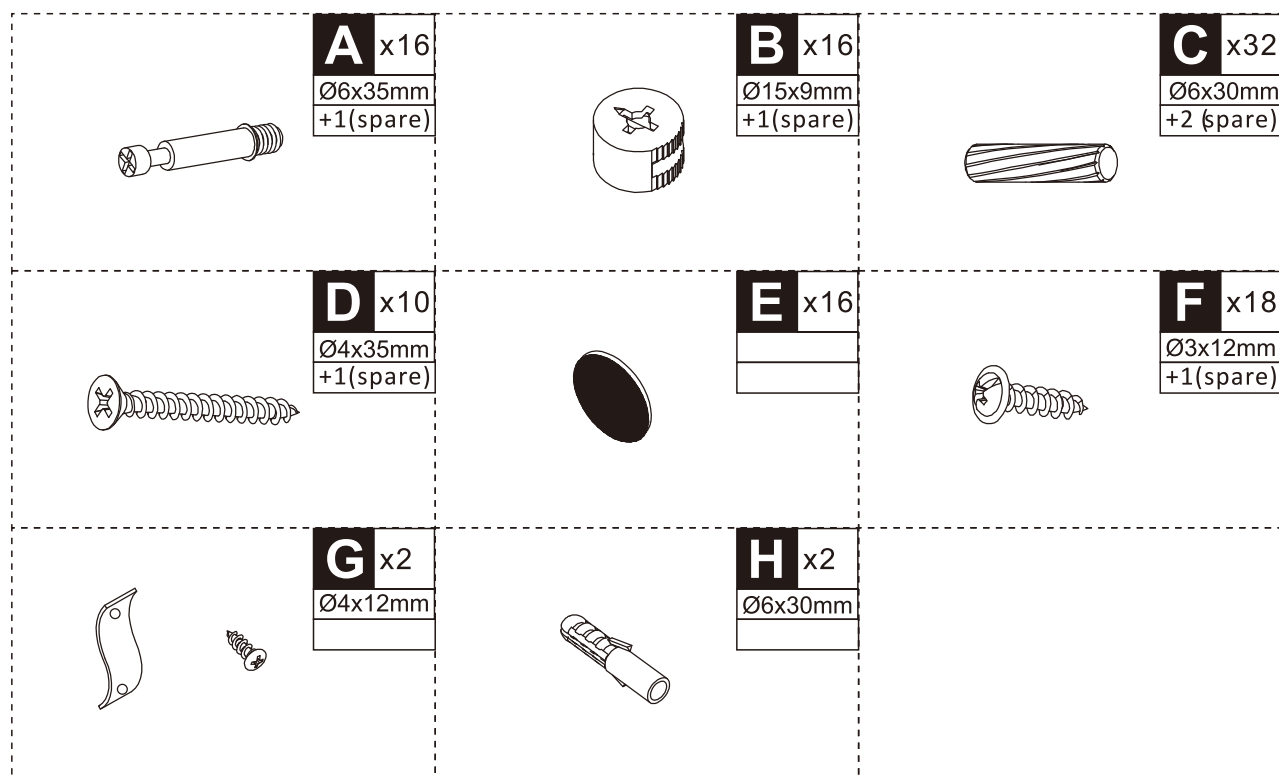


01

A x8

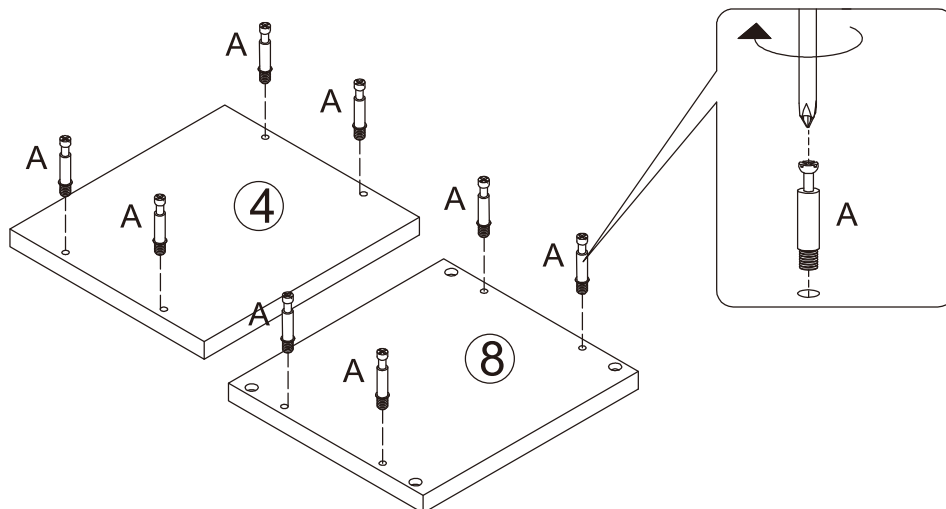

02

A x8

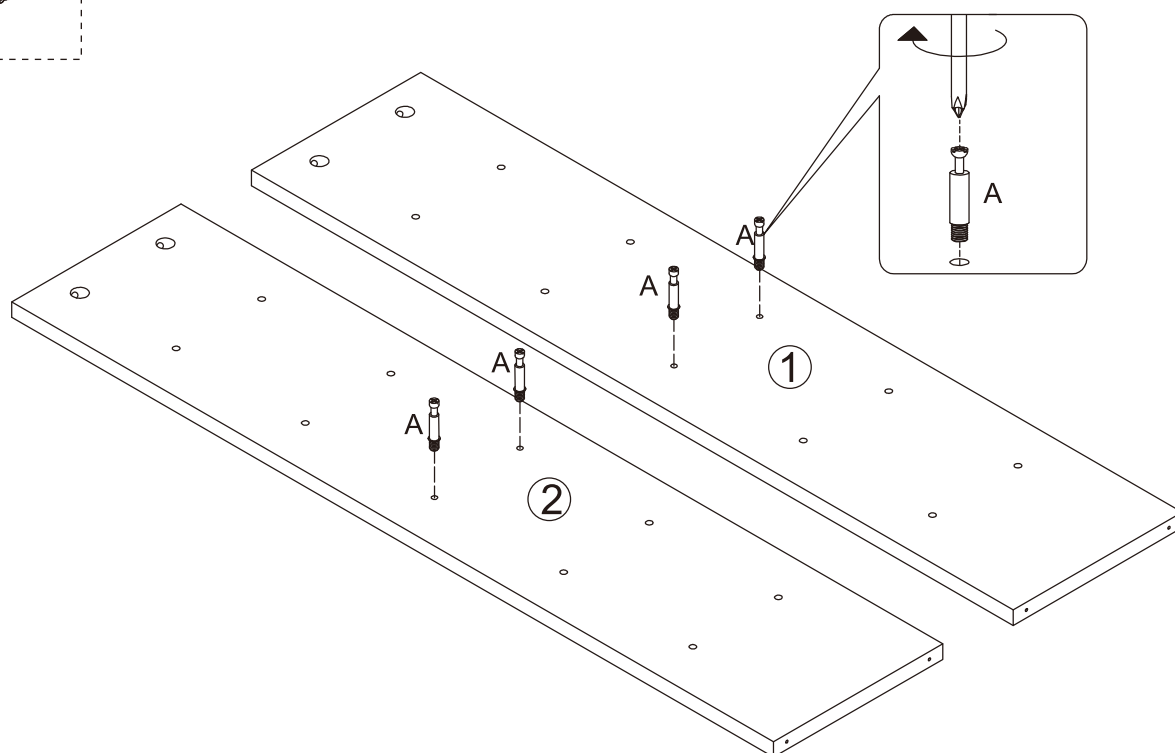


x2

03

B x4




E x4

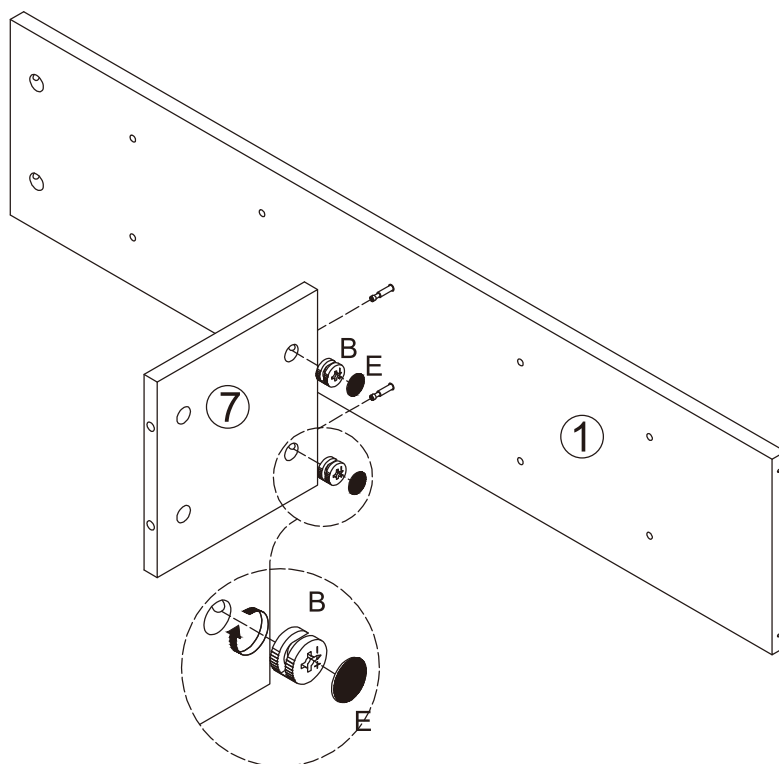

x2

04

C x32

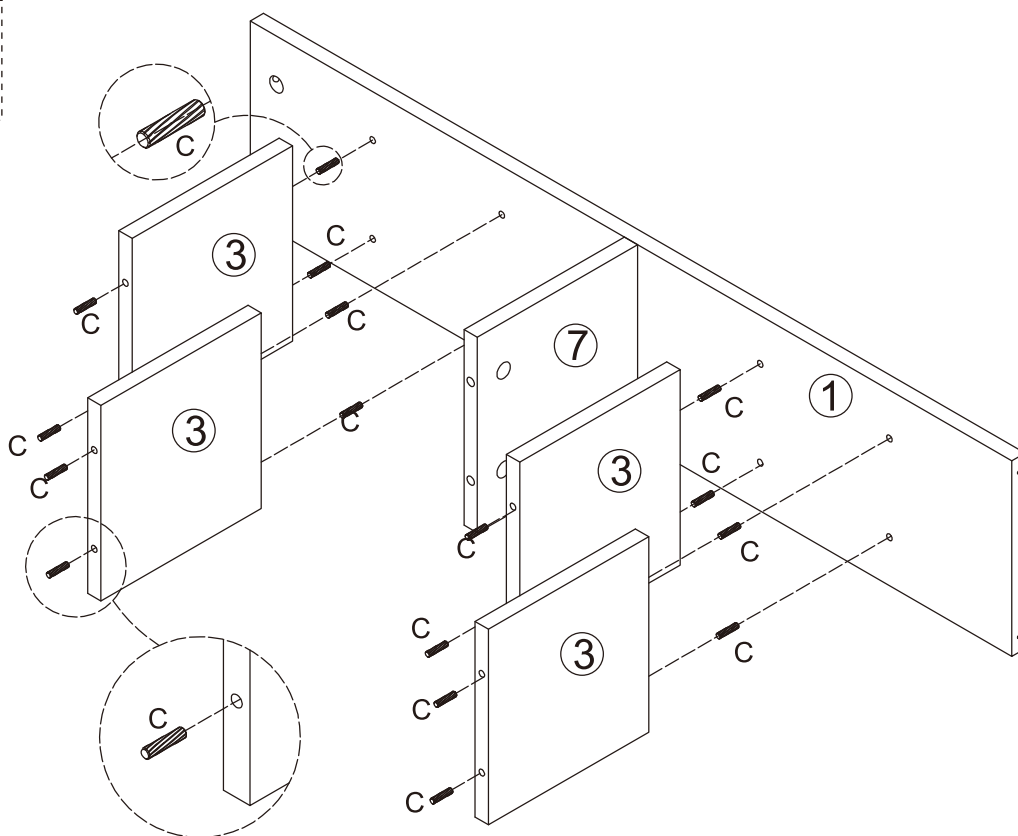


x2

B x4








E x4

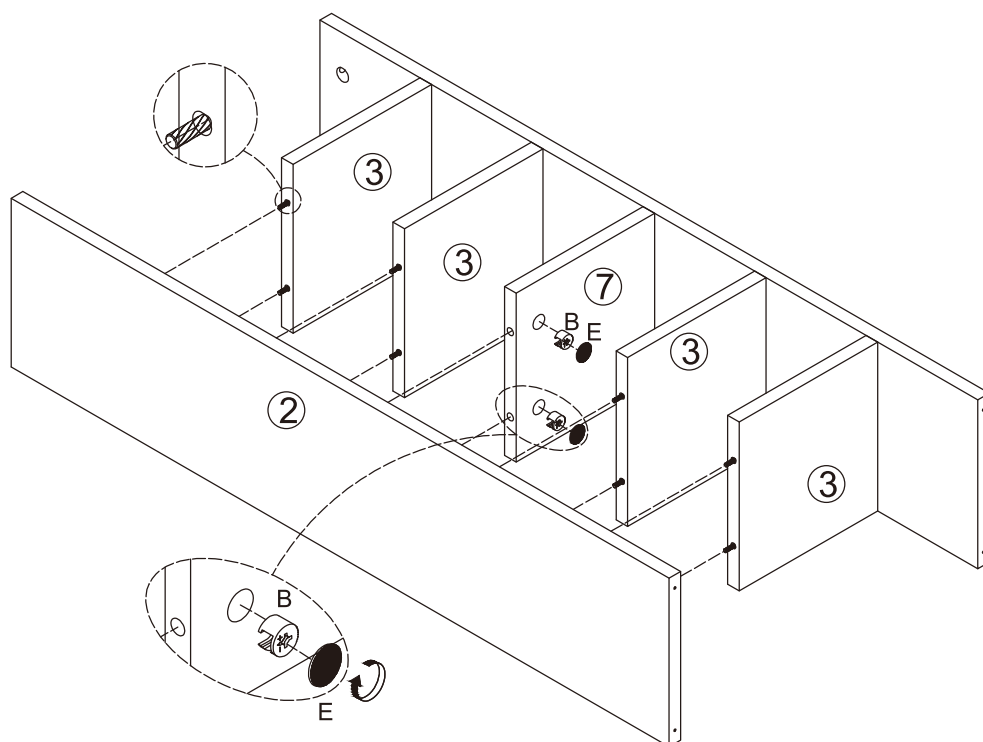

x2

D x4

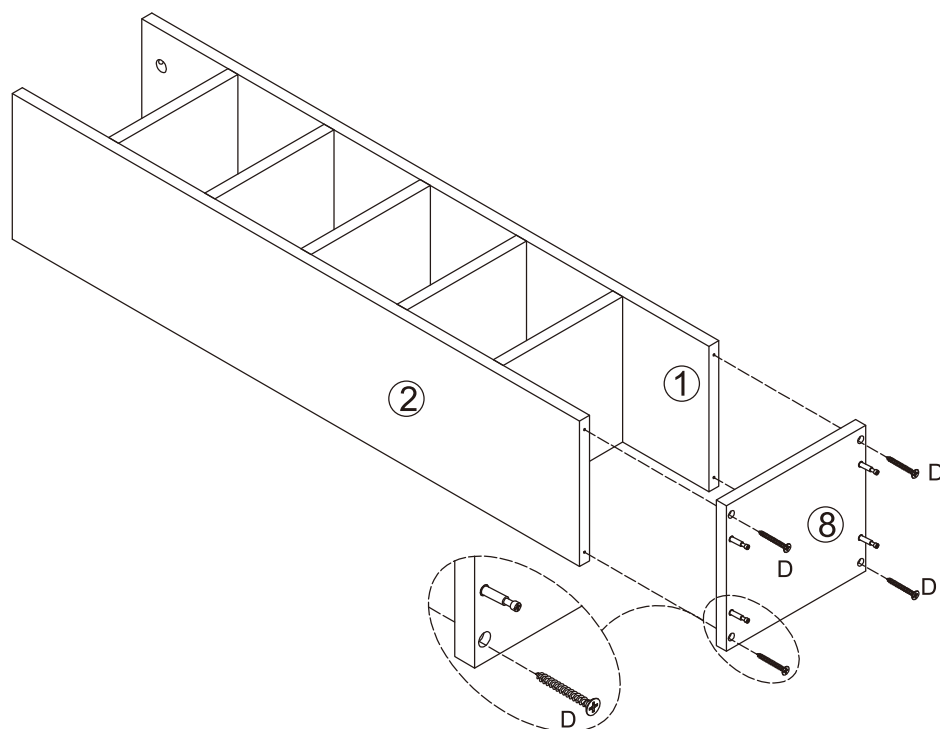


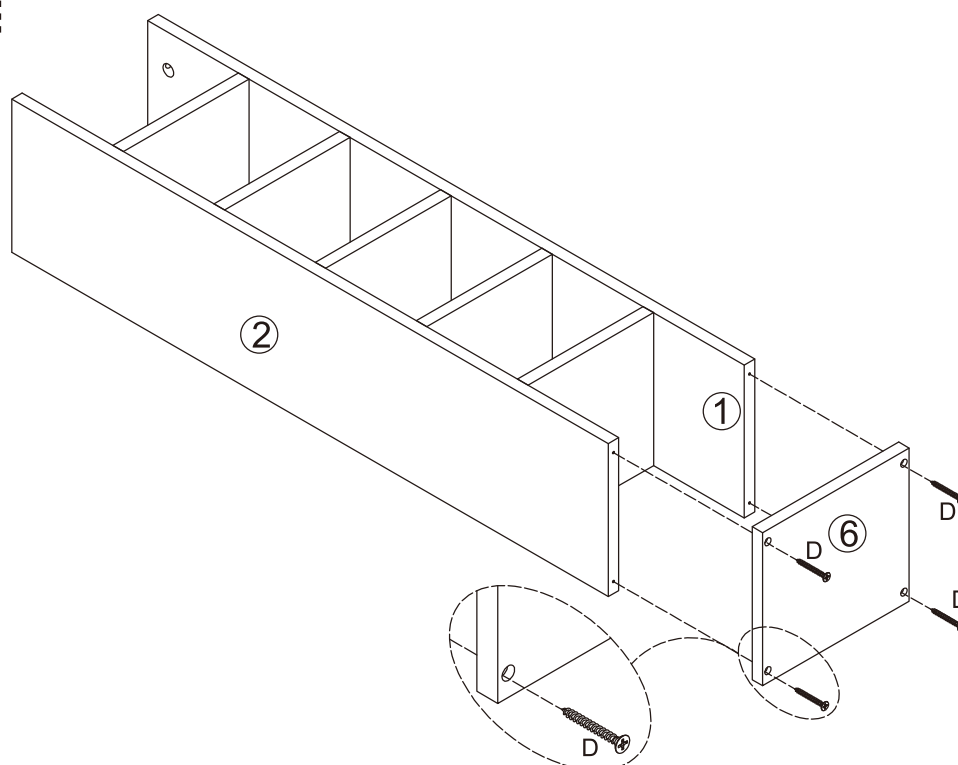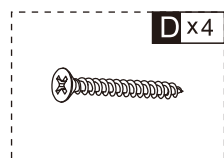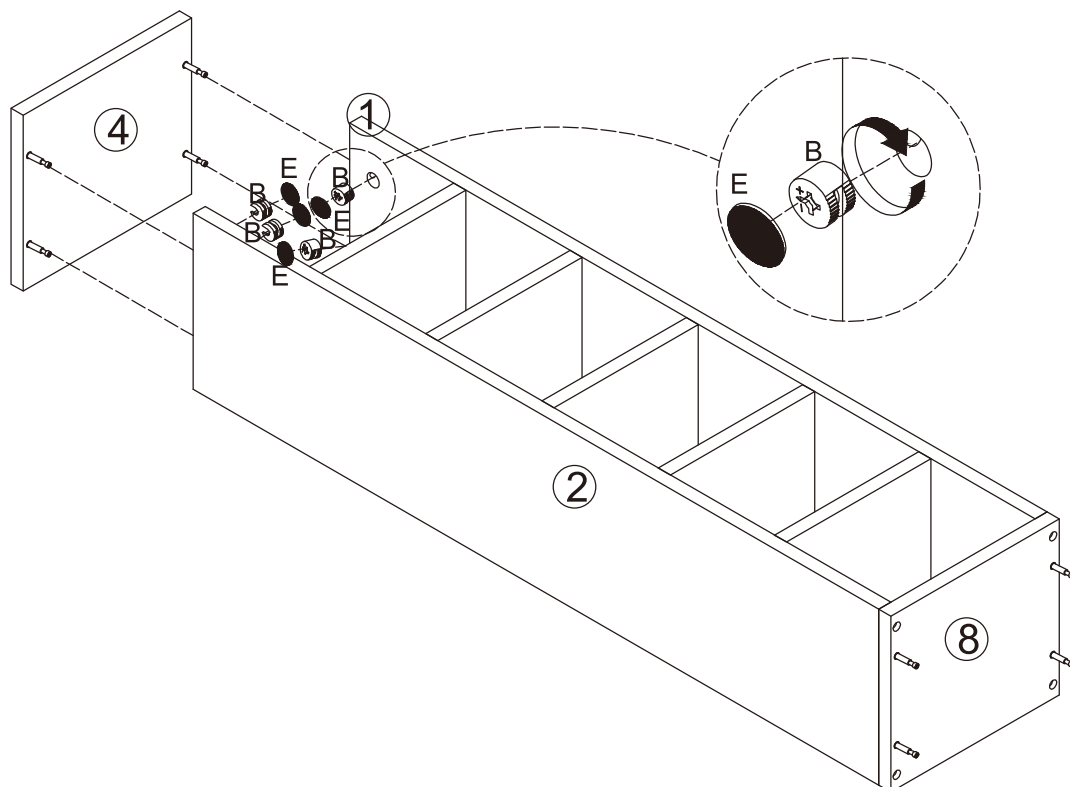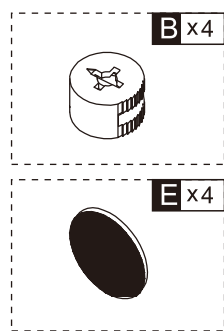

B x4




E x4

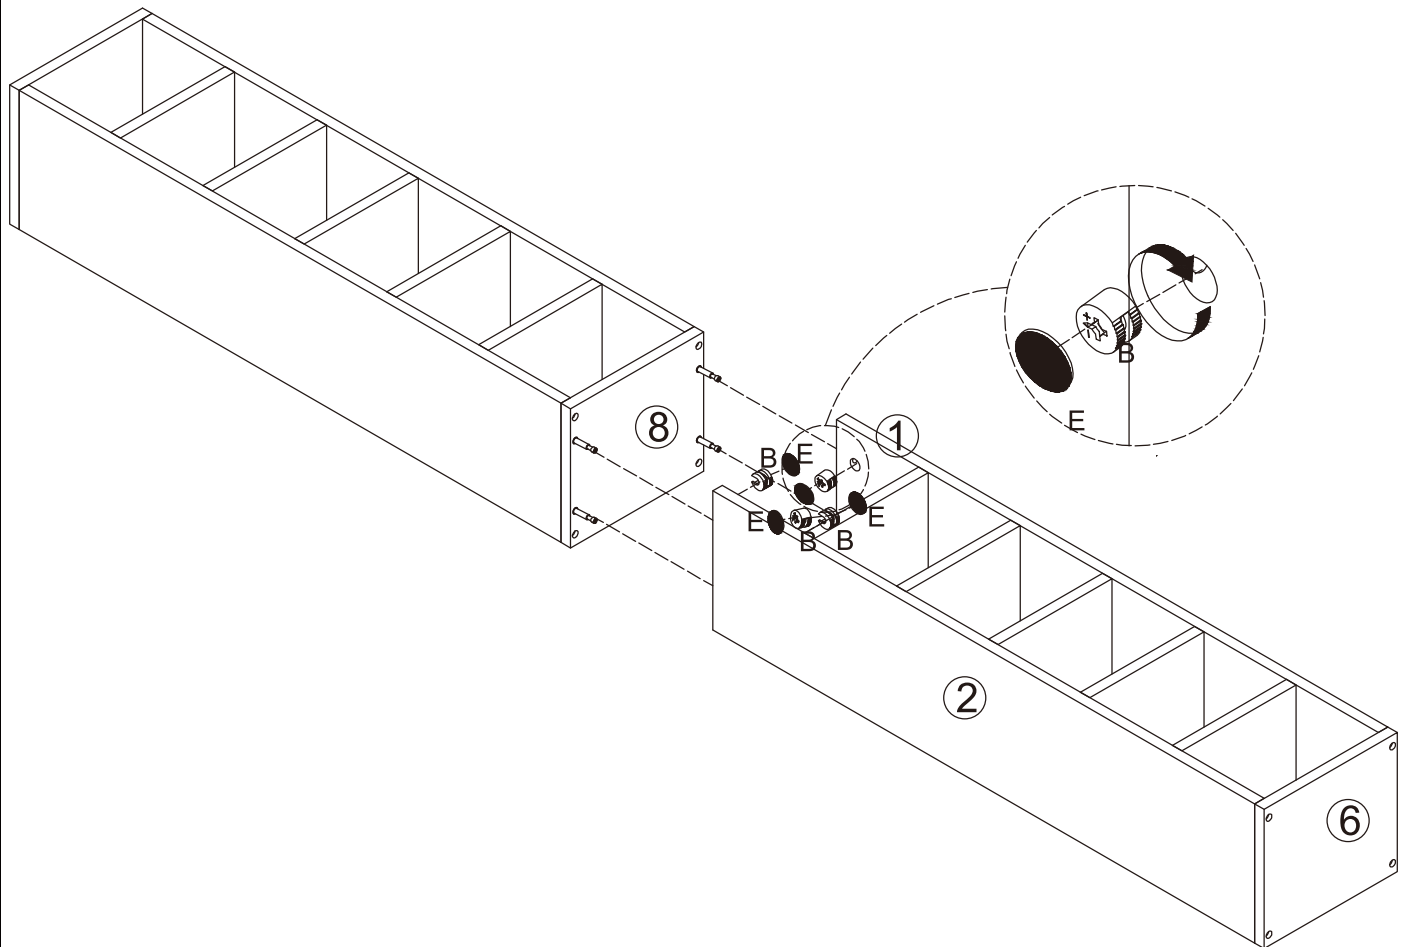


F x18




G x2

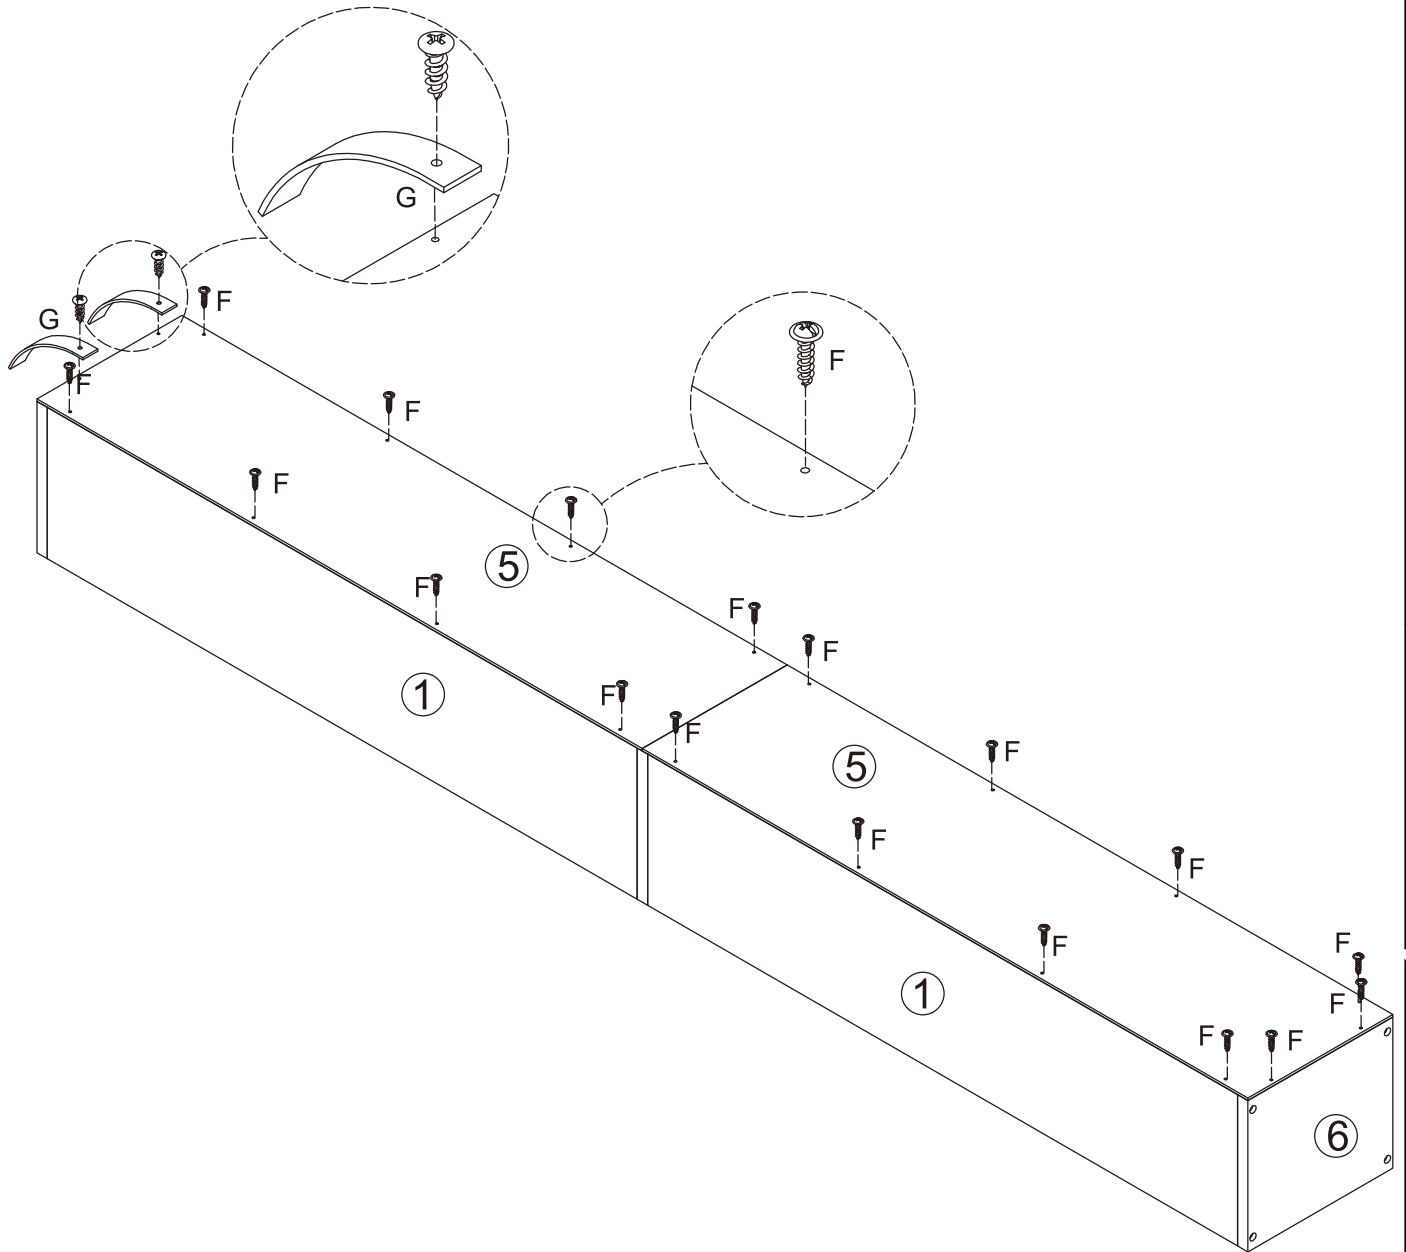

D x2**H** x2

EN_ This is anti-dumping belt that fix the product to the wall and it can be used or not follow your needs.

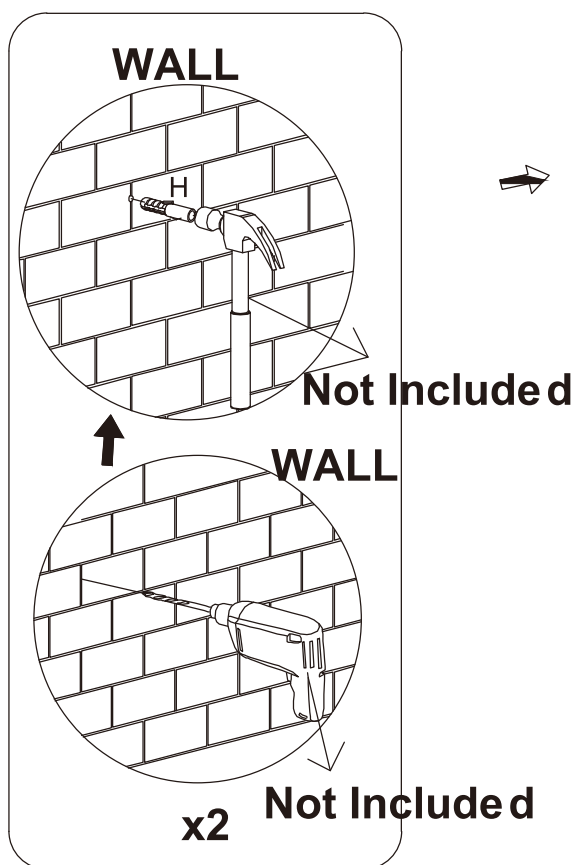

EN_ If it is a solid wall, please use expansion and self-tapping screws, if it is a wooden wall, only use self-tapping screws, please do not overtighten the screws

