






SKU.NO.	154-241-01	OAK with
PRODUCT NAME	RENO Dressing Table with 2 Drawers	

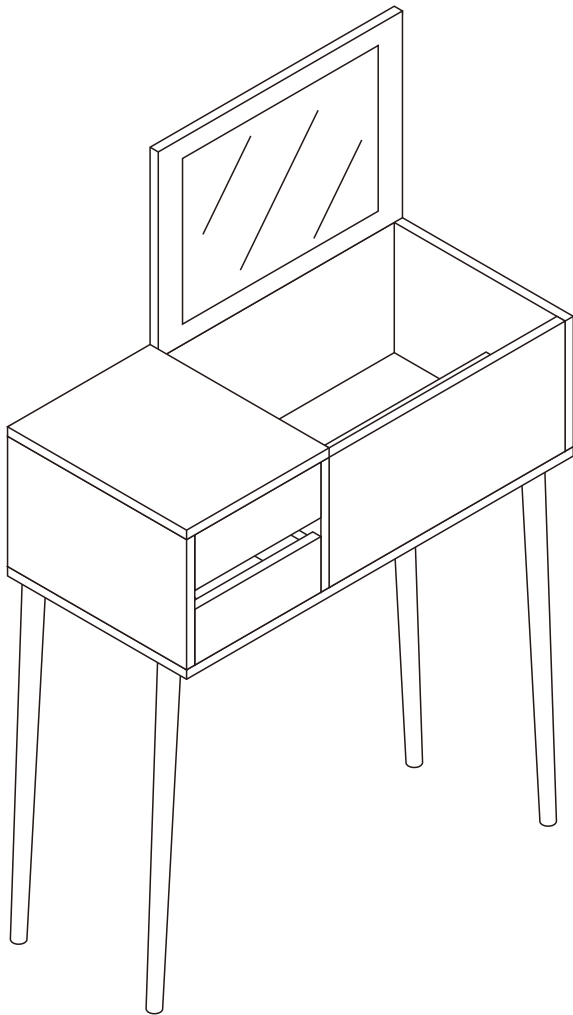


1. Identify the parts which make up your piece of furniture.
 2. Gather the hardware parts and count them.
 3. Have the necessary assembly tools ready.
 4. Organize a space for assembly, wall carpeting or a blanket will protect the furniture against scratches.
 5. Never force the assembling while you put the parts together. You are recommended to tighten the screws after the furniture has been used for some time.
 6. After assembling this product, it is advisable to regularly ventilate the room for a few days.
- KEEP THE ASSEMBLY INSTRUCTION. THE RELEVANT INFORMATION YOU CAN FIND ON IT WILL HELP YOU GET IN TOUCH WITH YOUR STORE IF A PART WAS TO BE MISSING.

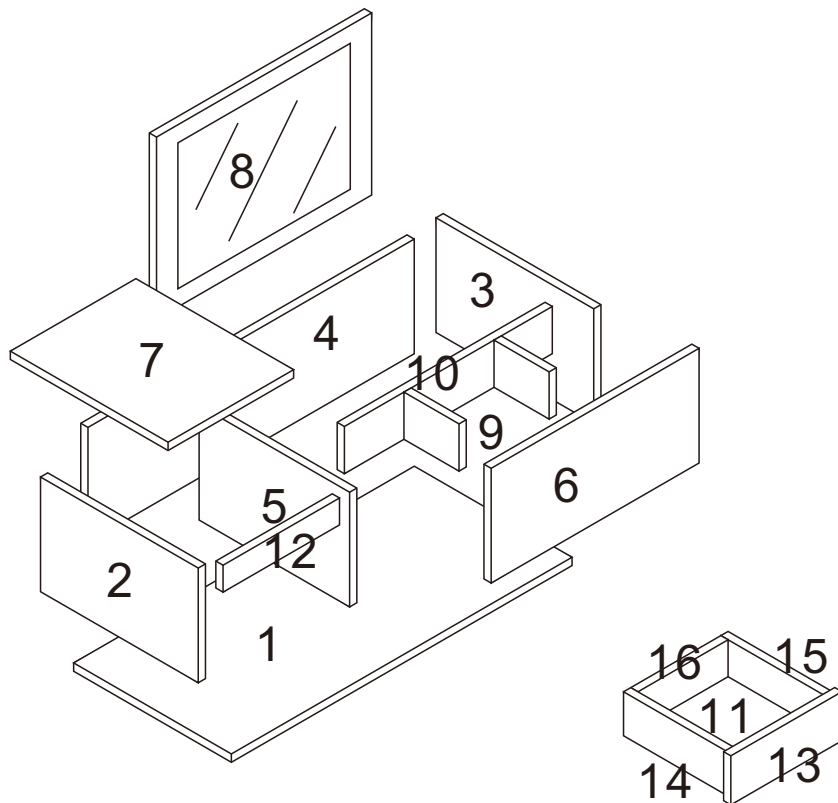

NO.	Size	Qty
1	800x400	1
2	193x398	1
3	193x398	1
4	766x193	1
5	193x378	1
6	472x193	1
7	310x400	1
8	488x400	1
9	194x90	2
10	472x90	1
11	230x290	2
12	278x40	1
13	274x80	2
14	300x60	2
15	300x60	2
16	219x60	2

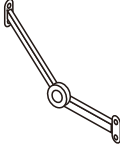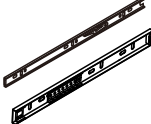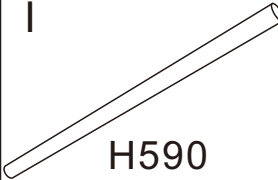A   x24	B  M8 x16	C  3. 5x16mm x36	D  x2	
F  x1	G  3.5x40mm x8	H  x4	I  H590 x4	




SET-UP TIME: 30 MINUTE



OUTILLAGE:
TOOLS:




NUMBER OF PERSONS: 02



screw driver or drill

1

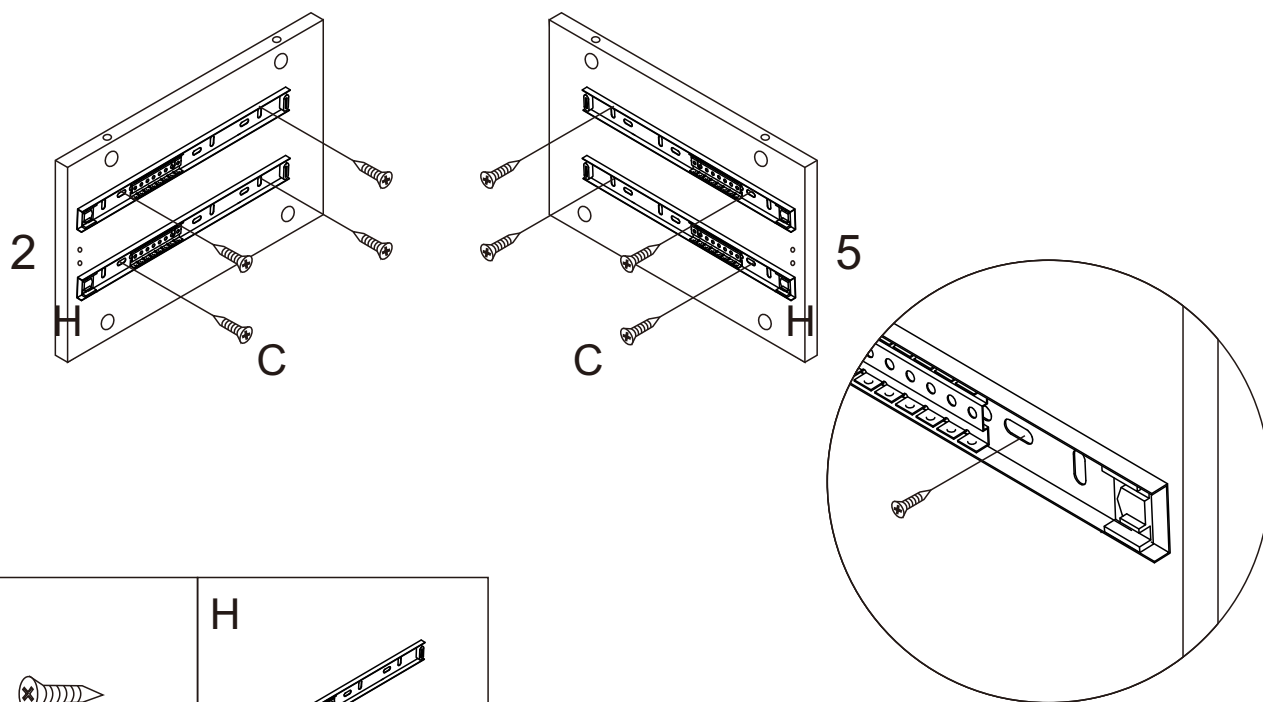


C




3. 5x16mm
x8

H

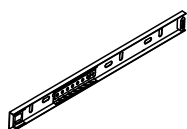

x4

2

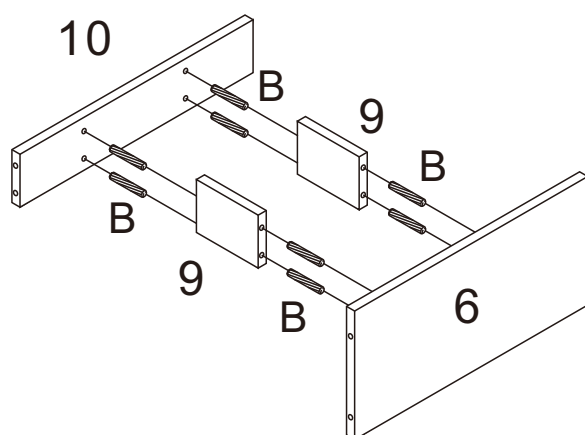


B




x8

3

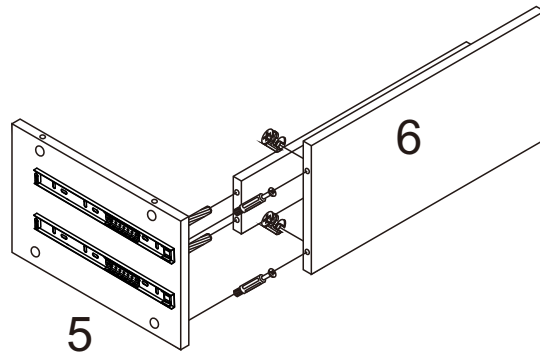

A




x2

B




x2

4

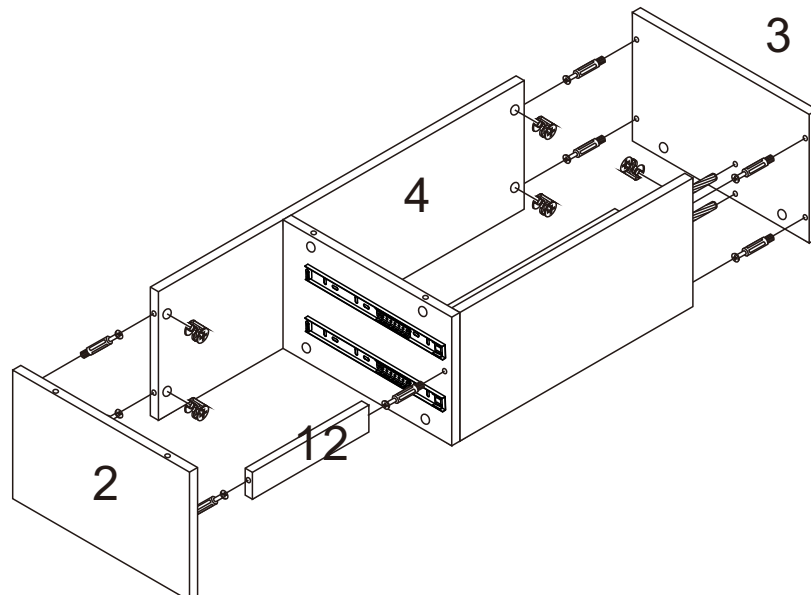

A




x8

B



x2

6

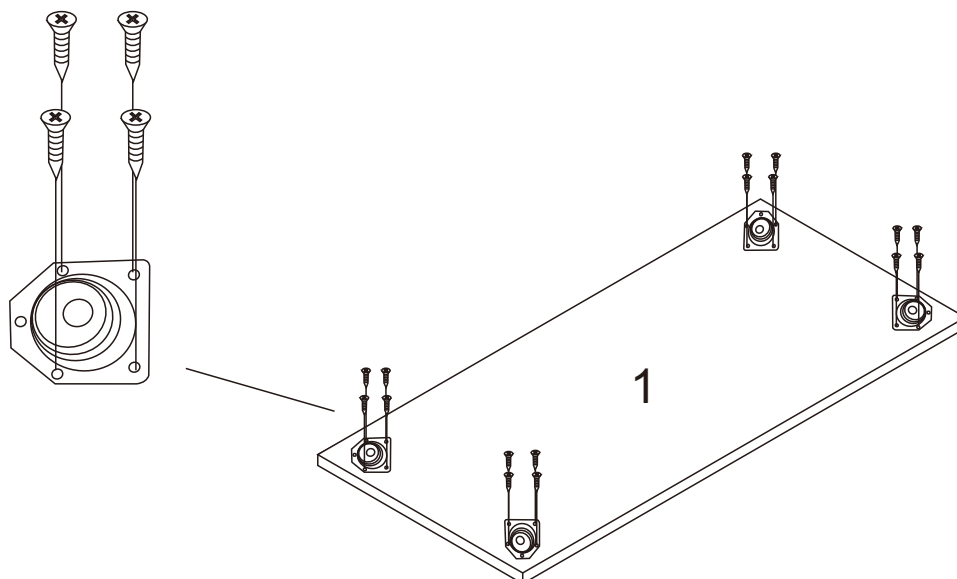

C




3. 5x16mm
x16

D




x4

7

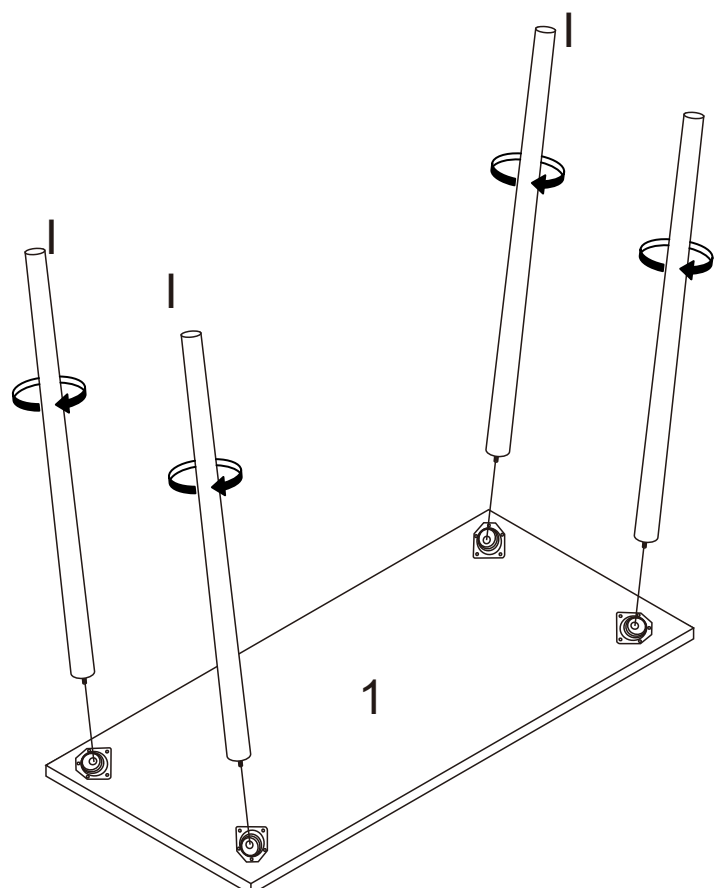


I

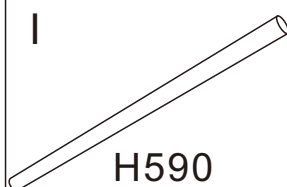


H590

x4

8

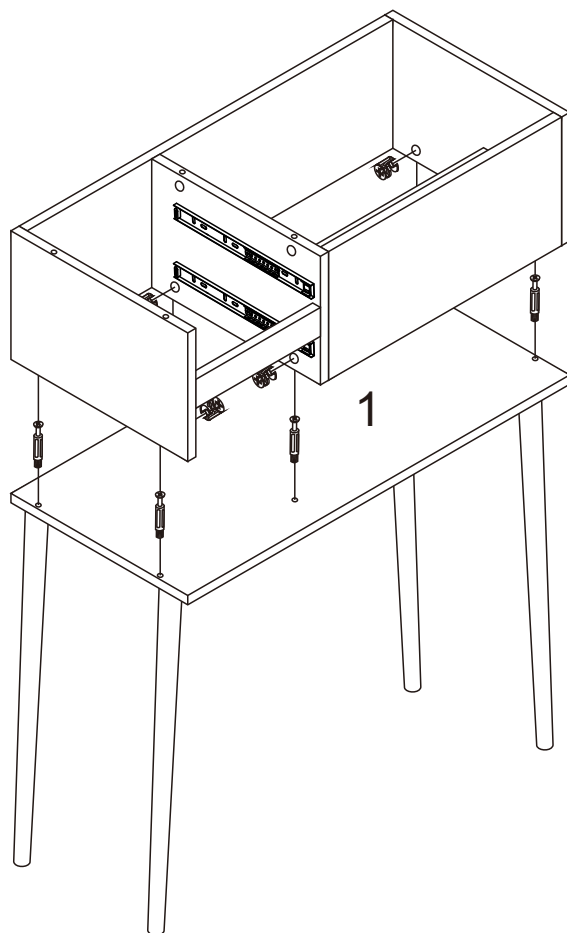


A




x6

9

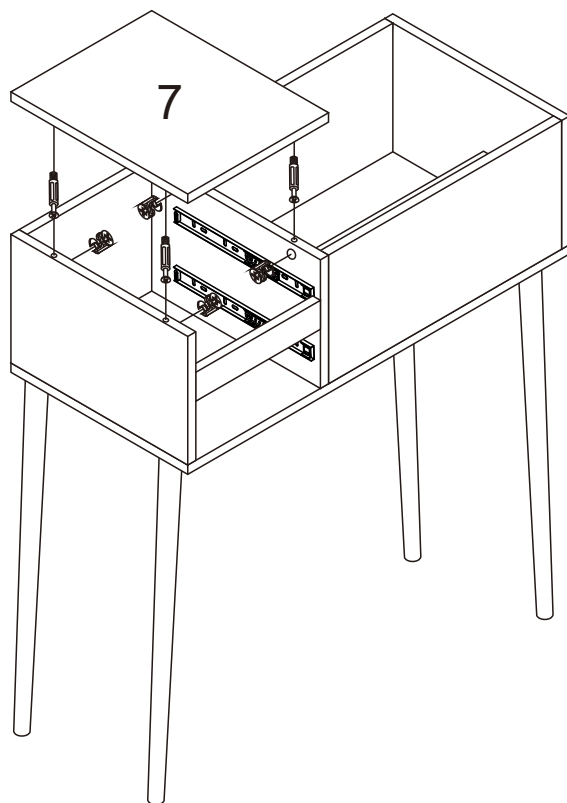


A




x4

10

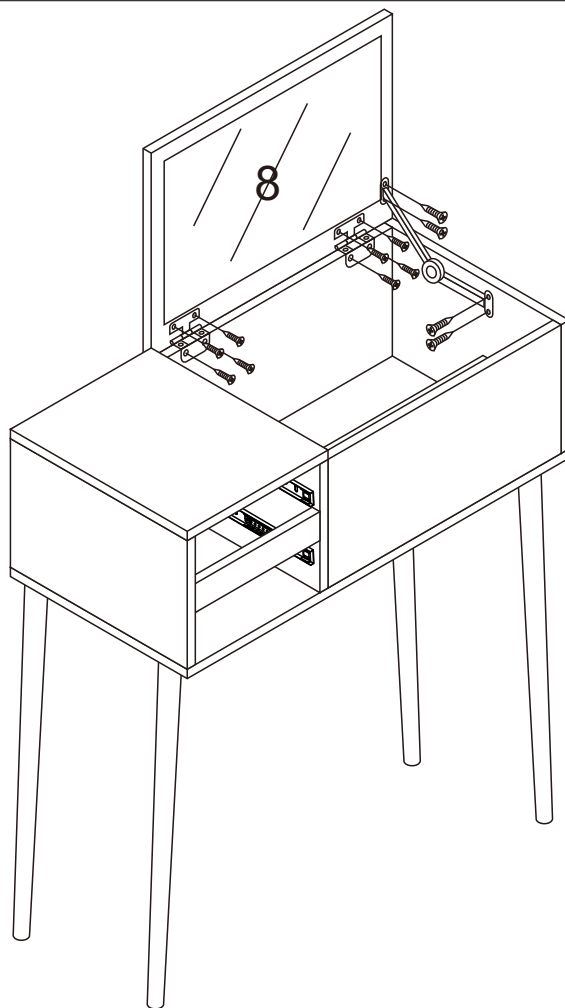

E




x2

C






3. 5x16mm
x8

F

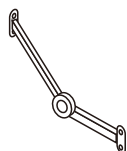


x1


11

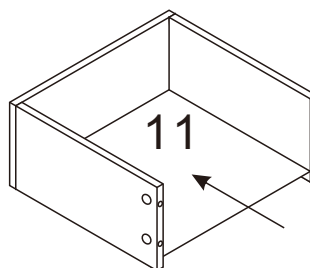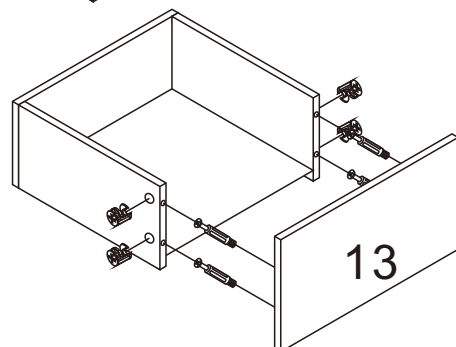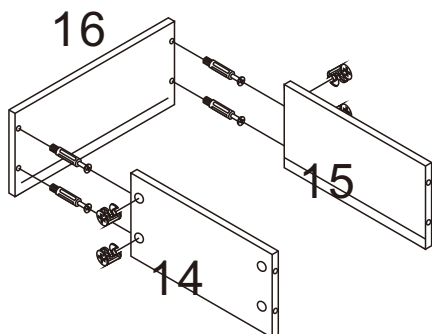

x2

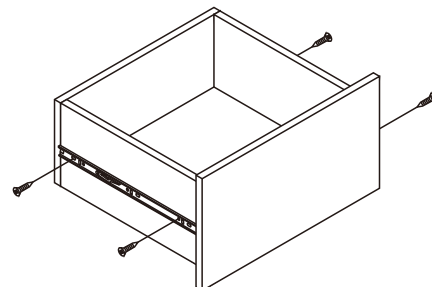

A




x8

C





3. 5x16mm
x4

H

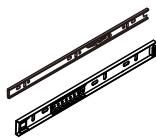

x2

10

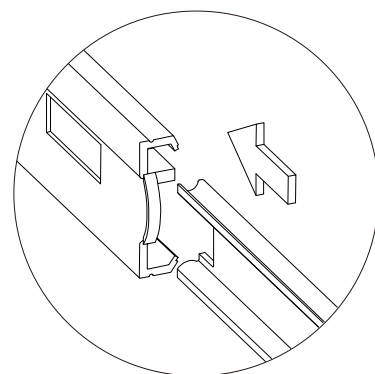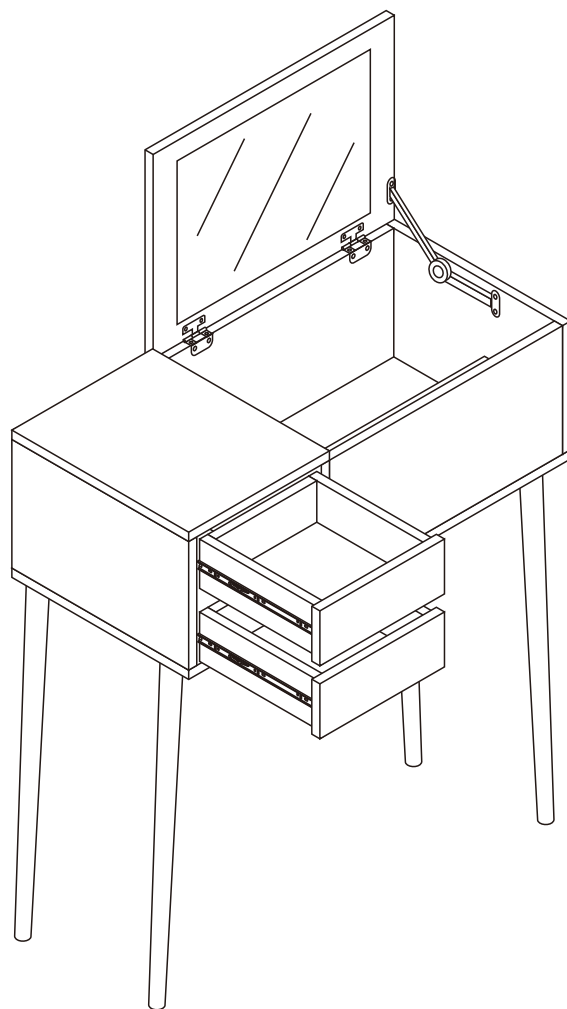

11

