
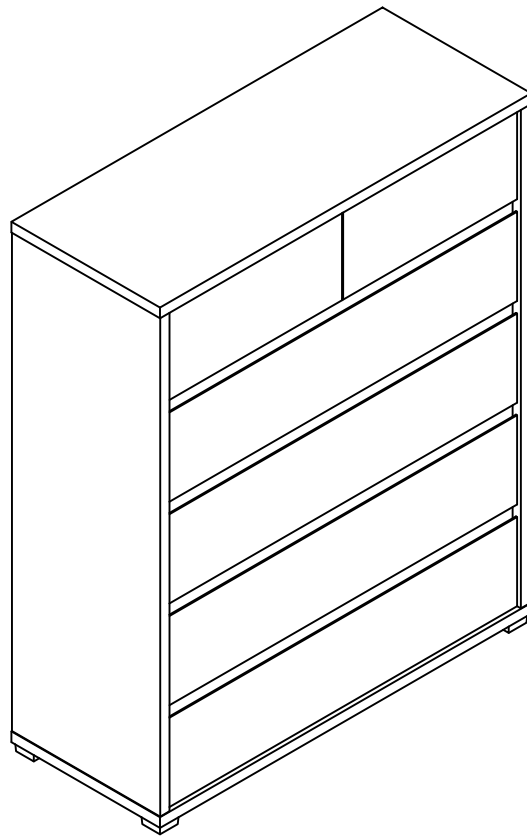
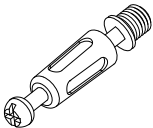

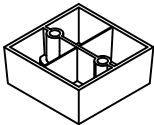







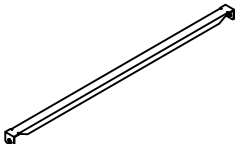



625-055 6-Drawer Tallboy *Oak

Assembly Instructions

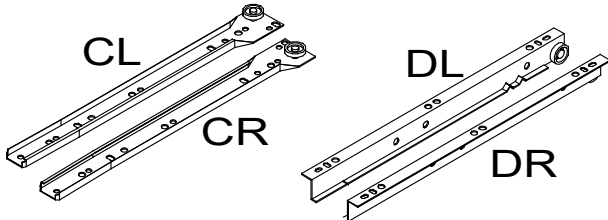


Assembly Instructions

Ø15x11  A x 47	Ø7.8x35  B x 47	Ø8x30  C x 19	Ø3.5x14  D x 64
50x50x21  E x 5	Ø4x40  F x 26	Ø4x30  G x 10	M7x48mm  H x 4
Ø3.5x16  I x 2	7.8x38  J x 2	4mm  K x 1	 L x 20
Ø3x16  M x 20	62x40x18x1.2  N x2	Ø4x16  O x 2	4mm  P x 4
334x15x15  Q x 8	14"  6sets		

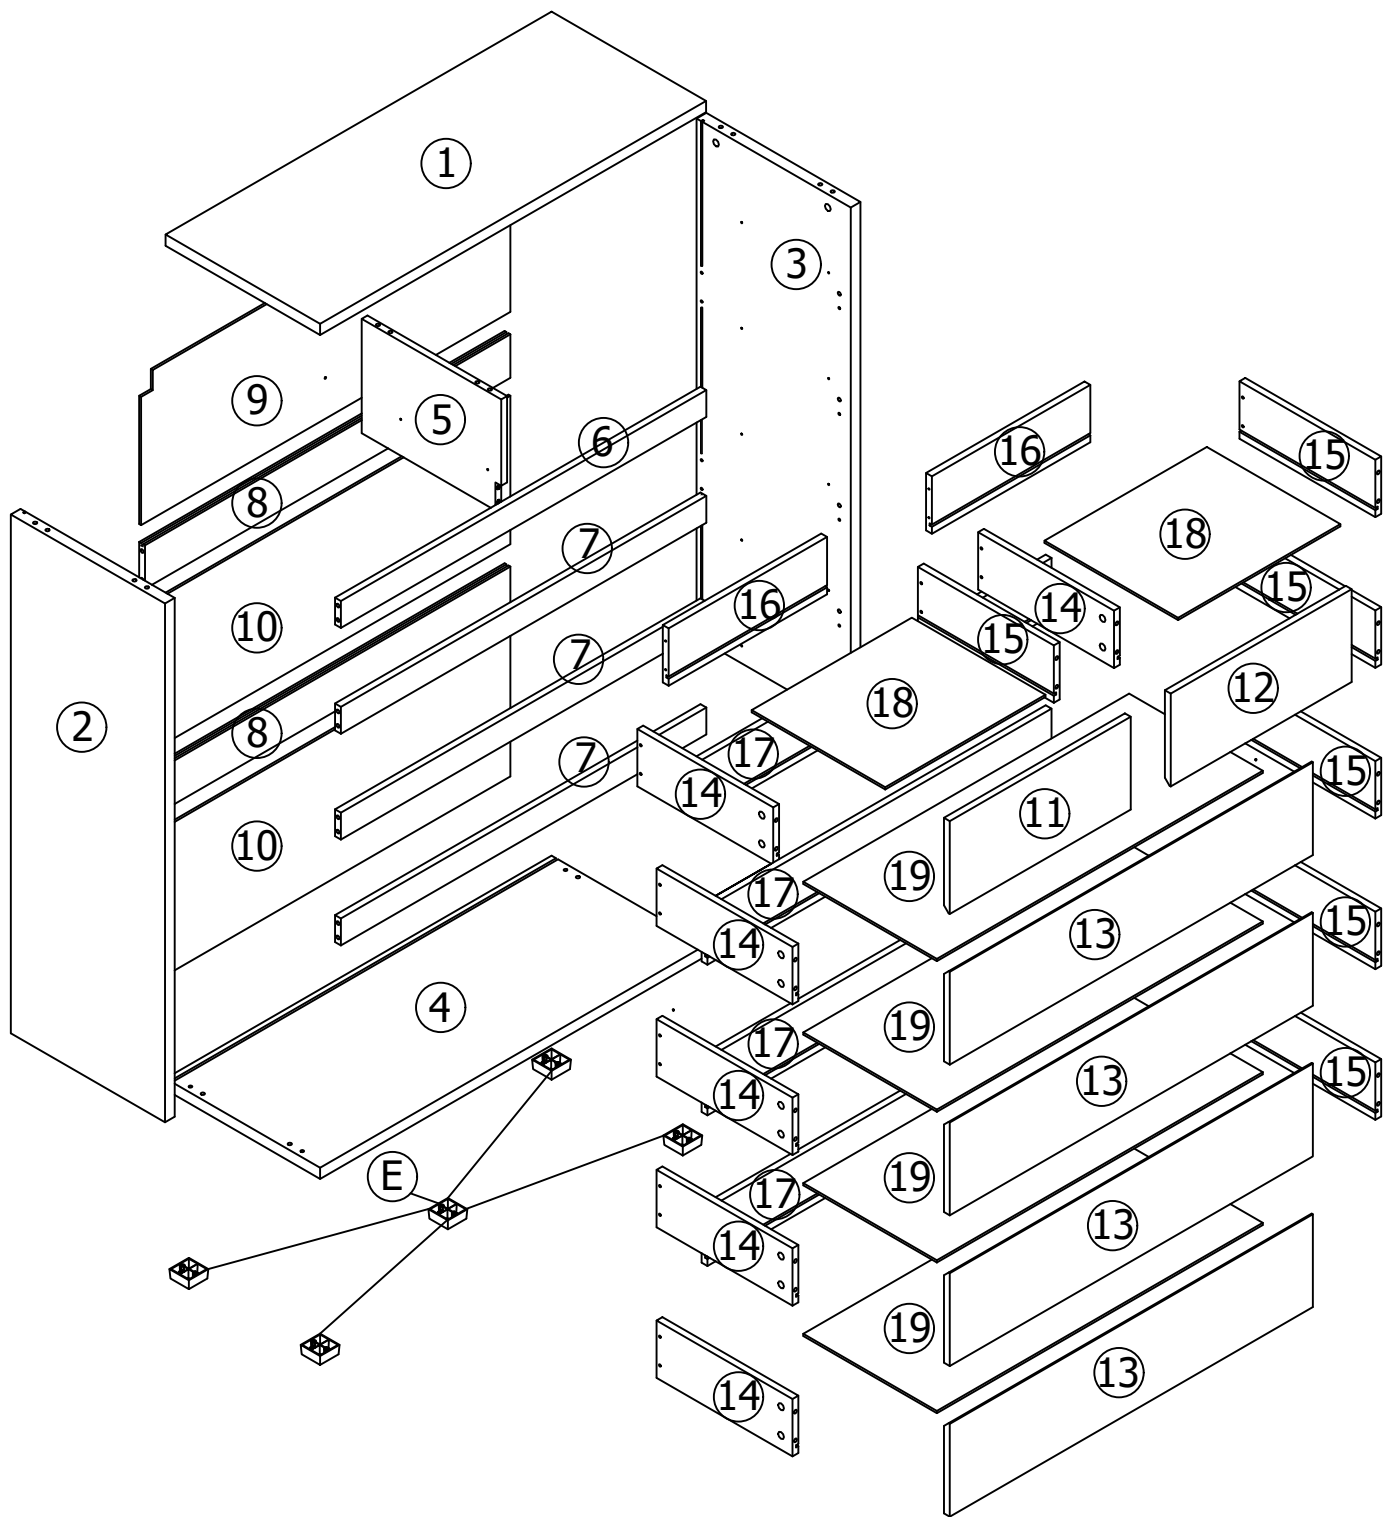






STEP 1

D x 24
CL x 6
CR x 6





REMARK:

When installing, please make sure the screws are flattened, Not crooked; Otherwise the drawers will not be installed perfectly.

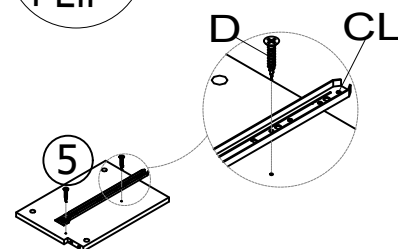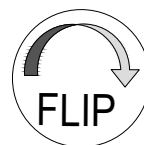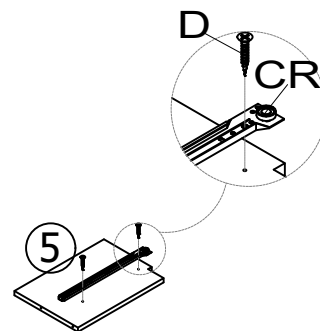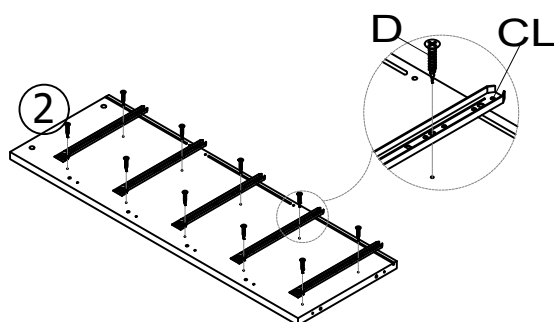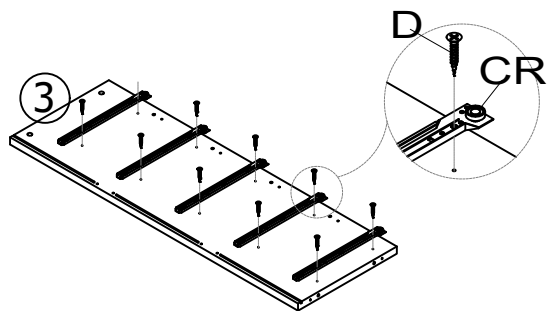


STEP 2

A x 8
B x 8
C x 4

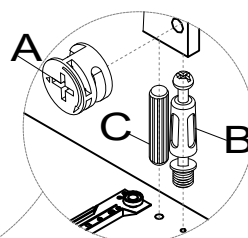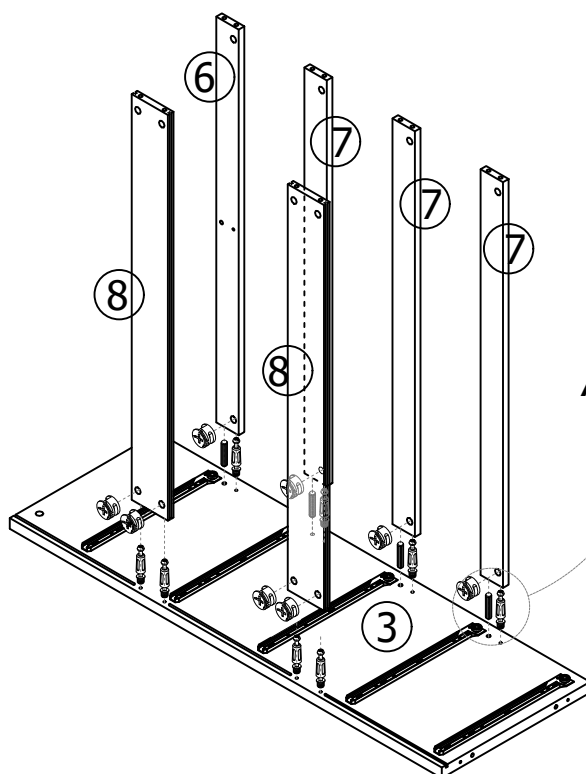


STEP 3

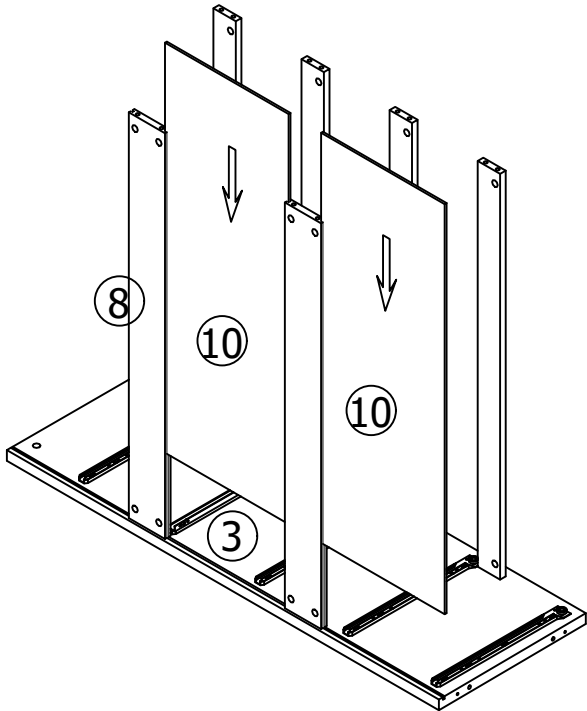


STEP 4

A x 8
B x 8
C x 4

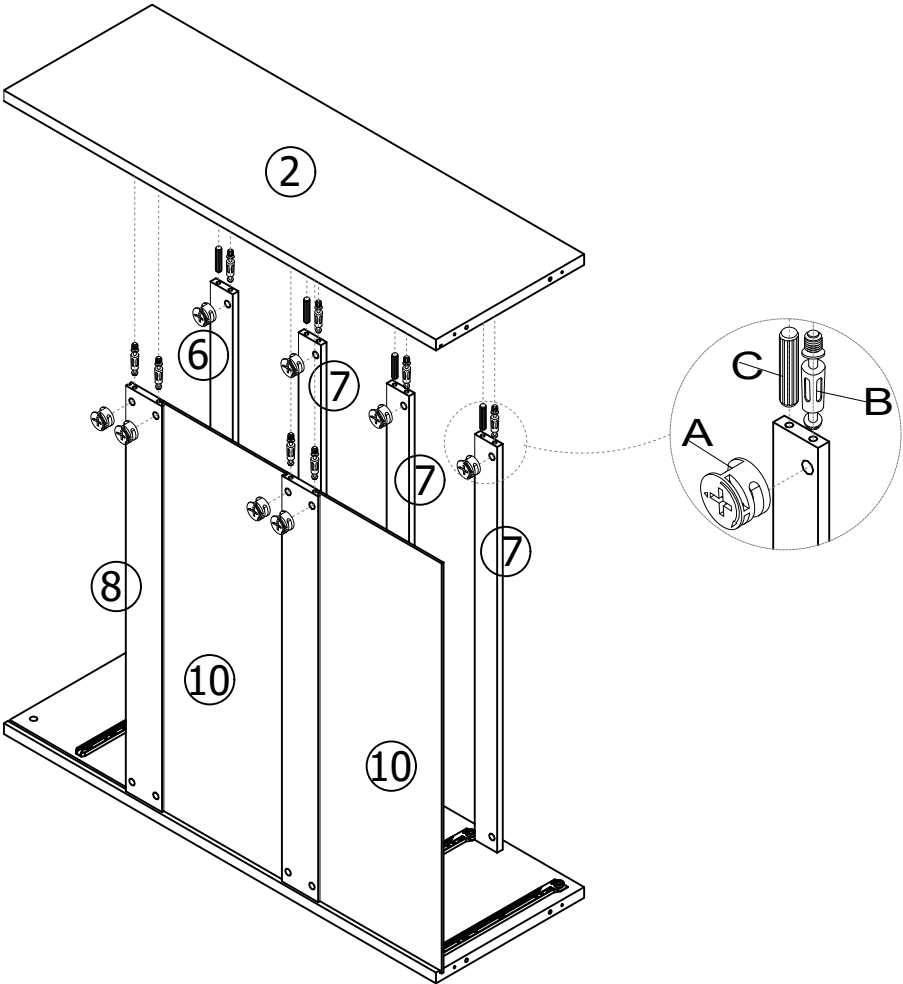


STEP 5

C x 4
H x 4
K x 1

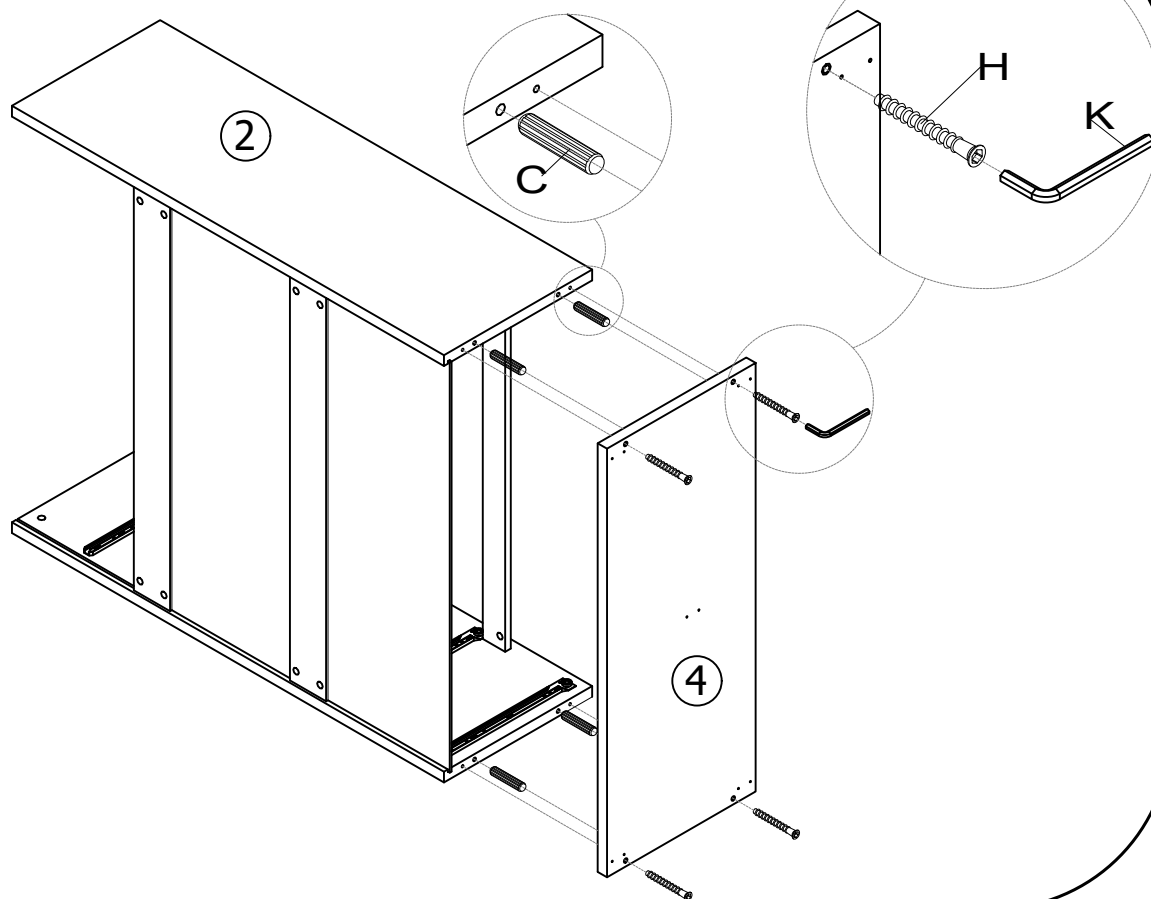


STEP 6

E x 5
G x 10

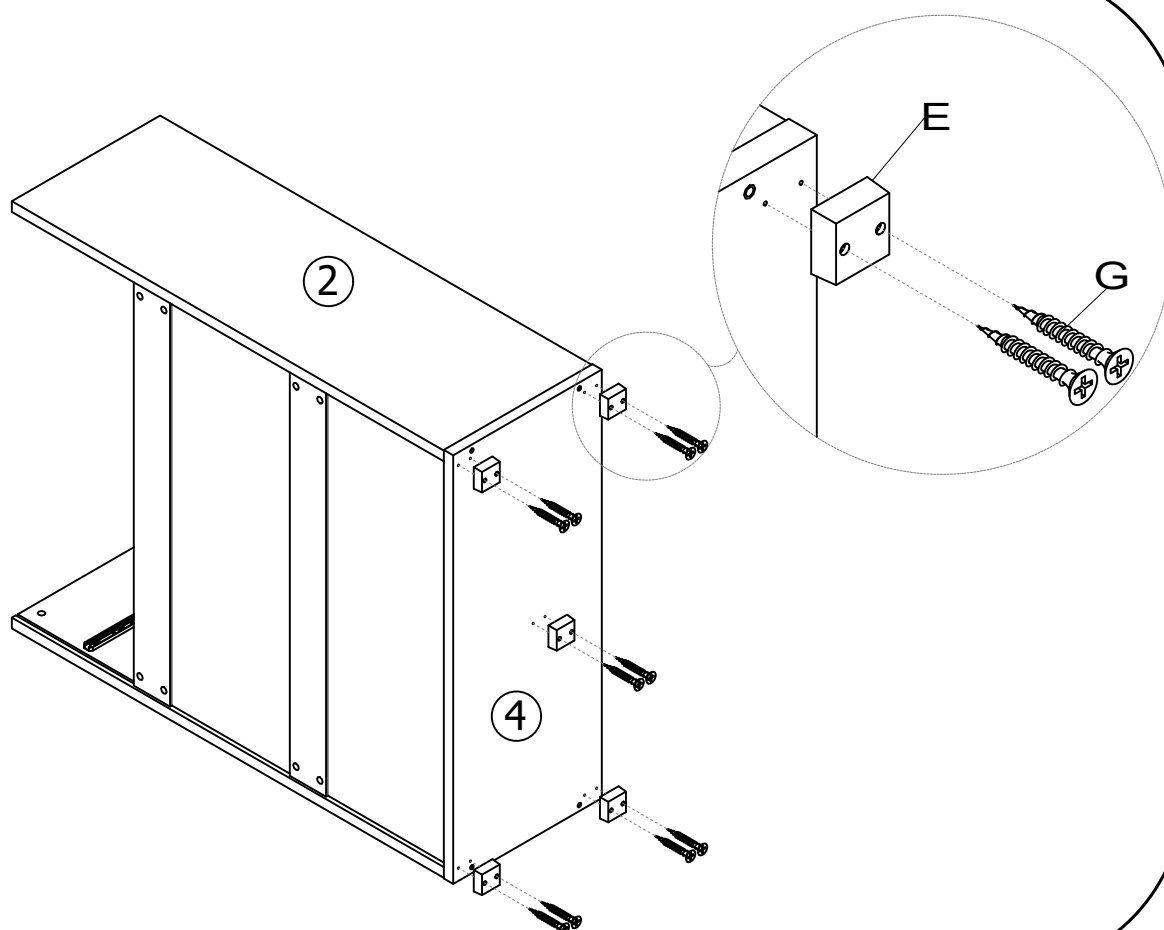


STEP 7

A x 1
B x 1
C x 1

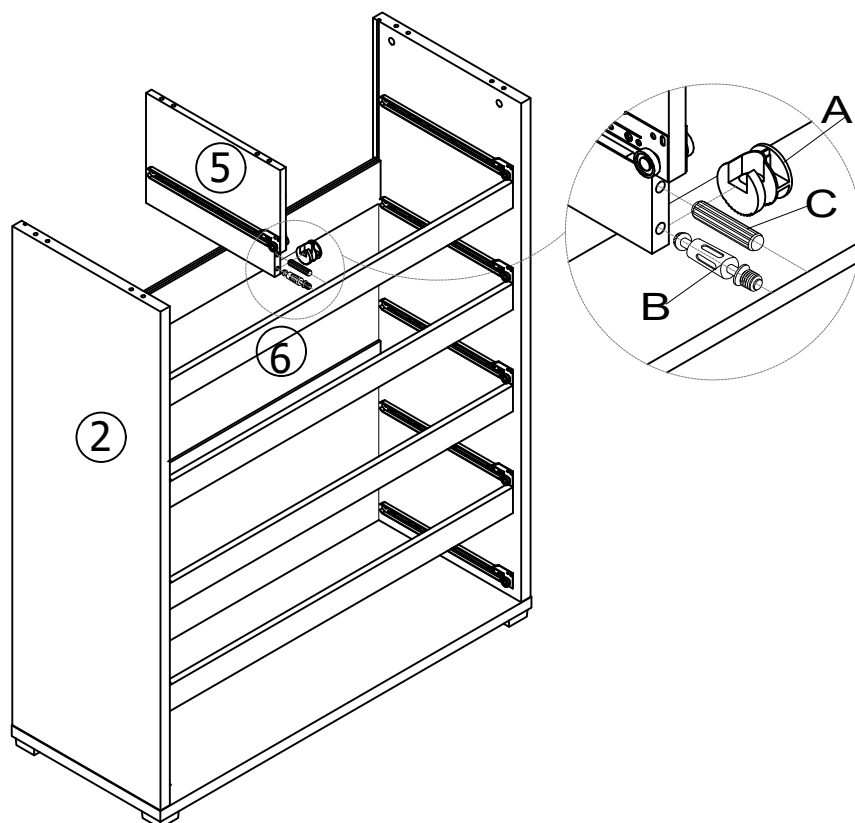


STEP 8

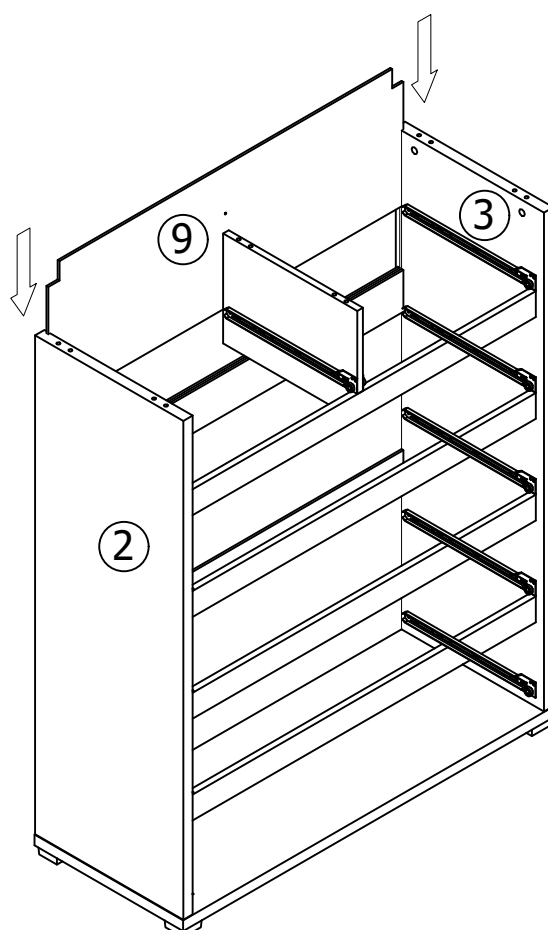


STEP 9

N x 2
O x 2
P x 2

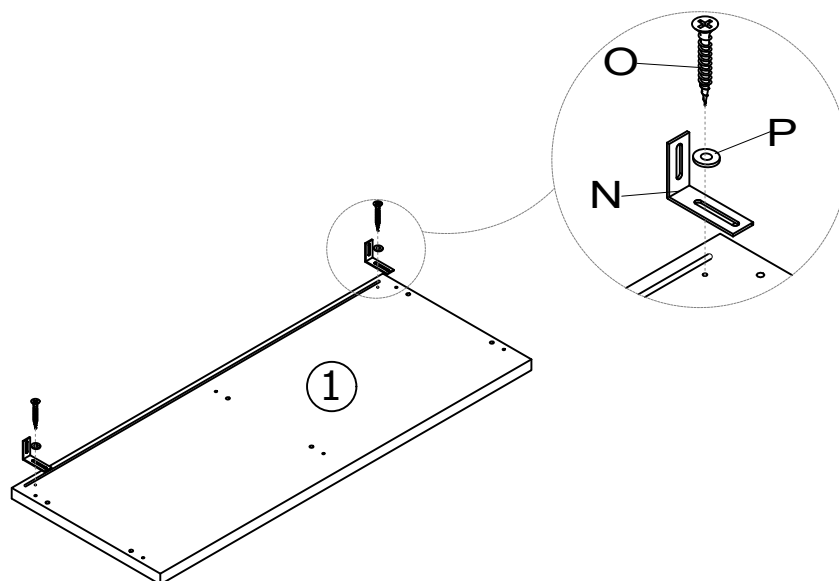


STEP 10

A x 6
B x 6
C x 6

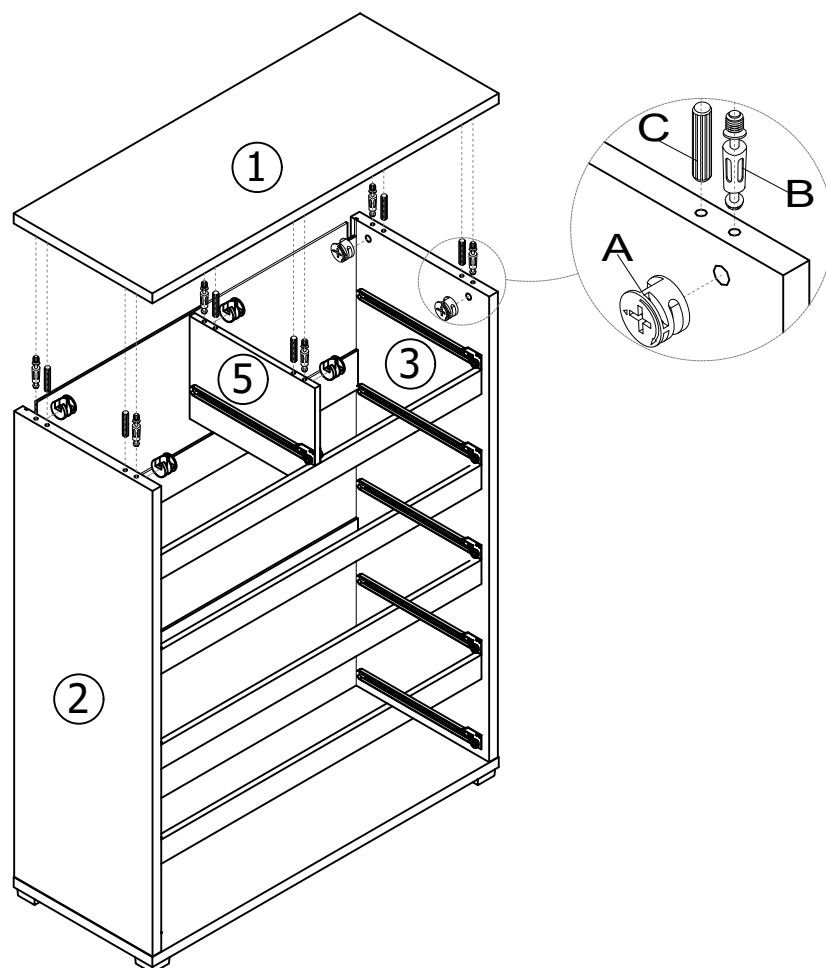


STEP11

I x 2
L x 20
M x 20

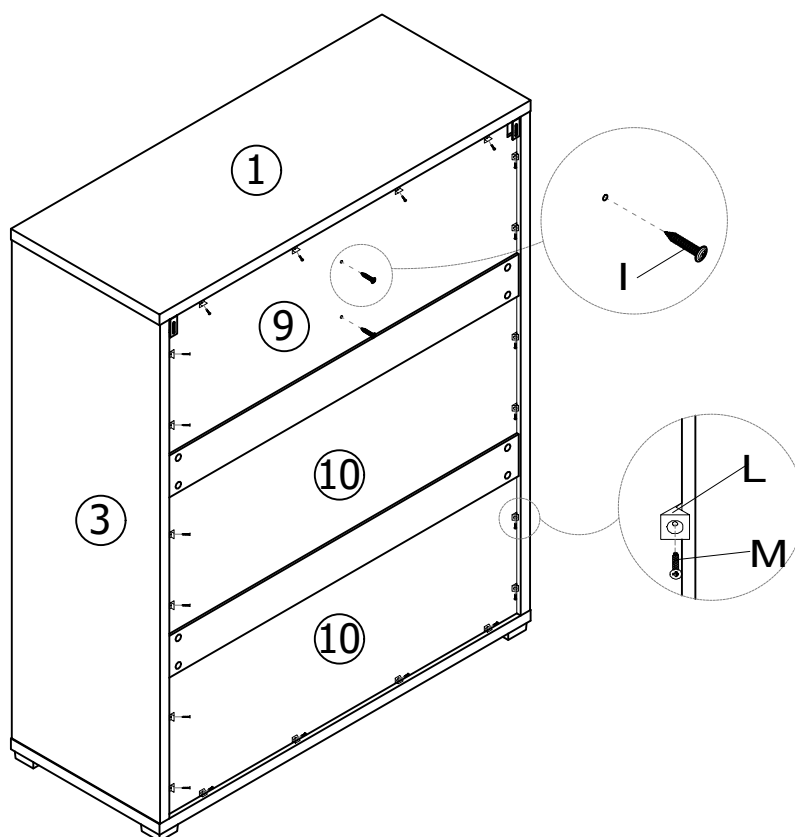


STEP 12

F x 2
J x 2
P x 2

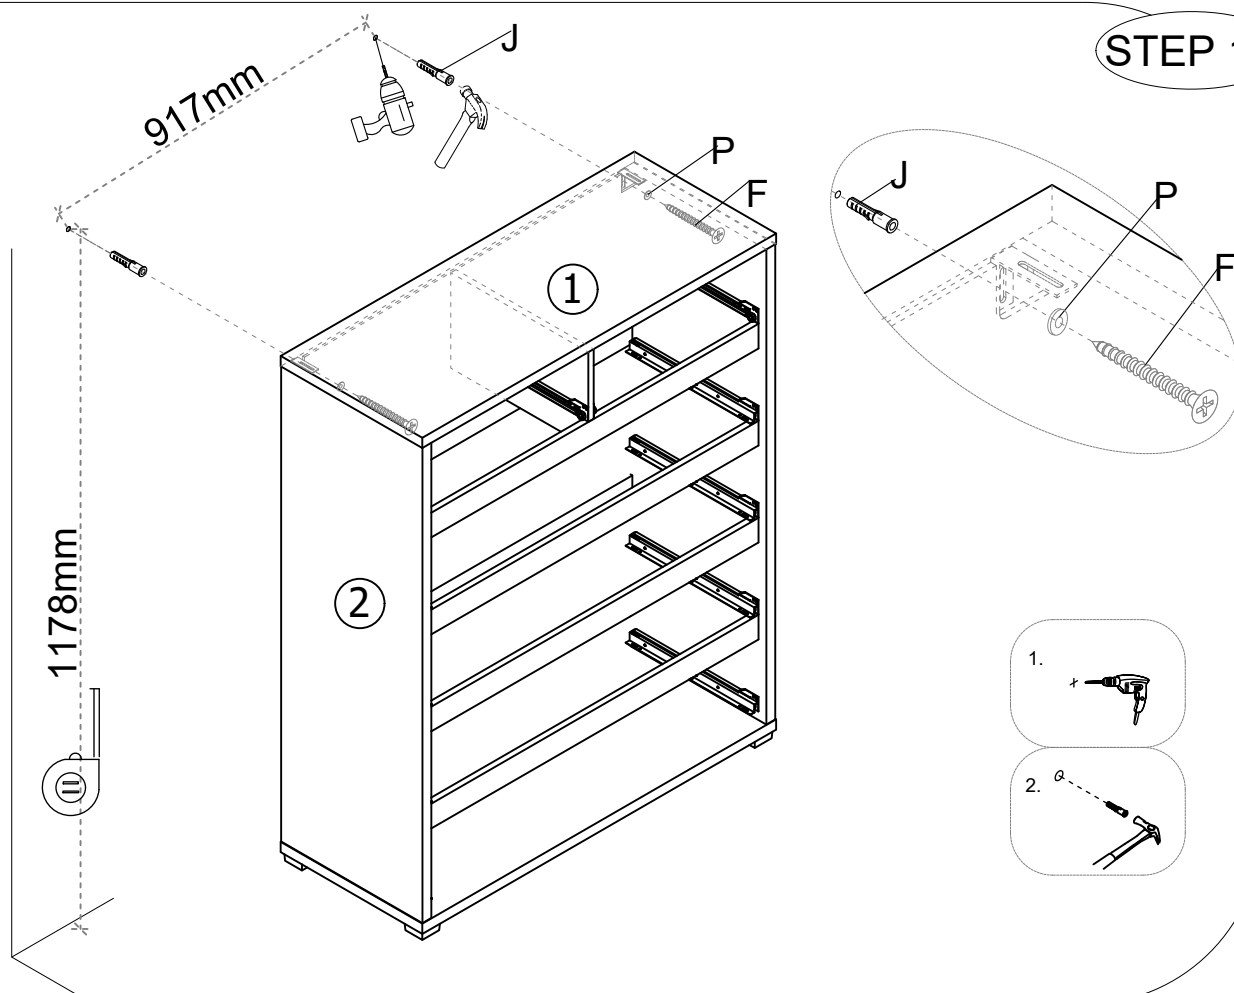


STEP 13

A x 24
B x 24






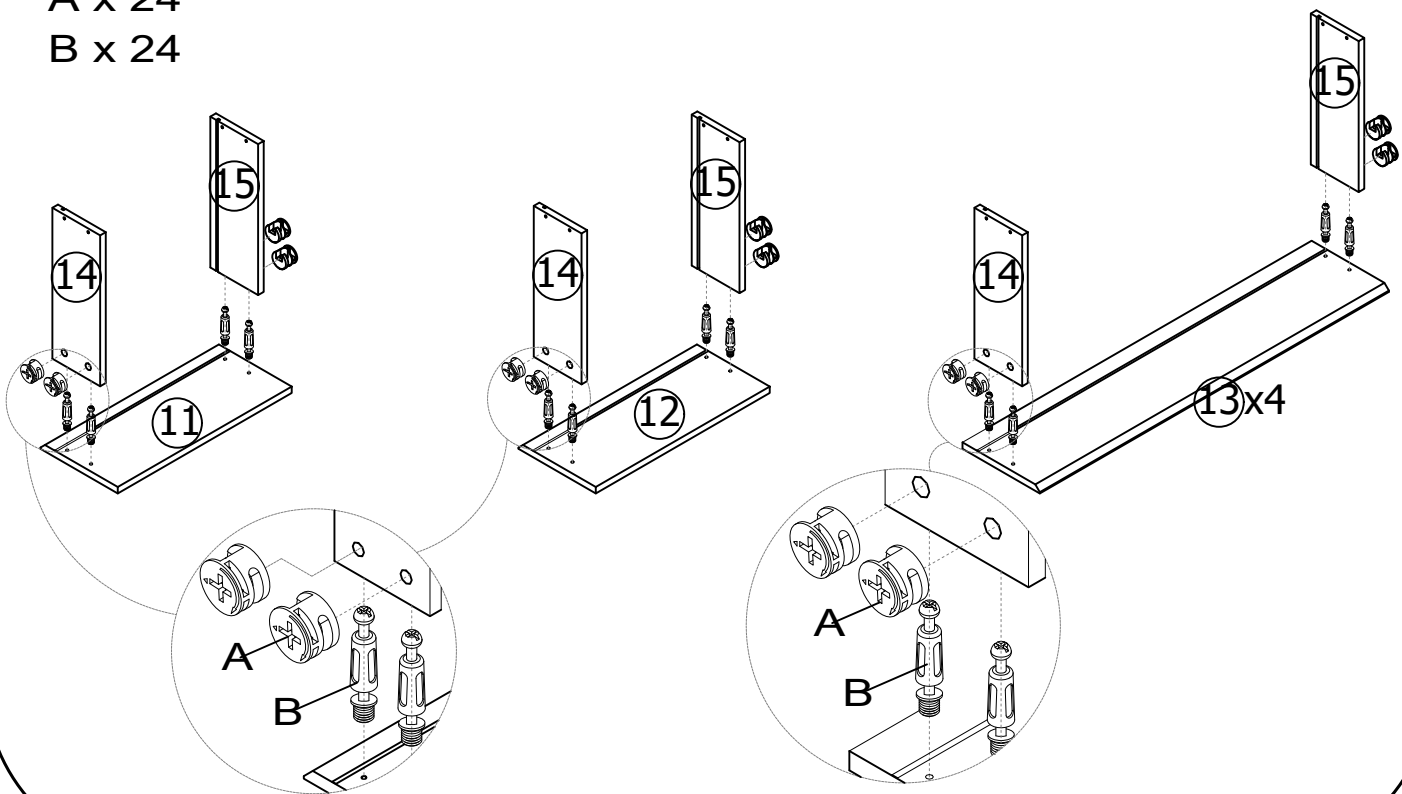


STEP 14

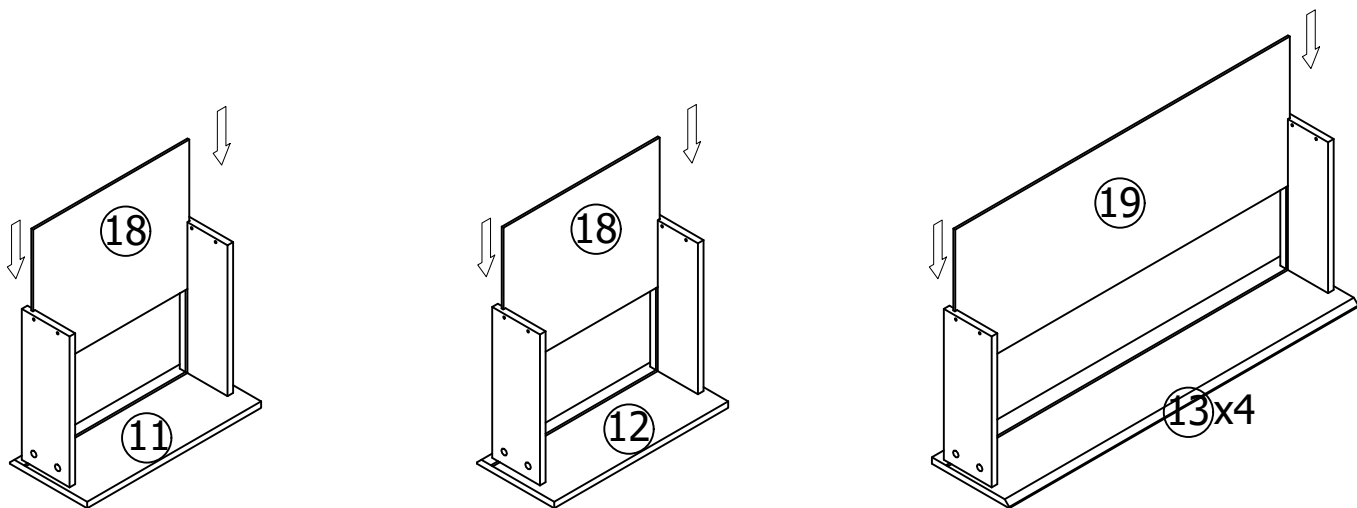

STEP 15

F x 24

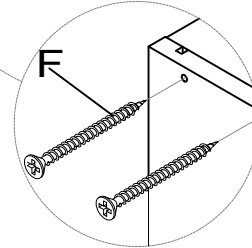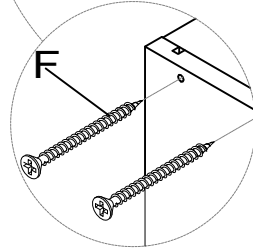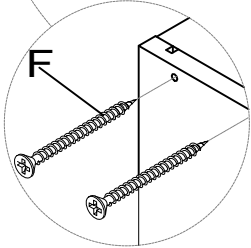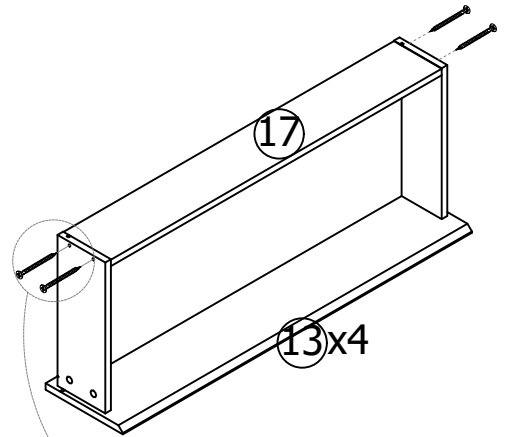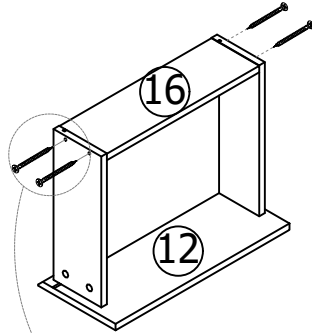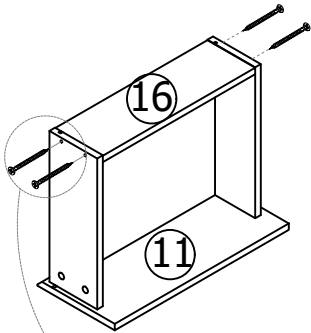








STEP 16

D x 40


Q x 8

DL x 6


DR x 6

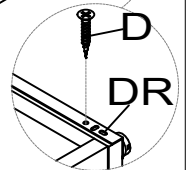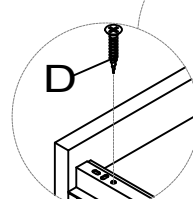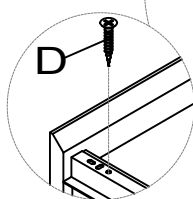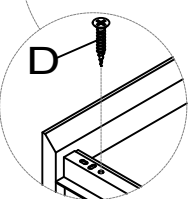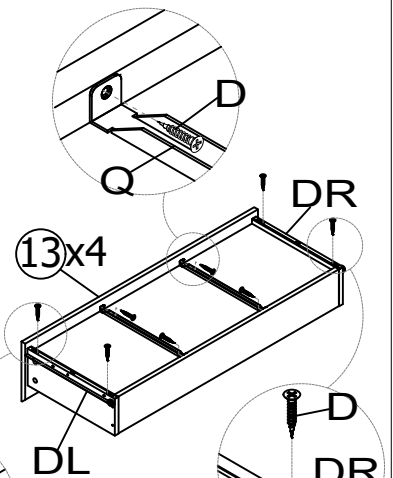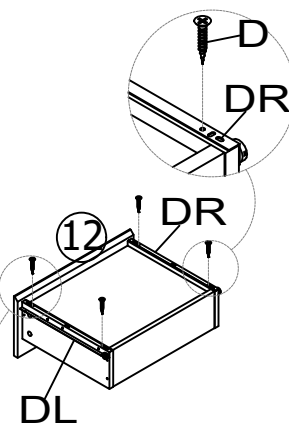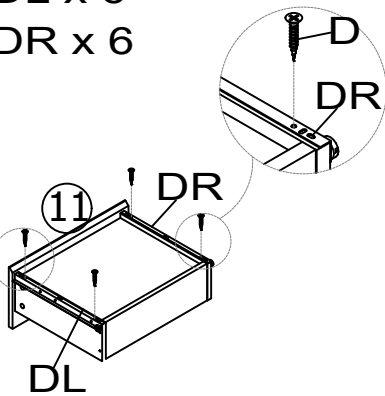

STEP 17

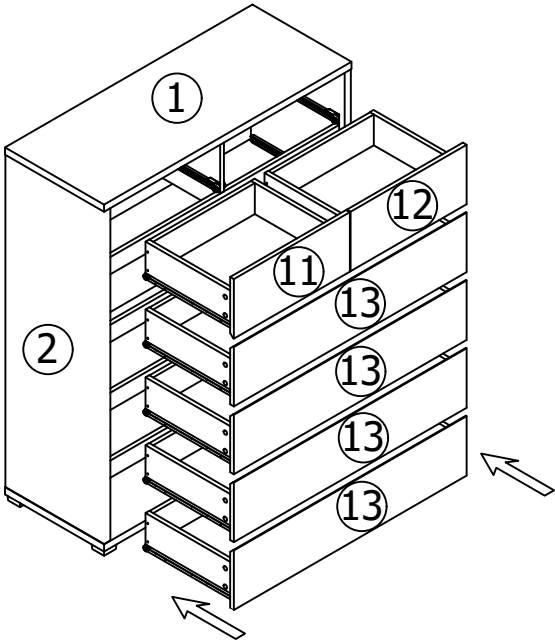

STEP 18

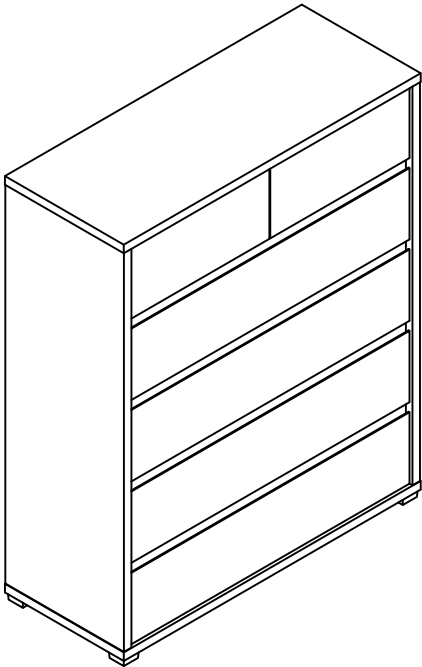

FINISH