
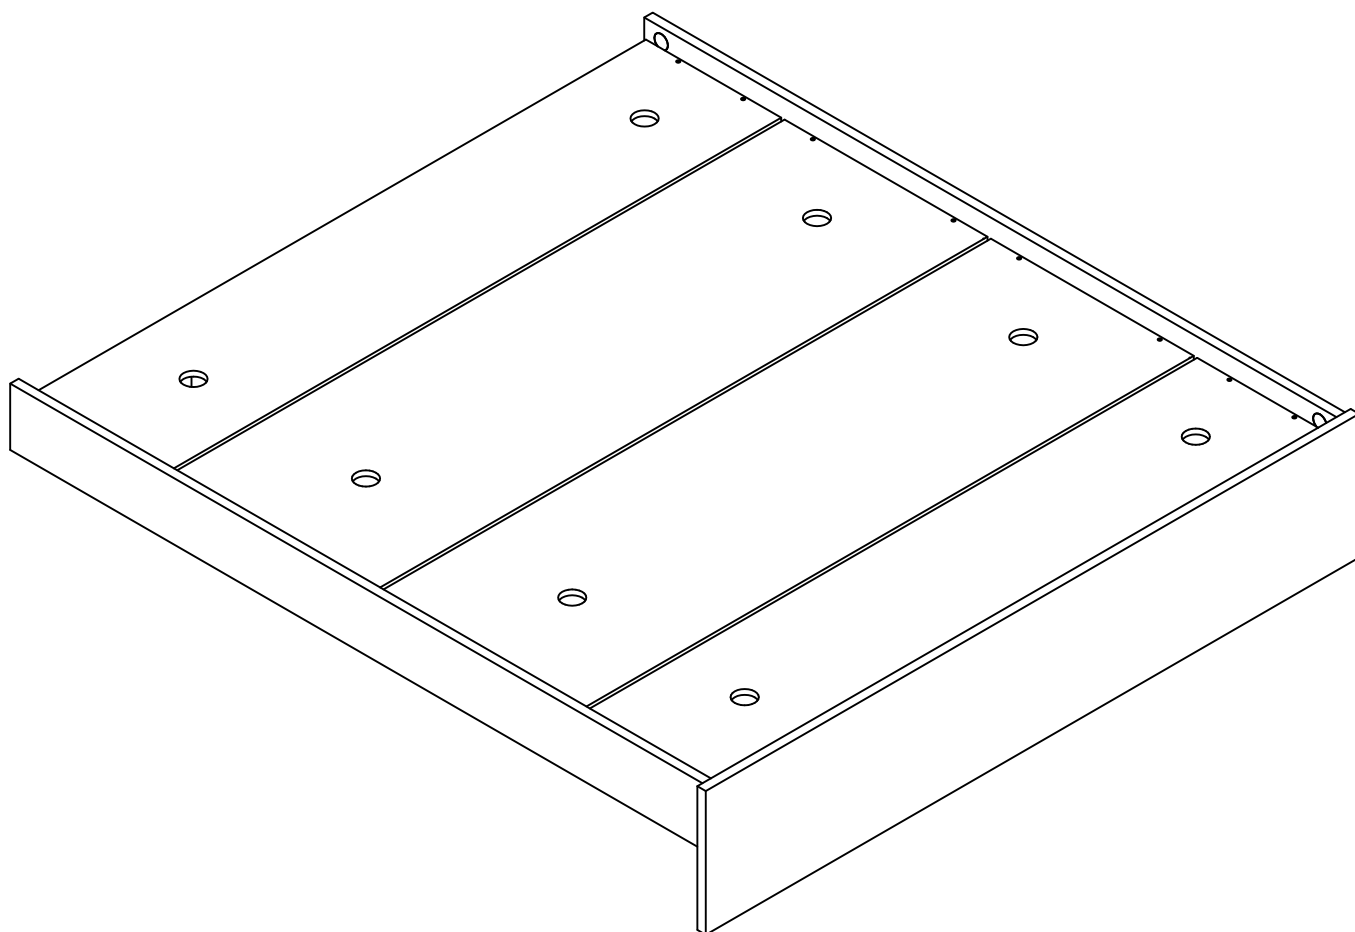
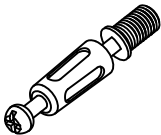


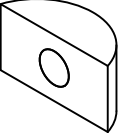




625-059/060/061 Bed Without Headboard *Oak

Assembly Instructions




Assembly Instructions

Ø15x11  A x 8	Ø7x35  B x 8	Ø8x30  C x 12	M7x48mm  D x 12
 E x 9	Ø40  F x 4	8mm  G x 4	M8  H x 4
Rx20  I x 4	 J x 1	M8x75  K x 4	4mm  L x 1

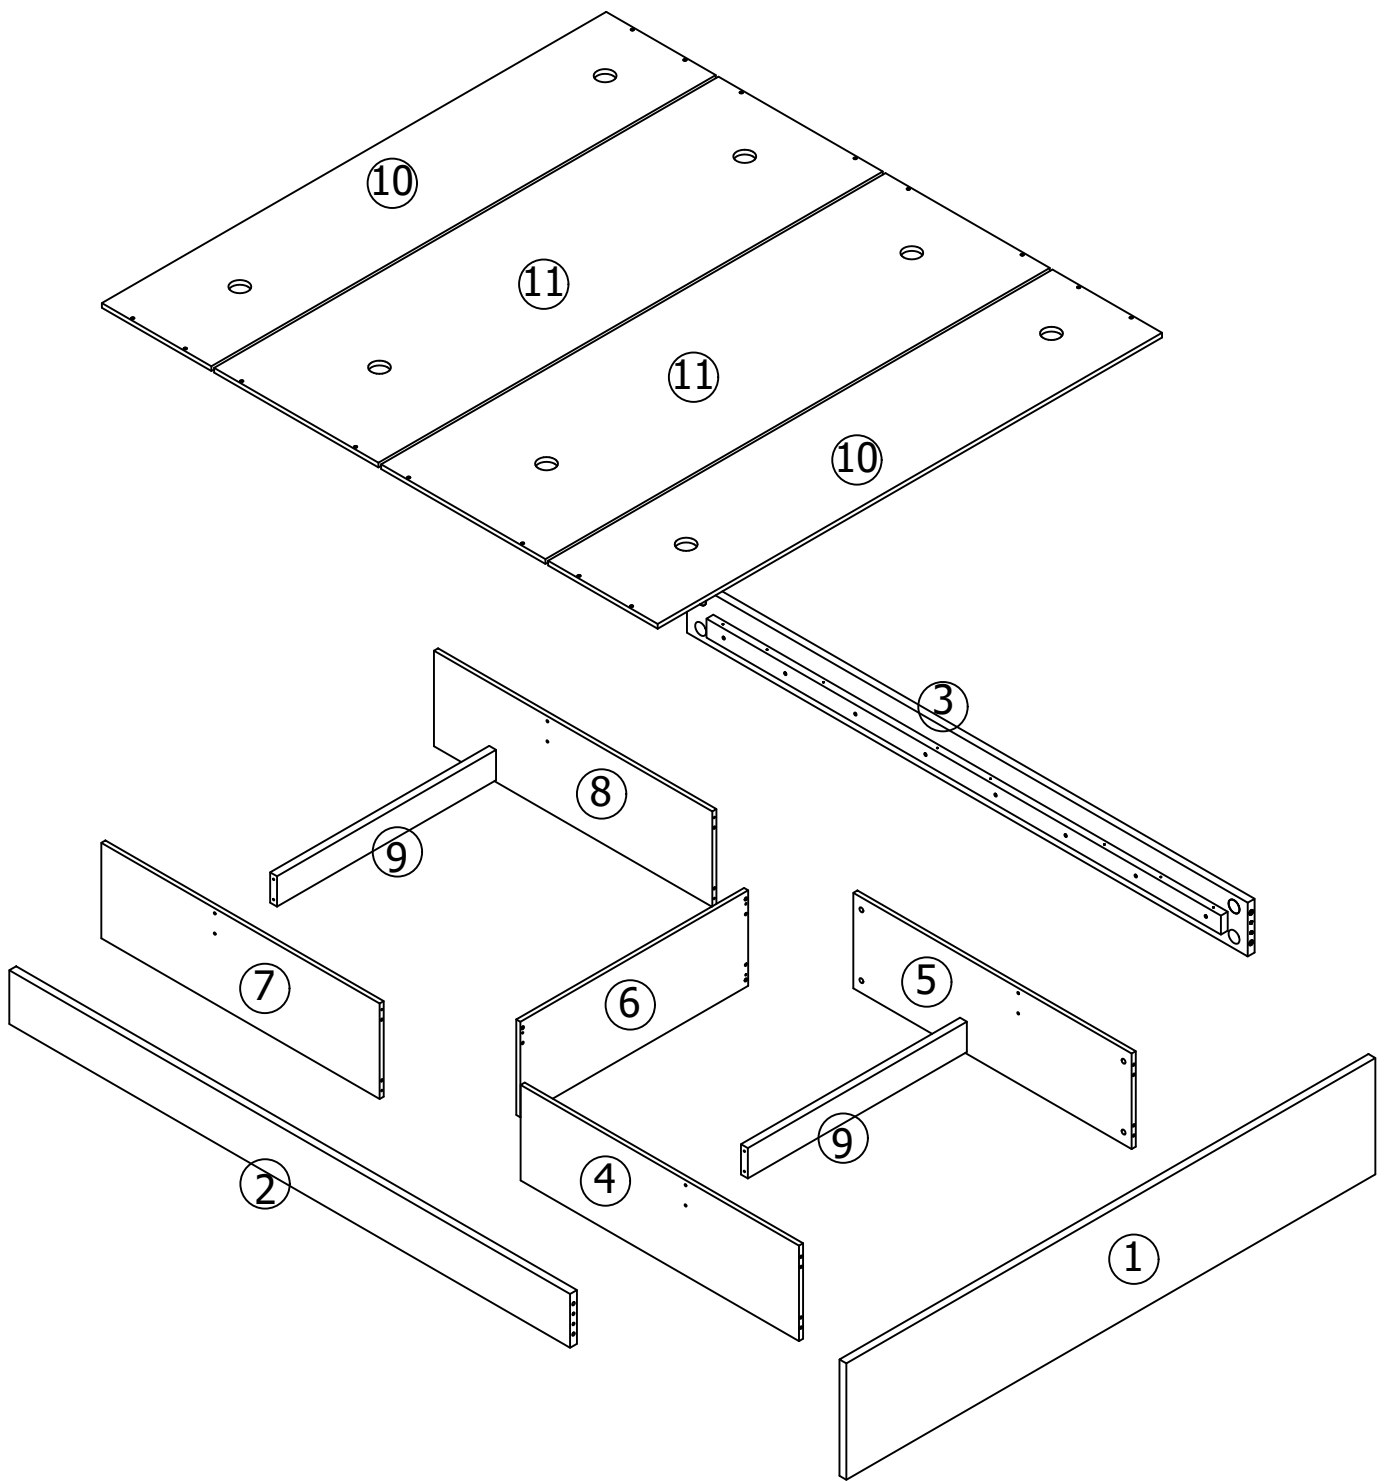


STEP 1

D x 4
L x 1

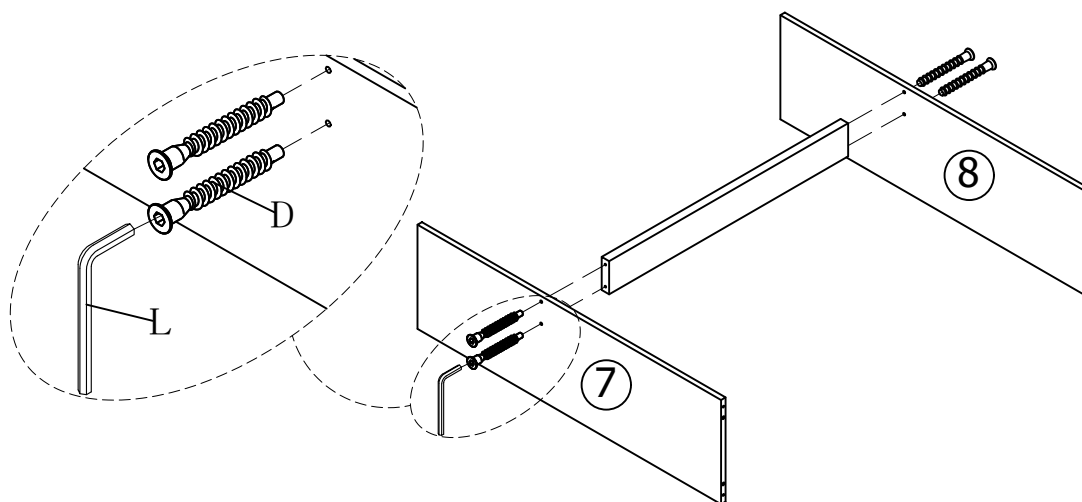


STEP 2

C x 4
D x 4

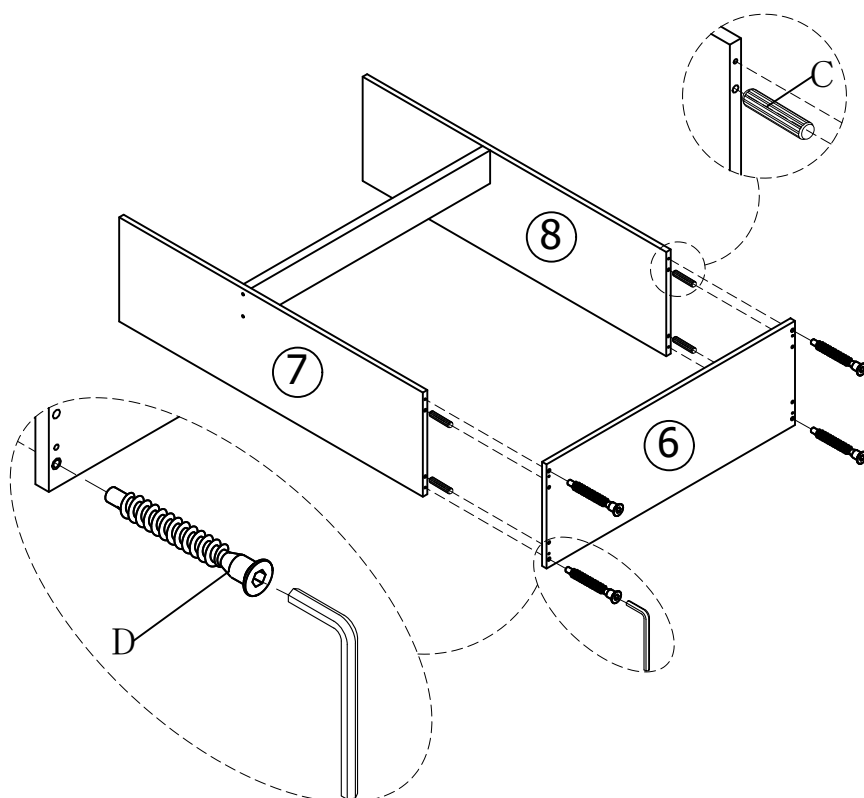

STEP 3

D x 4

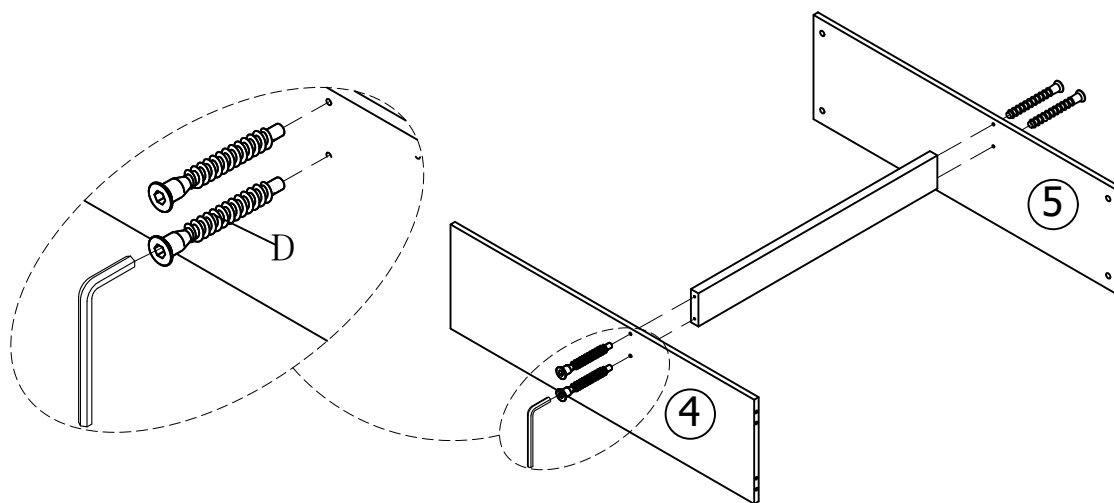


STEP 4

A x 4


B x 4

C x 4

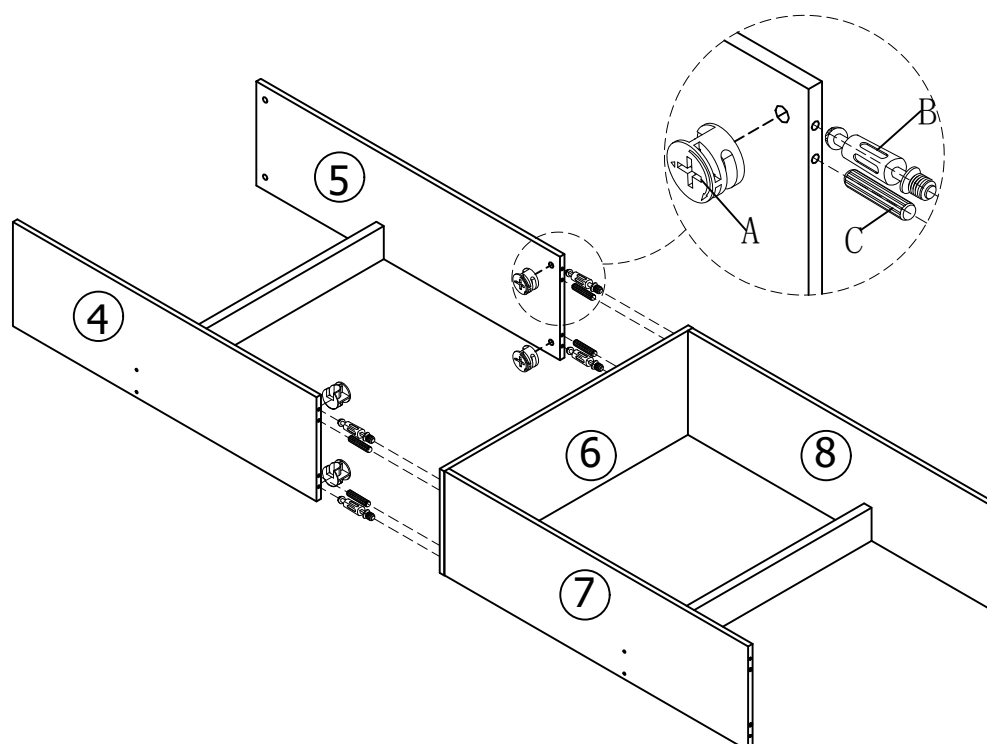


STEP 5

K x 4

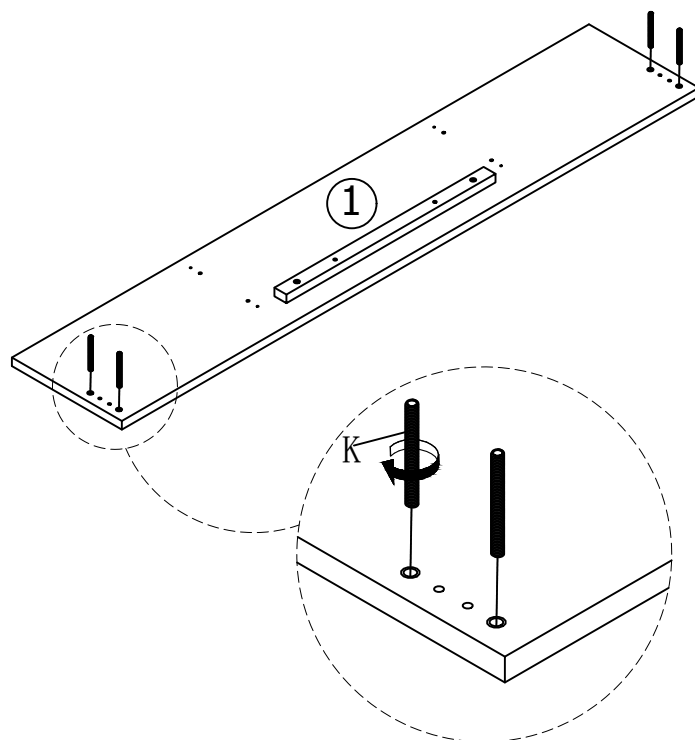


STEP 6

A x 4
B x 4
C x 4
F x 4
G x 4
H x 4
I x 4
J x 1

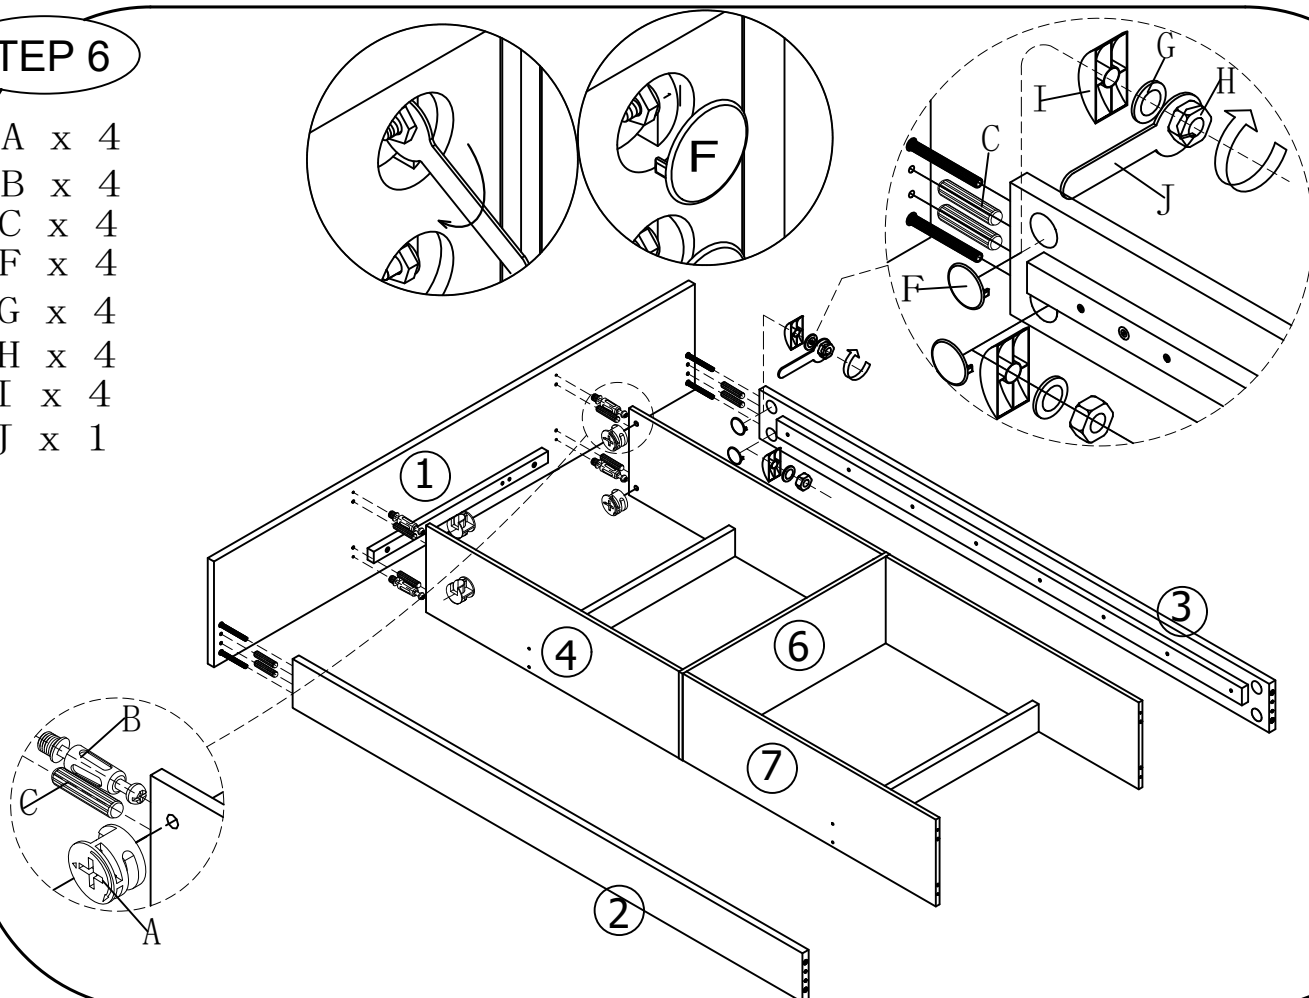


E x 9

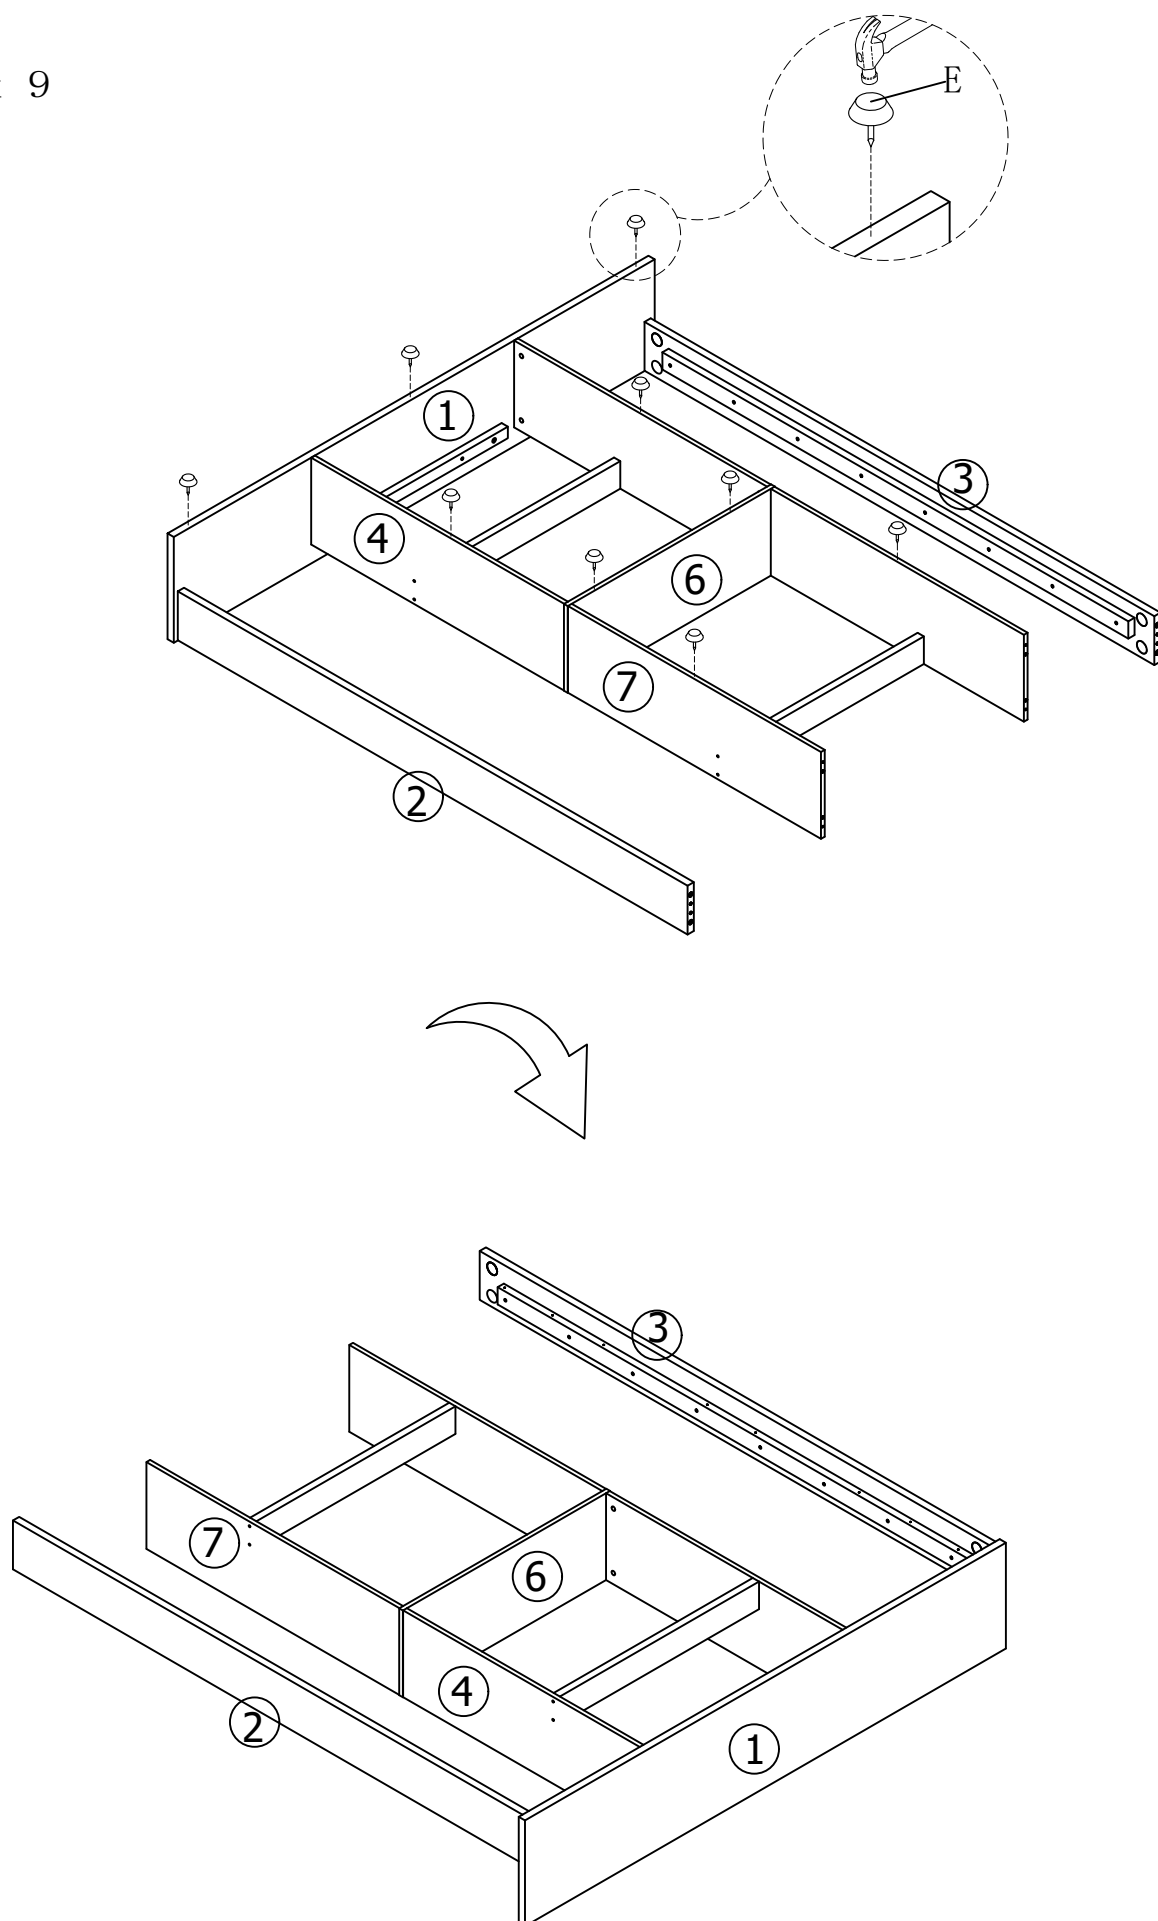


STEP 8

The bed slats (9) and (10) can only be placed last, after the bed has been securely connected to the headboard.

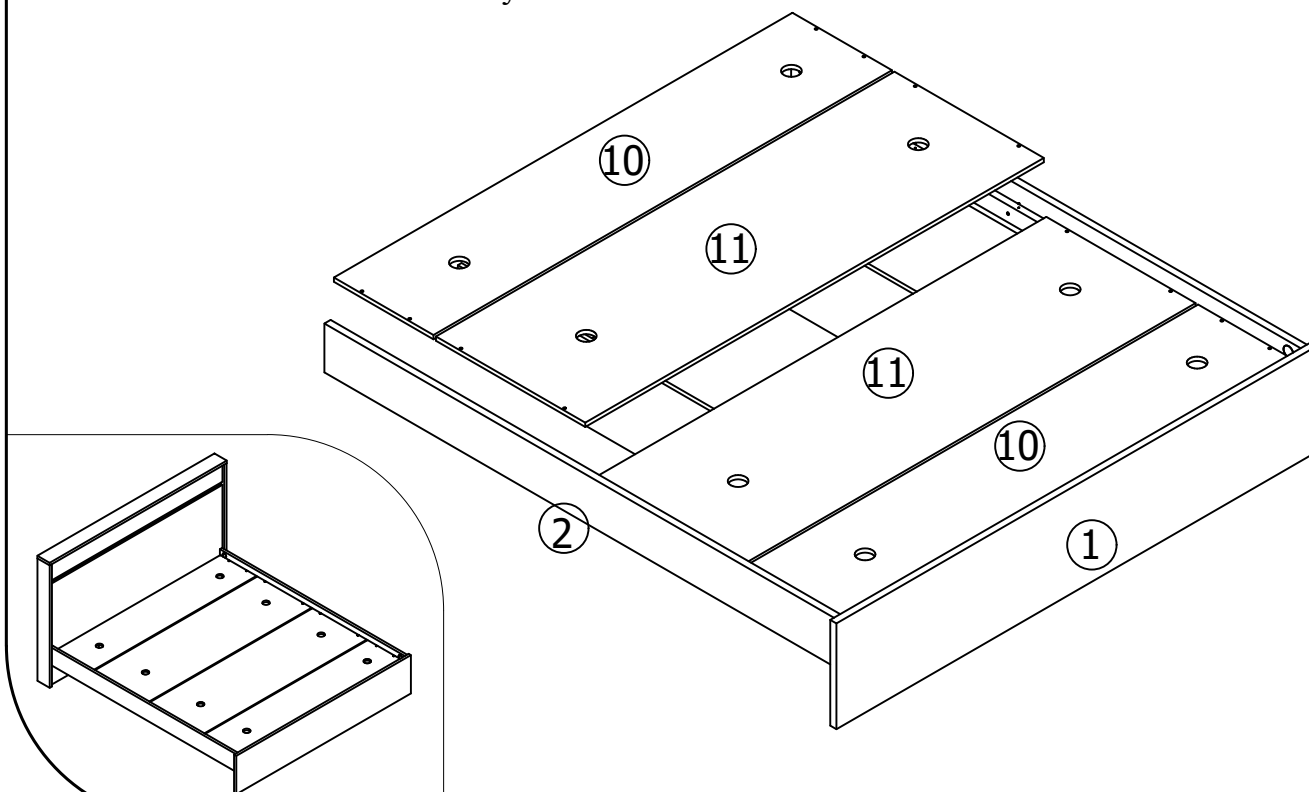

STEP 9

This bed should be used with headboards of the same model and specification, and cannot be used alone.

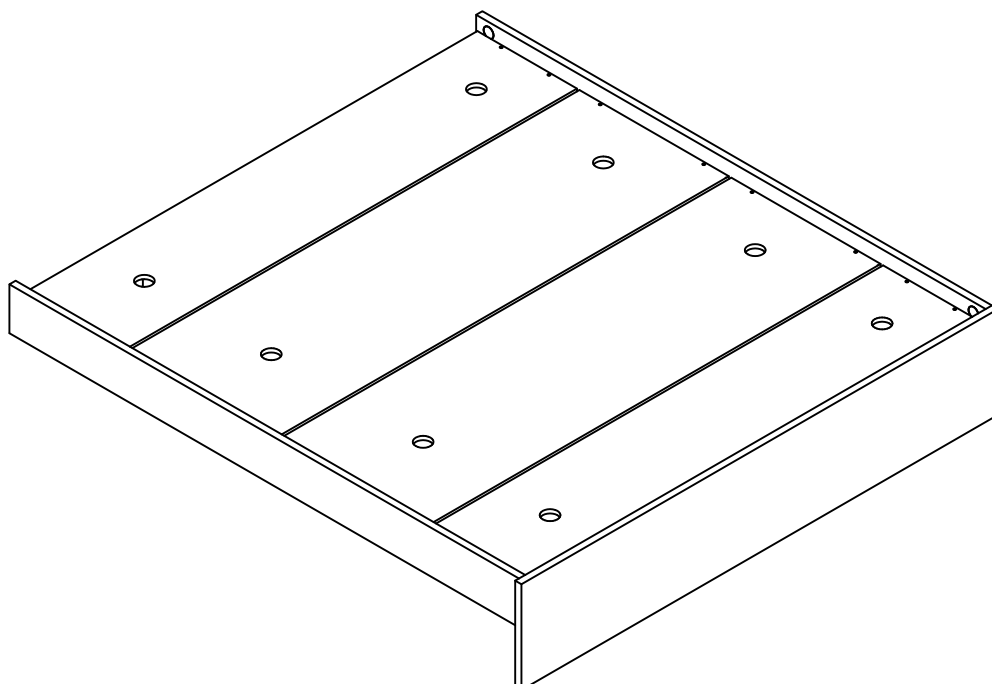

FINISH