FYG0354,Wardrobe System 3-Drawer Side Cabinet *Oak

Assembly Instructions

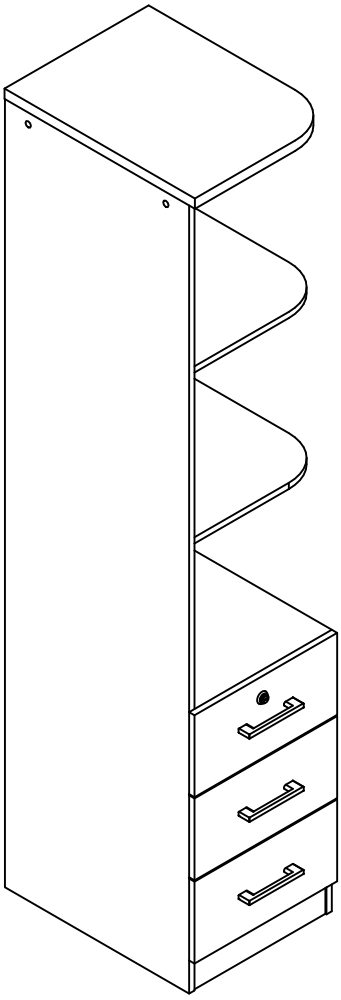

Assembly Instructions

Ø15x11 A x 45	Ø7.8x35 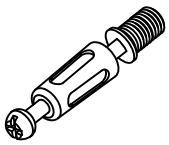 B x 45	Ø8x30  C x 22	Ø3.5x14 D x 38
Ø4x40 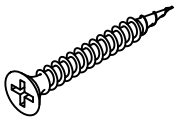 E x 12	F x 8	M4x20 G x 6	152x30x9.5 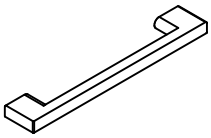 H x 3
Ø16  I x 1	39x20x9 J x 1	Ø4x18  K x 4	
16″ CL CR DL DR 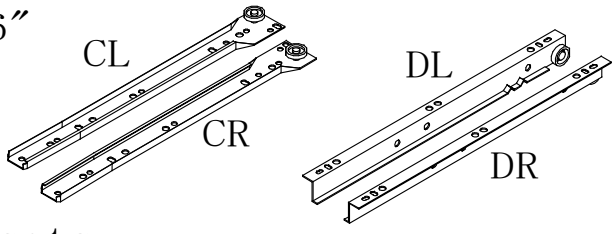 3sets			

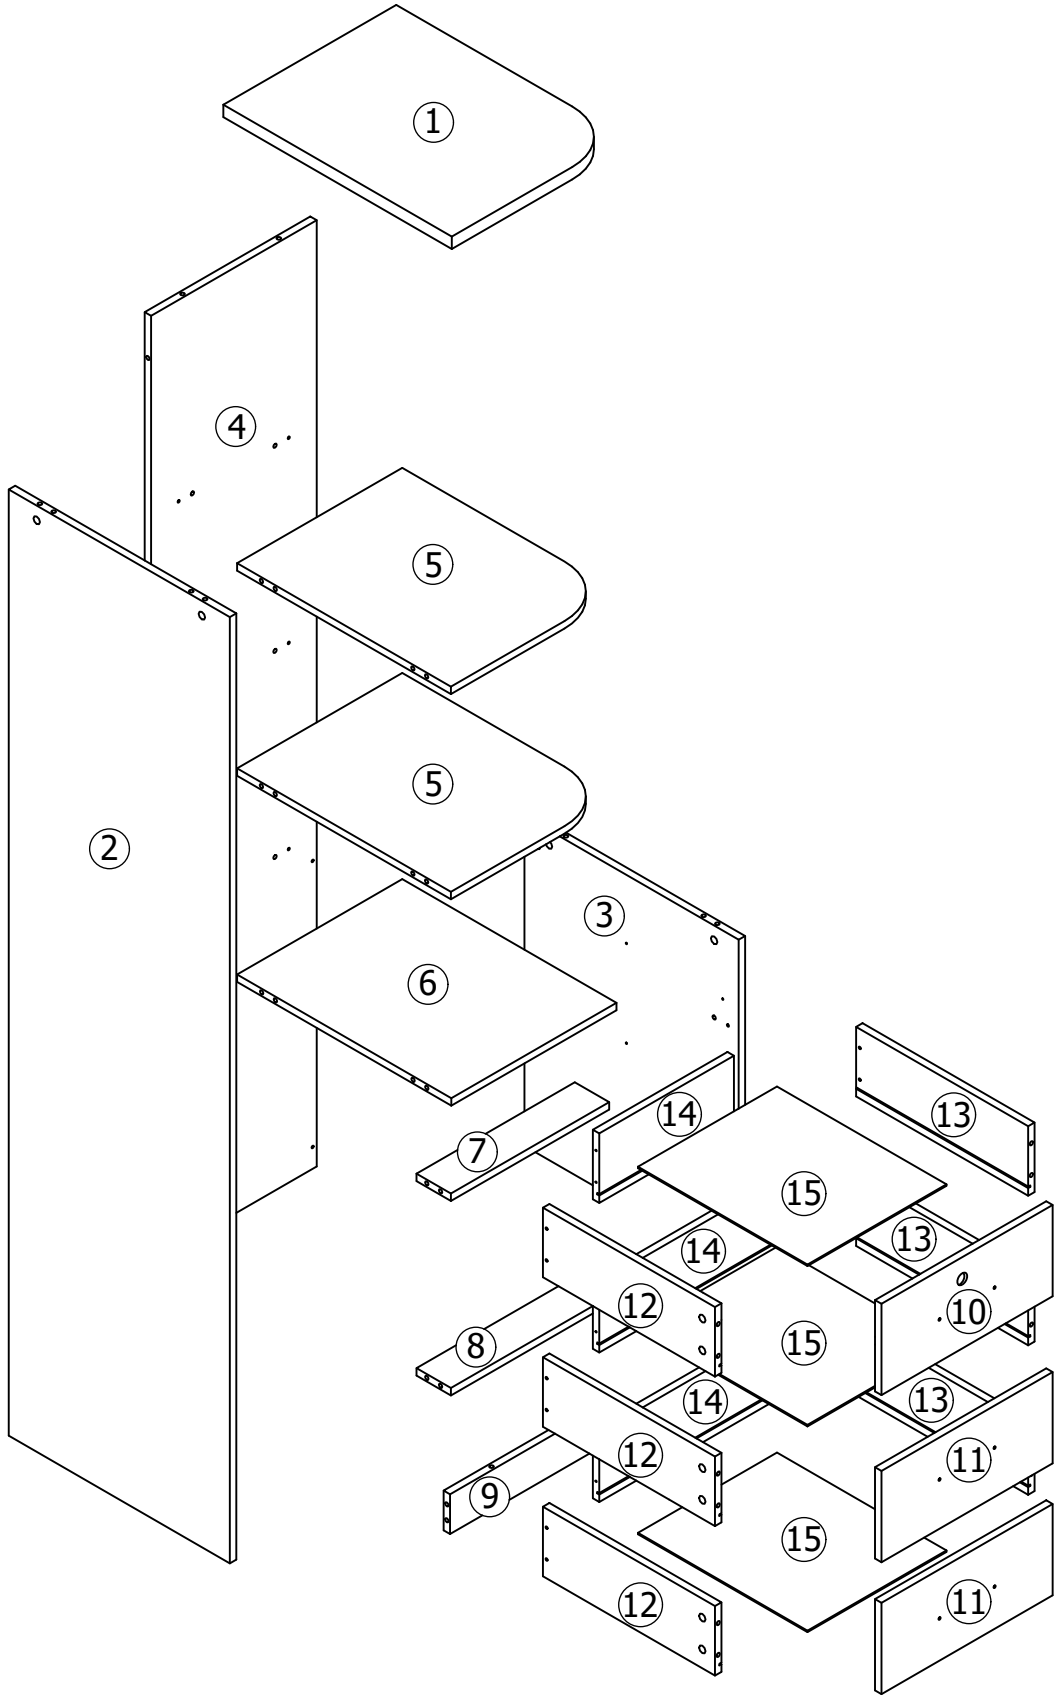
1
4
5
5
2
3
6
14
13
7
15
14
13
12
10
8
15
14
13
12
11
9
15
12
11

STEP 1

D x 18
CL x 3
CR x 3

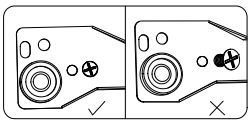

REMARK:
When installing, please make sure the screws are flattened, Not crooked; Otherwise the drawers will not be installed perfectly.

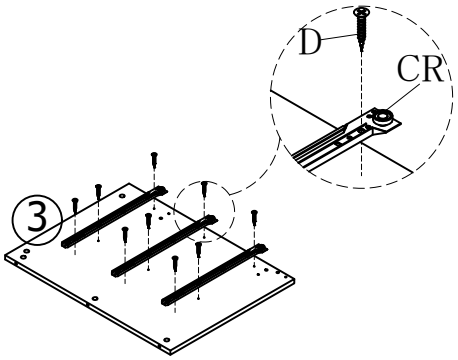

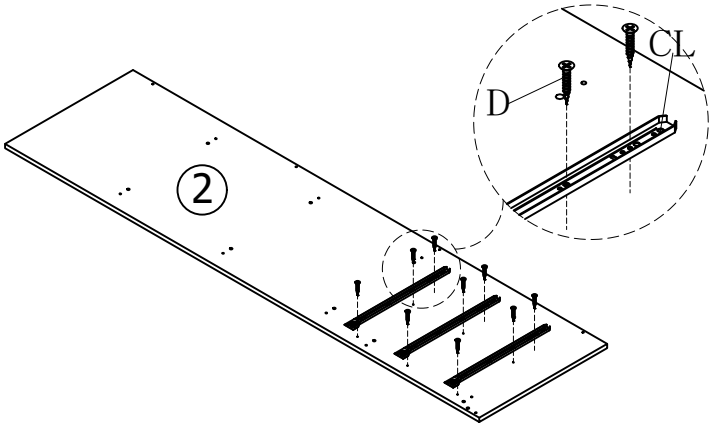

STEP 2

A x 5
B x 5
C x 3
D x 2
O x 1

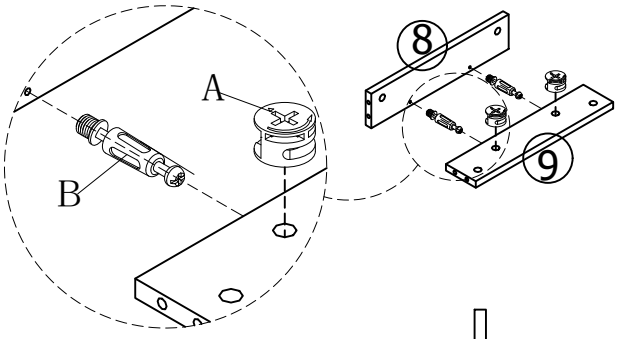

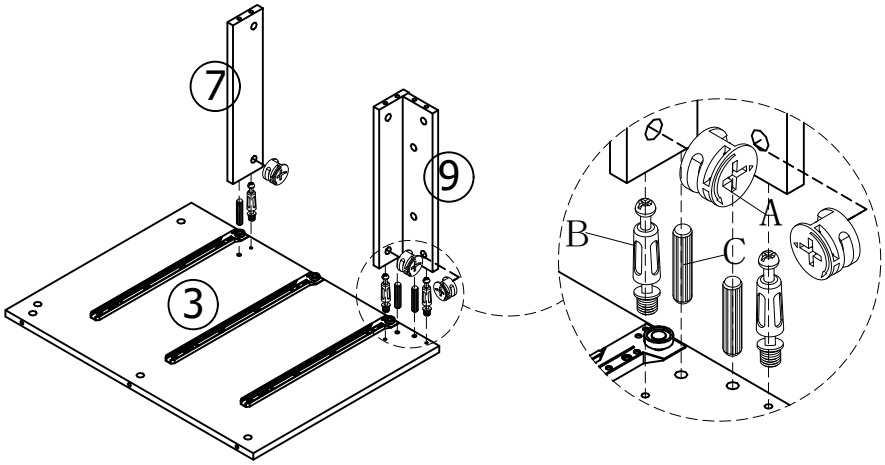

STEP 3

A x 2
B x 2
C x 2
D x 2
J x 1

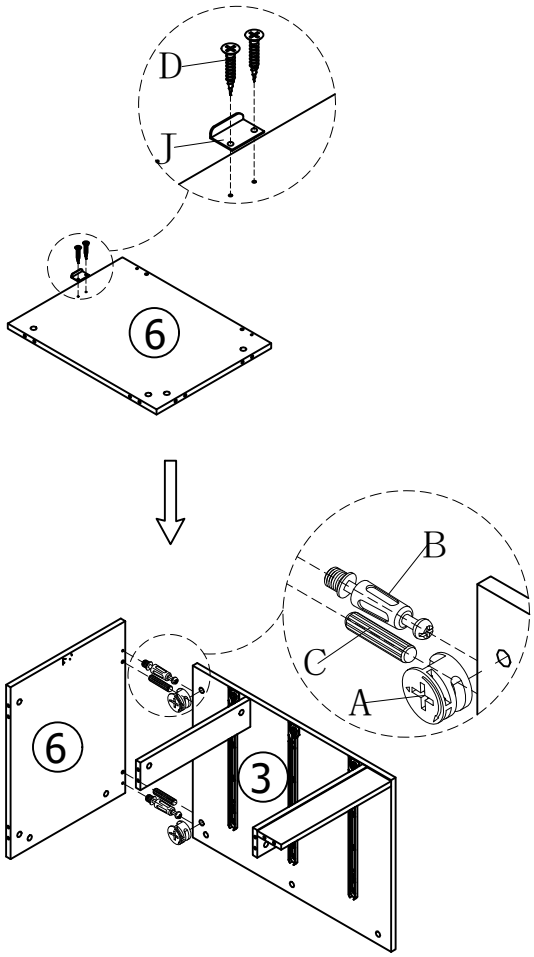

STEP 4

A x 9
B x 9
C x 6

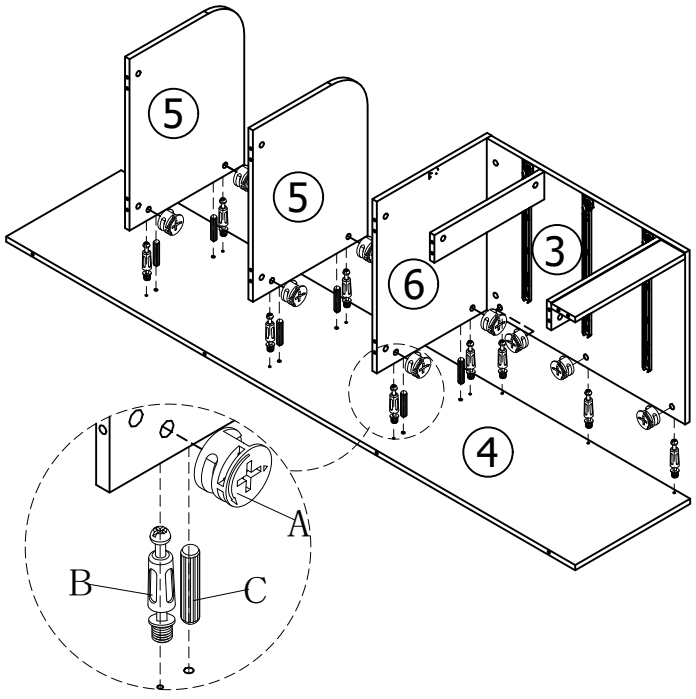

STEP 5

A x 13
B x 13
C x 9

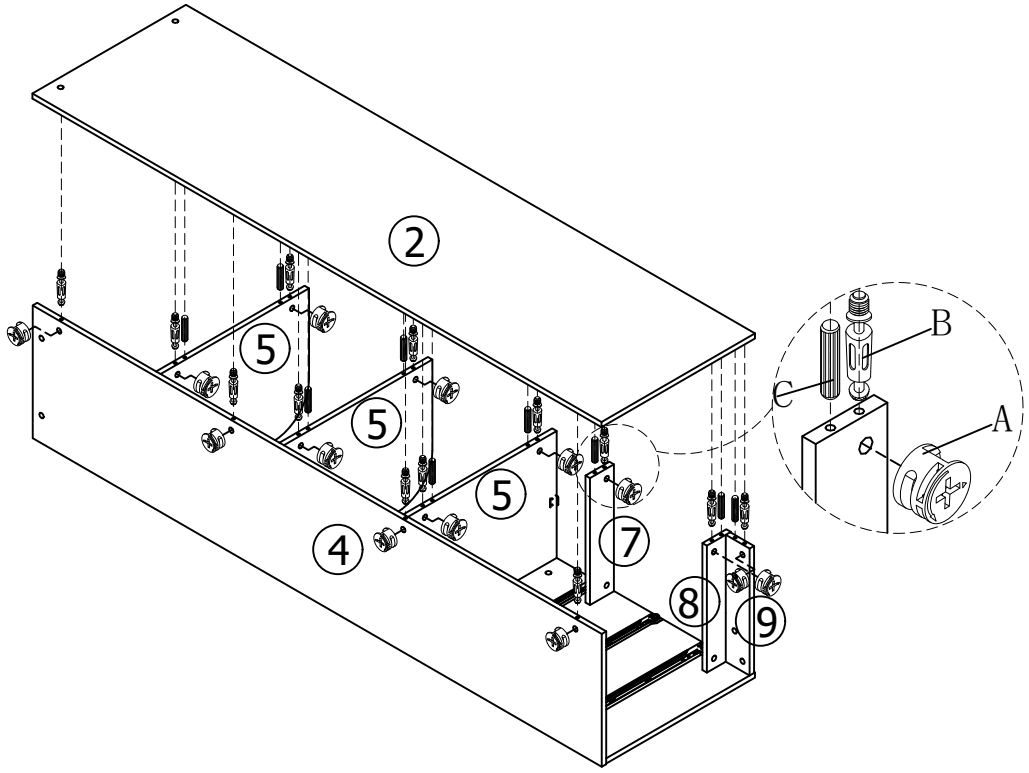

STEP 6

A x 4
B x 4
C x 2
F x 8

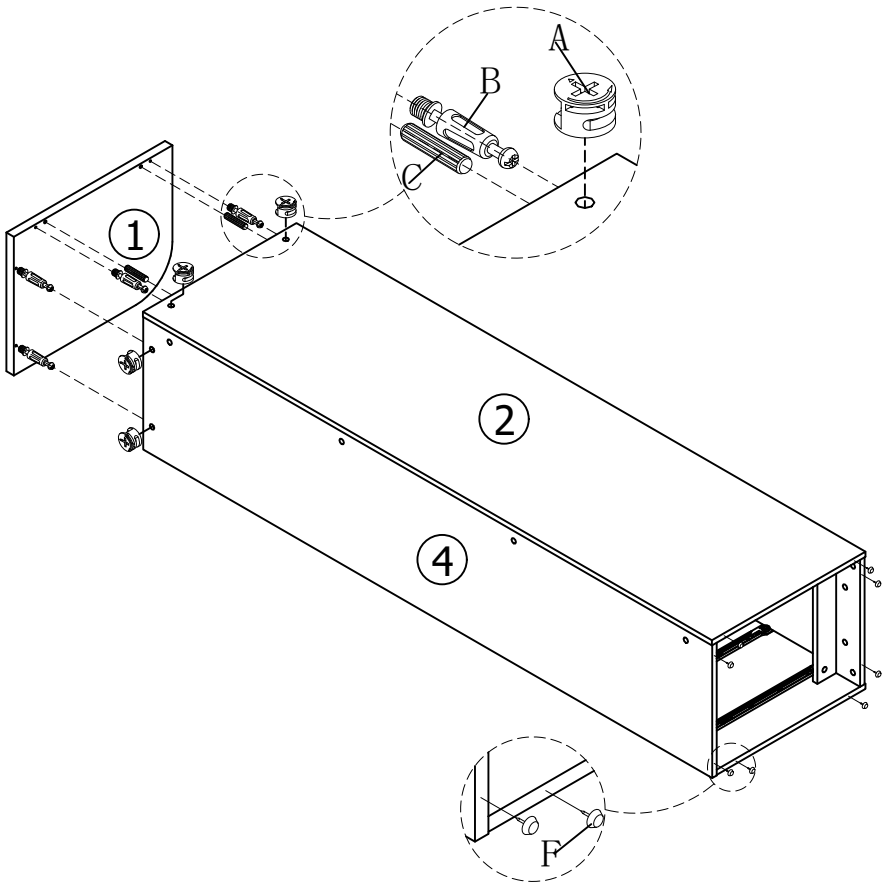

STEP 7

A x 12
B x 12
E x 12
K x 4
I x 1

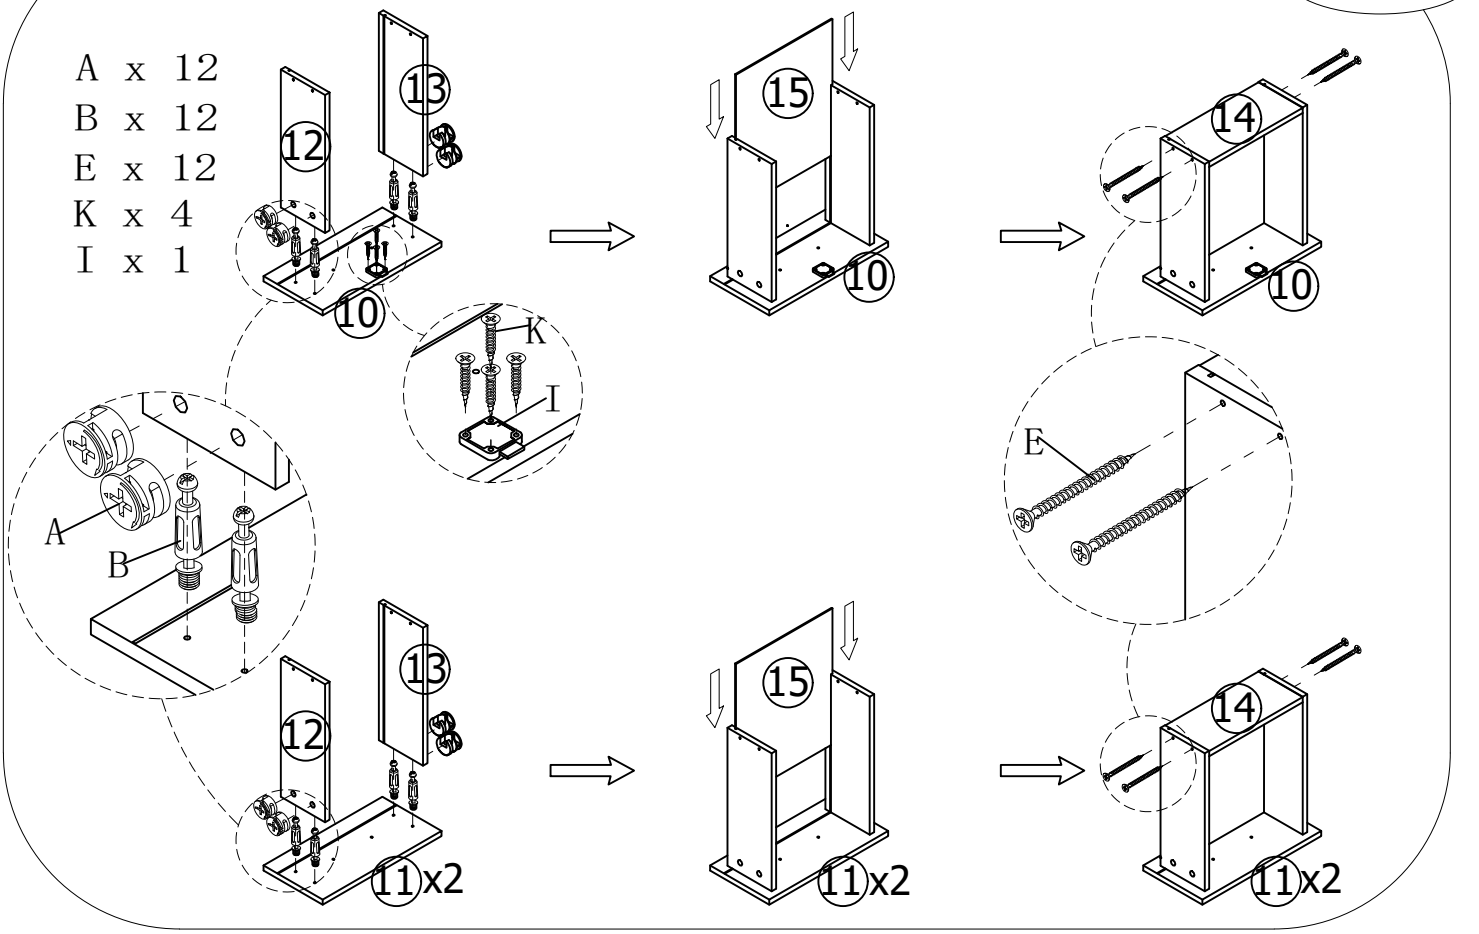

STEP 8

D x 18
G x 6
H x 3
DL x 3
DR x 3

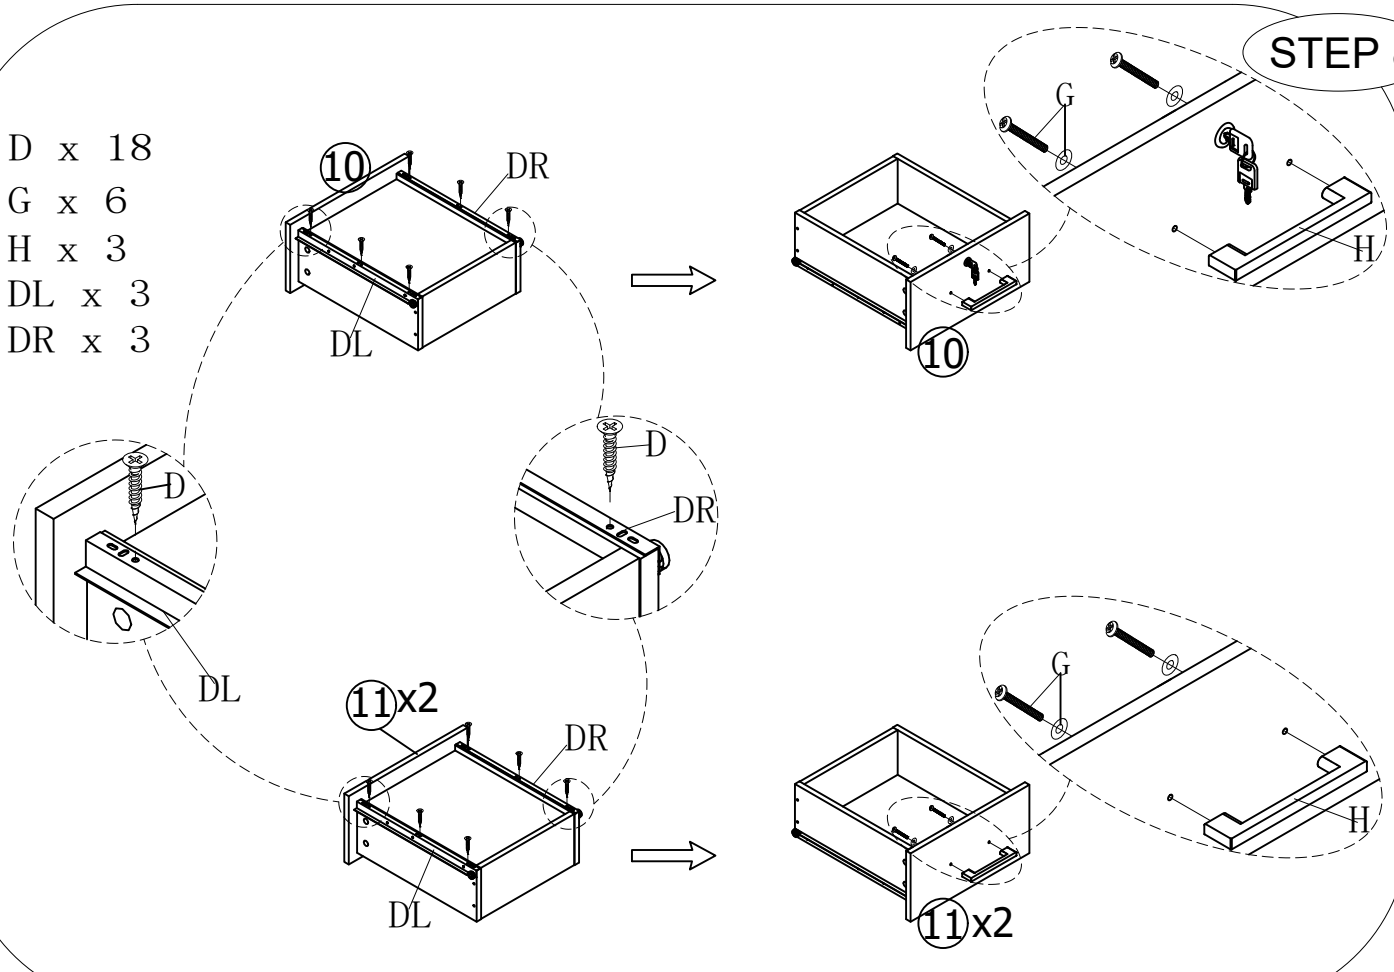

STEP 9

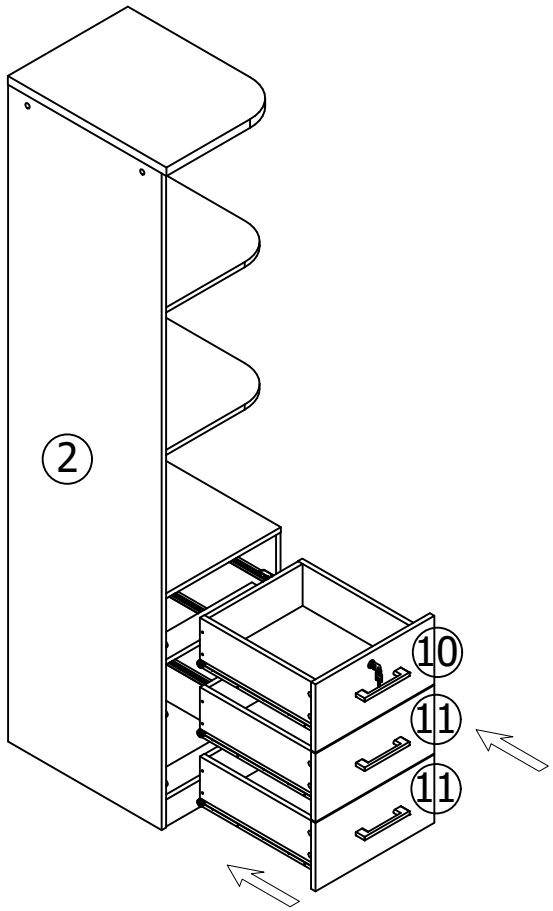

STEP 10

7

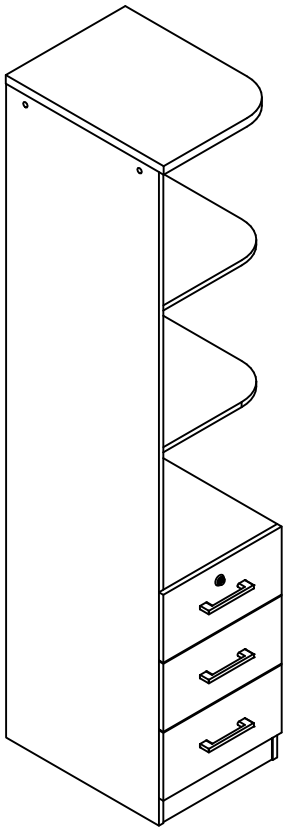

FINISH