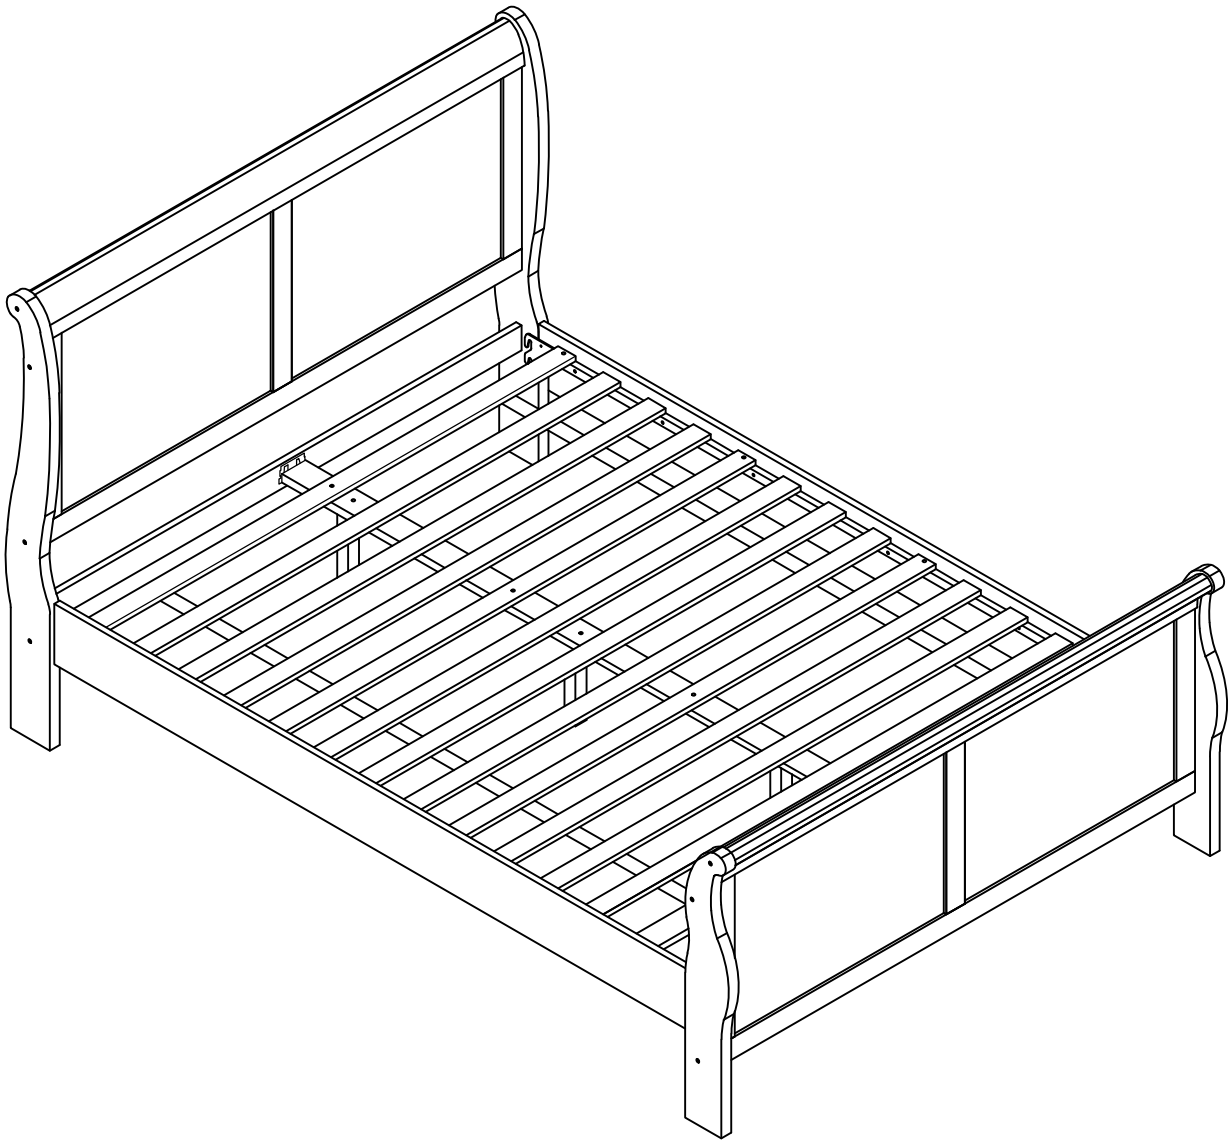


ASSEMBLY INSTRUCTION

MODEL : #918-067/ 918-072 QUEEN BED

1



SAFETY WARNINGS



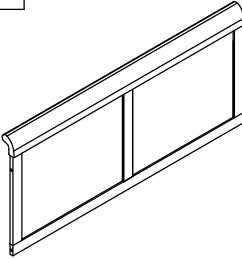
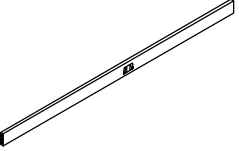


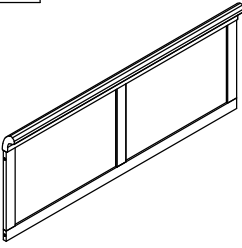
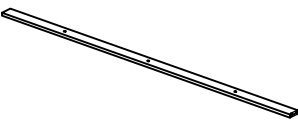
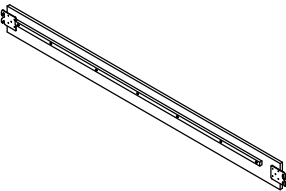

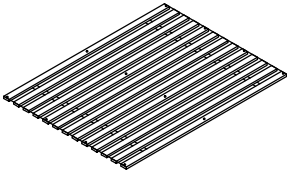
1. Follow the information on the warning label appearing on the upper bunk end structure and on the carton... Do not remove warning label from bed.
2. Always use the recommended size mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
3. Surface of mattress must be at least 5 inches below the upper edge of guard rails.
4. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
5. Do not use substitute part. Contact the manufacturer or dealer for replacement part.
6. The use of water or sleep flotation mattresses is prohibited.
7. Keep these instruction for future reference.
8. Strangulation Hazard - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed, for example, but not limited to hooks, belts and jump rores.

ASSEMBLY INSTRUCTION

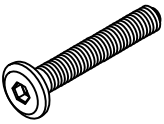








MODEL : #918-067/ 918-072 QUEEN BED

2

PARTS LIST & ILLUSTRATION

Box 1	1		2		3		4	
		left leg (headboard) 1pc		Right leg (headboard) 1pc		Headboard panel 1pc		Support bar 1pc
Box 1	5		6		7			
		left leg (footboard) 1pc		Right leg (footboard) 1pc		Footboard panel 1pc		
Box 2	8		9		10		11	
		Support Bar 1pc		Side rails 2pcs		Support legs 3 pcs		

HARDWARE & ILLUSTRATION

A		B		C		D		E	
	Ø13 x1/4 x 35 mm Allen bolts 10 pcs		Ø1/4" Lock Washer 10 pcs		Ø5/16" x L20 mm Allen Head bolts 8pcs		Ø5/16" Flat Washer 8 pcs		Ø5/16" Lock Washer 8 pcs
F		I		K		L			
	Allen Key 1pc		Ø16mm Wooden Plugs 14Pcs		Ø4 x 30 mm Wood Screws 16 pcs		Ø8 x 30 mm Wood dowel 4pcs		

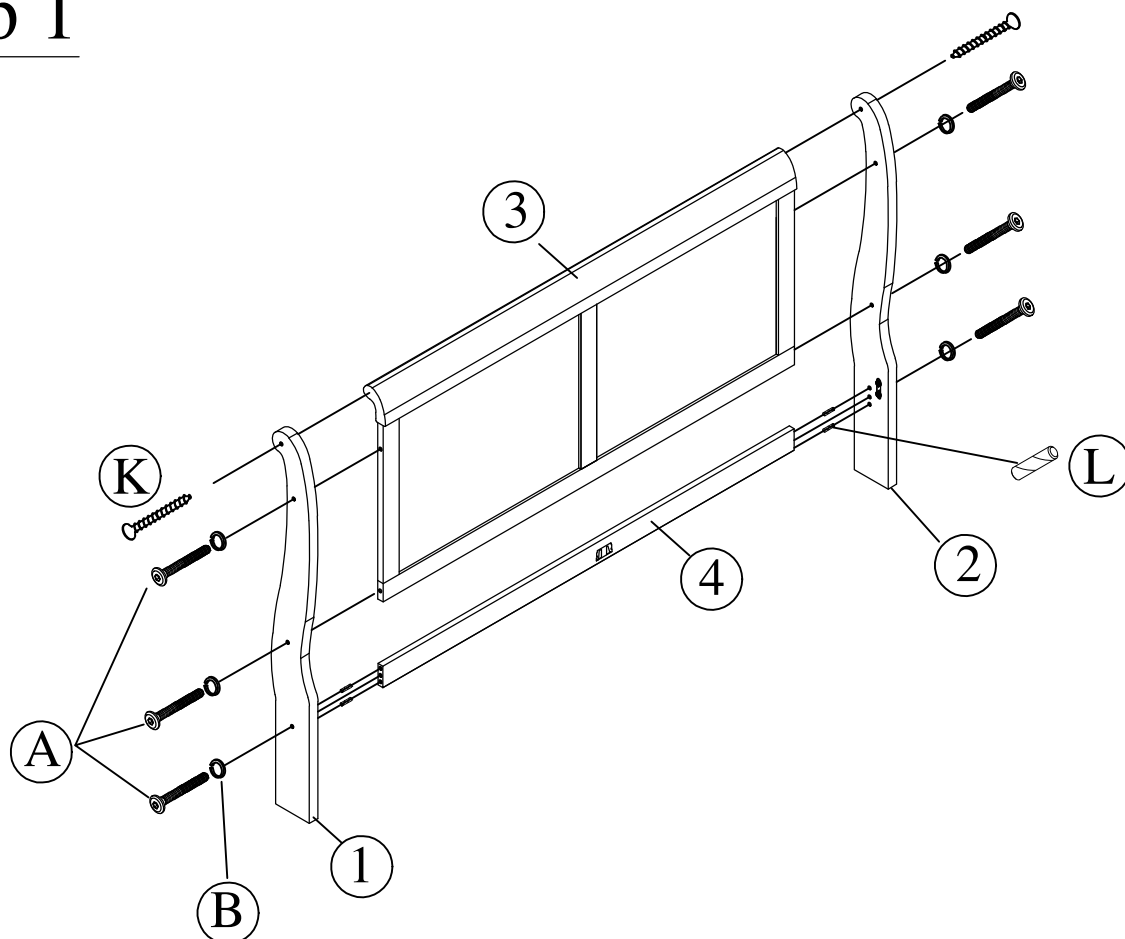
ASSEMBLY INSTRUCTION

MODEL : #918-067/ 918-072 QUEEN BED


3

RE-TIGHTEN ALL BOLTS FOR A SNUG FIT. DO NOT OVER TIGHTEN.

Step 1



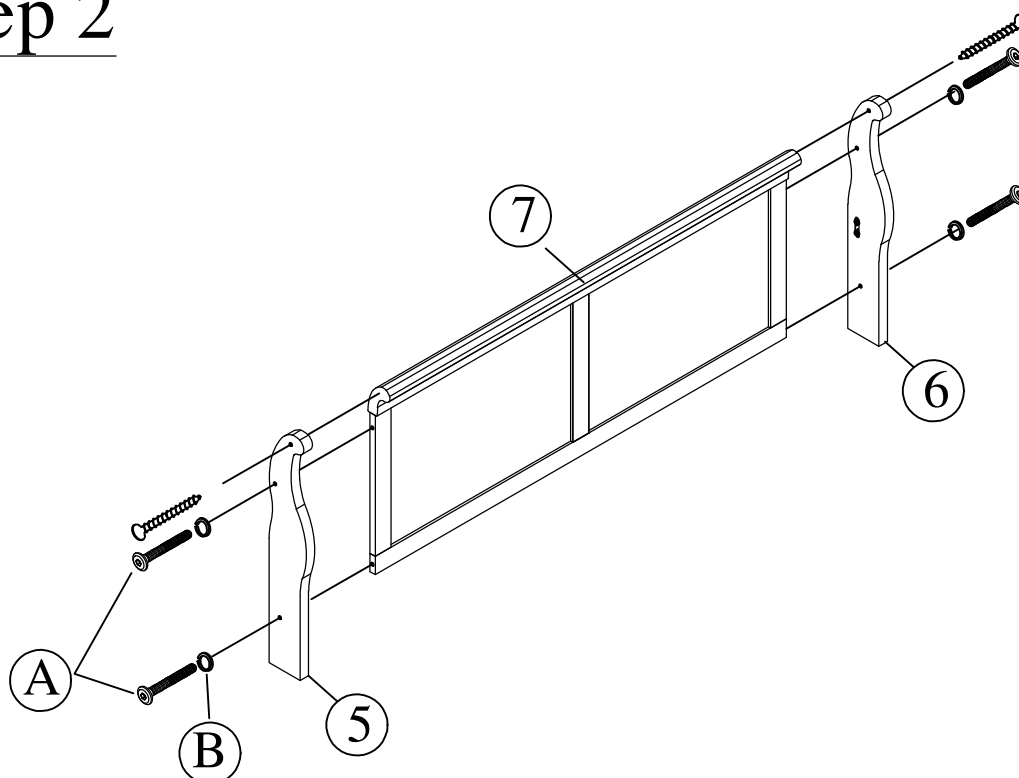
Step 2




ASSEMBLY INSTRUCTION
MODEL : #918-067/ 918-072 QUEEN BED

4

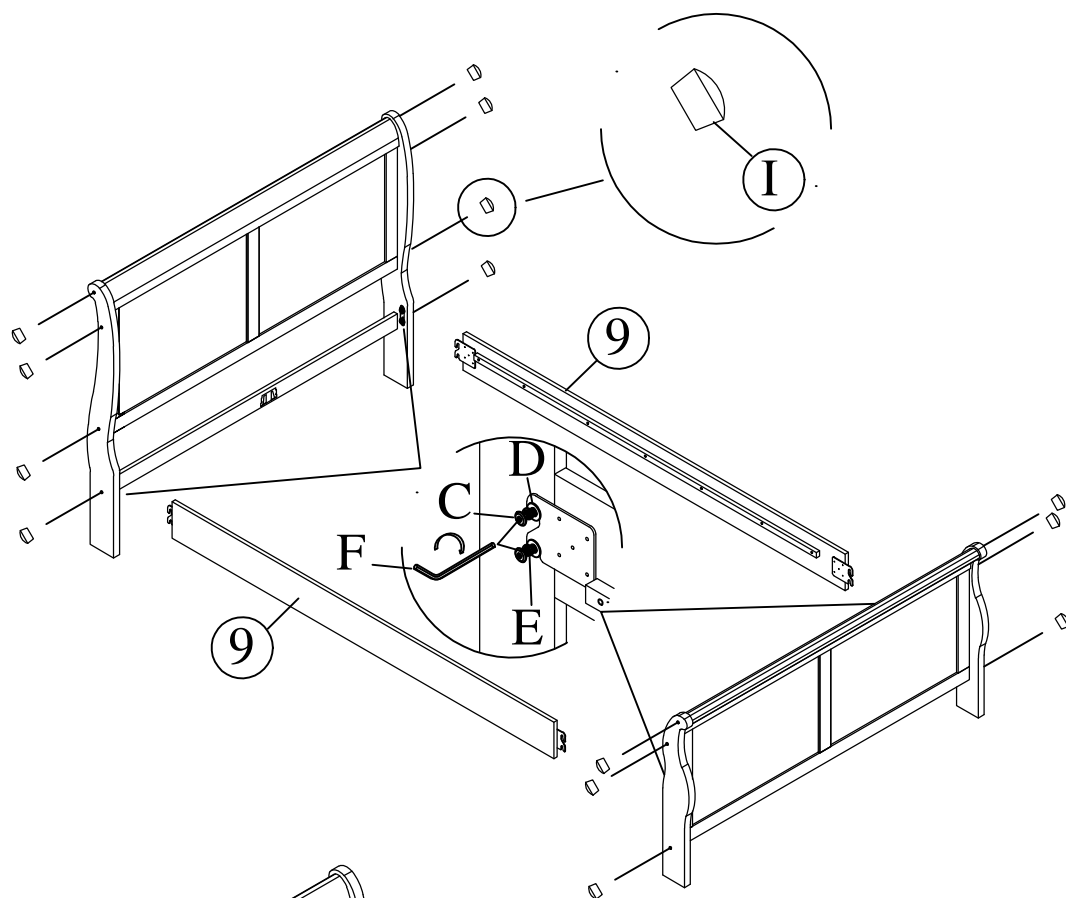Step 3



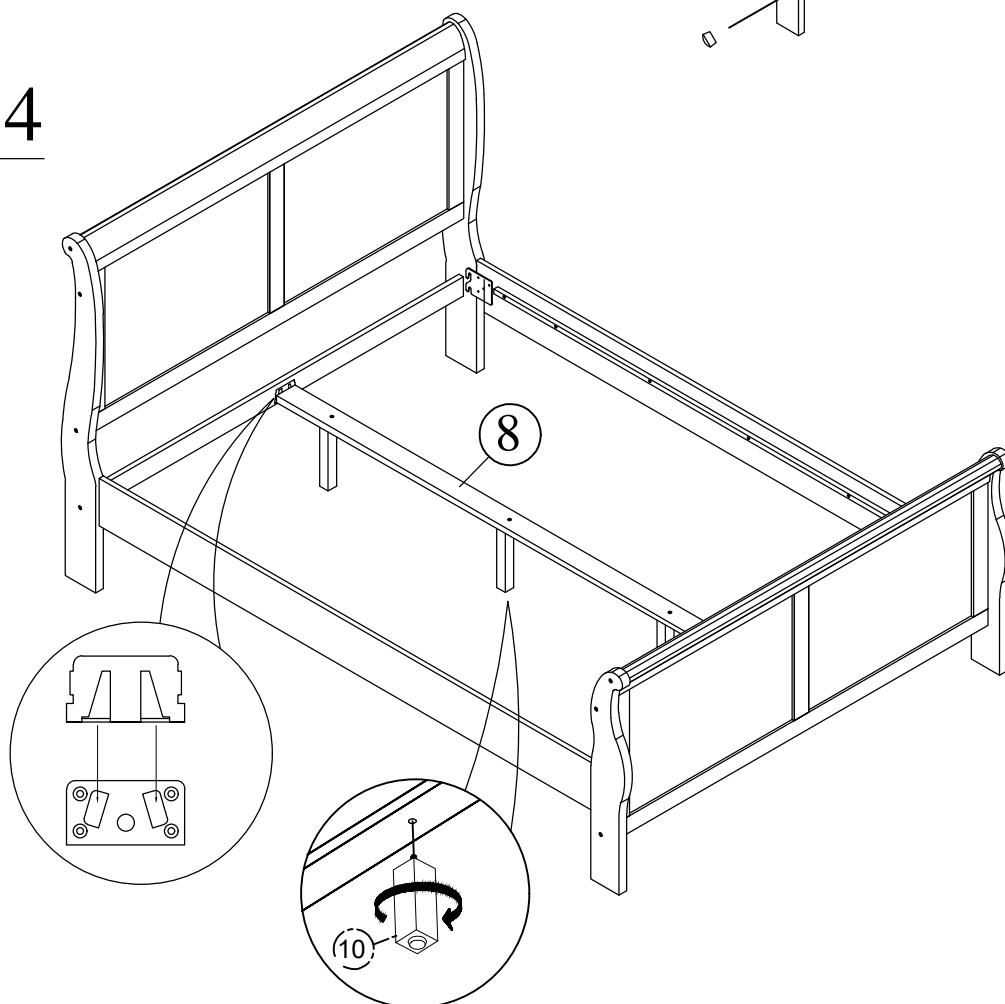
Step 4



ASSEMBLY INSTRUCTION
MODEL : #918-067/ 918-072 QUEEN BED

5

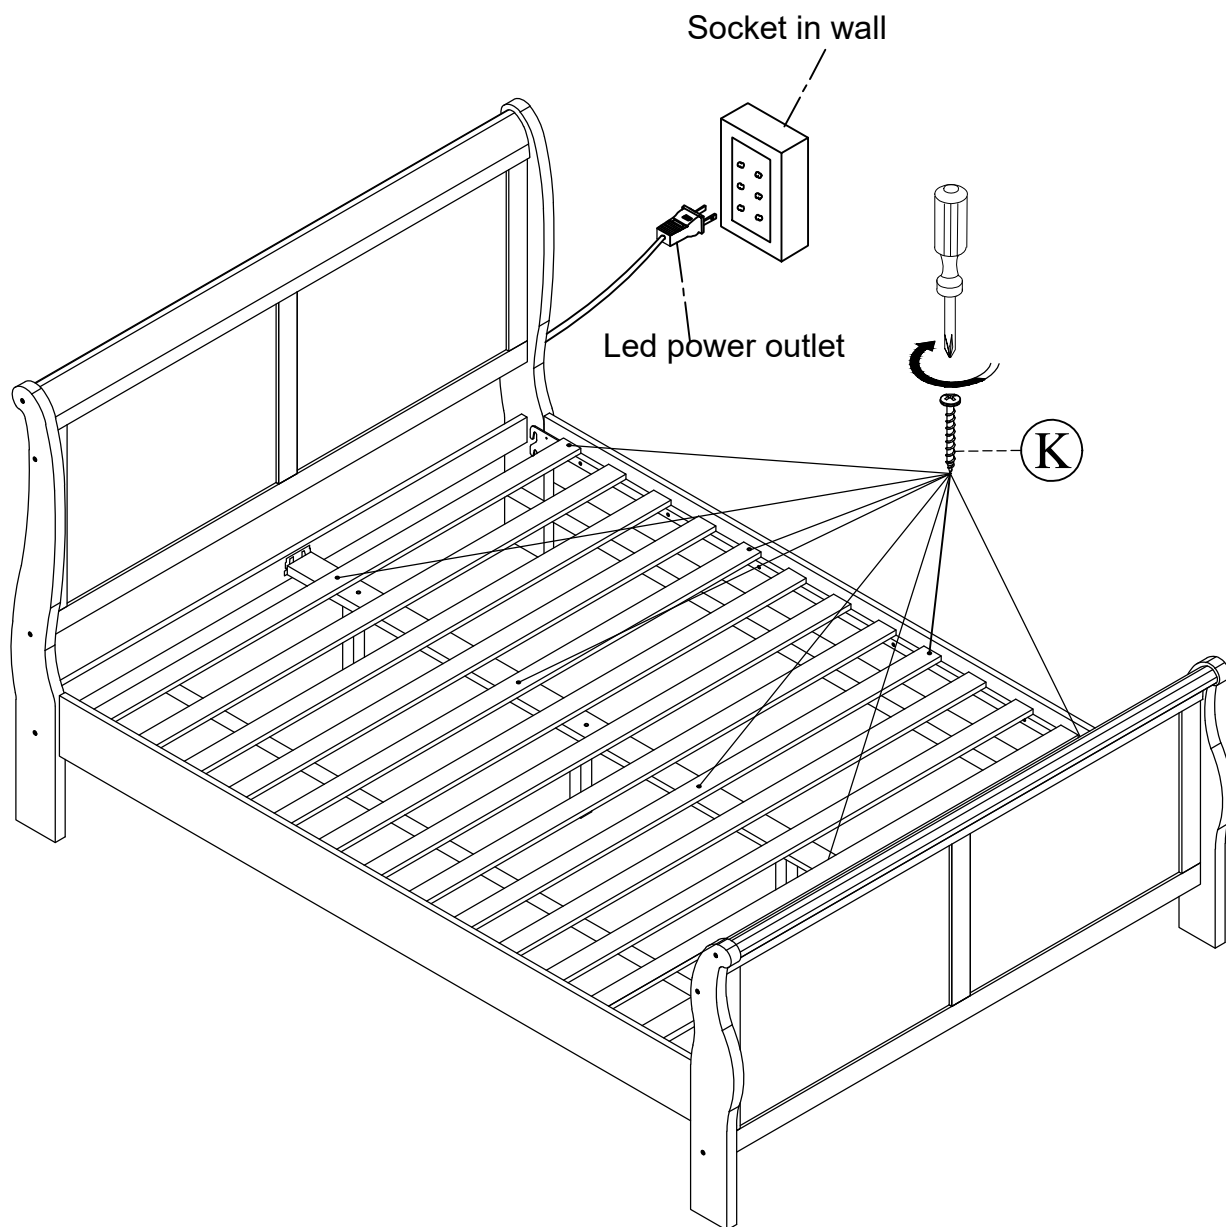Step 5



ASSEMBLY IS NOW COMPLETED AND THANKS FOR YOUR PURCHASE
Made in VIETNAM