




STEP2:Screw the glue foot clockwise into the hole at the bottom of the sofa.

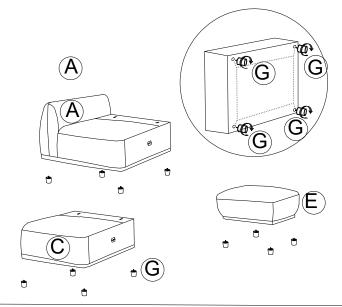


STEP4:Turn the connector screw clockwise into the black fitting on the right side of the sofa.

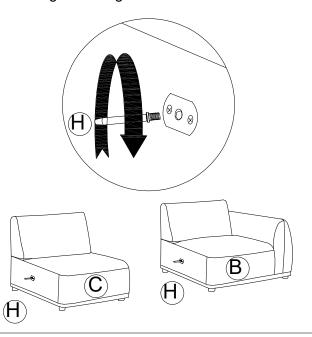

STEP3:Insert the backrest into the sofa seat.

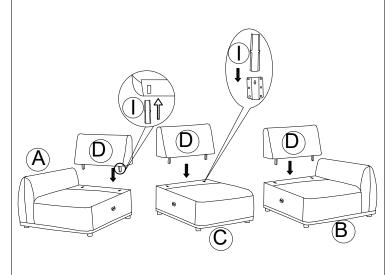

STEP5: Connect the sofas as shown.

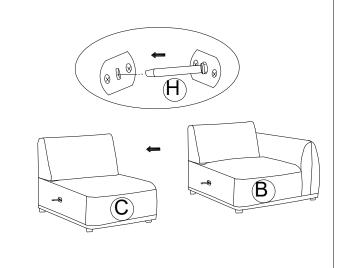

STEP6:Put the four pillows on.

Complete