



| | | |
|--------------|--------------------|---------------|
| SKU.NO. | 154.234.01 | USSURI OAK |
| PRODUCT NAME | RENO TALLBOY WHITE | |

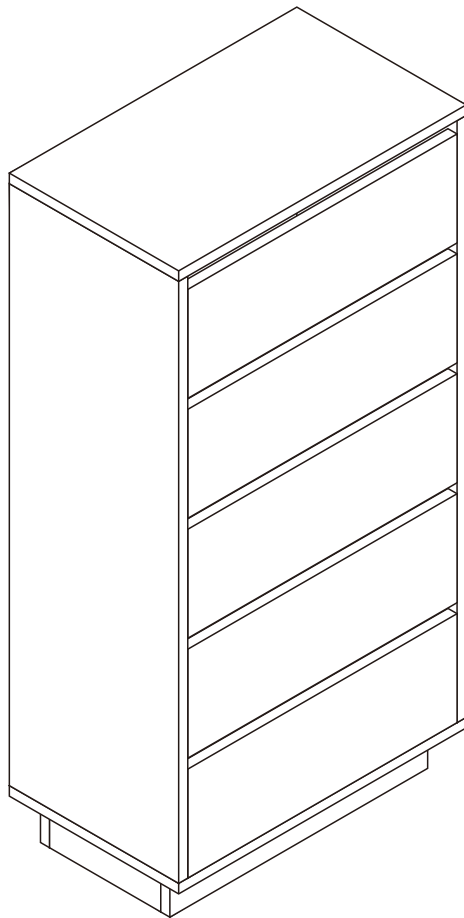


1. Identify the parts which make up your piece of furniture.
 2. Gather the hardware parts and count them.
 3. Have the necessary assembly tools ready.
 4. Organize a space for assembly, wall carpeting or a blanket will protect the furniture against scratches.
 5. Never force the assembling while you put the parts together. You are recommended to tighten the screws after the furniture has been used for some time.
 6. After assembling this product, it is advisable to regularly ventilate the room for a few days.
- KEEP THE ASSEMBLY INSTRUCTION. THE RELEVANT INFORMATION YOU CAN FIND ON IT WILL HELP YOU GET IN TOUCH WITH YOUR STORE IF A PART WAS TO BE MISSING.

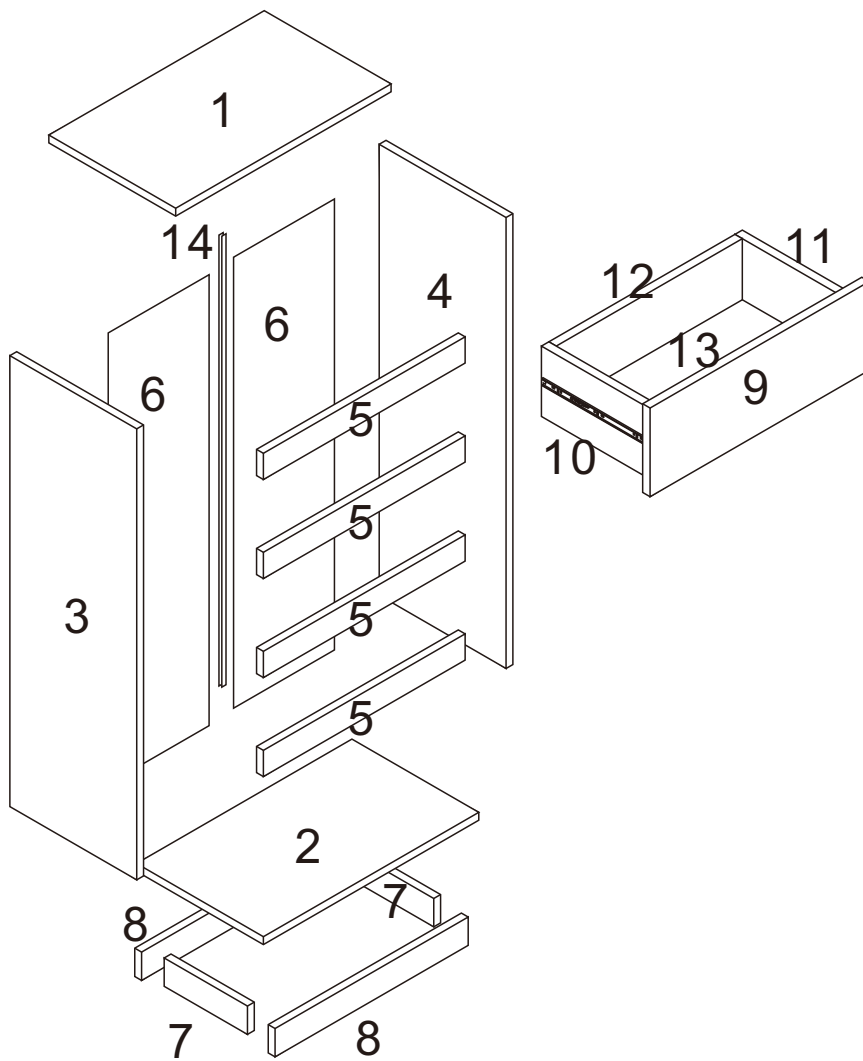

| NO. | Size | Qty |
|-----|----------|-----|
| 1 | 750x40 | 1 |
| 2 | 750x40 | 1 |
| 3 | 1131x398 | 1 |
| 4 | 1131x398 | 1 |
| 5 | 716x60 | 4 |
| 6 | 1141x362 | 2 |
| 7 | 304x70 | 2 |
| 8 | 670x70 | 2 |
| 9 | 710x200 | 5 |
| 10 | 350x146 | 5 |
| 11 | 350x146 | 5 |
| 12 | 659x146 | 5 |
| 13 | 699x344 | 5 |
| 14 | ABS | 1 |

| | | | | |
|----------------------------|---------------------------|----------------------------|----------------------------|----------------------------|
| A x48 | B x8 | C x42 | D x20 | E x10 |
| F x26 | G x1 | | | |




SET-UP TIME: 30 MINUTE



OUTILLAGE:
TOOLS:




NUMBER OF PERSONS: 02




screw driver or drill

1

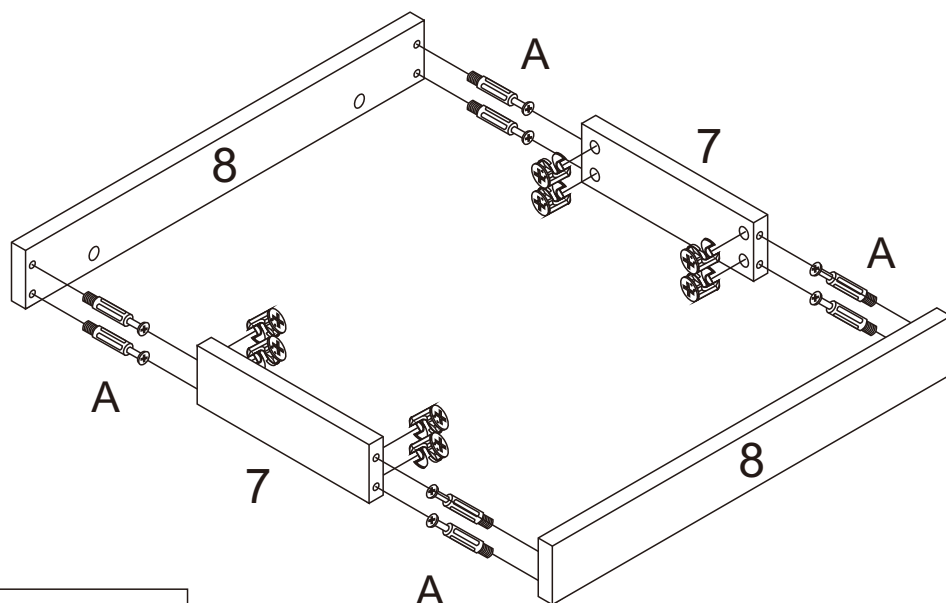


A




x8

2

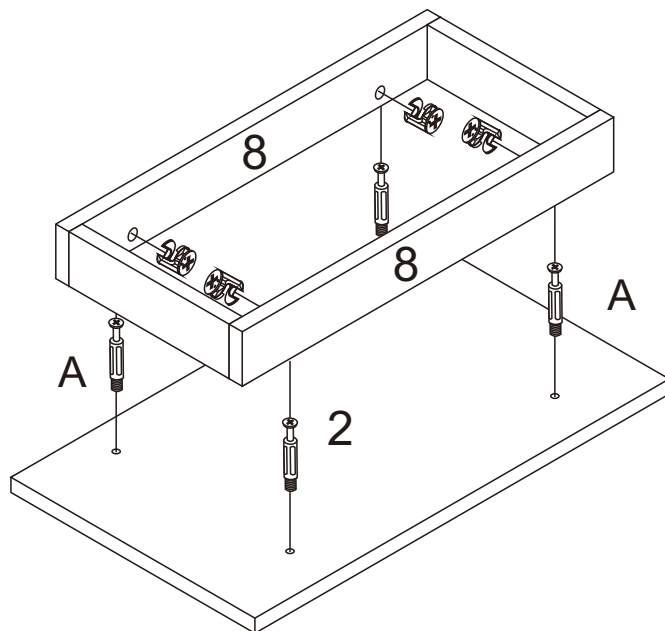


A



x4

3

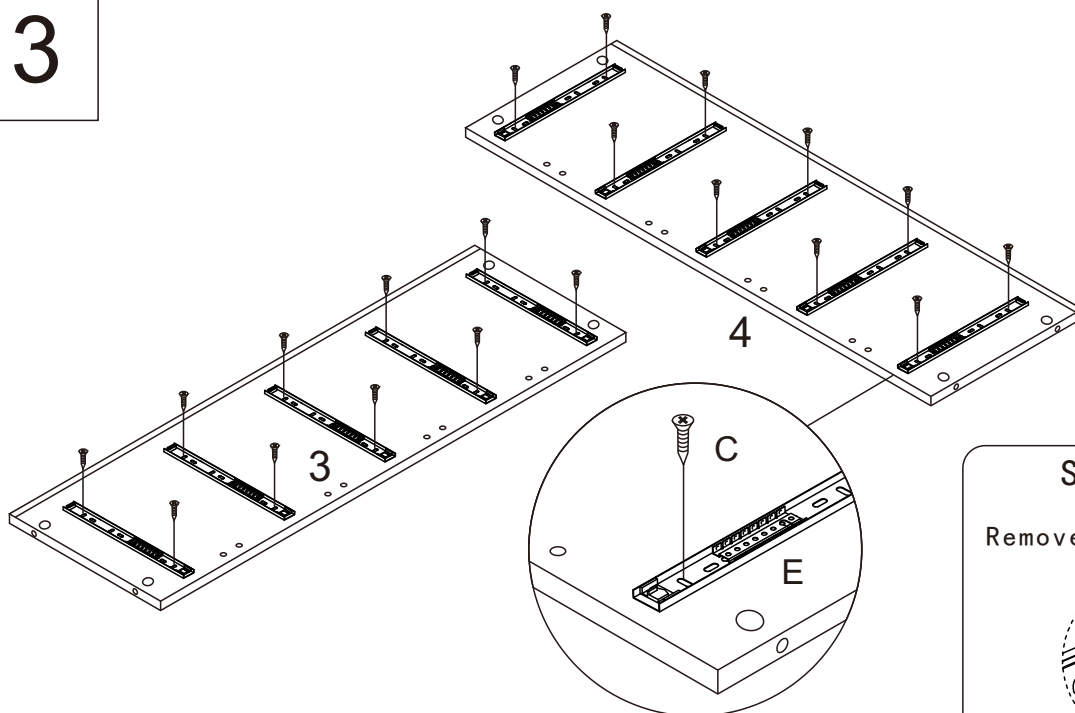


C



x20


E




x10

Slide instructions

Remove the control lock

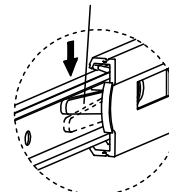


Fixed to side panel

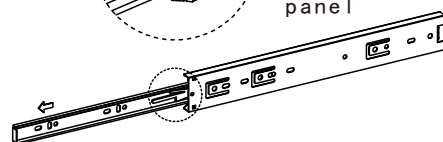


Fixed on the side of the drawer

4

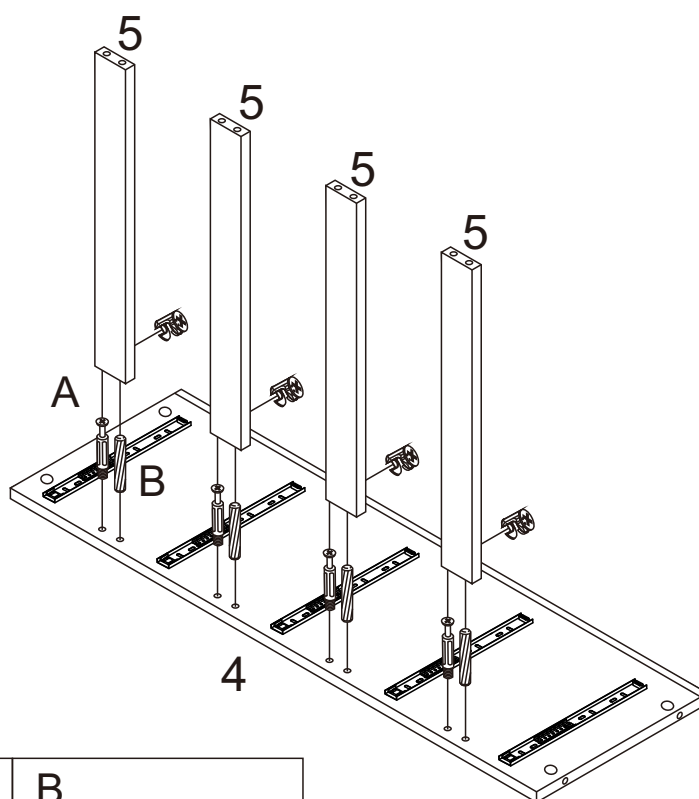

A




x4

B




x4

5

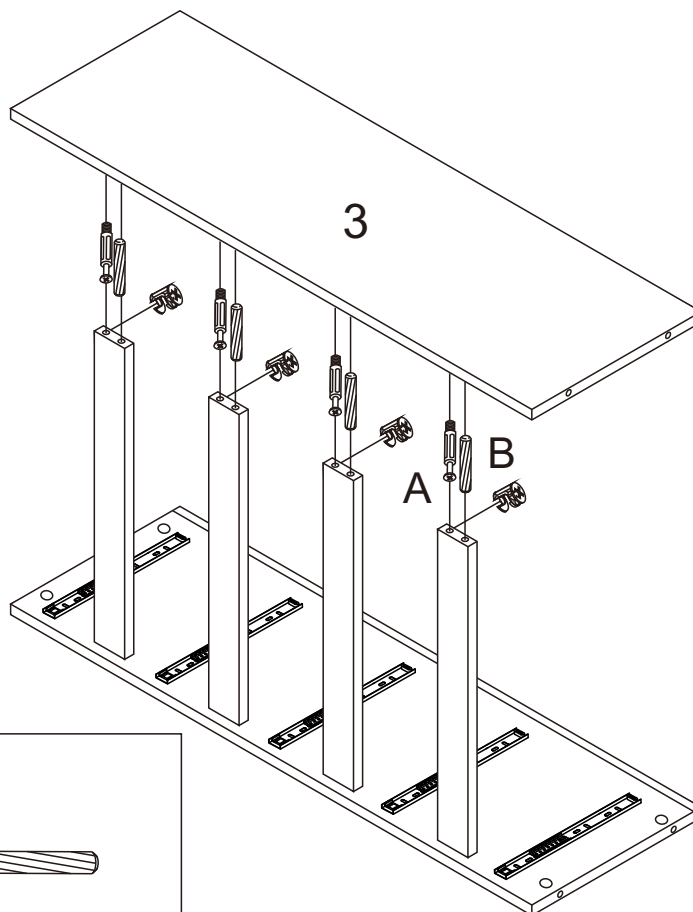

A




x4

B




x4

6

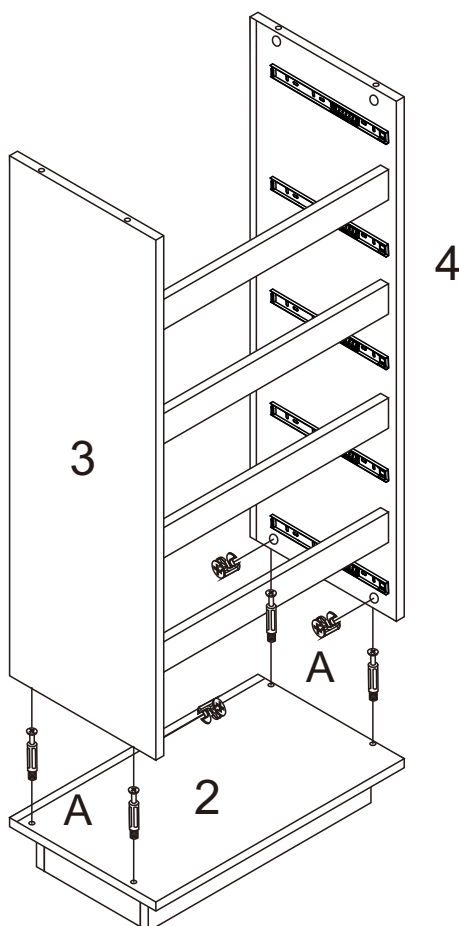


A




x4


7

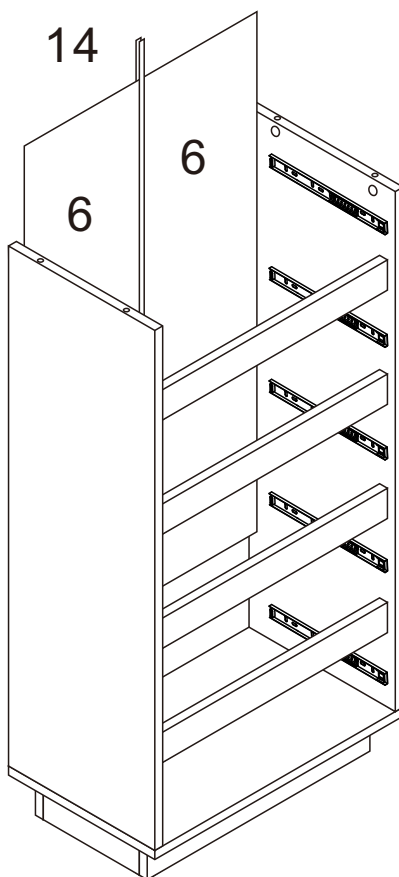

8



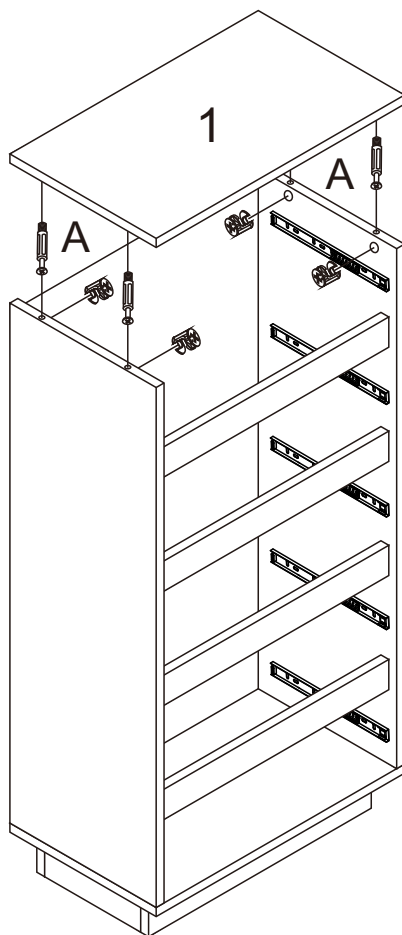


A




x4

9

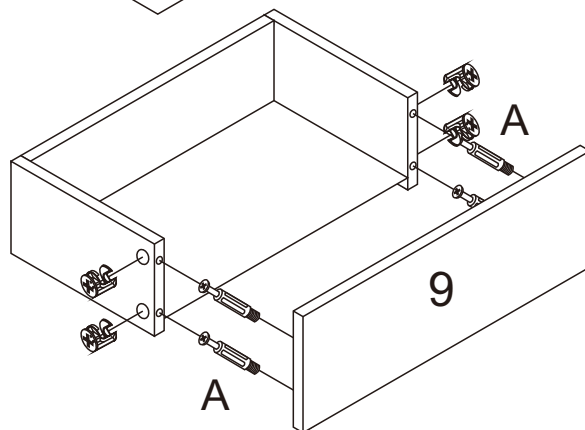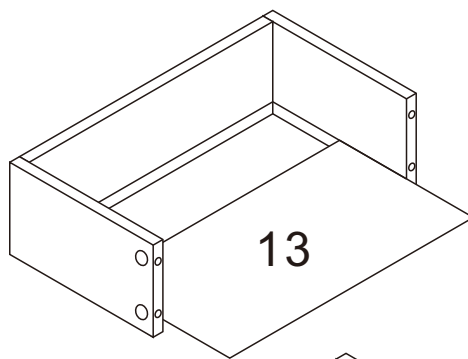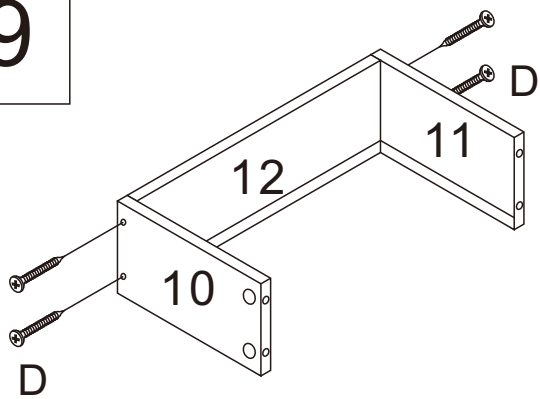

A



x20




D



x20

x5

10

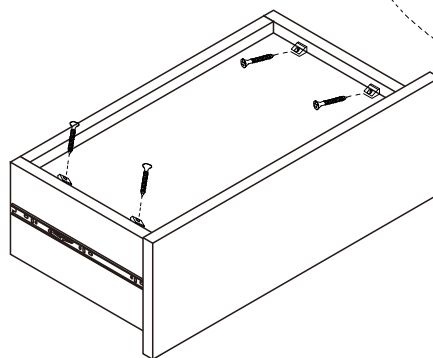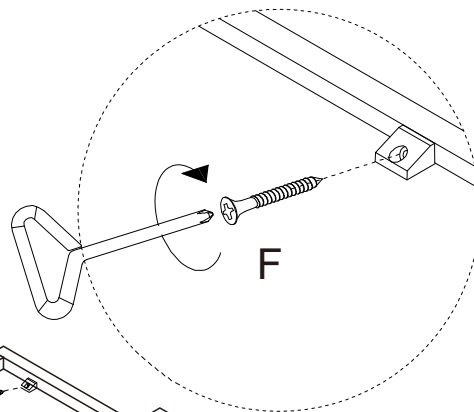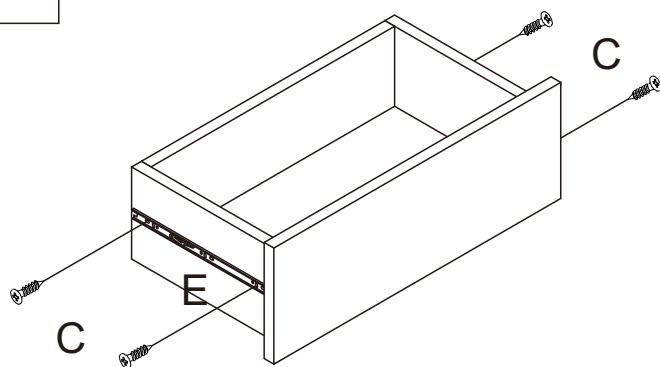

C



x20

E



x10



F



x20

x5

11

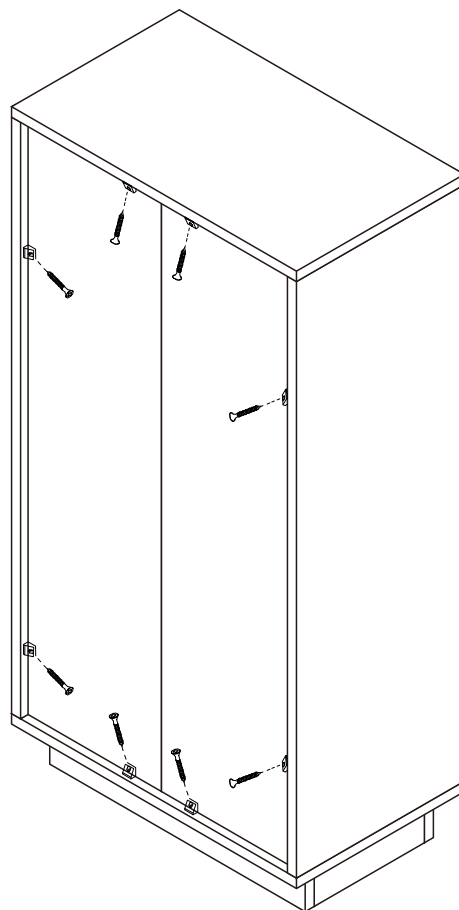
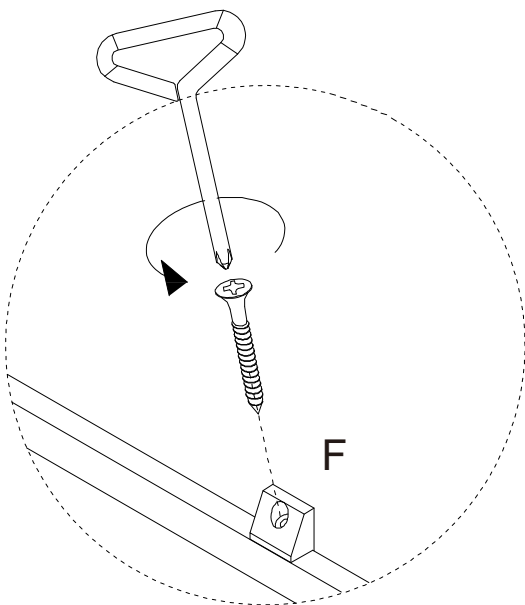


F






x8

12

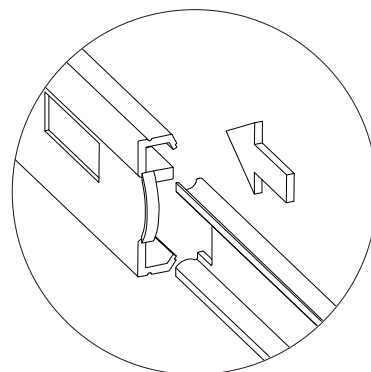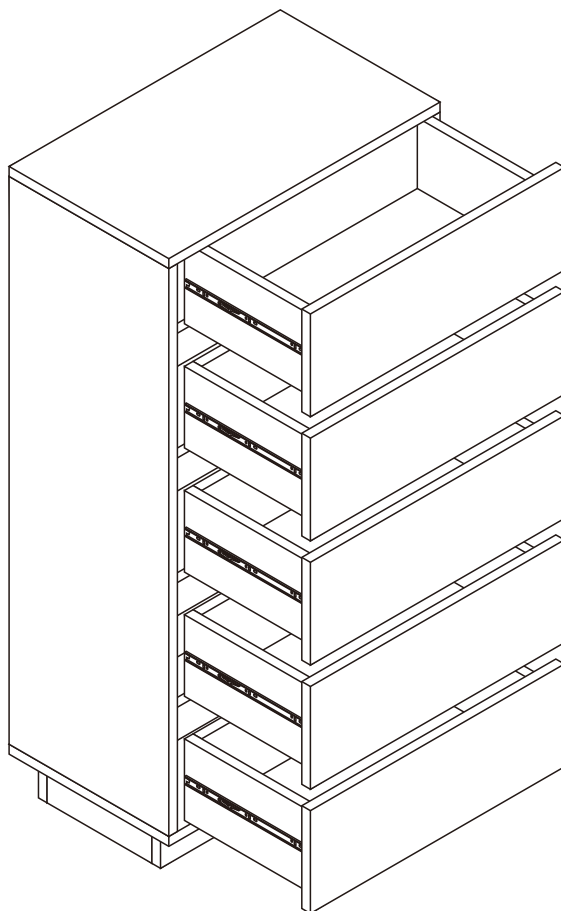

13

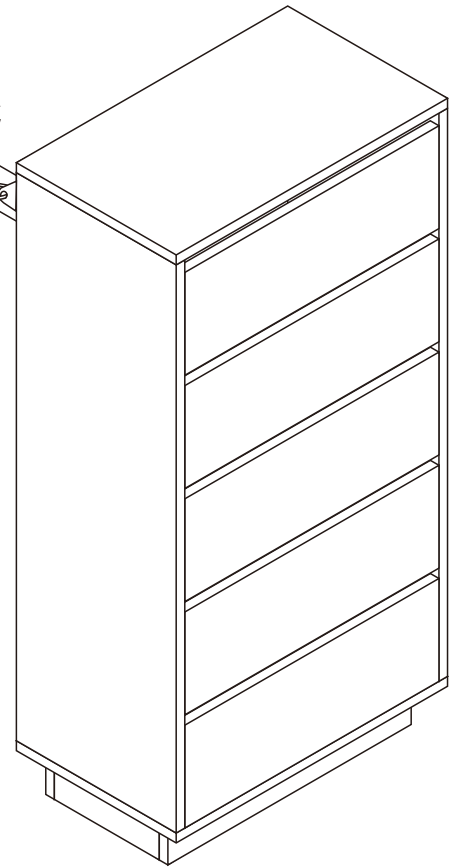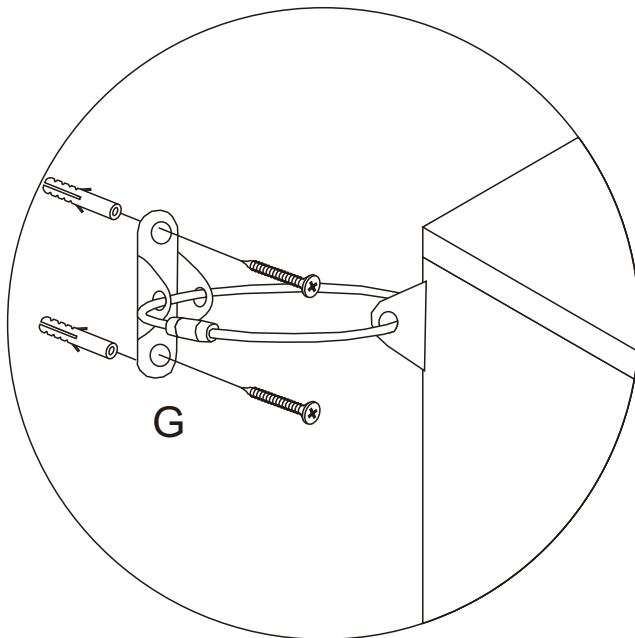



wall stripe need fix on the main frame,
not on the back panel

C



x2

G



x1

14

