
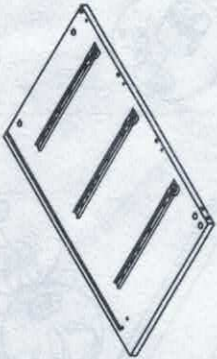
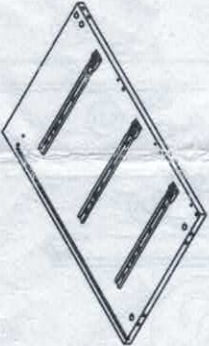
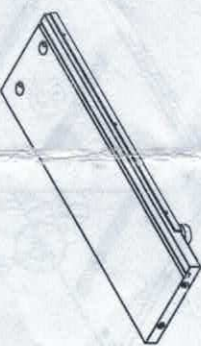
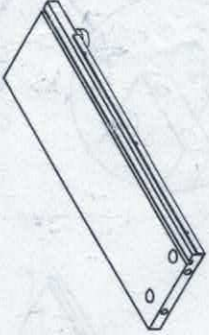
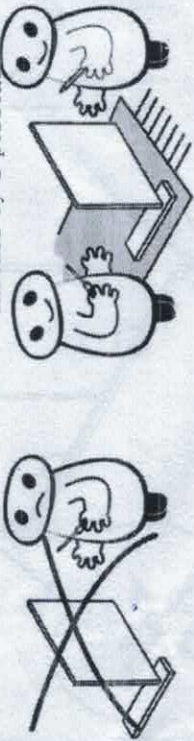



① Top Panel  1×	② Right top Panel  1×	③ Left top Panel  2×	④ Back Panel  1×	A. Dowel 12×  B. Cam Lock 28+2×  C. Cam Pin 28+1×  D. Cam Cover 28× 
⑤ Front baffle panel  3×	⑥ Drawer front panel  3×	⑦ Drawer right side panel  3×	⑧ Drawer Left side panel  3×	E. Long pitch self-tapping screw 12×  F. Back panel bracket 8×  G. Backboard strip 1×  H. Anti-pour hardware package 2× 
⑨ Drawer back panel  3×	⑩ bottom panel  3×	⑪ Brace  1×	⑫ Apron board  1×	I. Dual-purpose Screddriver 1× 
Install by 2 persons 				Model GF581-0807 Size 800W*480D*774H

Step 1


Attention: First of all, put a piece of carton or rug on the floor, and then begin to install the panels, so as to prevent the parts from scratch.

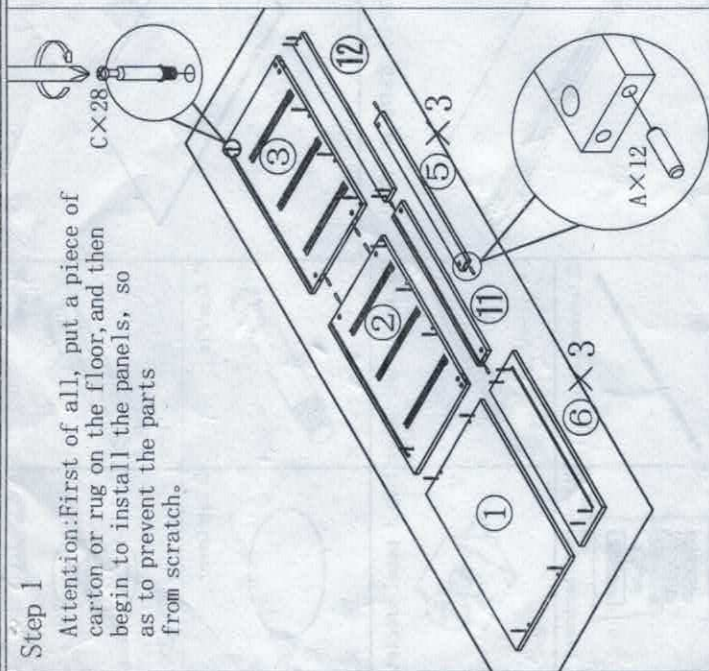

Step 2

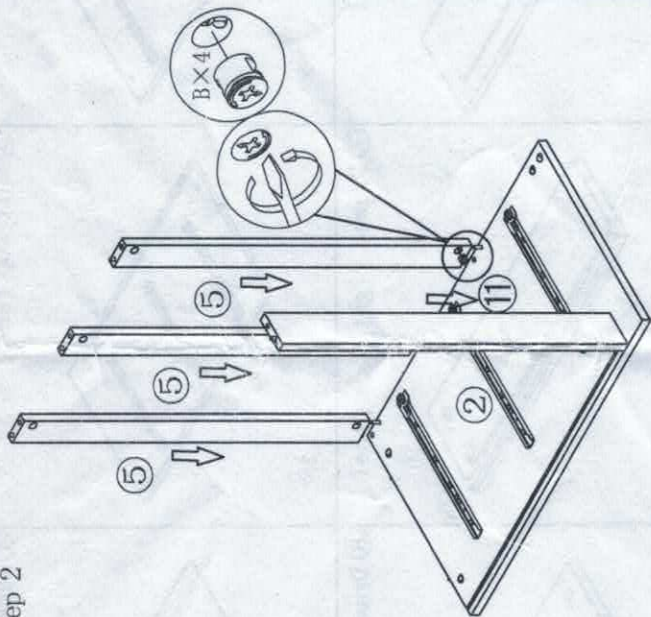


Step 3

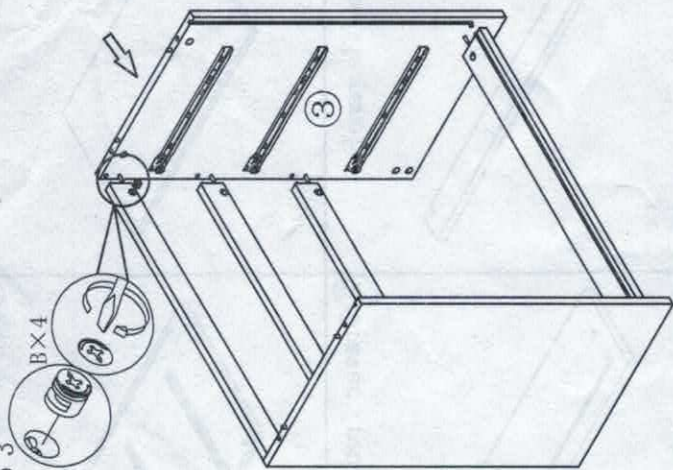


Step 4

Note: Both sides should be stuck into the backplane slot and pressed down slowly along it when installing the backplane. If there is an offset slot, use hard to press on both sides of the offset area until it is stuck into the backplane slot.

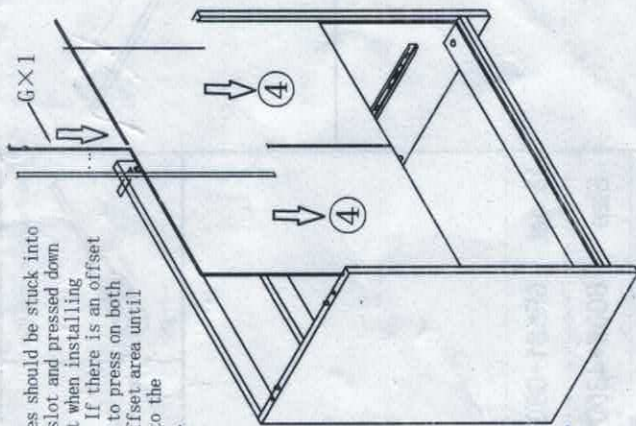


Step 5

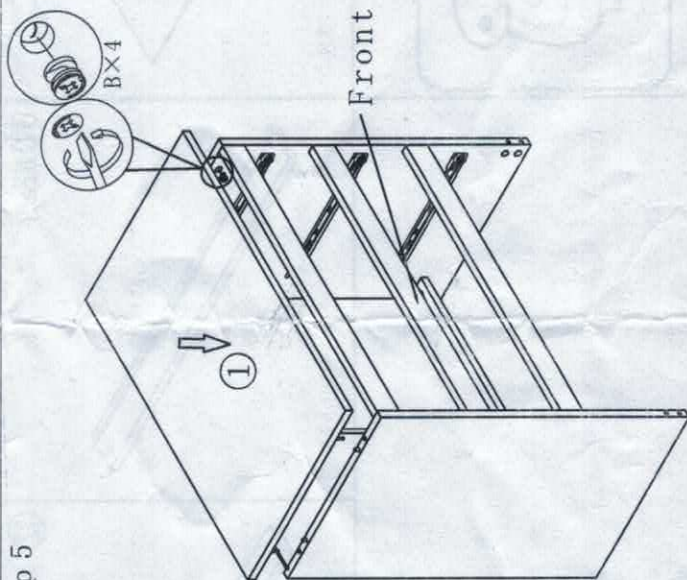


Step 6


Note: After installing the top panel, you can refer to the drawing of the circle on the diagram when installing the back panel bracket, there is no accurate hole position.

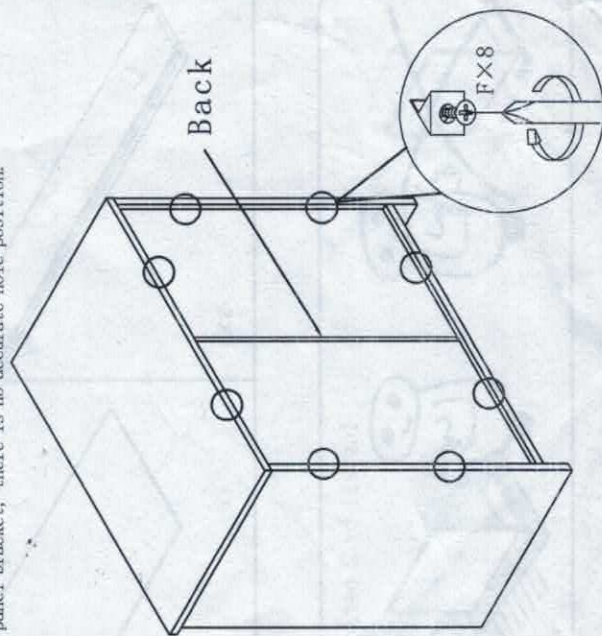


Step 7

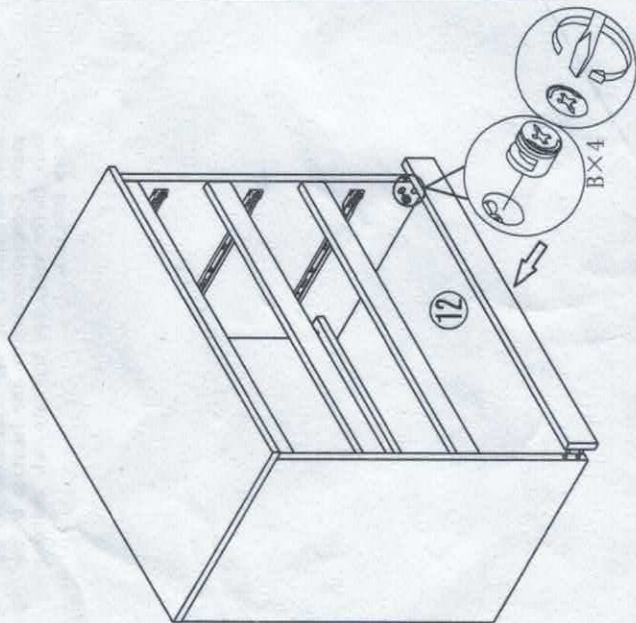


Step 8

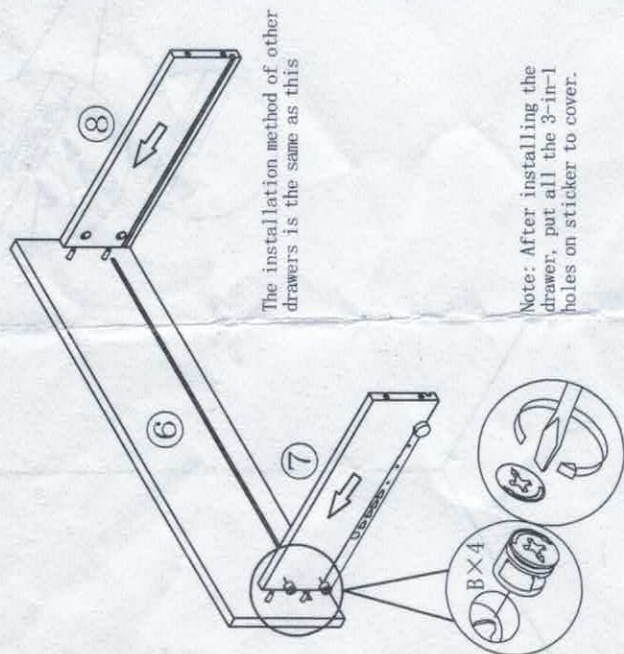


Step 9

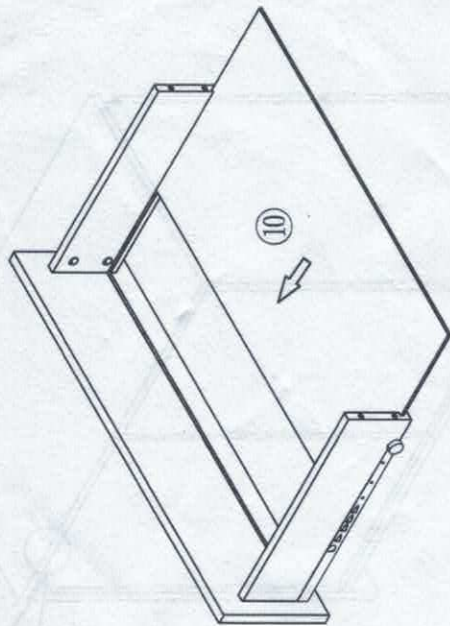

Step 10

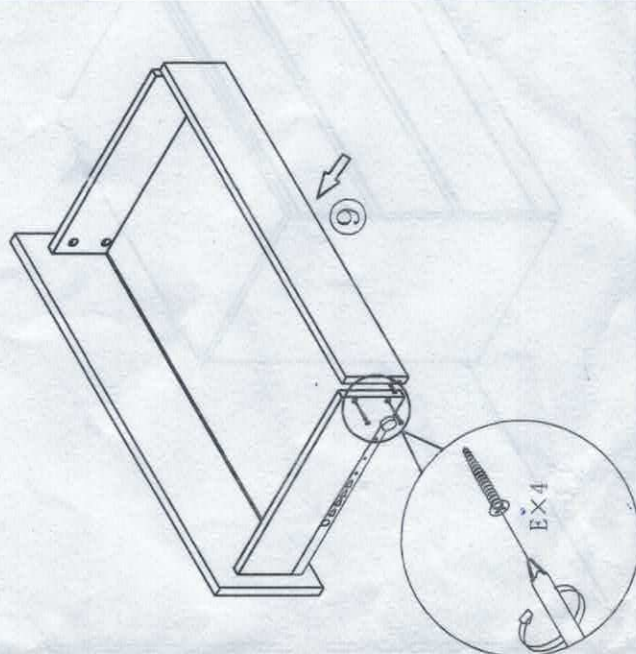


Step 11

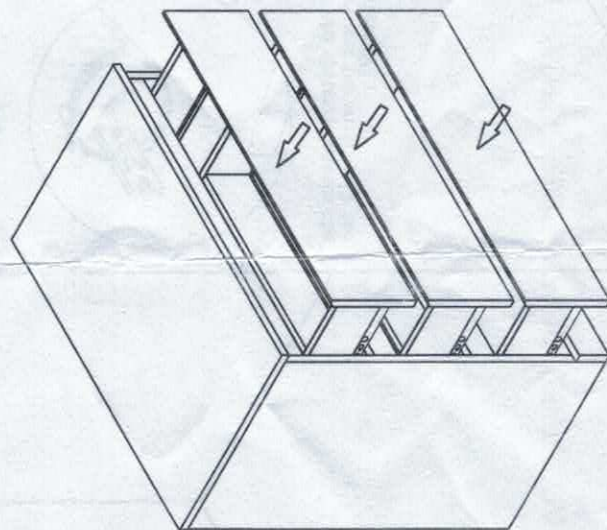


Step 12

Open K (anti-pour hardware package) 2X (the following is the number of single package) in-1 holes on sticker to cover.

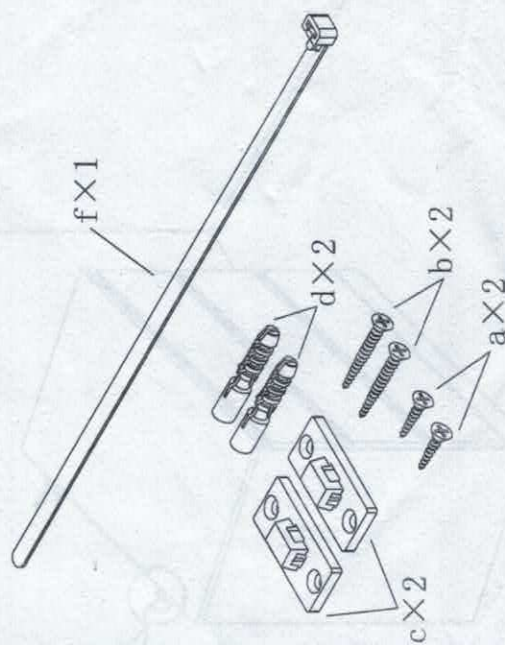

Step 13

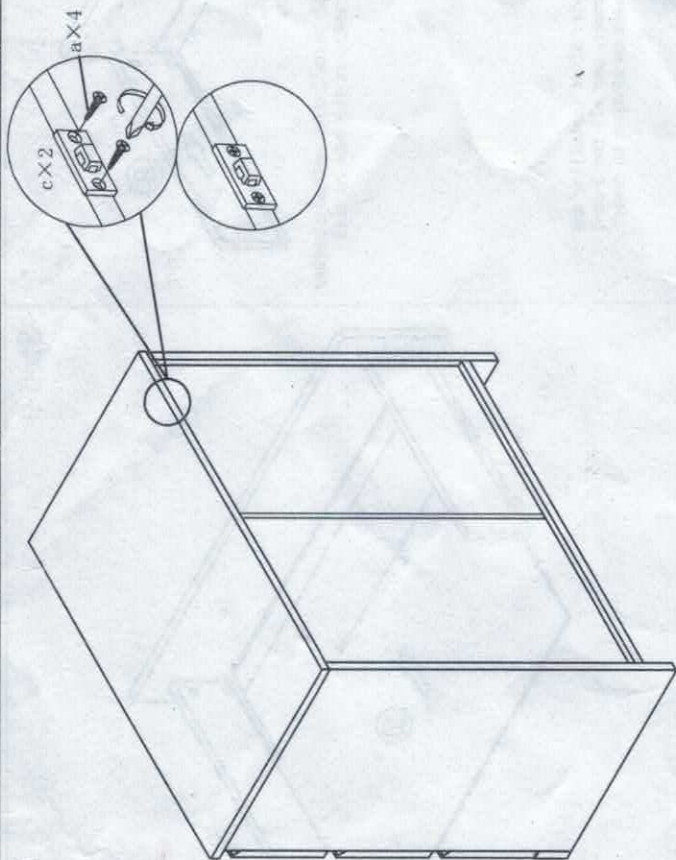


Step 14

Note: According to the installation in the top plate C corresponding to the location of the hole in the wall, and tap into dx4, and then screw into bx4.




Step 15

Note: put f (x2) through the c (x2)

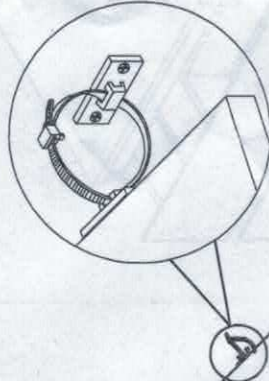

Adjust the distance between the cabinet and the wall, pull the tape tight (f)

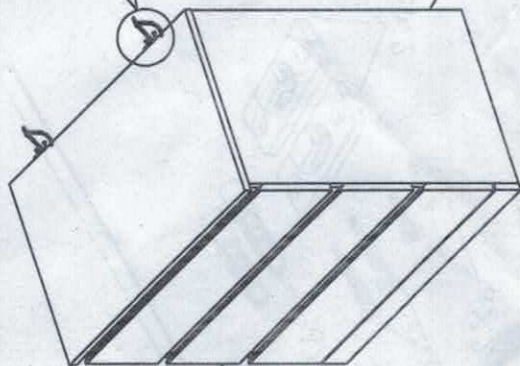

Step 16

