


PRODUCT NAME

LANGFORD 79 Sideboard Cabinet


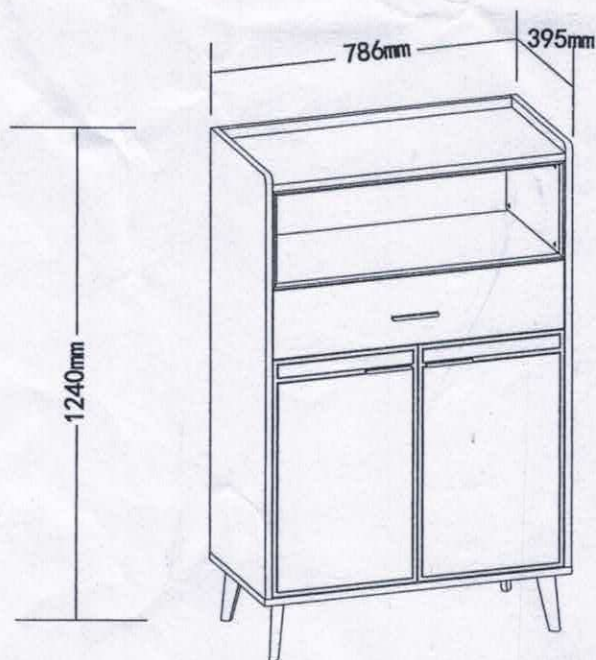


EN

1. Identify the parts which make up your piece of furniture.
 2. Gather the hardware parts and count them.
 3. Have the necessary assembly tools ready.
 4. Organize a space for assembly, wall carpeting or a blanket will protect the furniture against scratches.
 5. Never force the assembling while you put the parts together. You are recommended to tighten the screws after the furniture has been used for some time.
 6. After assembling this product, it is advisable to regularly ventilate the room for a few days.
- KEEP THE ASSEMBLY INSTRUCTION. THE RELEVANT INFORMATION YOU CAN FIND ON IT WILL HELP YOU GET IN TOUCH WITH YOUR STORE IF A PART WAS TO BE MISSING.



119x1	101x2	103x26	108x4	109B X2
				
	φ6X30mm	φ7*32.5mm	φ4X12mm	L=300mm

1

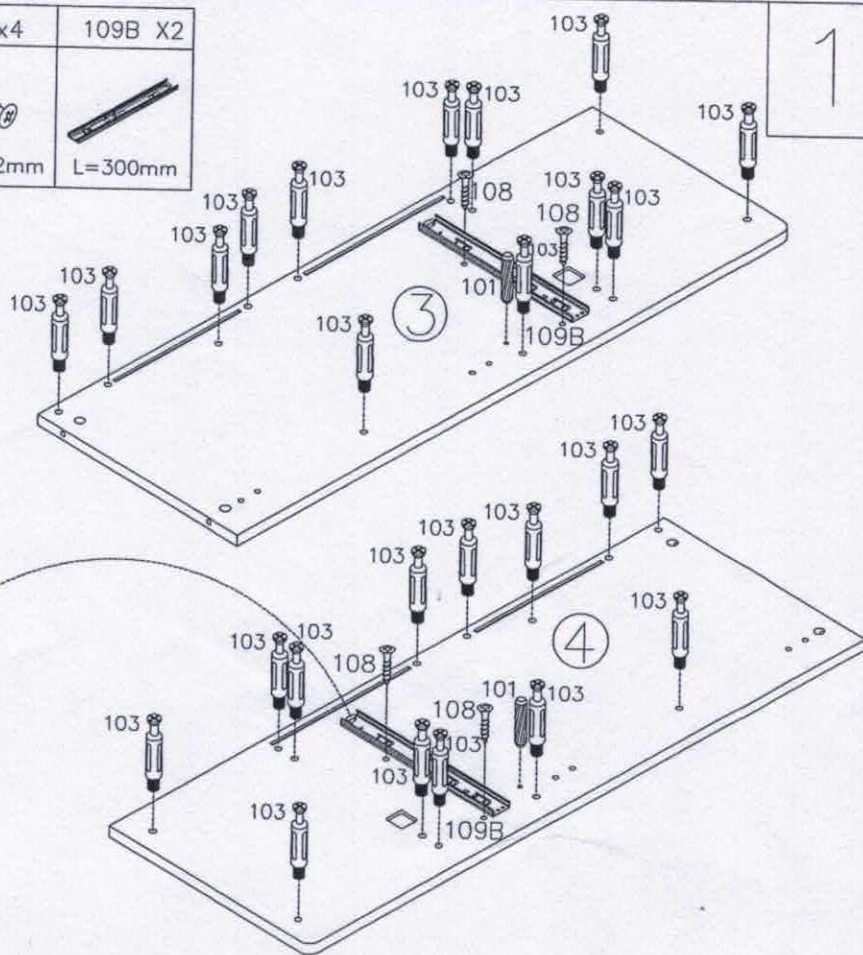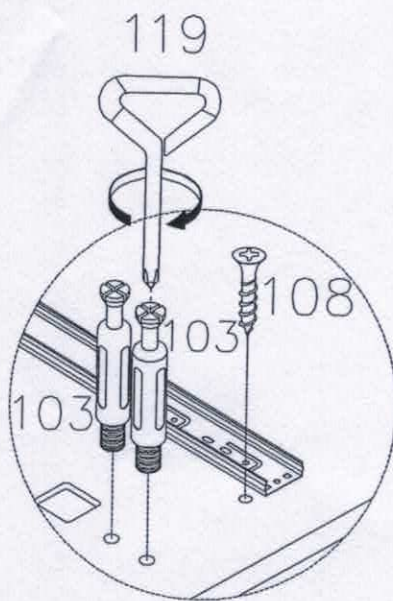


119x1	103x6	110x16
		
	φ7*32.5mm	φ4X16mm

2

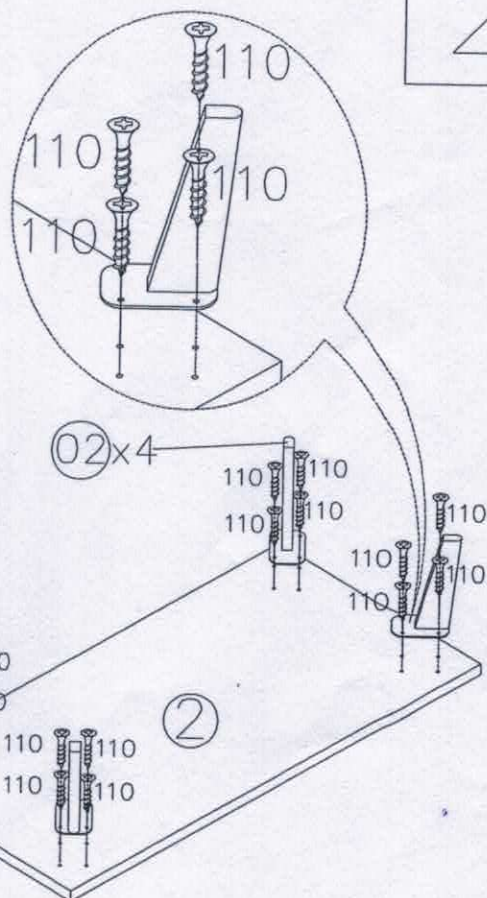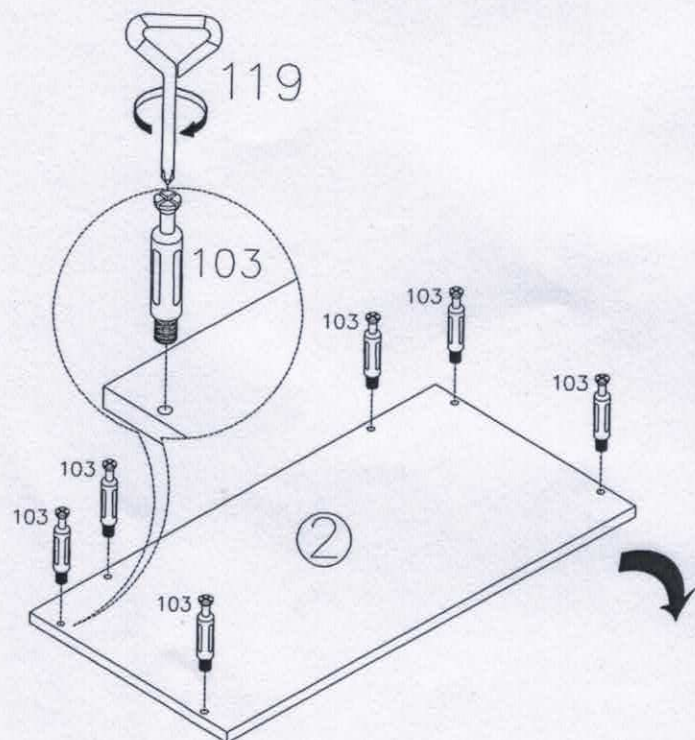


119x1	106x13	107x5
		
	φ10	φ5X50mm

3

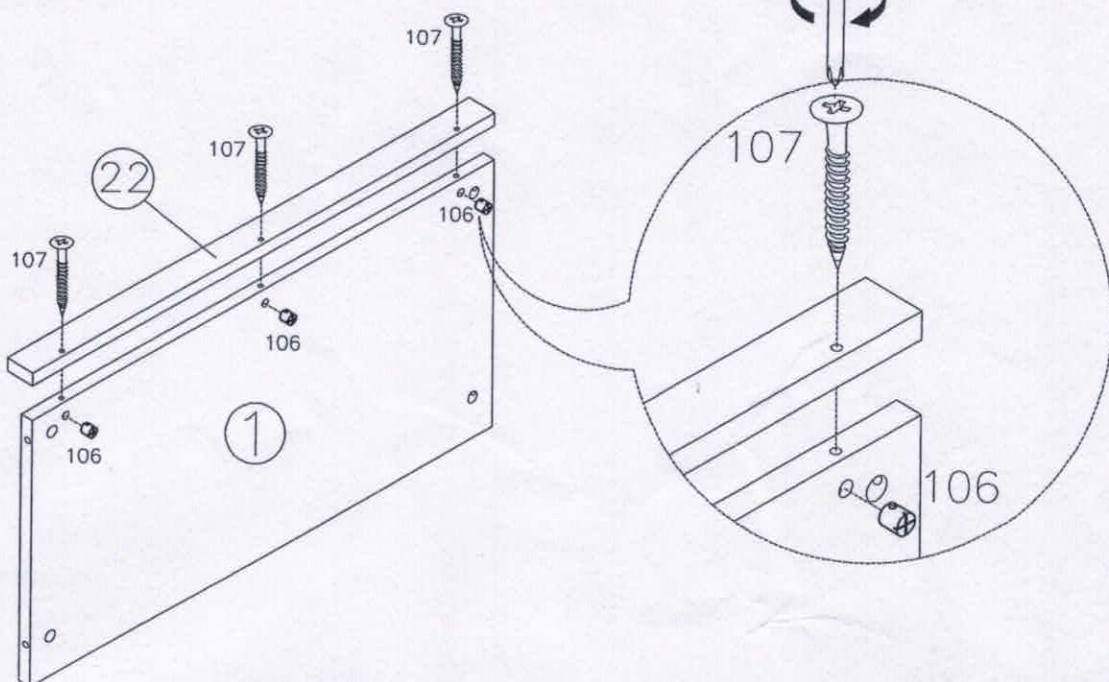



119x1	102x13
	
	φ15*12mm

4

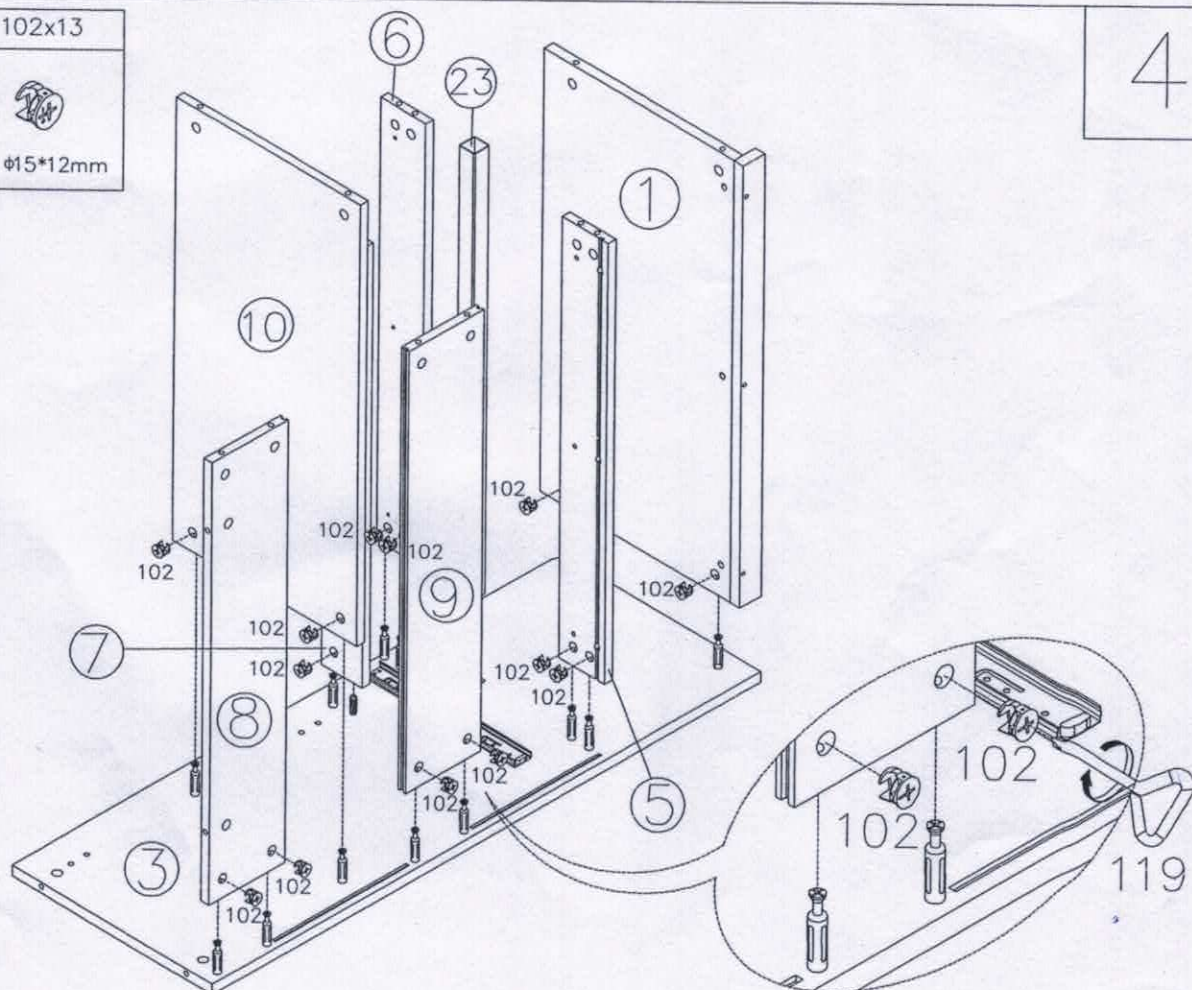


119x1	102x13
	
	Φ15*12mm

5

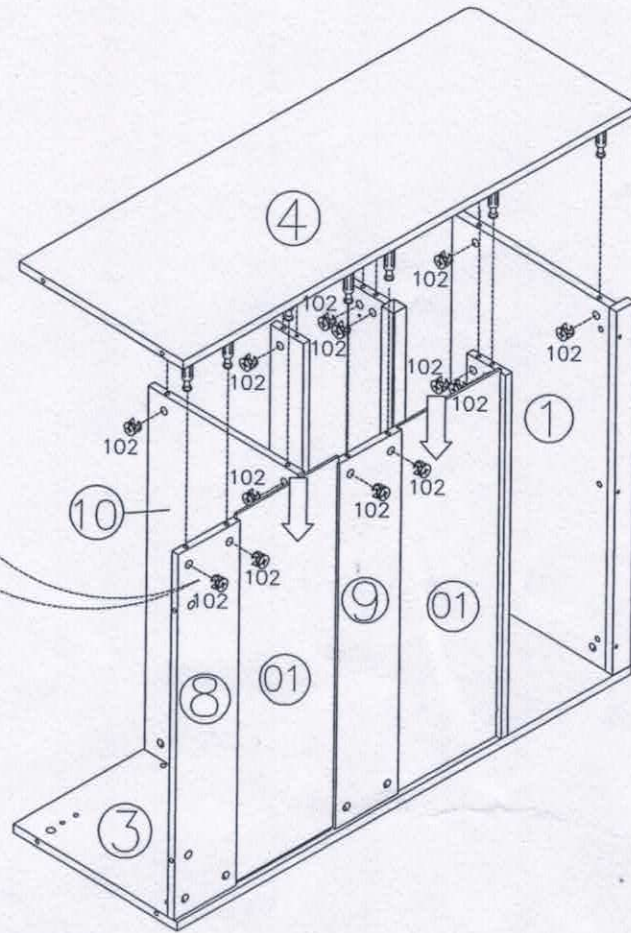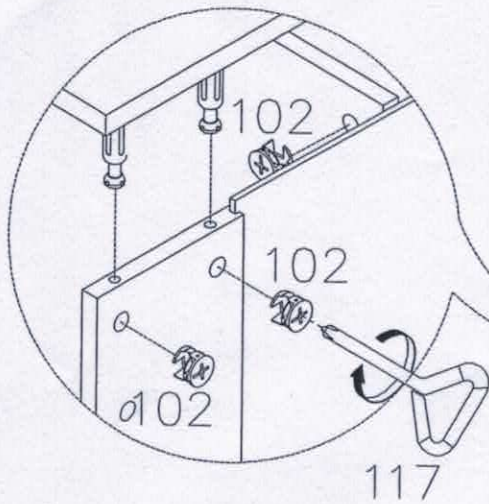


119x1	102x6
	
	Φ15*12mm

6

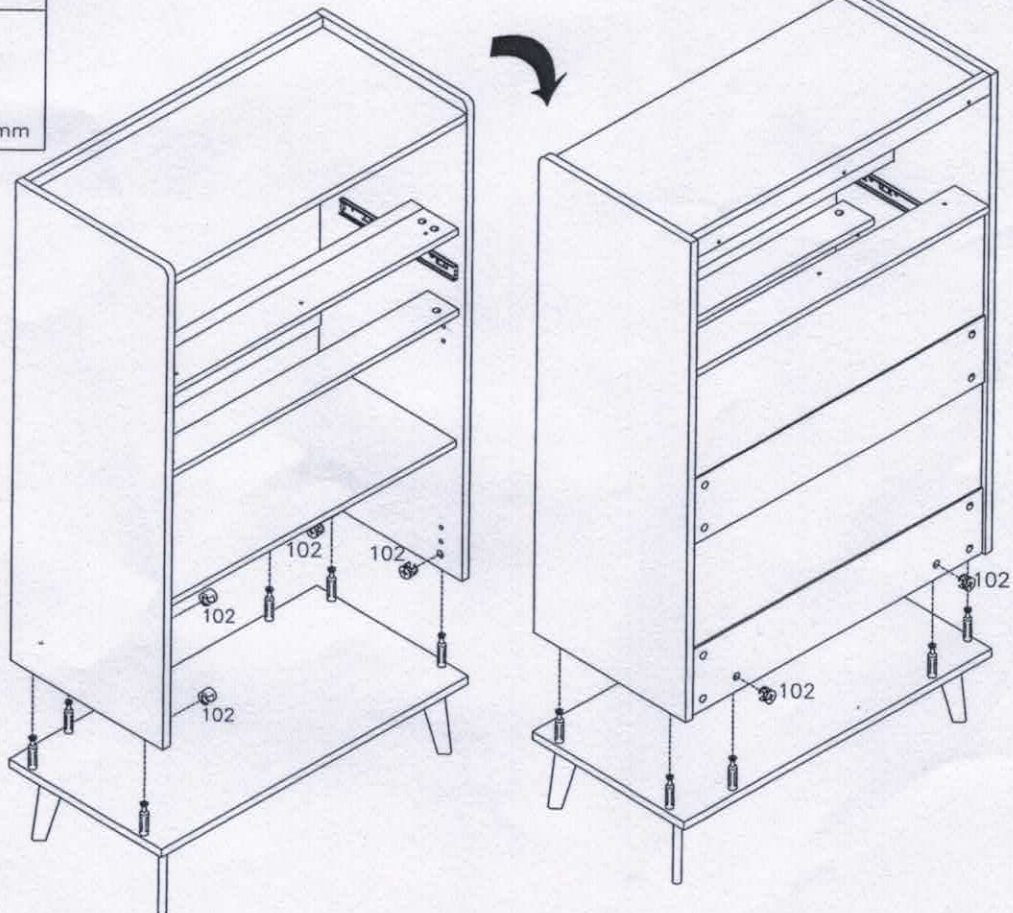


119x1	101x8	106x8	112x8
			
	Φ6X30mm	Φ10	Φ4X40mm

7

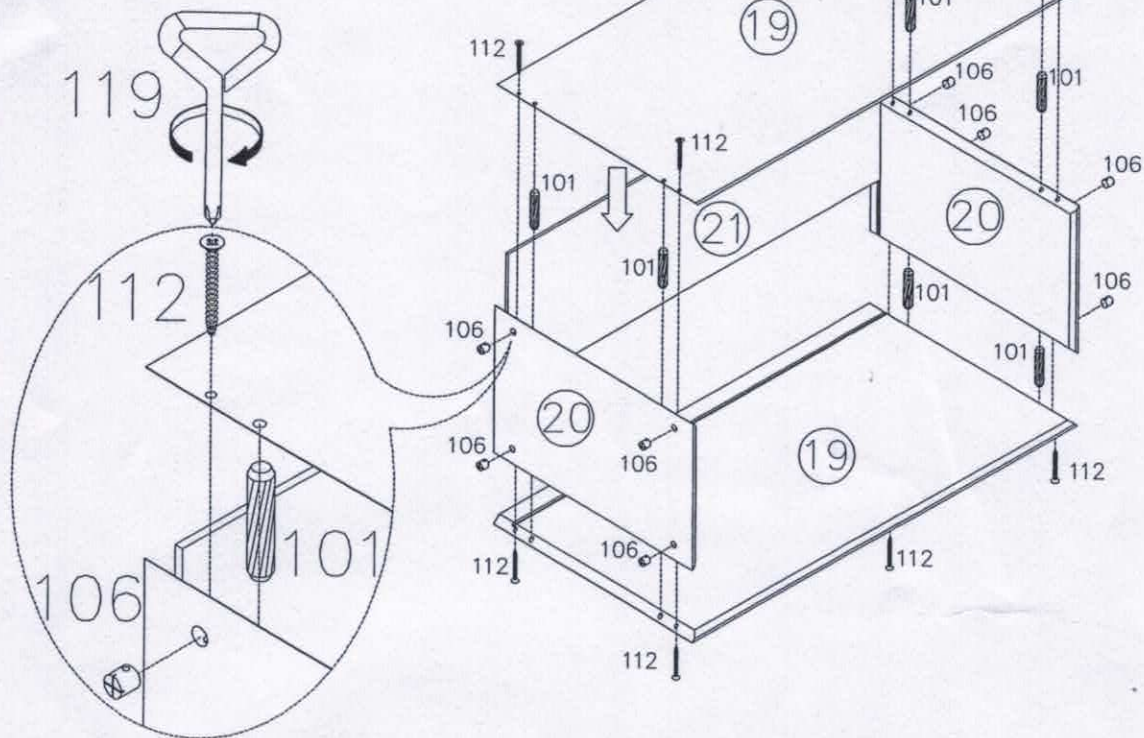


119x1	113x8	114x8
		
		Φ3X20mm

8

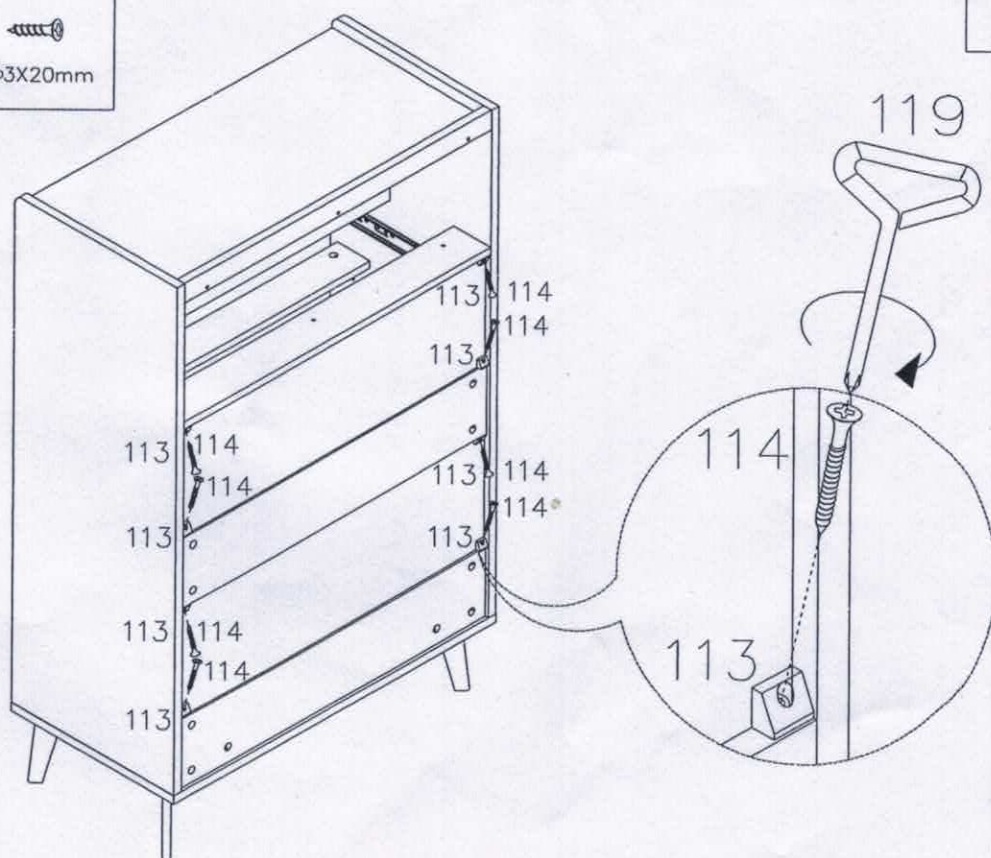


119x1	111x4
	
	Φ4X25mm

9

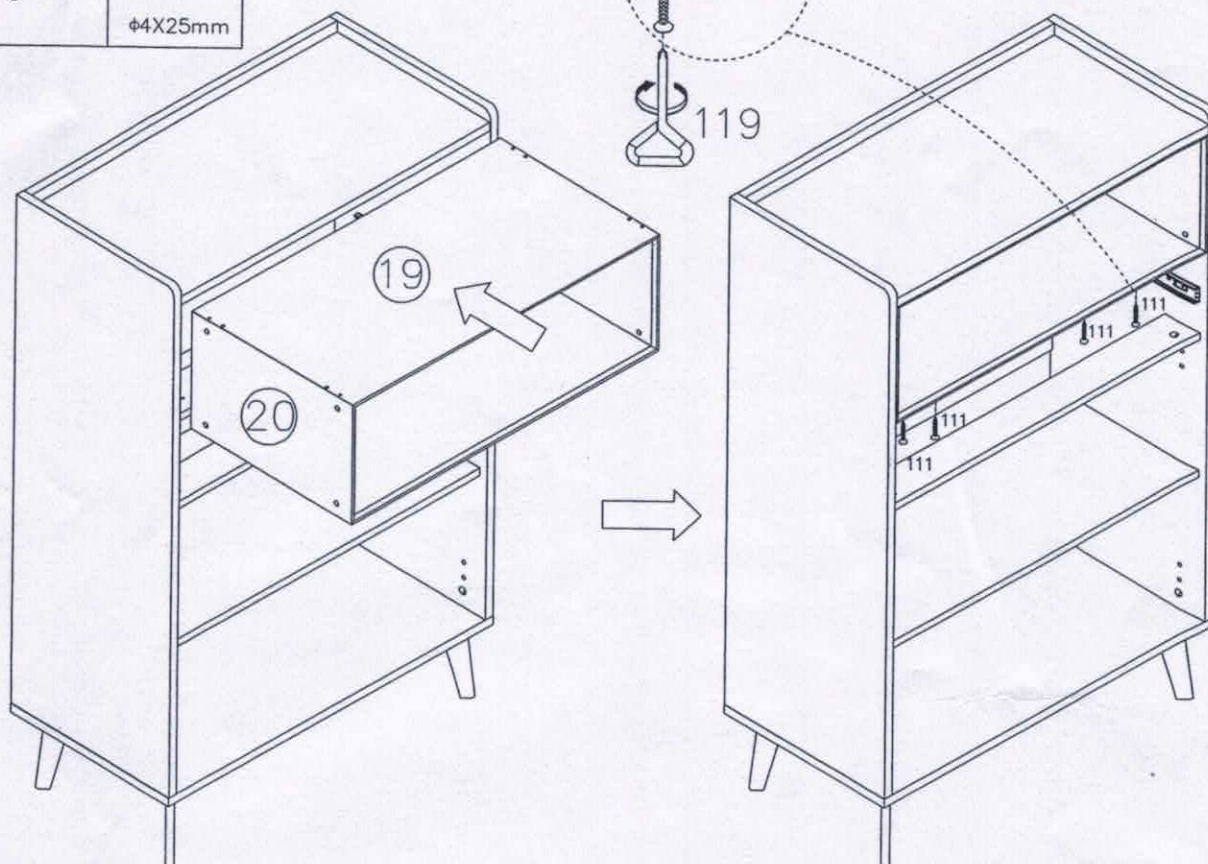


119x1	101 x2	105x8
		
	Φ6X30mm	Φ6*19.5mm

10

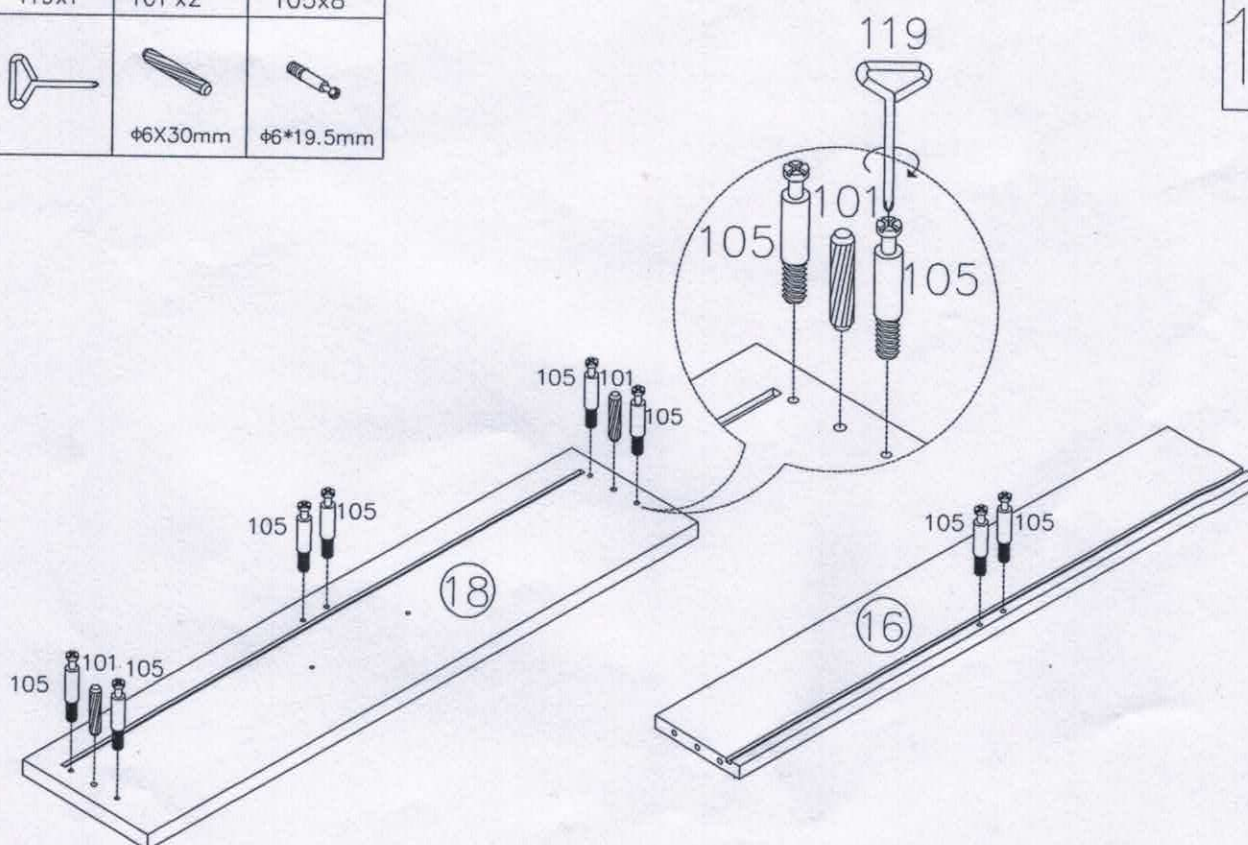


119x1	101x4	106x2	107x2	104x2
				
	Φ6X30mm	Φ10	Φ5X50mm	Φ12*10mm

11

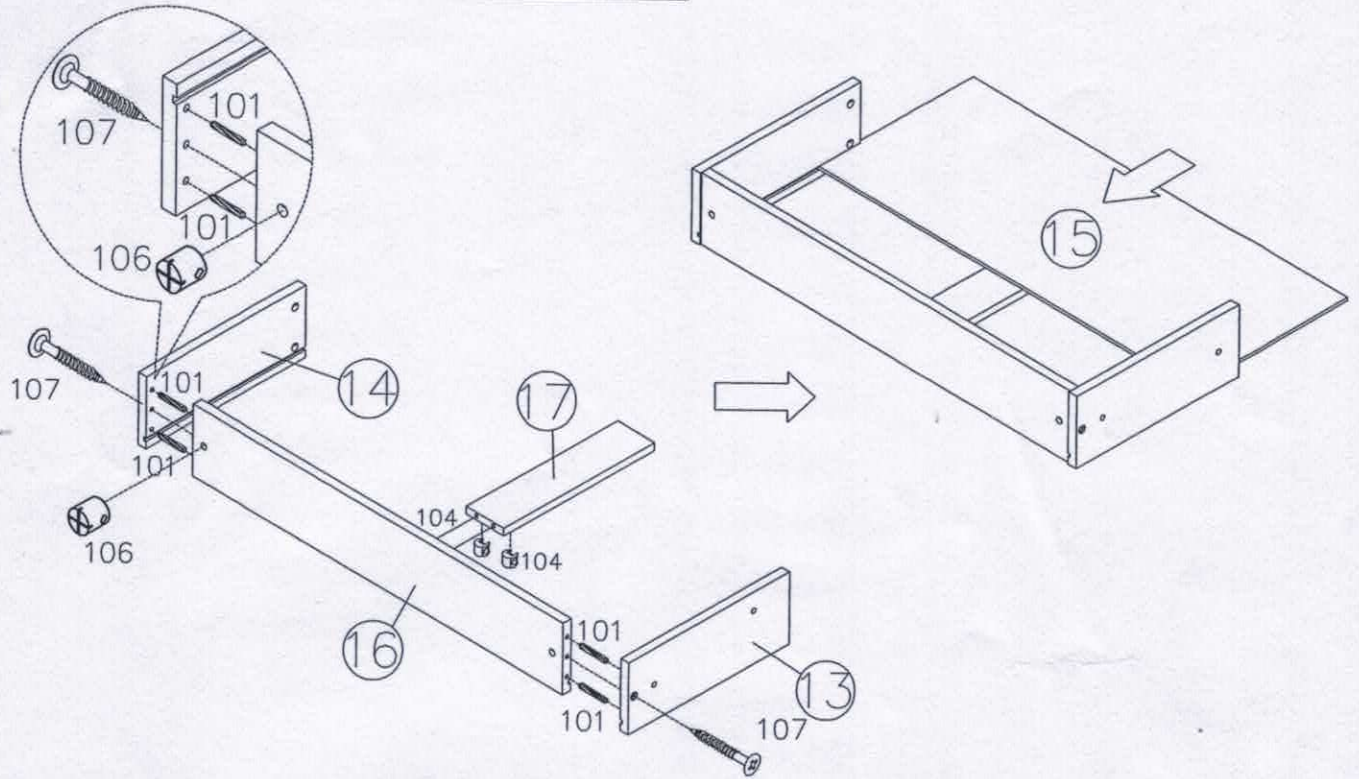


119x1	104x6	109A X2	108x4	116x1	118x4
					
	Φ12*10mm	L=300mm	Φ4X12mm	CC128	M4X25mm

12

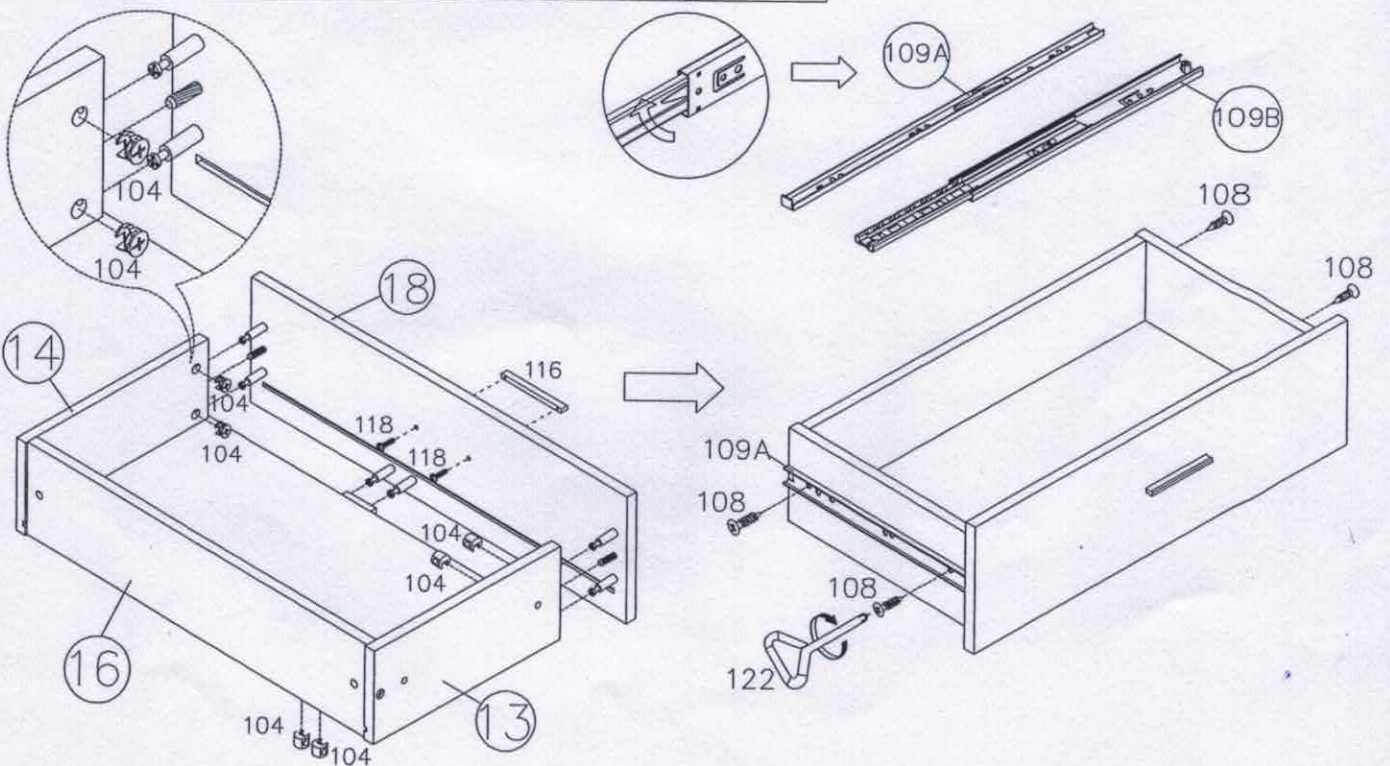

119x1	115x4	116x2	117x4
			
		CC128	M4X22mm

13

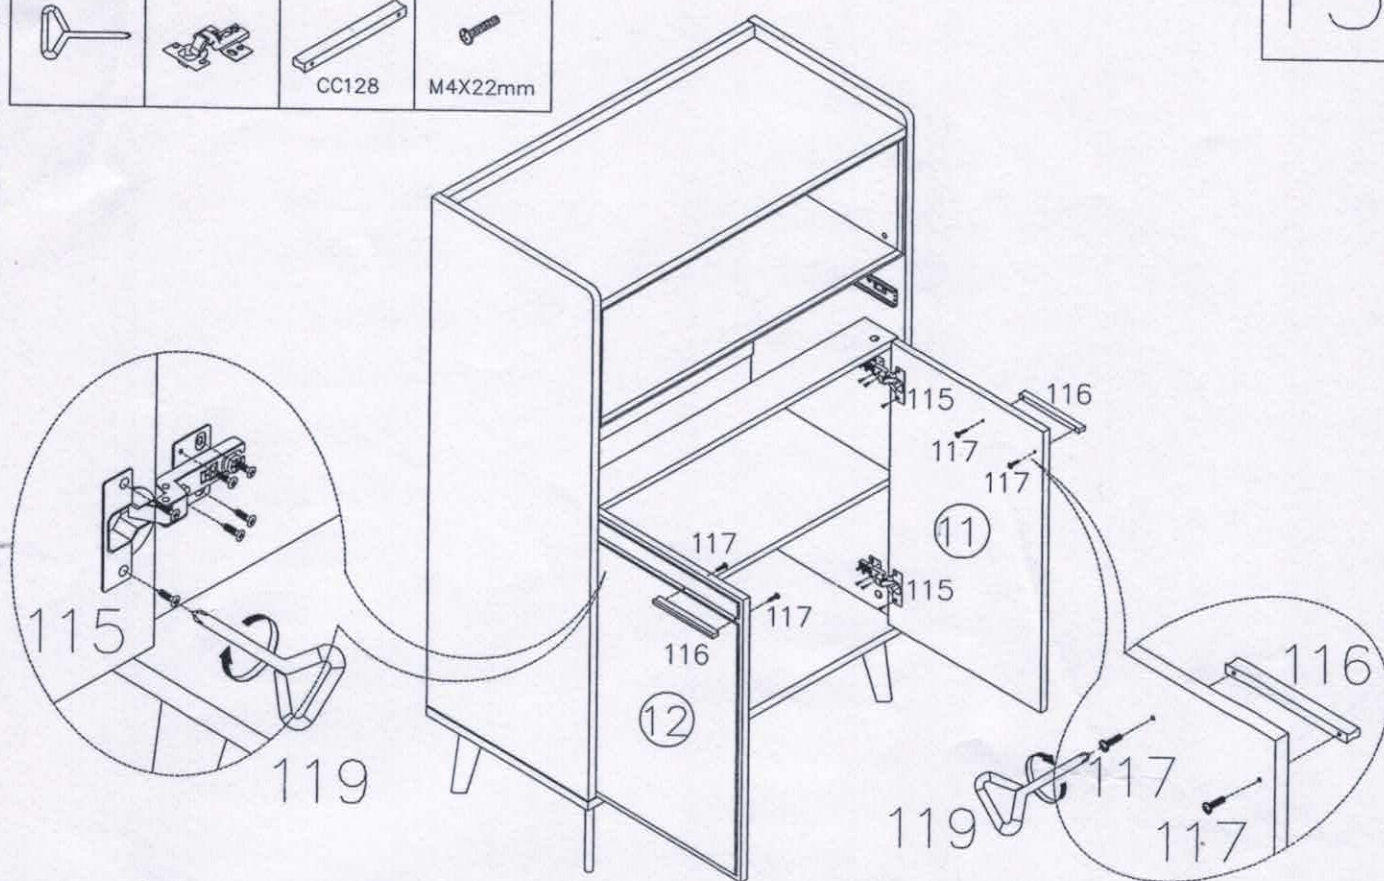

14

