



An analog clock face with a circular border and 12 tick marks. Two hands are shown: a shorter hour hand pointing straight up to the 12 o'clock position, and a longer minute hand also pointing straight up to the 12 o'clock position.



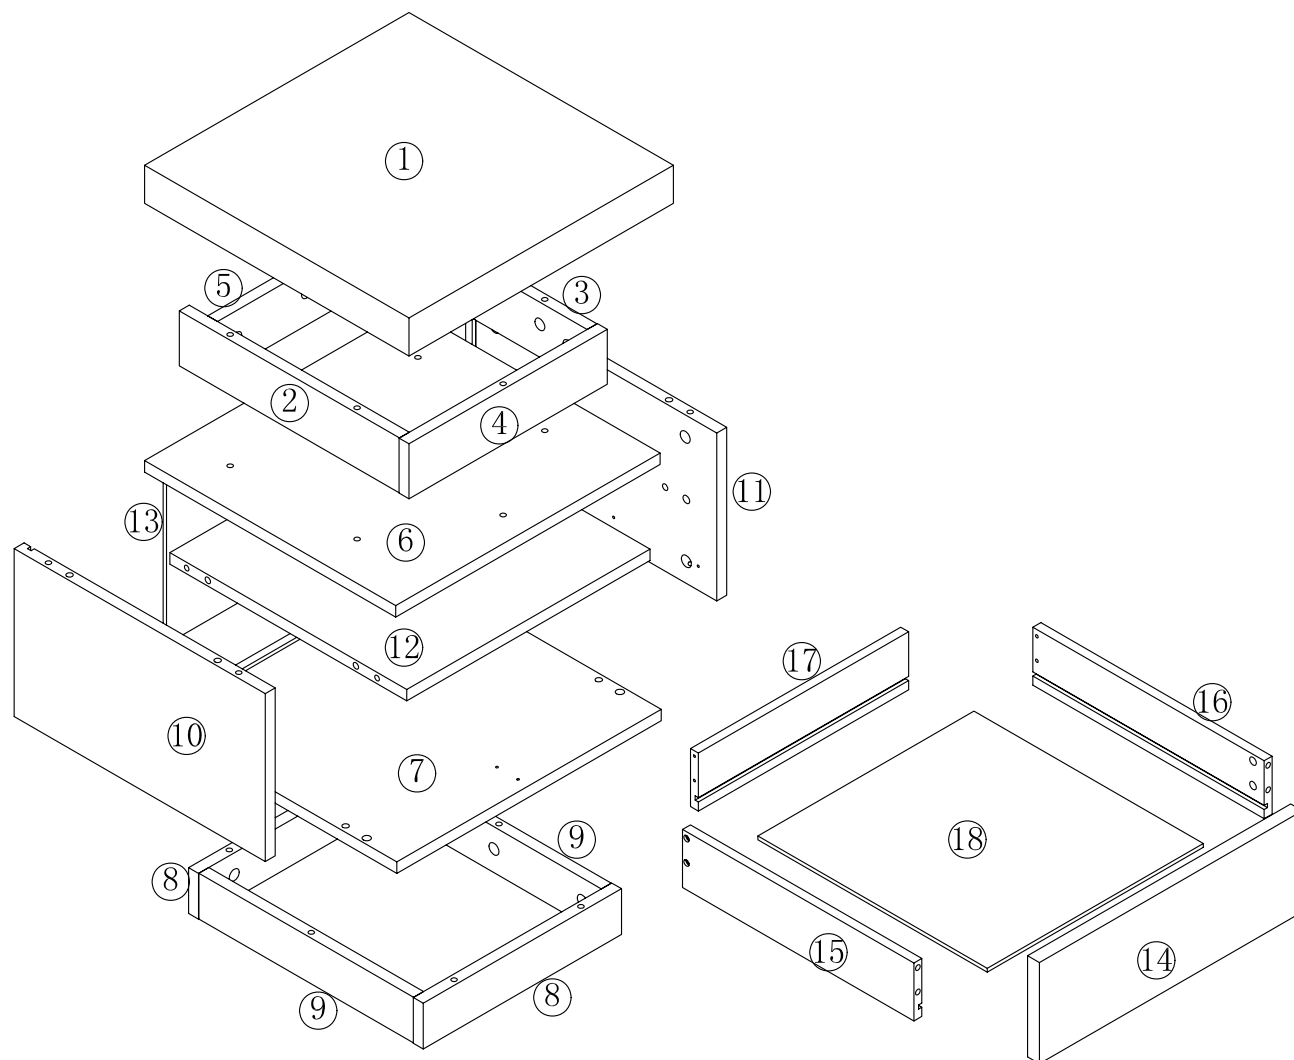
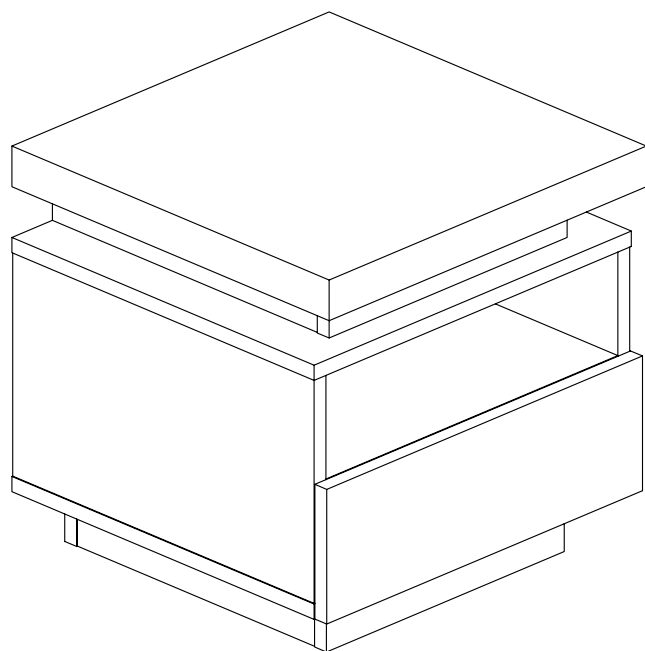
1



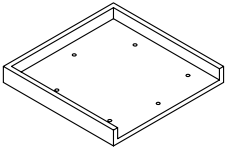
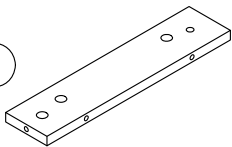
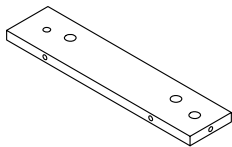
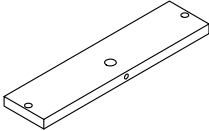
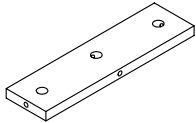
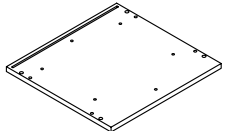
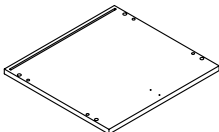
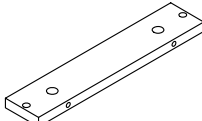
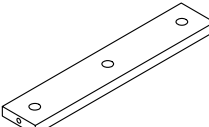


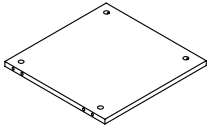

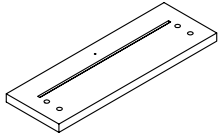
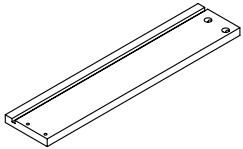
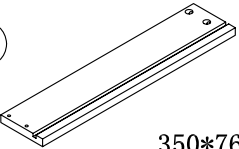
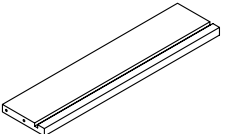

Wood: Dust regularly with a clean, soft, dry cloth; do not use any abrasives or acidic products, and never use solvents.

Important: Make sure you have received all parts before starting to assemble your furniture.

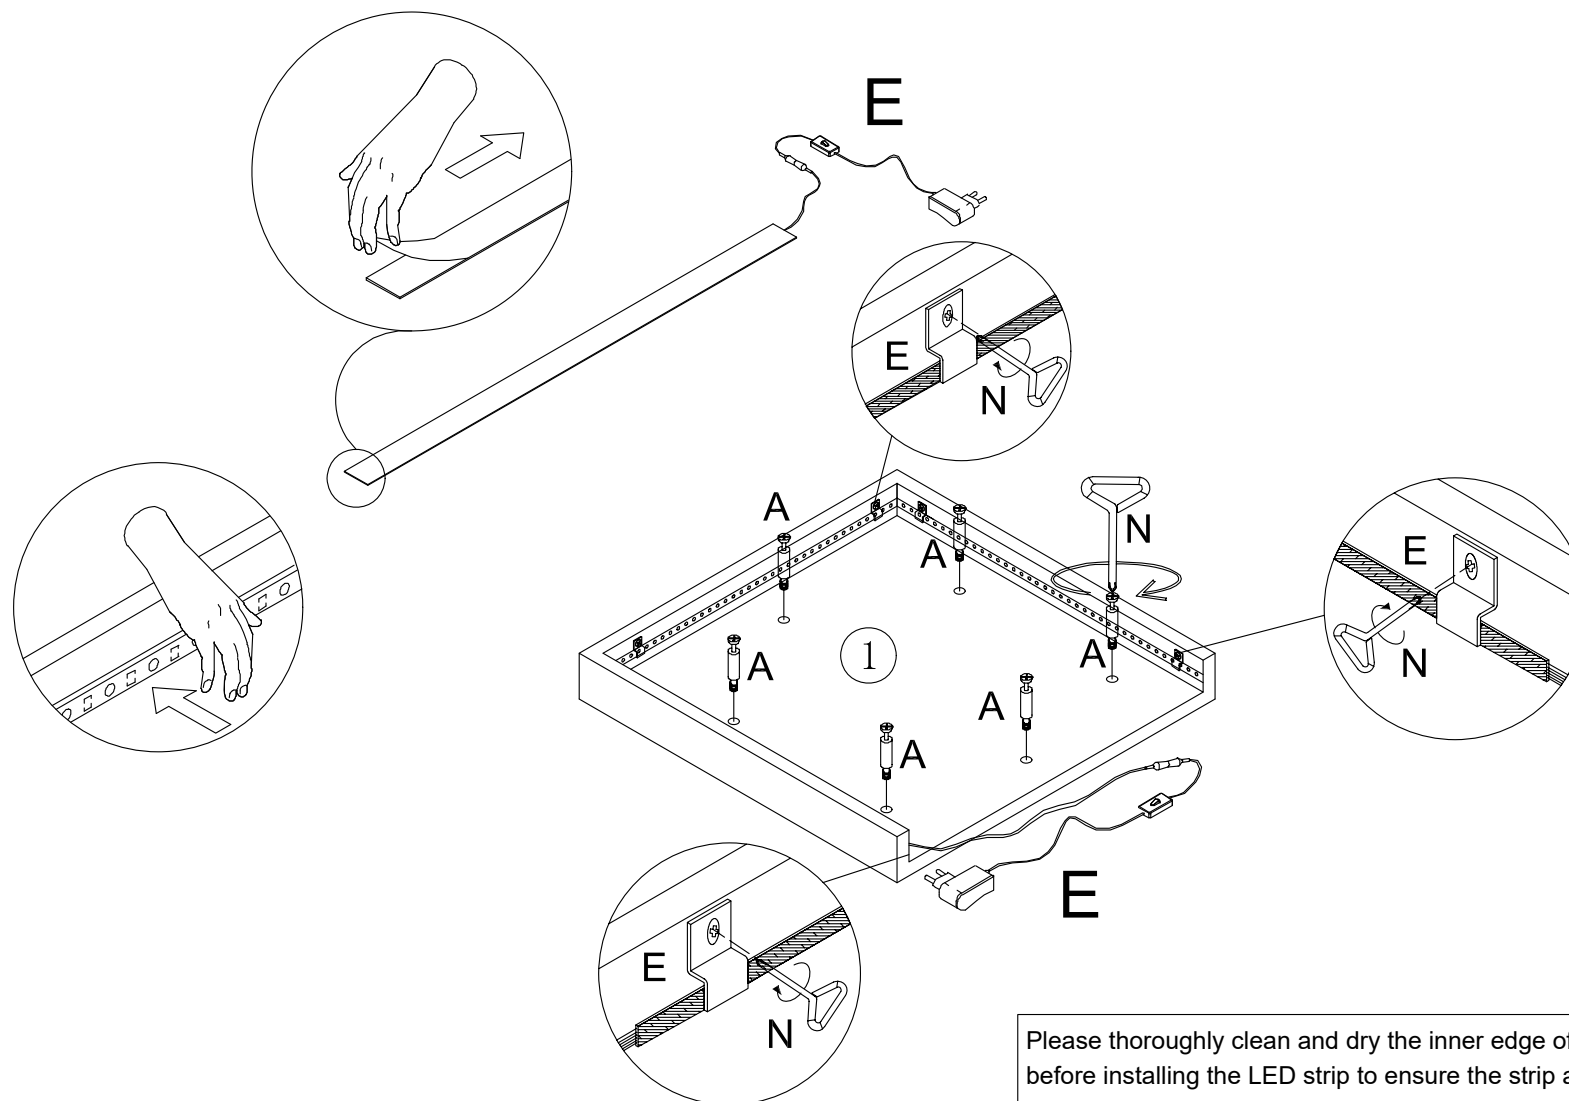
[illegible]



1-1




<p>①</p>  <p>400*400*40mm</p> <p>1</p>	<p>②</p>  <p>333*75*15mm</p> <p>1</p>	<p>③</p>  <p>333*75*15mm</p> <p>1</p>	<p>④</p>  <p>300*75*15mm</p> <p>1</p>	<p>⑤</p>  <p>269*75*15mm</p> <p>1</p>
<p>⑥</p>  <p>400*380*15mm</p> <p>1</p>	<p>⑦</p>  <p>400*380*15mm</p> <p>1</p>	<p>⑧</p>  <p>300*60*15mm</p> <p>2</p>	<p>⑨</p>  <p>325*60*15mm</p> <p>2</p>	<p>⑩</p>  <p>220*380*15mm</p> <p>1</p>
<p>⑪</p>  <p>220*380*15mm</p> <p>1</p>	<p>⑫</p>  <p>368*363*15mm</p> <p>1</p>	<p>⑬</p>  <p>377*229*5mm</p> <p>1</p>	<p>⑭</p>  <p>398*142.5*15mm</p> <p>1</p>	<p>⑮</p>  <p>350*76*12mm</p> <p>1</p>
<p>⑯</p>  <p>350*76*12mm</p> <p>1</p>	<p>⑰</p>  <p>318*76*12mm</p> <p>1</p>	<p>⑱</p>  <p>327*347*5mm</p> <p>1</p>		

1

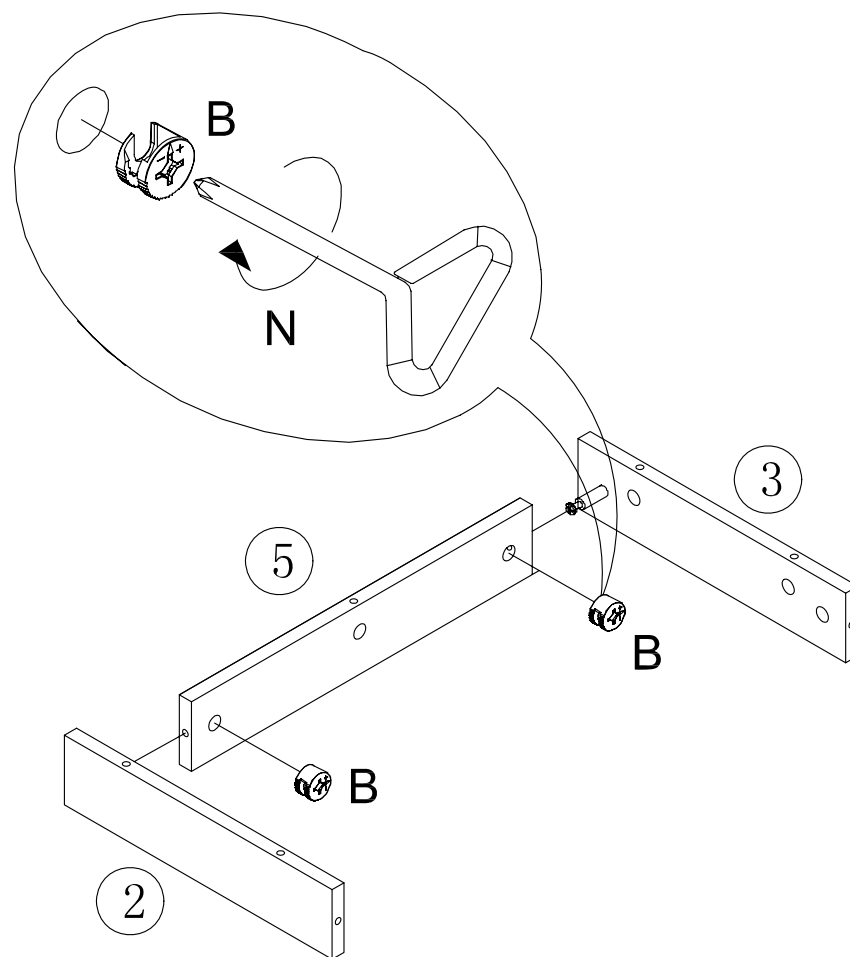
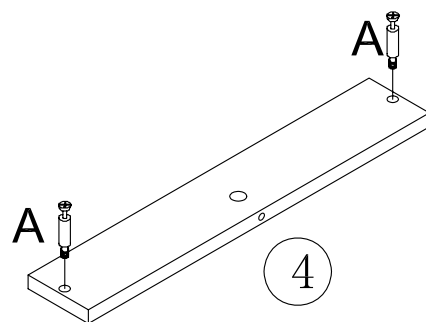
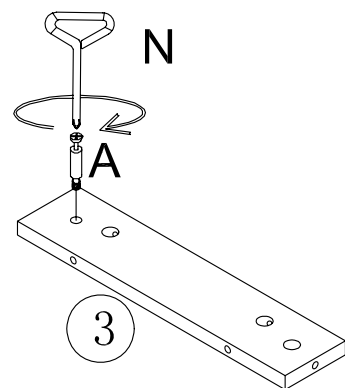
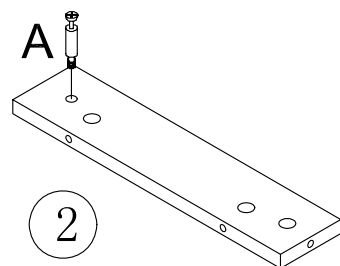





Please thoroughly clean and dry the inner edge of the panel before installing the LED strip to ensure the strip adheres securely.

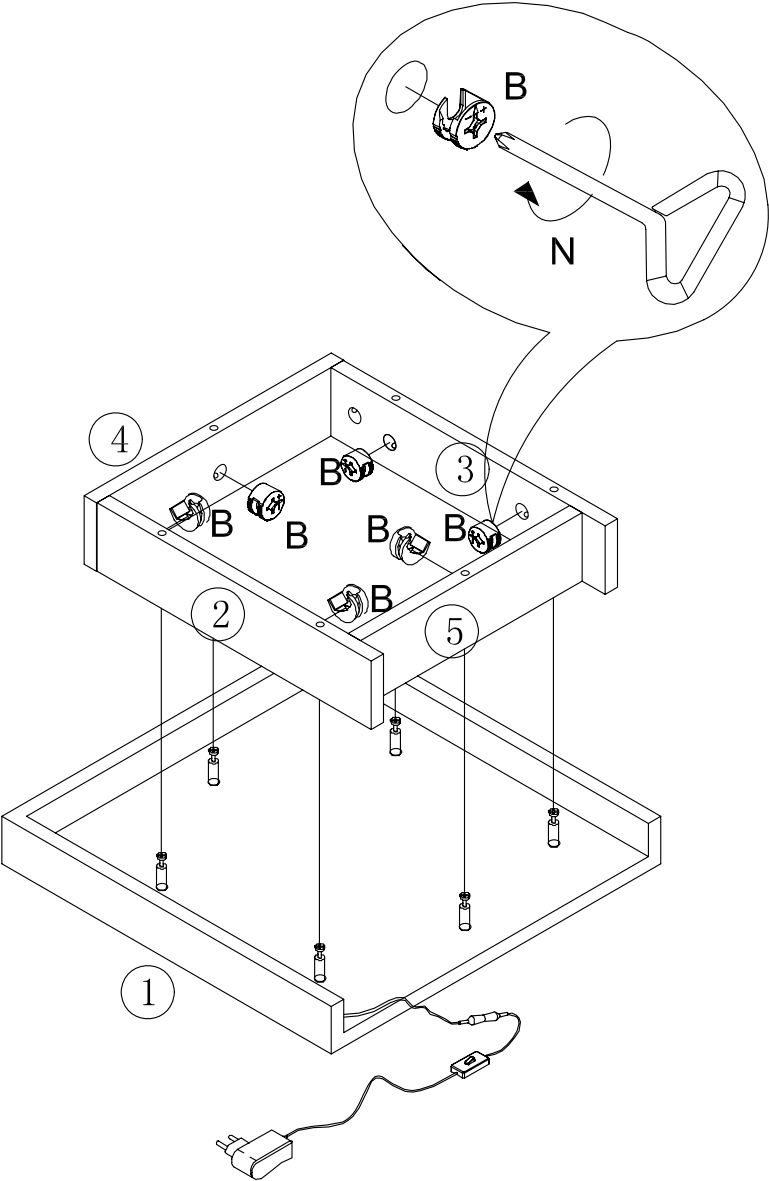
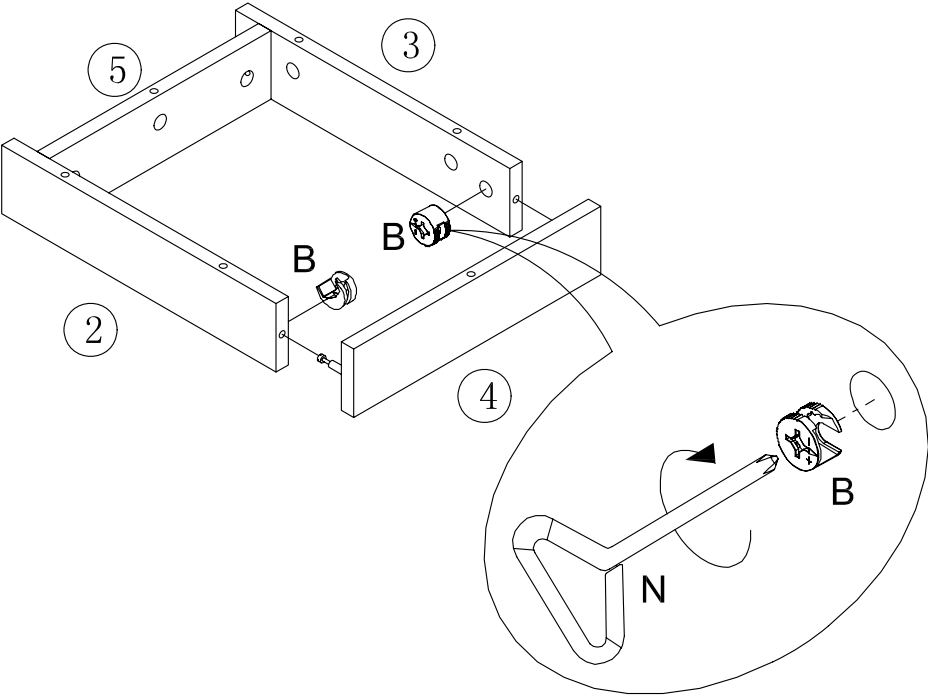
Please use the metal fasteners provided with the LED strip to secure the strip after gluing.



A		6	E		1	N		1
	Ø7*33mm						Ø5mm	

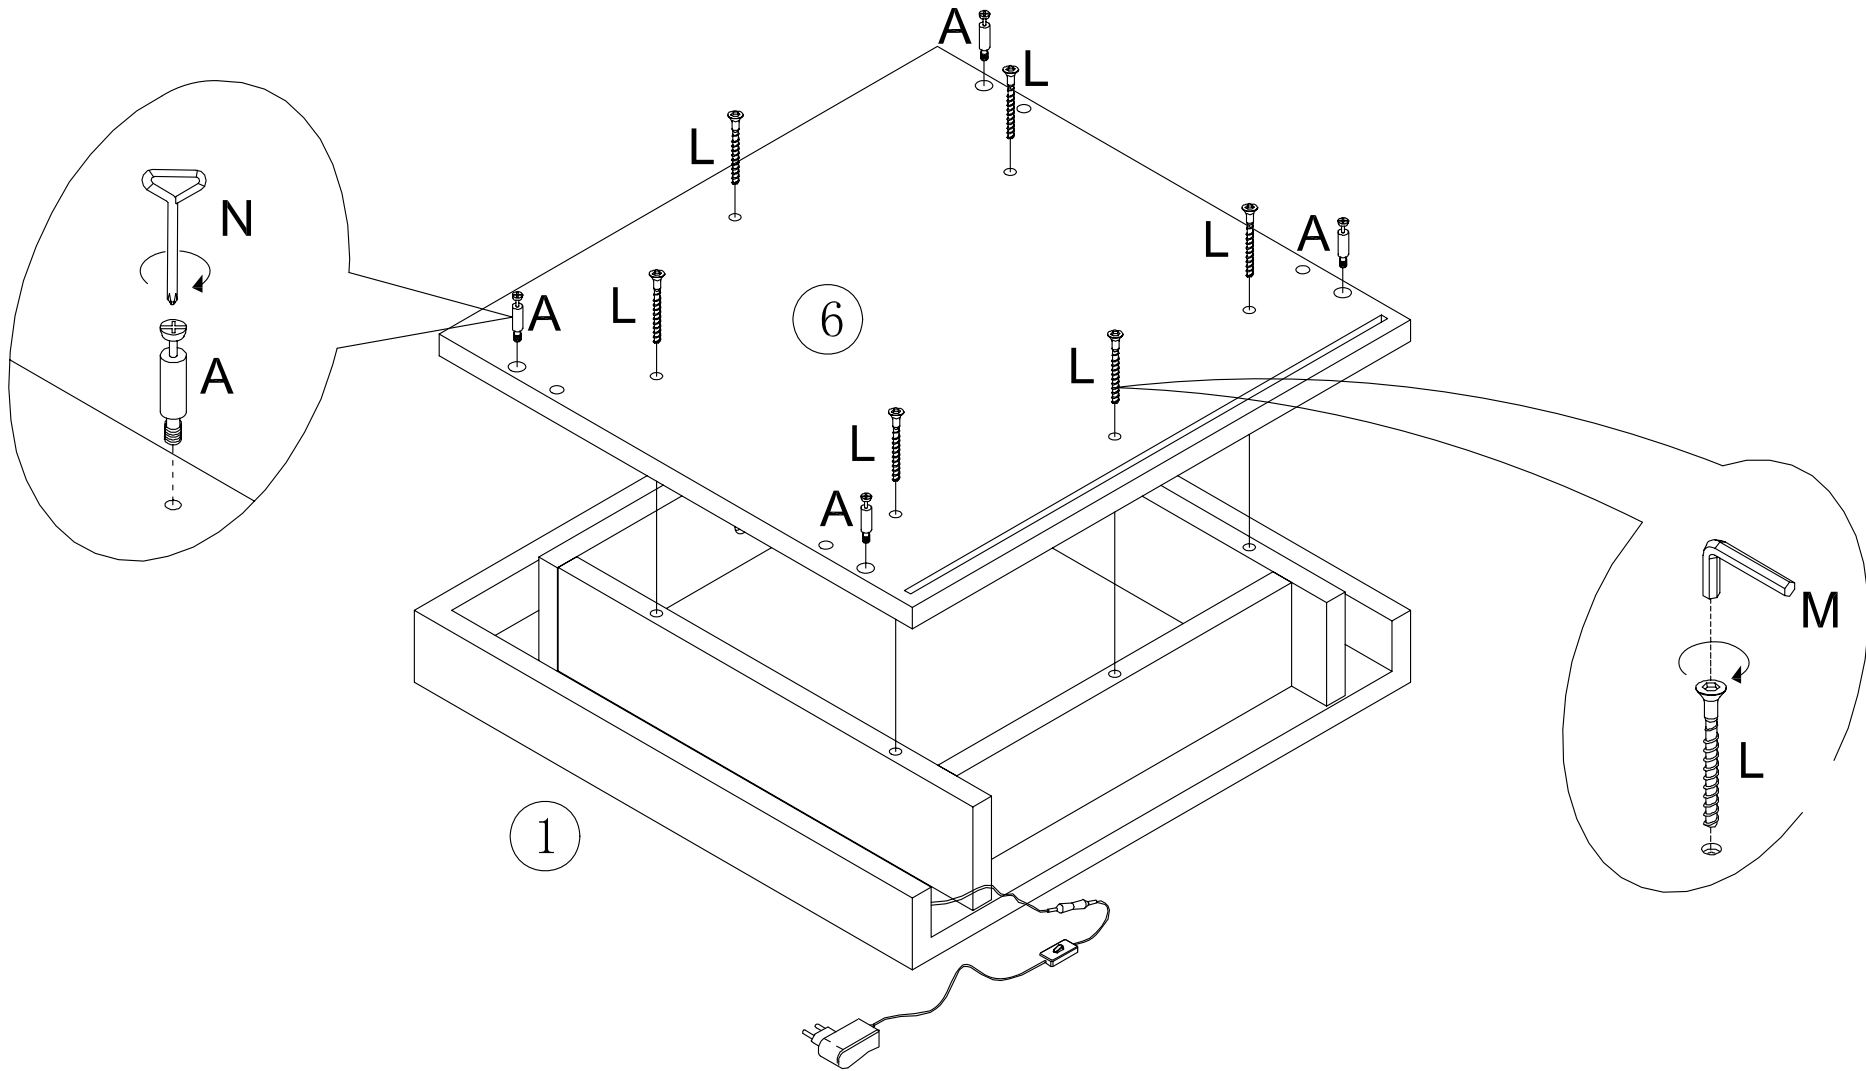
2







A		4	B		2	N		1
	Ø7*33mm			Ø15*11.5mm			Ø5mm	

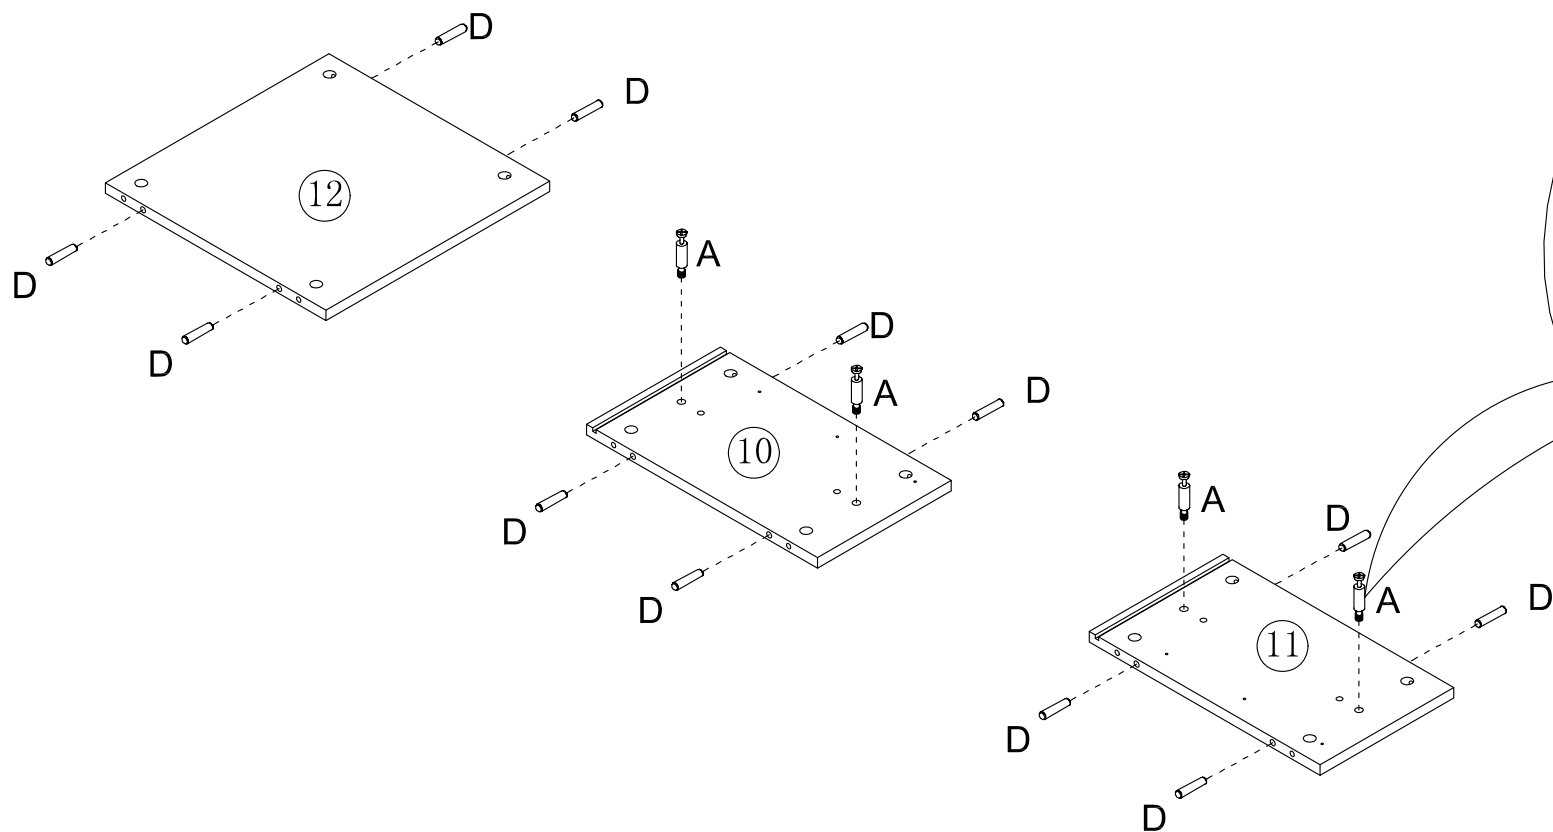





B		8	N		1
	Ø15*11.5mm			Ø5mm	



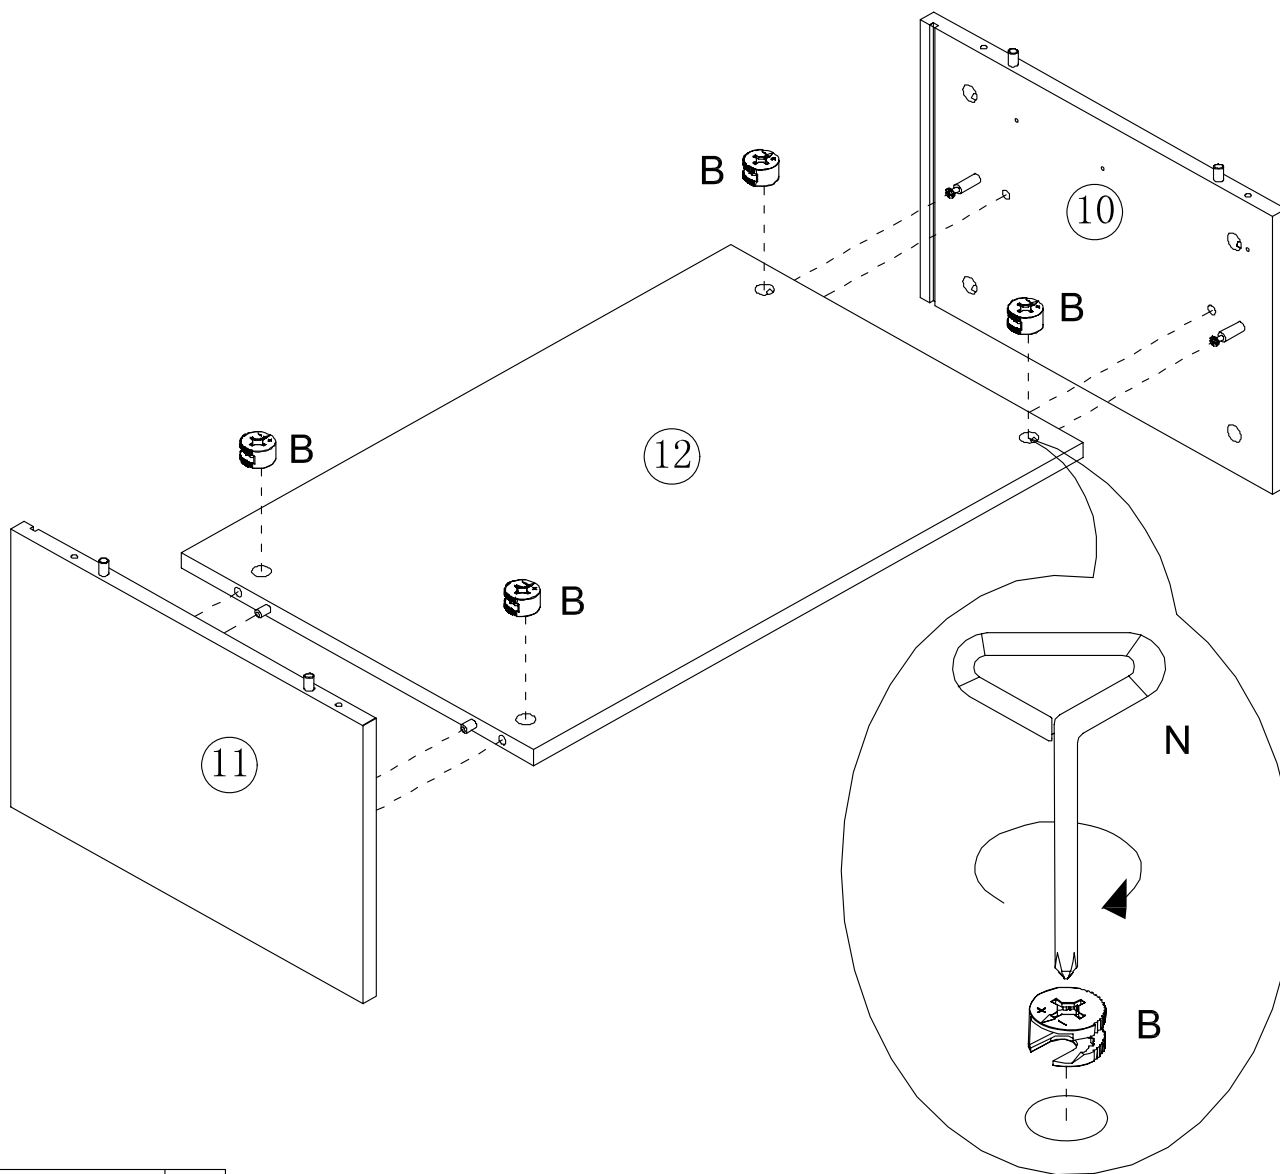
M		1	N		1	A		4	L		6
	60*30*4mm			Ø5mm			Ø7*33mm			Ø6*40mm	



5



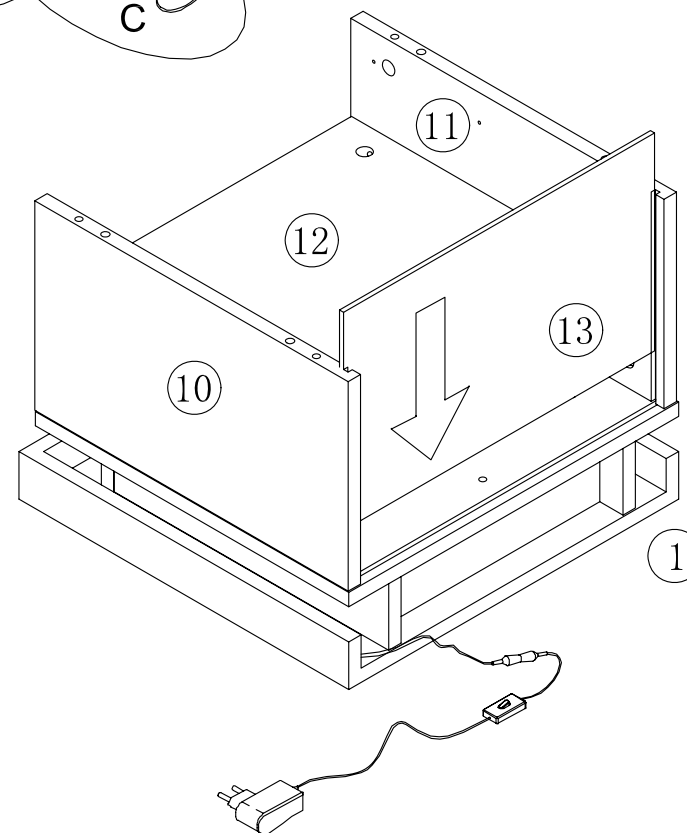
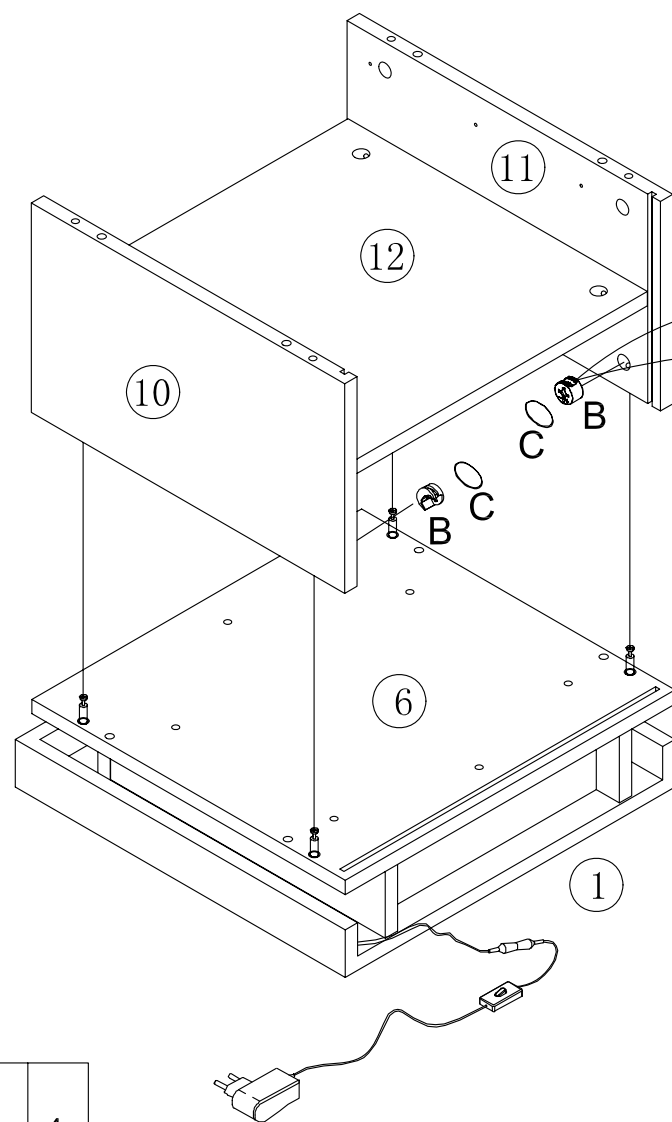
A		4	D		12	N		1
	Ø7*33mm			Ø8*30mm			Ø5mm	




6



B		4	N		1
	Ø15*11.5mm			Ø5mm	

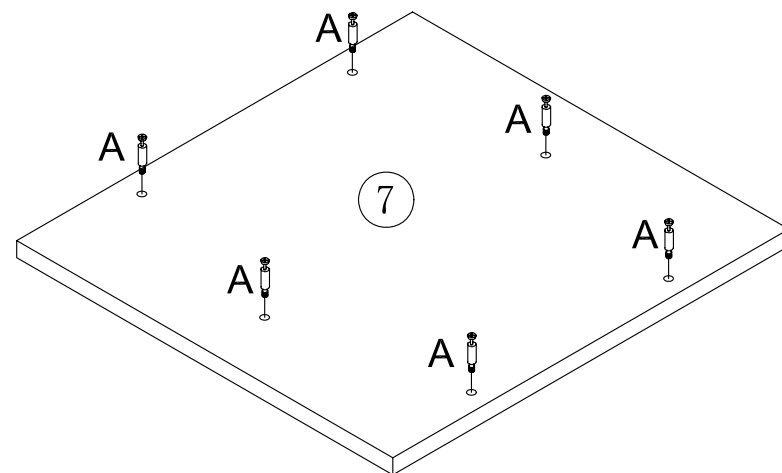
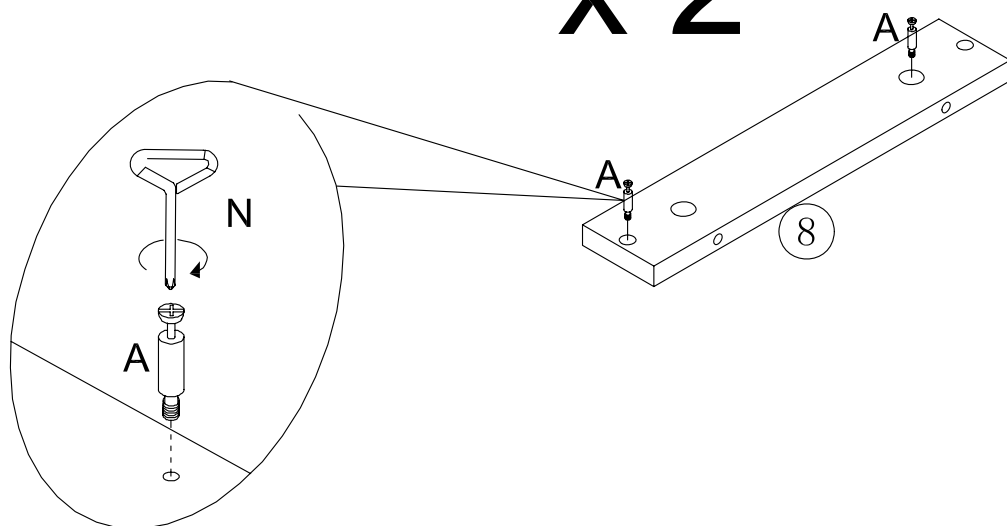
7





C		4			
Ø20mm					
B		4	N		1
Ø15*11.5mm			Ø5mm		

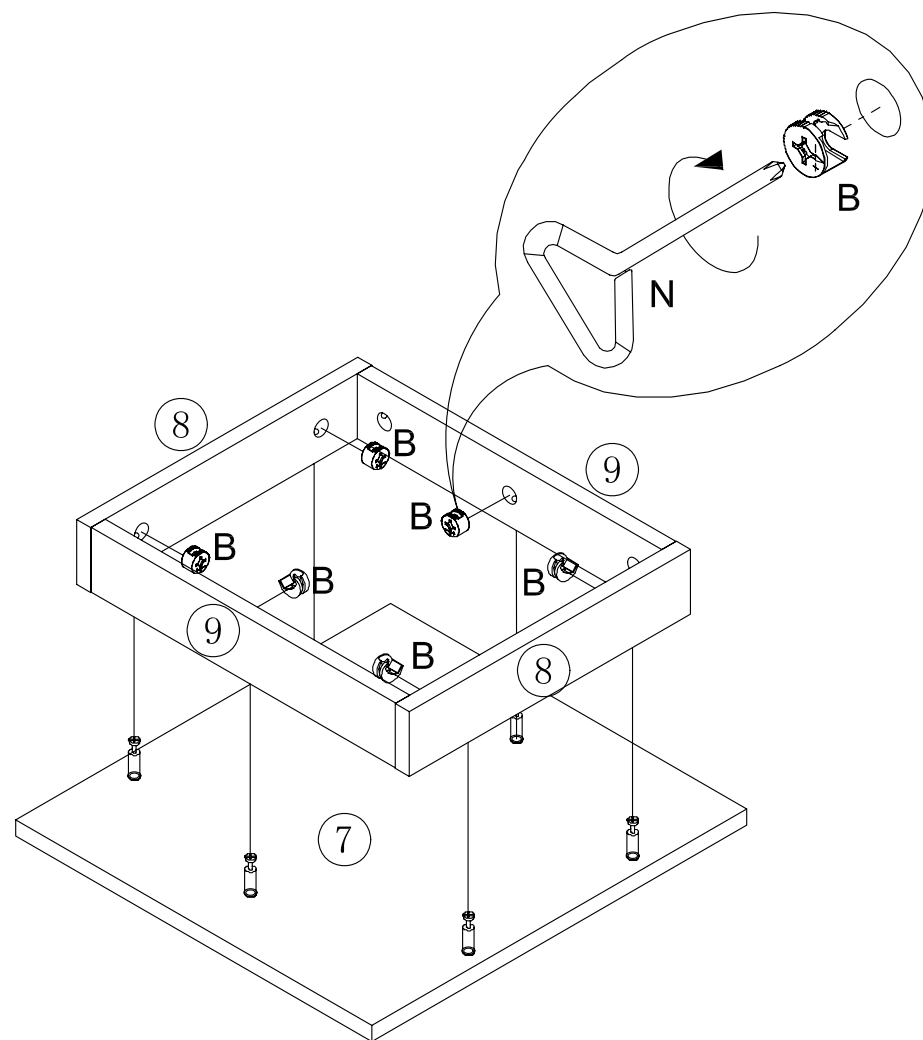
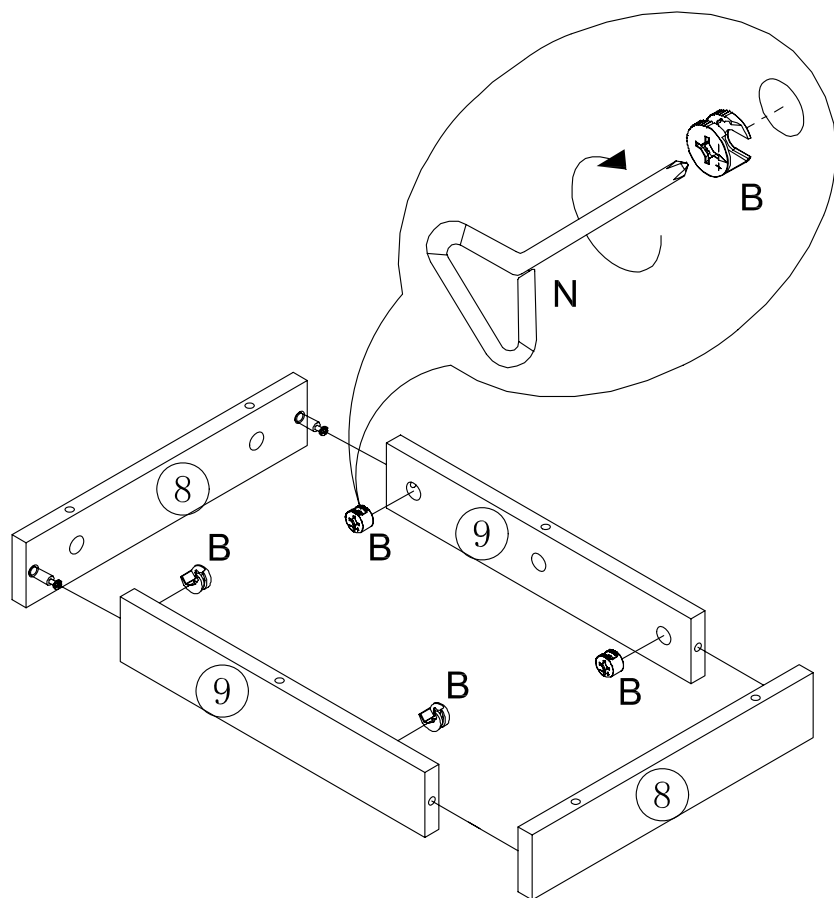
8



x 2



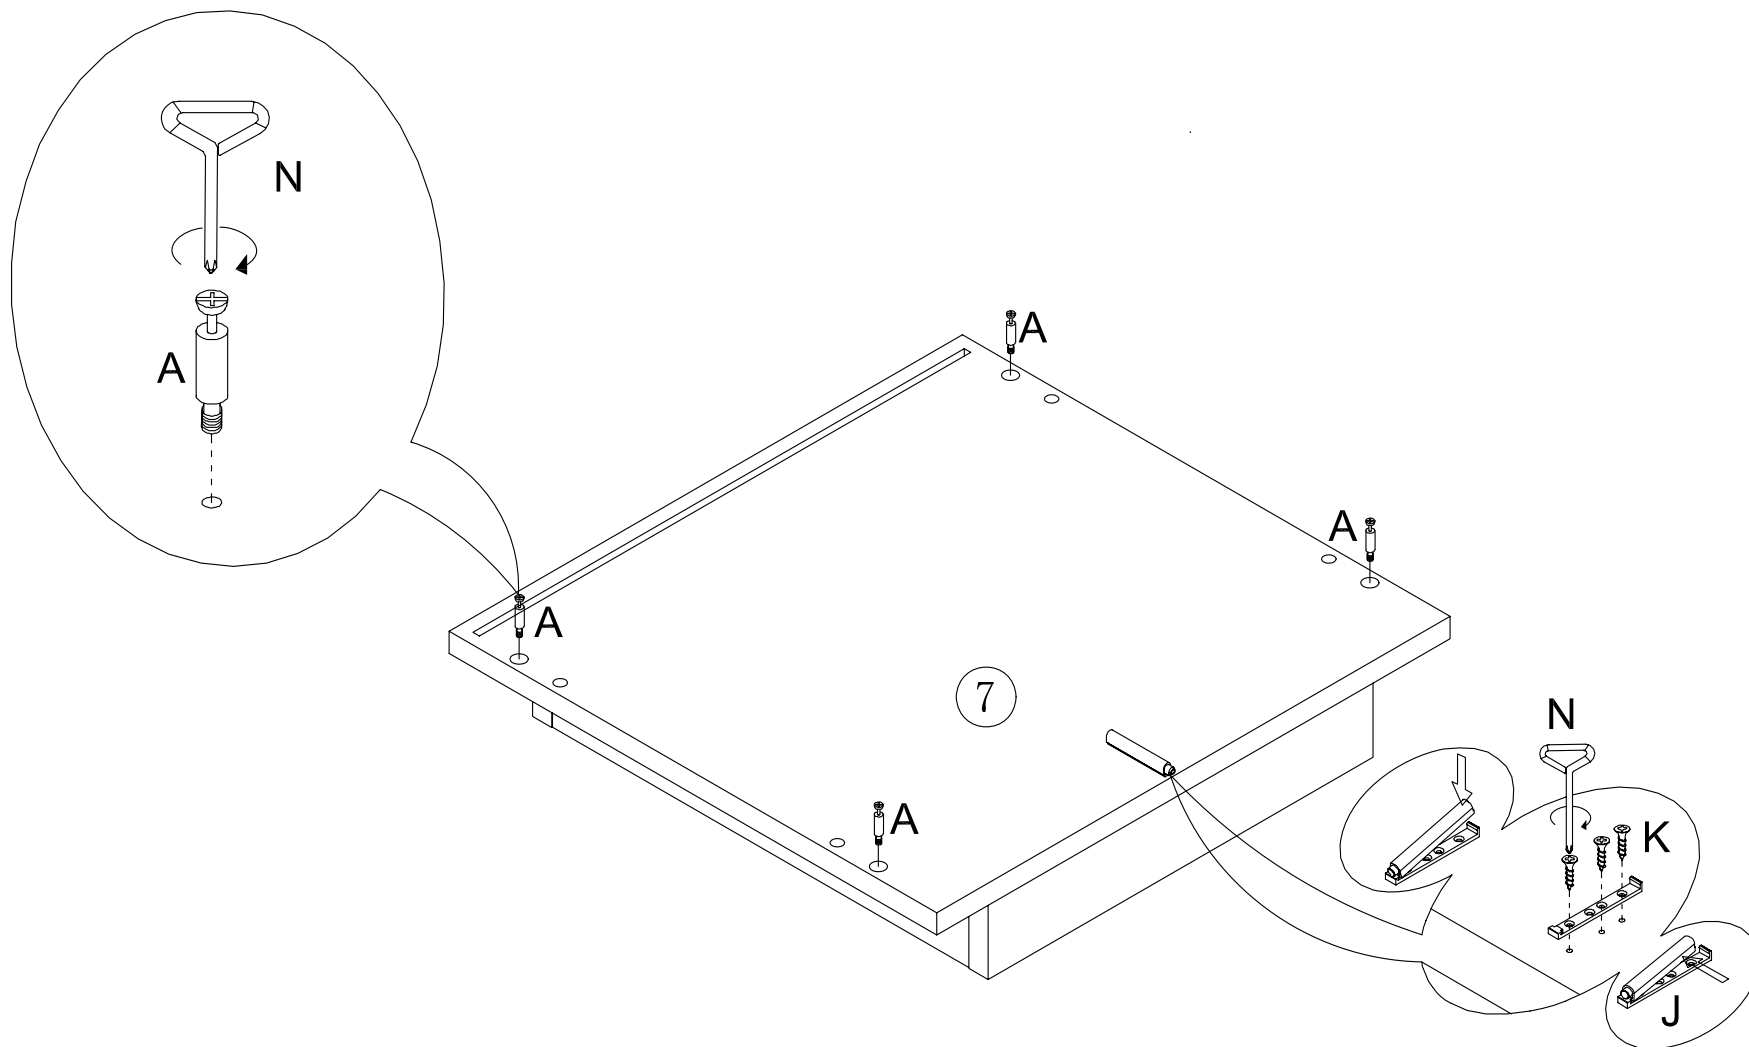
A		10	N		1
	Ø7*33mm			Ø5mm	

9







B		10	N		1
	Ø15*11.5mm			Ø5mm	

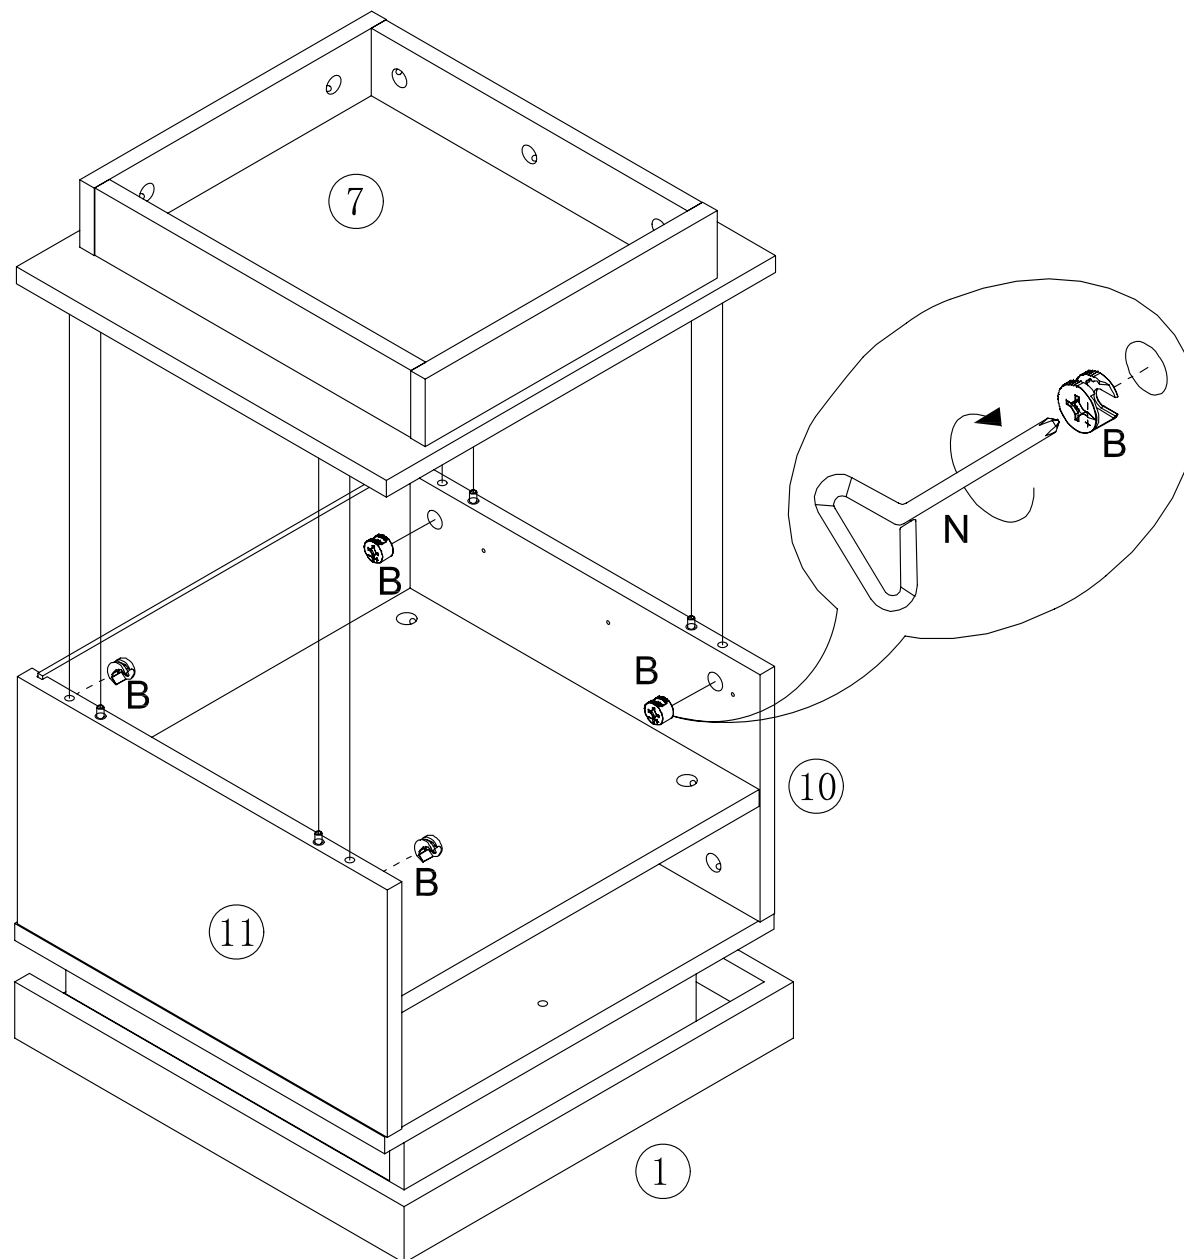
10





Important: Unscrew the push-pull head to adjust its length.

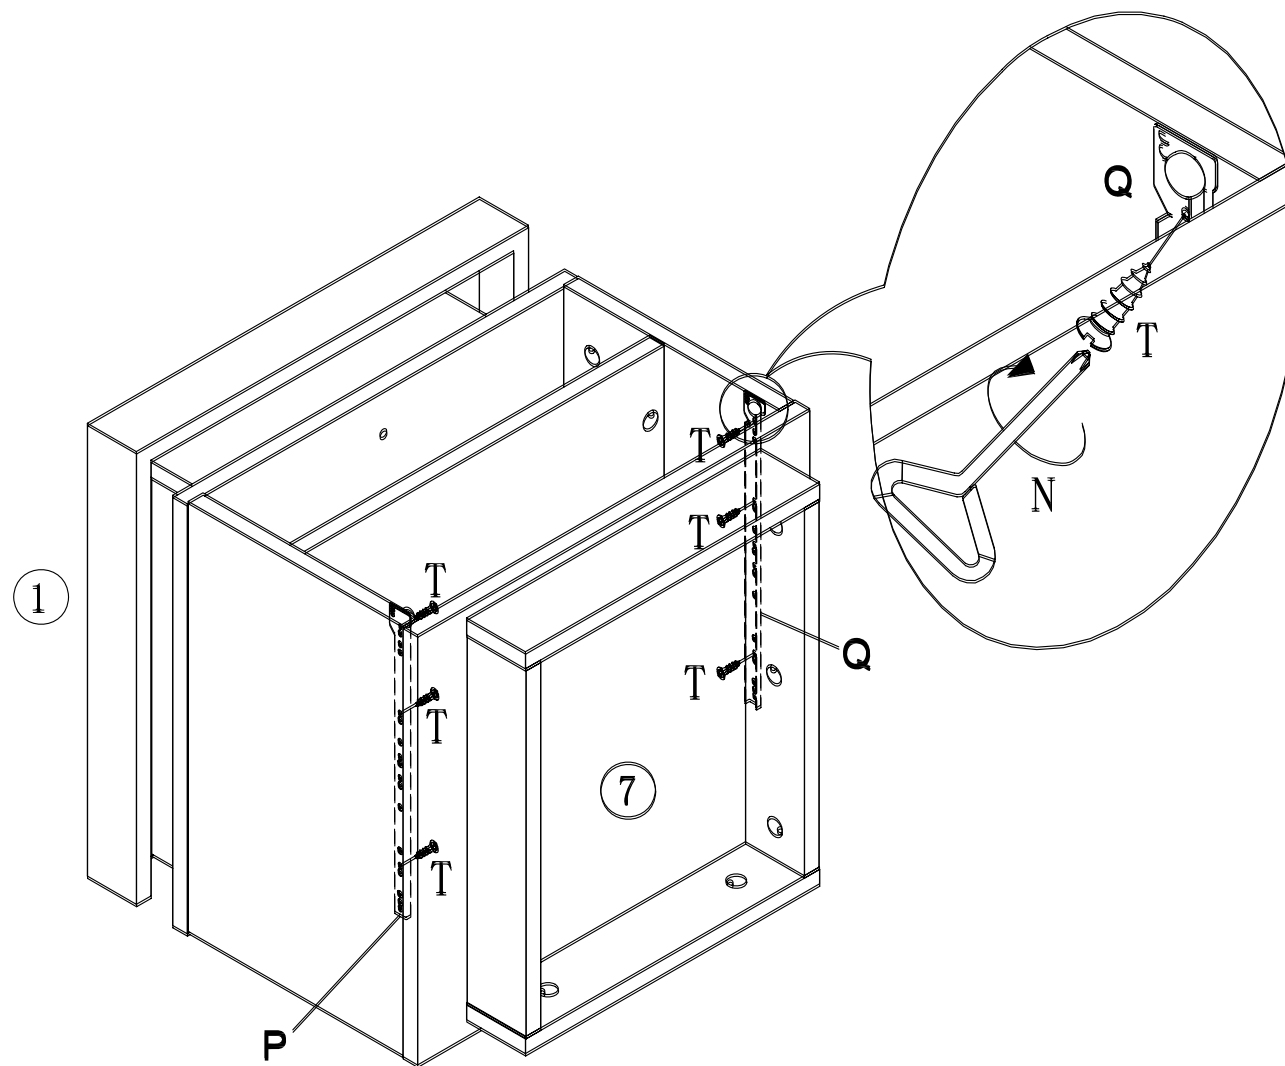
K		3	J		1	A		4	N		1
	Ø3.5*12mm			80*10*15mm			Ø7*33mm			Ø5mm	





11



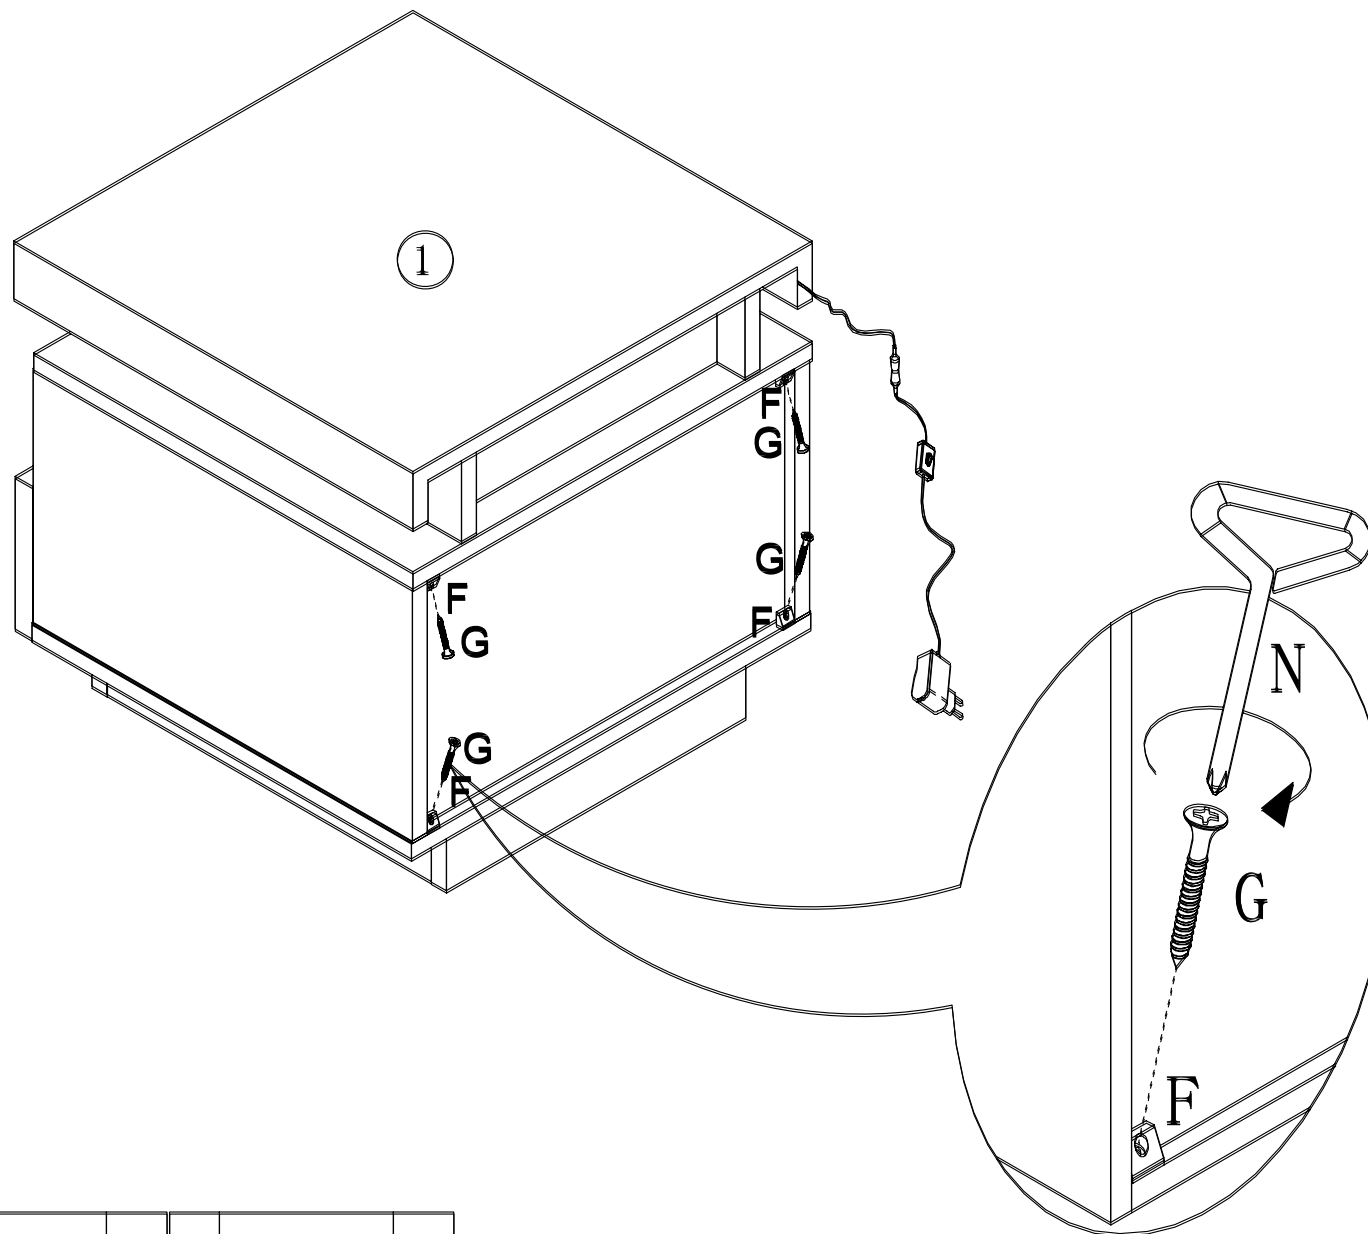
N		1	B		4
	Ø5mm			Ø15*11.5mm	




12



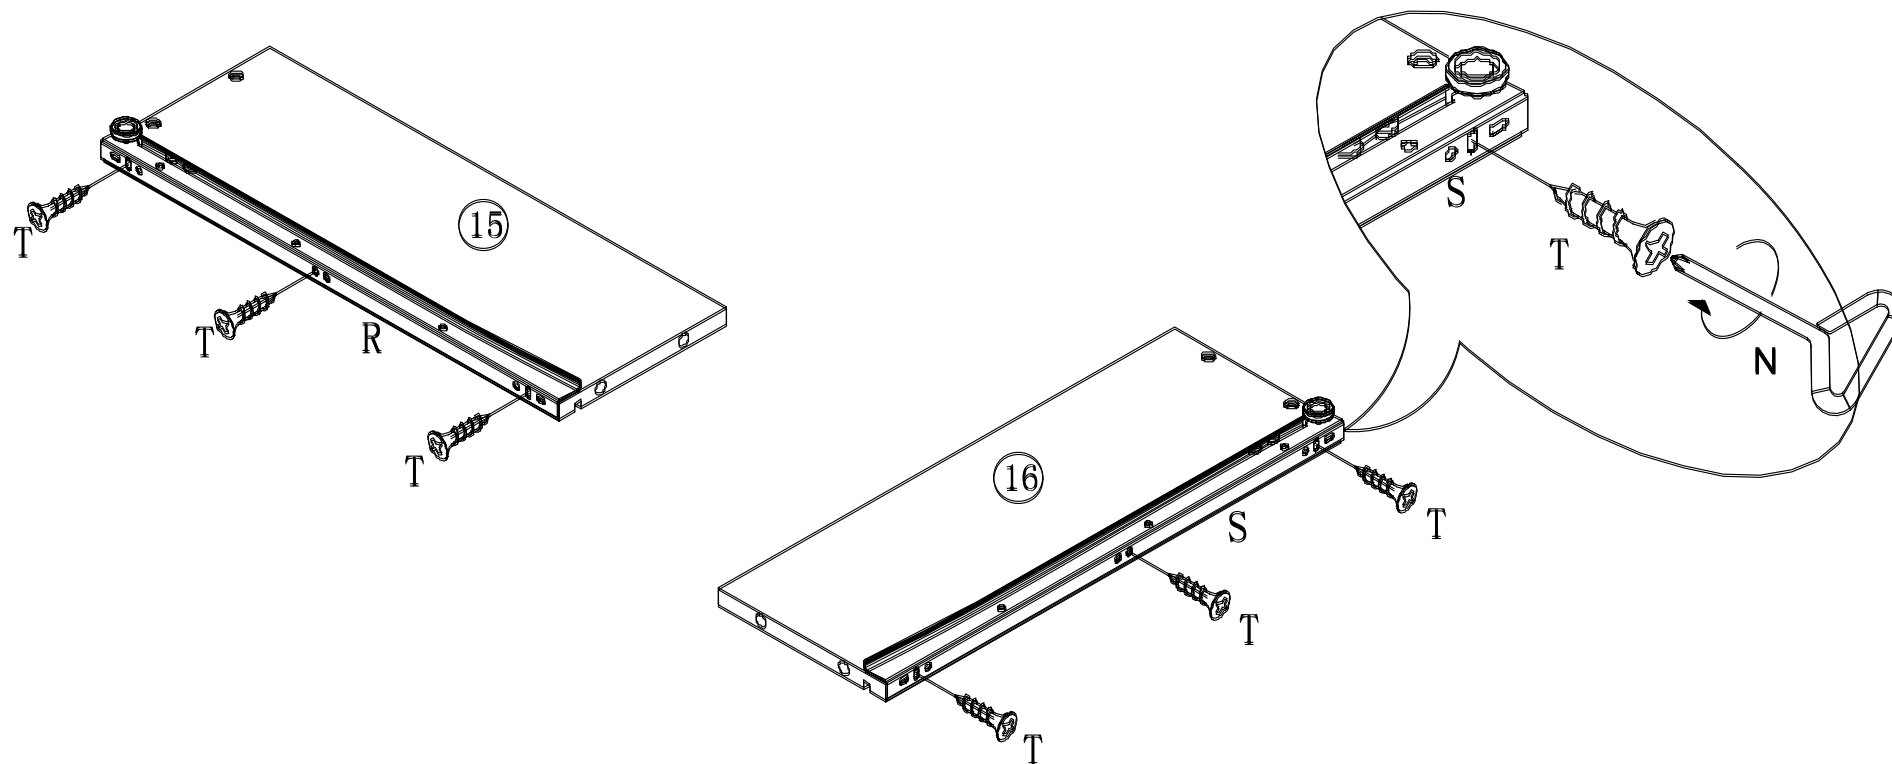
T		6	P		1	Q		1	N		1
	Ø4*12mm			350mm			350mm			Ø5mm	





13



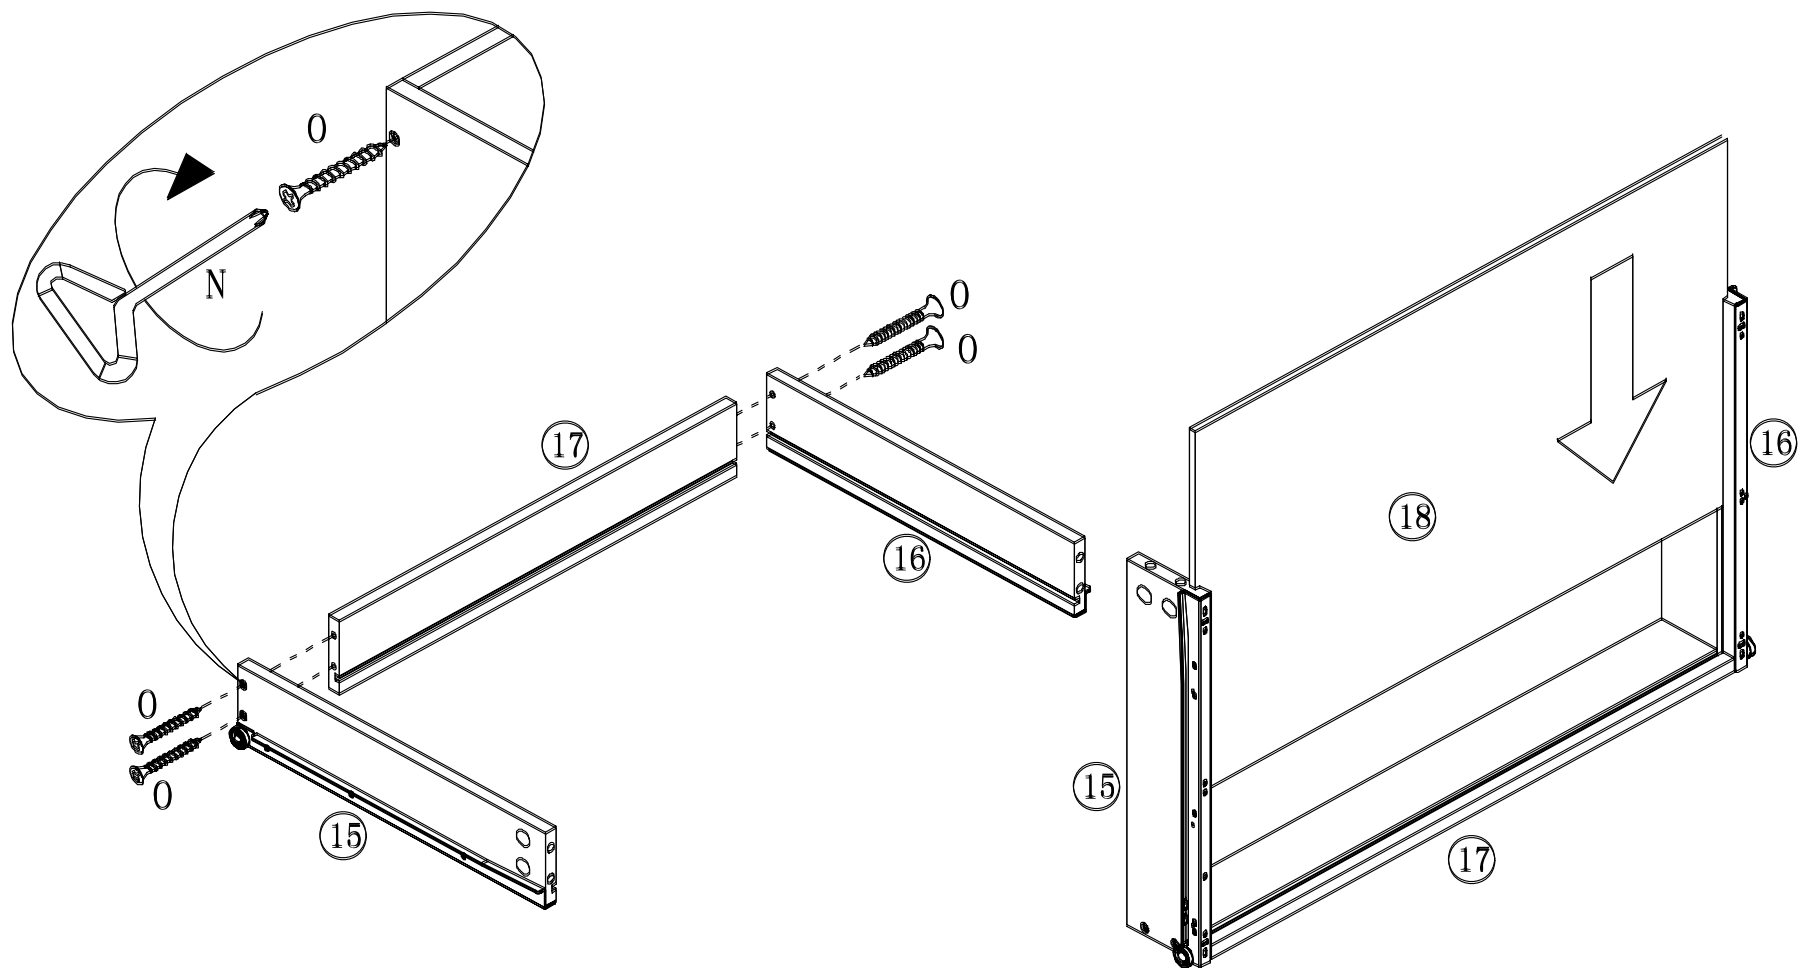
G		4	F		4	N		1
	Ø4*16mm			17*16*10.5mm			Ø5mm	



14



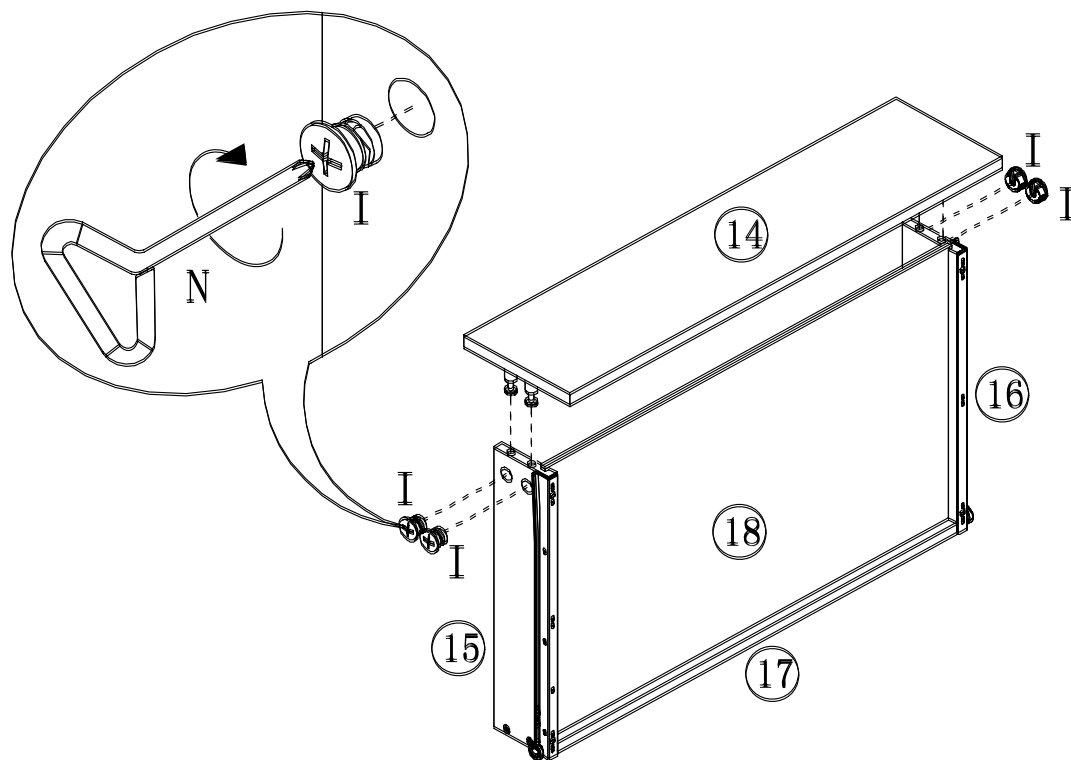
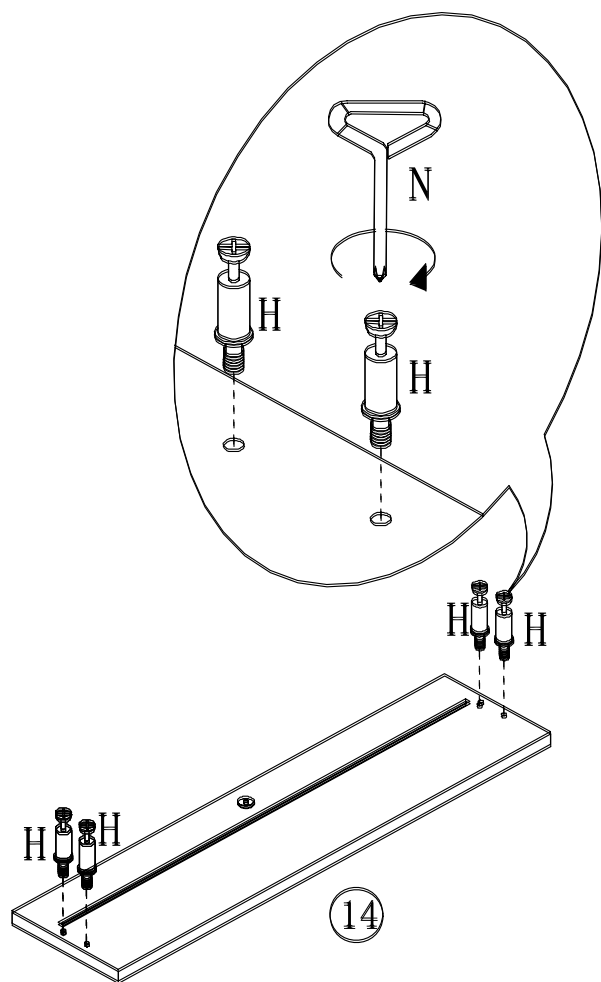
T		4	R		1	S		1	N		1
	Ø4*12mm			350mm			350mm			Ø5mm	




15

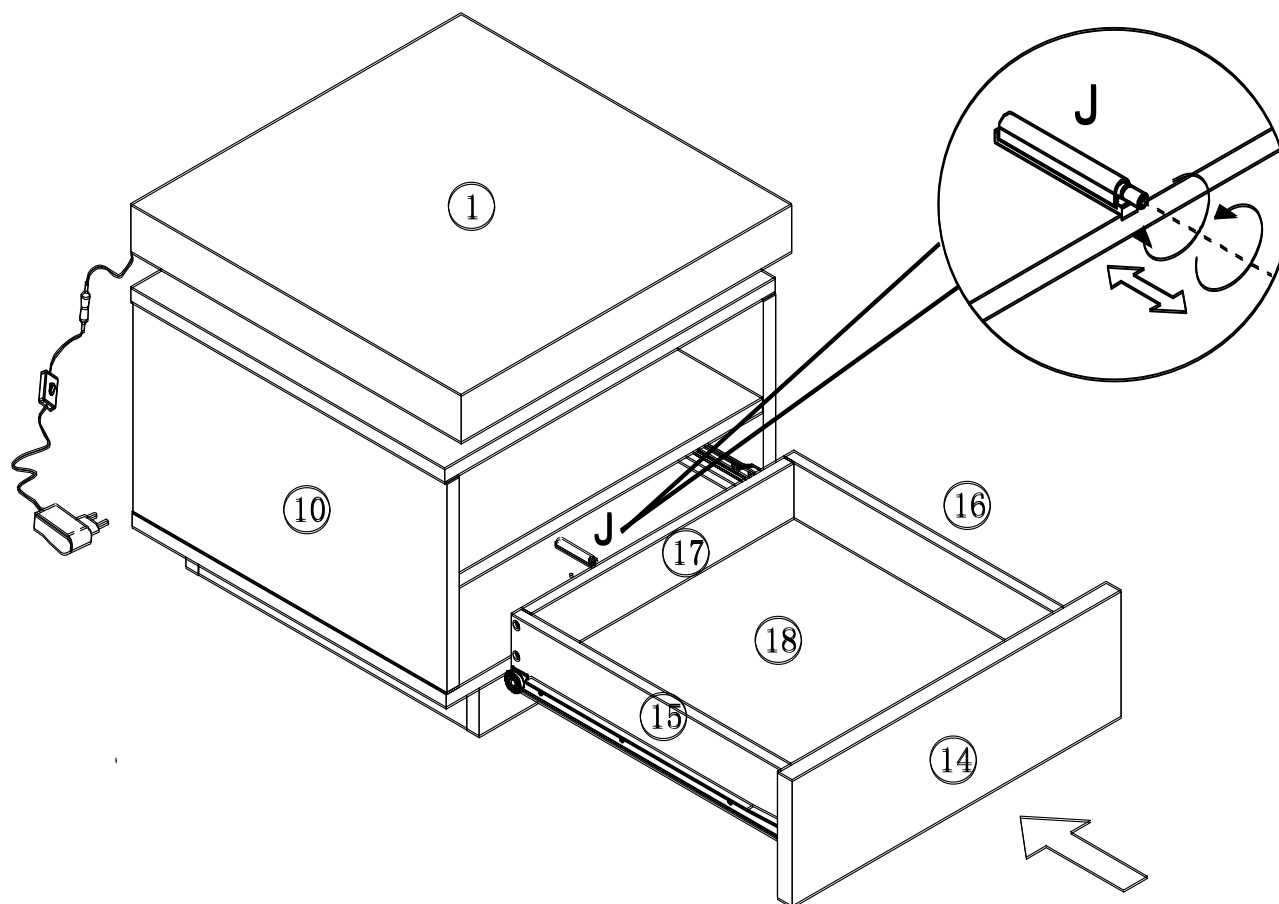


O		4	N		1
	Ø4*25mm			Ø5mm	

16



H		4	I		4	N		1
	Ø6.5*28mm			Ø10*9.5mm			Ø5mm	



Important: To reduce any possible gap between the furniture and the drawer panel, you can adjust the length of the push-pull by unscrewing its head.

