


ASSEMBLY INSTRUCTIONS


MODEL NO : 860-004 (Wardrobe System 3-Drawer Side Cabinet*Oak)

Before you begin, please follow Assembly Instruction carefully.
Please follow them step by step.


A)  plastic dowel 46 pcs	B)  jcbc m6x40mm 14 pcs	C)  jcbc m4x50mm 16 pcs	D)  m4 x 5/8" 36 pcs	E)  minifix 8 sets	F)  (15 mm) minifix cover 8 pcs	G)  L key 1 pc	H)  stud 4 sets	I)  leg stud 4 pcs	J)  handle 4 sets	K)  Lock (S) 1 set	L)  L bracket 2 sets
---	---	---	--	--	--	--	---	--	--	--	--

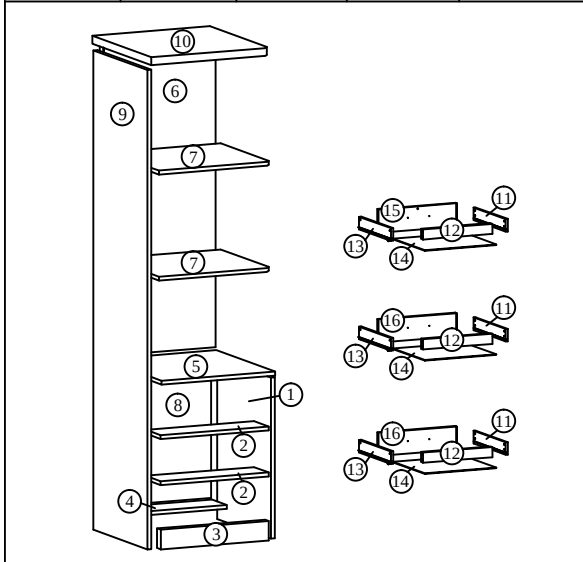


STEP 1

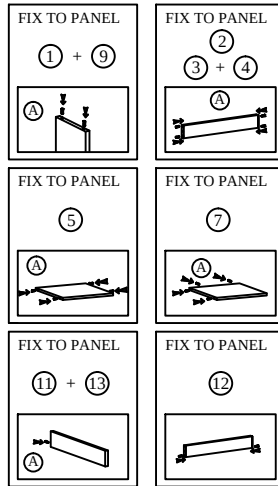


STEP 2

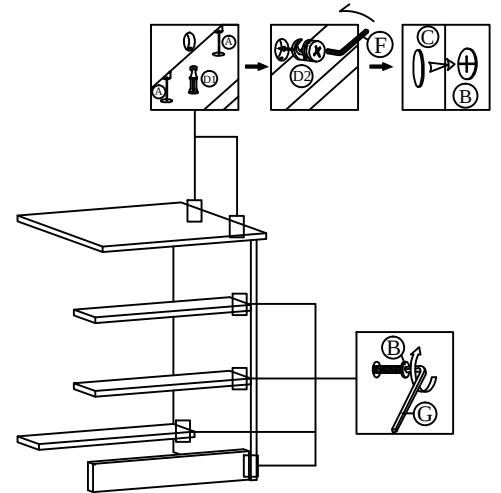


STEP 3

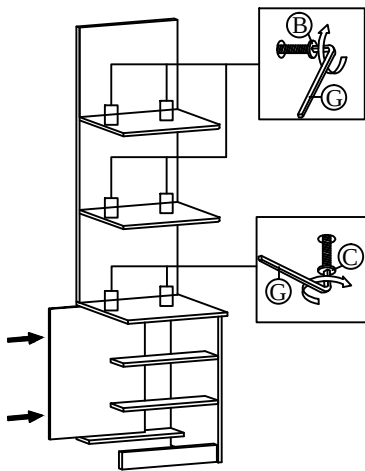


STEP 4

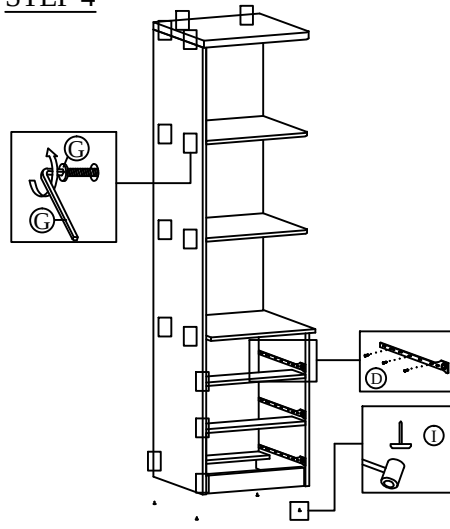


STEP 5

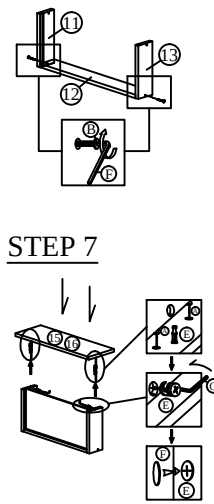


STEP 6

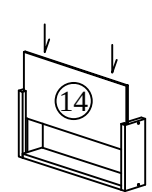


STEP 7

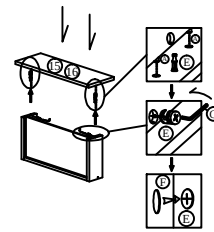



STEP 8

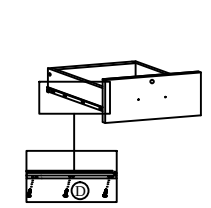

STEP 9

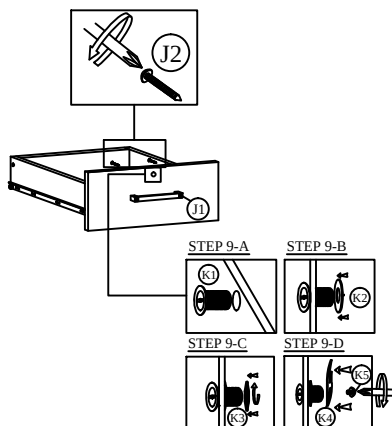

STEP 10

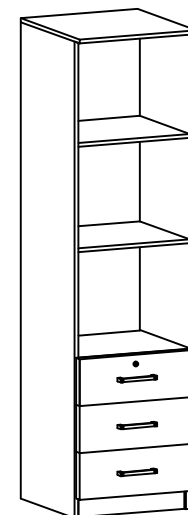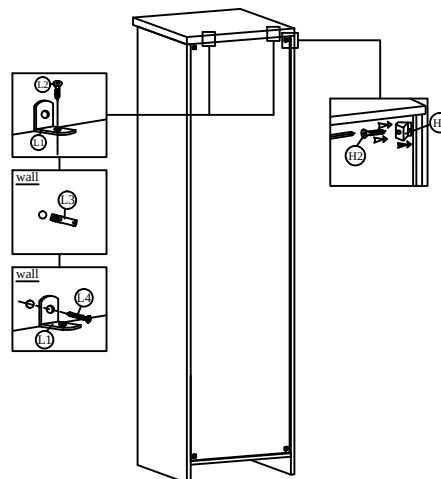

Complete