




# ASSEMBLY INSTRUCTION

## 7001-S0FA

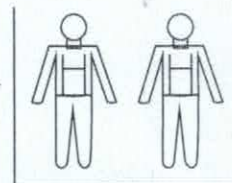


A\*1



B\*1




C\*1 LEFT



C\*1 RIGHT




D\*2



E\*2



F\*2




G\*4




I\*4


### STEP1

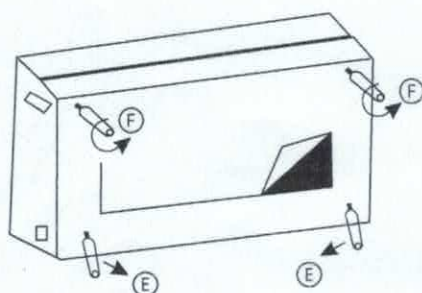


### STEP2

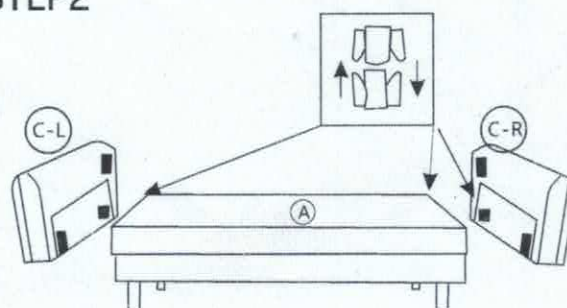

### STEP3

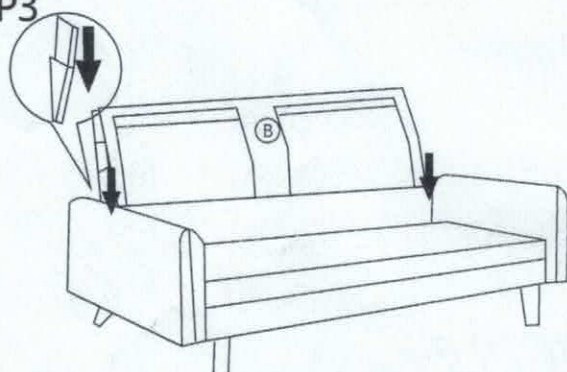


### STEP4

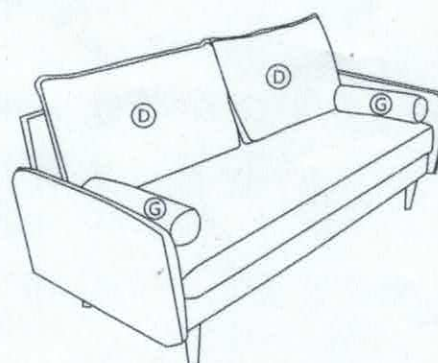

### KINDLY REMINDER

D\*2, E\*2, F\*2, I\*4  
PACKED IN LOVESEAT

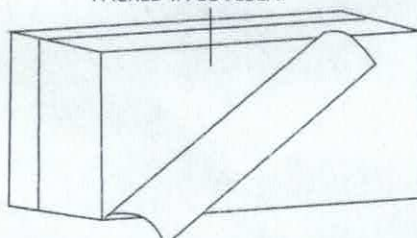

CAREFULLY UNPACK AND PLACE THE LOVESEAT BOOYIAJ ON ACLEAN FLAT SURFACE TO SHOW THE BASE AS SHOWN  
UNPACK PARTS FROM THE STORAGE COMPARTMENT