

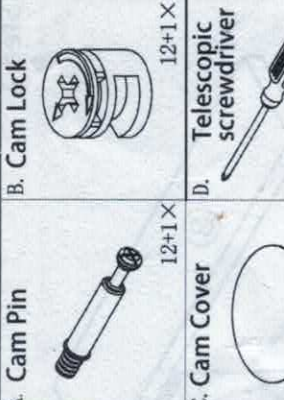

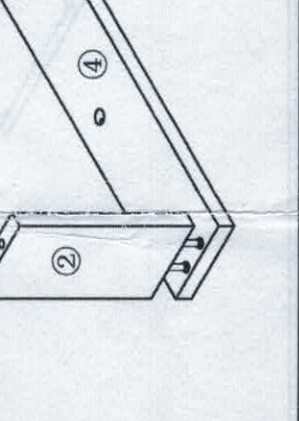
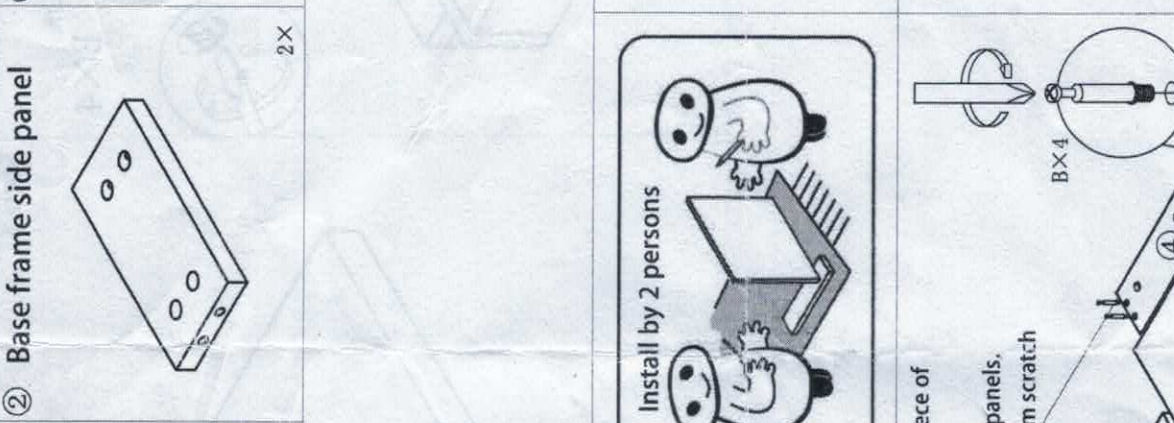


① Bedboard  1×	② Base frame side panel  2×	③ Base frame back panel  1×	④ Base frame front panel  1×	A. Cam Pin  12+1×	B. Cam Lock  12+1×	C. Cam Cover  12×	D. Telescopic screwdriver 
Install by 2 persons 				Step 1 Attention: First of all, put a piece of carton or rug on the floor, and then begin to install the panels, so as to prevent the parts from scratch 			
Step 2 				Model GF089-CT0404 Size 400W*400D*153H			


Step 3

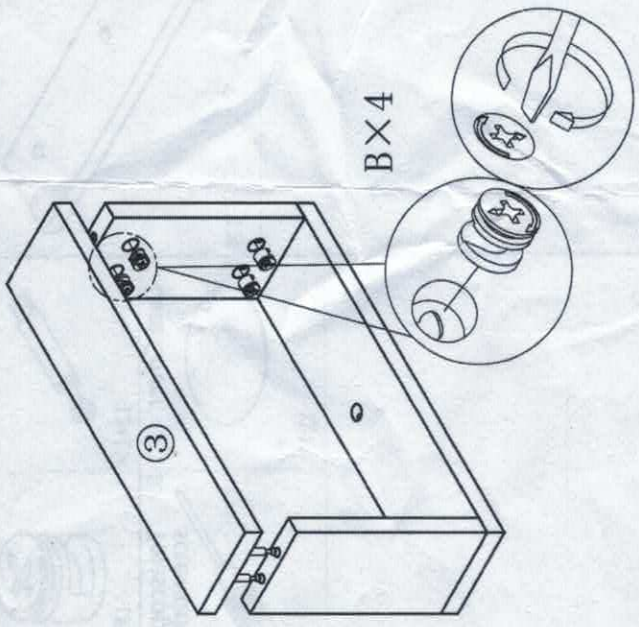

Step 4 Note: The bottom frame and bedboard connection can be installed left and right both.

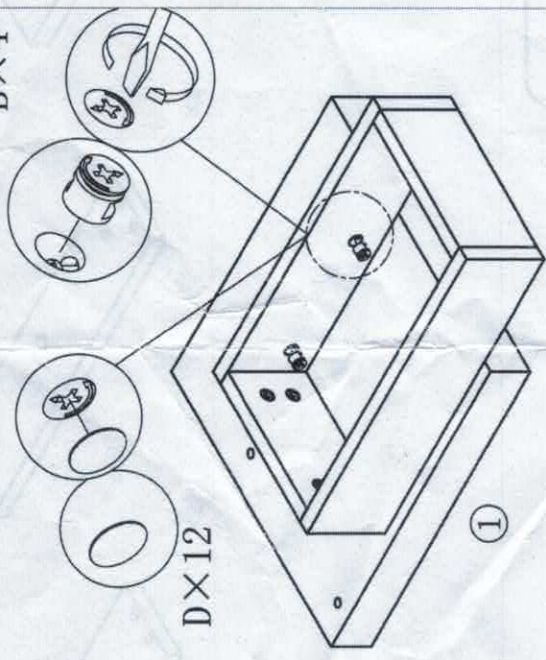

Step 5

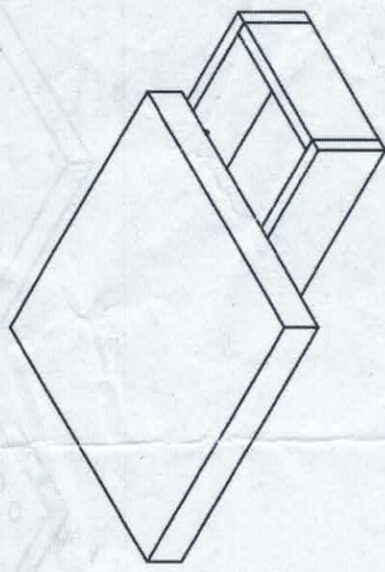

Step 6 Note: The steps of side bedboard and bed connection are as follows, side bedboard can be installed left and right both.

