



①Desk top panel 1×	②Solid wood leg 1 2×	③Solid wood leg 2 2×	④Left and right side panels 2×	A. Cam pin 33+1× B. Cam Lock 33+1×
⑤Brace 1 1×	⑥Brace 2 1×	⑦Modesty panel 1×	⑧Drawer front panel 1×	C. Cam Cover 33× D. Dowel 18×
⑨Drawer left and right side panel 2×	⑩Drawer back panel 1×	⑪Drawer bottom panel 1×	⑫Mirror plate 1×	E. Long pitch self-tapping screw (4*35/Black) 4× F. Puller screw 1×
Install by 2 persons				G. Telescopic screwdriver 1× H. Japanese-made nails (3.5*14/color zinc) 24+2×
				I. Corner bracket 4× J. T-shape pull handle 1×
				K. Wood screw (3*15/color zinc) 8× L. Flat bracket 2×
				M. Self-adhesive mat 4×
				N. Outside rail 2×
				Model GF106-0613 Name Dresser table Size 600W*400D*1350H

Step 1

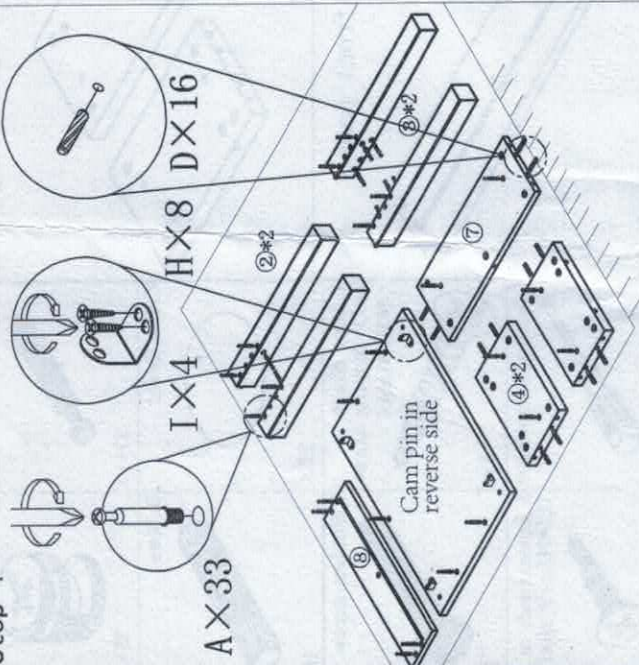


Step 2

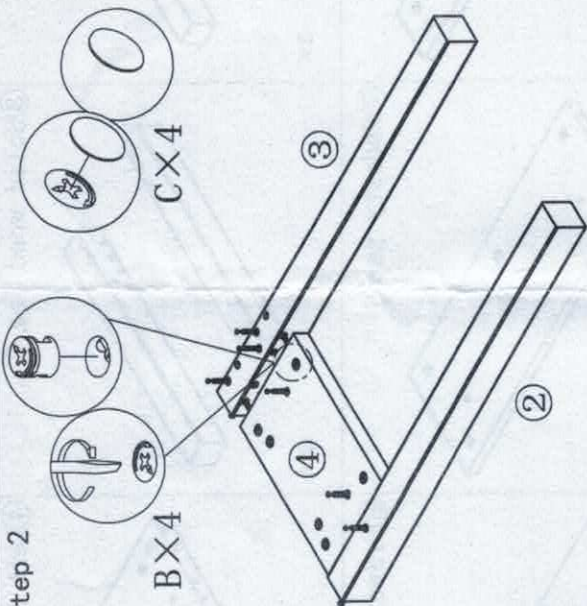


Note: installation of two sets, one set each on the left and right


Step 3

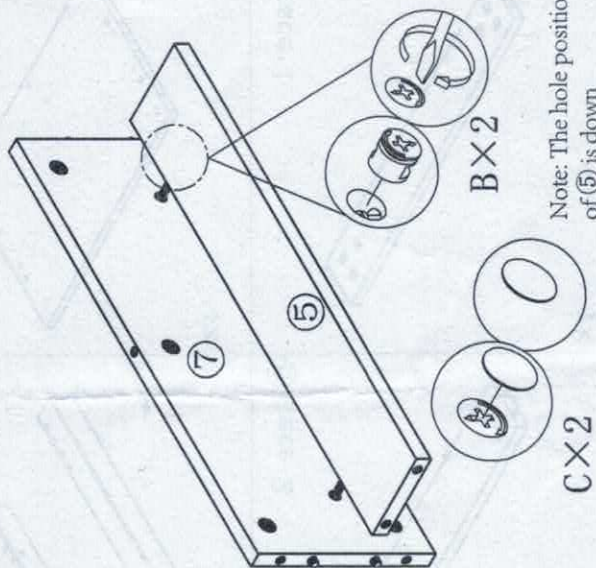


Step 4

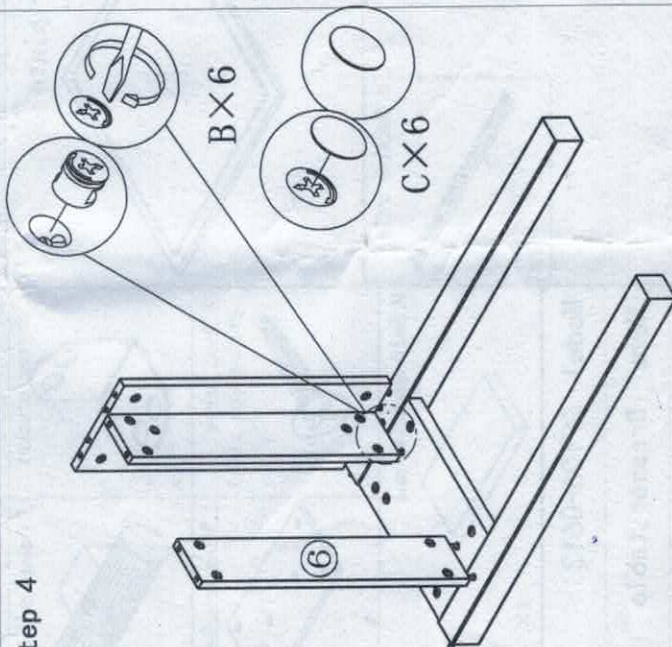


Step 5

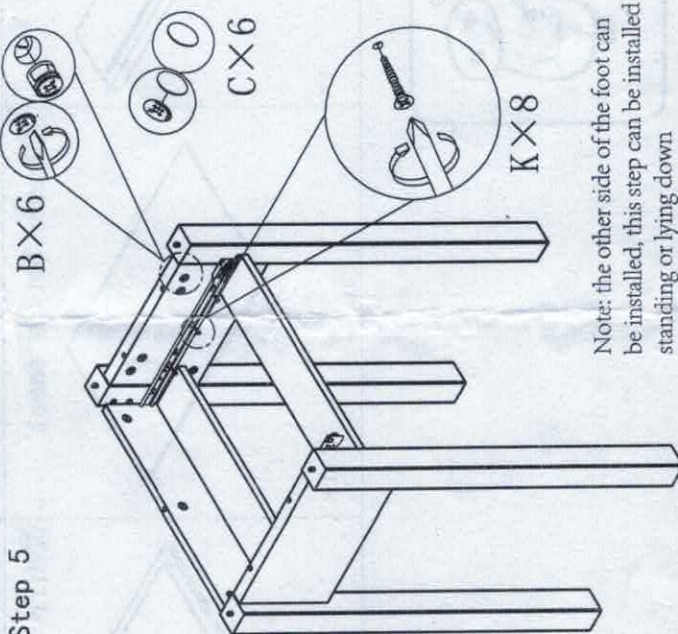


Step 6

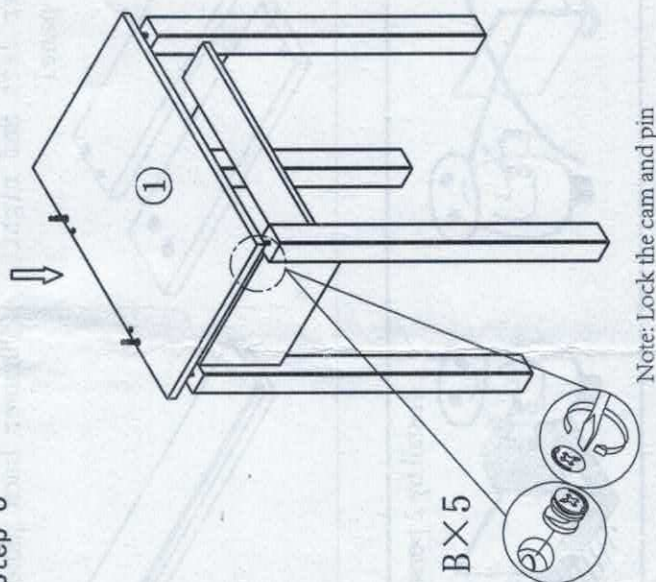


Step 7

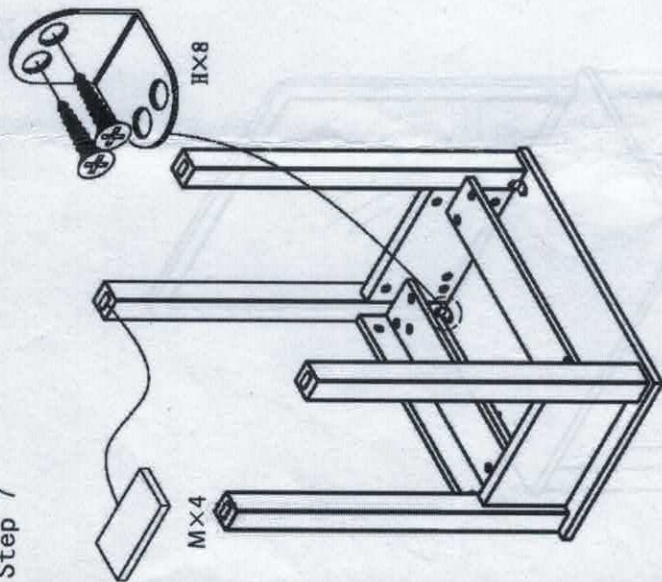


Step 8

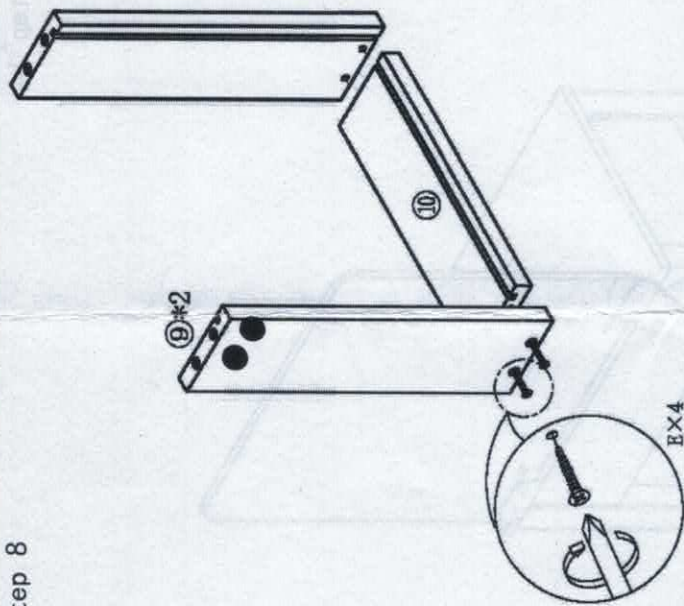


Step 9

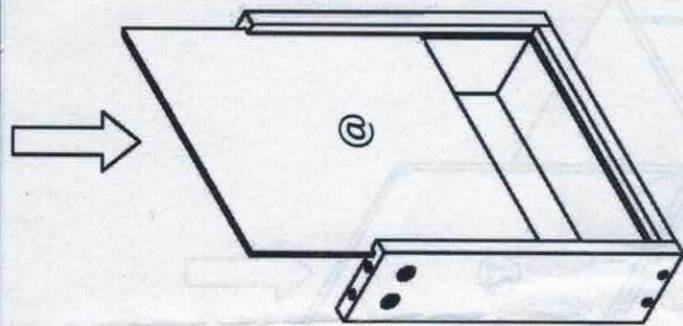


Step 10

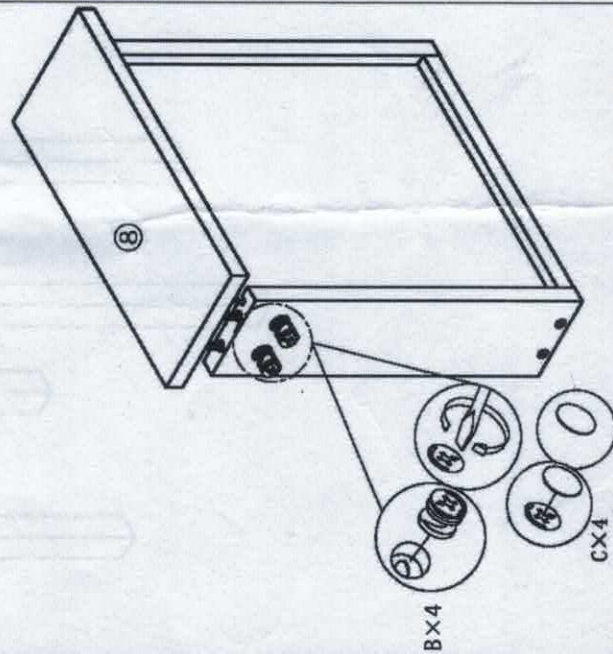

Step 11

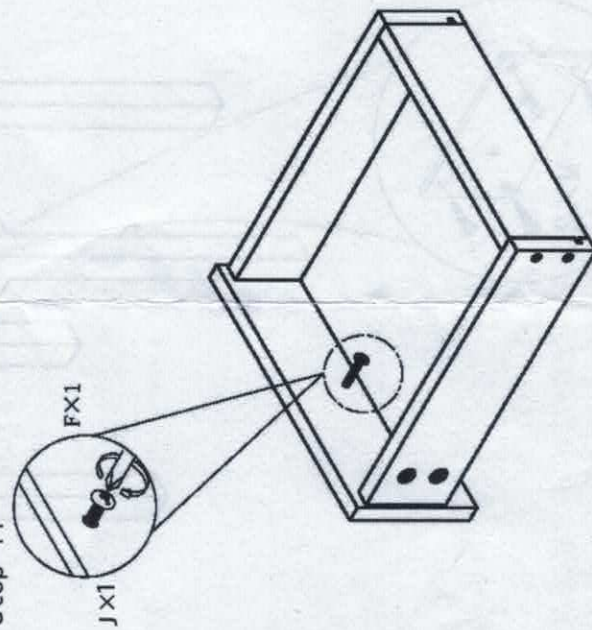


Step 12

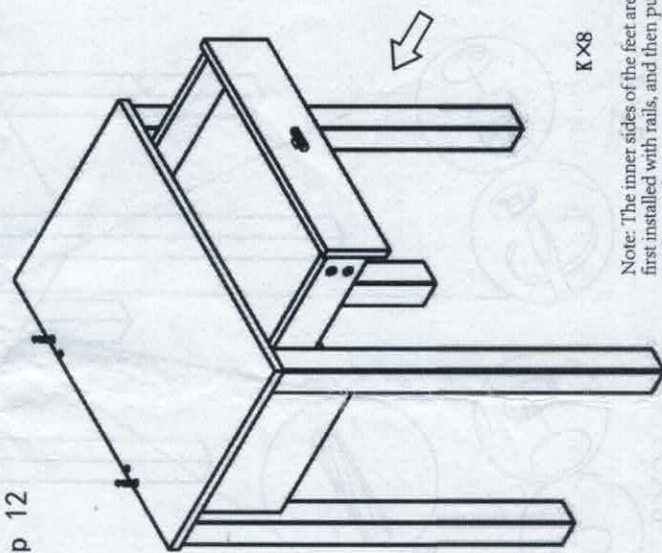


K x 8

Note: The inner sides of the feet are first installed with rails, and then put on the pat drawer.

Step 13

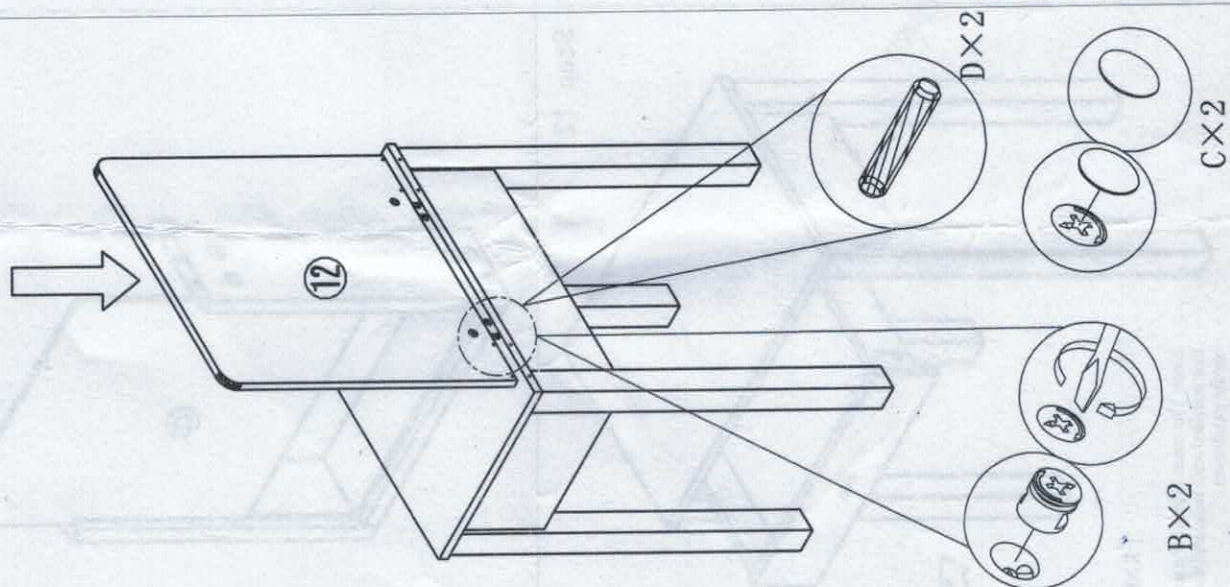

Step 14

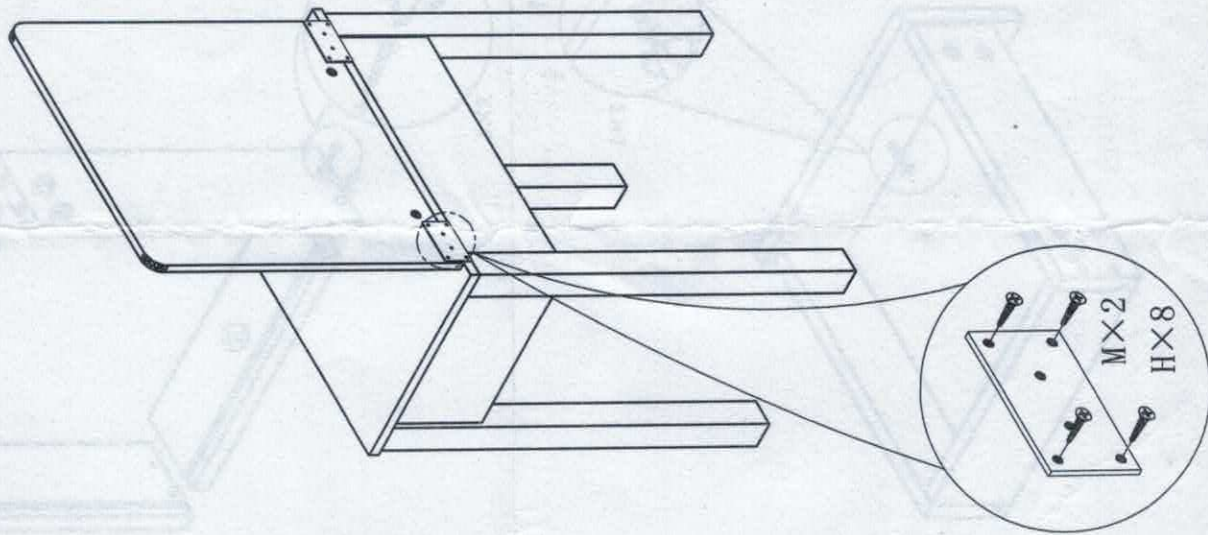

Step 15

