


































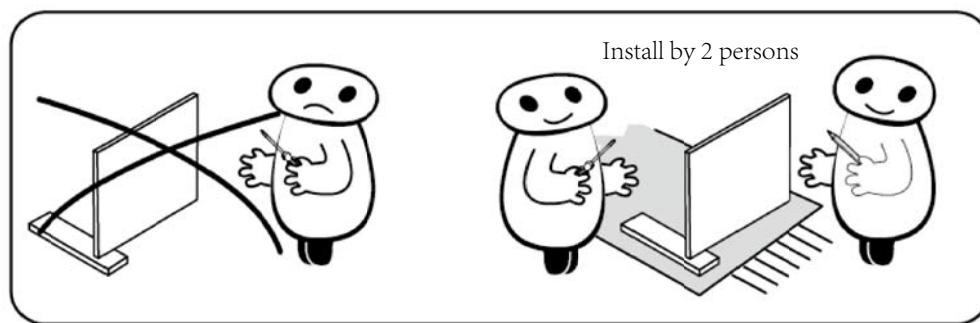



①Desk top panel  1×	②Panel  1×	③Bottom brace 1  1×	④ Bottom br  1×	⑤Bottom brace 3  1×
⑥Modesty panel  1×	⑦Right side panel  1×	⑧Left side panel  1×	⑨Divider panel  1×	⑩Solid wood leg  1×
⑪Drawer front panel  2×	⑫Drawer left side panel  2×	⑬Drawer right side panel  2×	⑭Drawer back panel  2×	A. Cam lock  48×
				B. Cam cover  48×
				C. Cam pin  48×
				D. Dowel  16×
⑮Drawer bottom panel  2×	⑯Left rear solid wood leg  1×	⑰Left front solid wood leg  1×	⑱Right rear solid wood leg  1×	
⑲Right front solid wood leg  1×	⑳Solid wood brace 1  2×	㉑Solid wood brace  2×	㉒Solid wood rail  1×	
				Model PS601-1206
				Name End table
				Size 1210W*600D*450H

E.Handle  2×	F.Handle nails  2×	G.Long pitch self-tapping screw(black) (4*35)  8×	H.Fiber nail (color) (4*35)  18×	I. Telescopic screwdriver  1×	J. Wood screw(3*15)  13×	K. Guide  2×	M. Large flat M8x30  1×	N. Adjustable leveling glides  1×
--	--	--	--	--	---	--	--	--

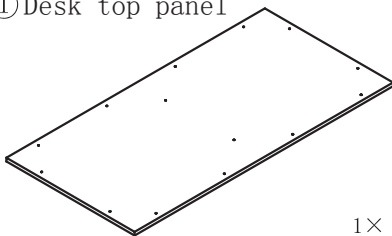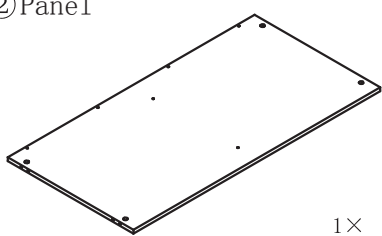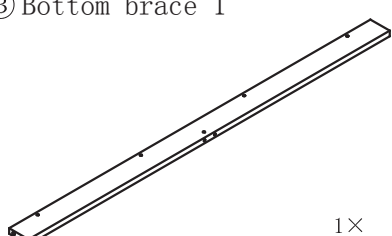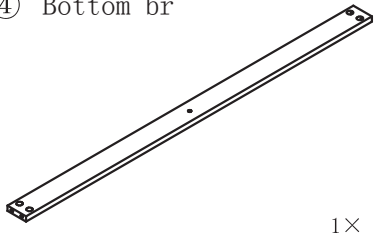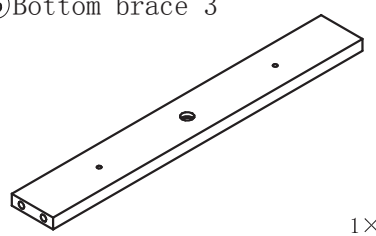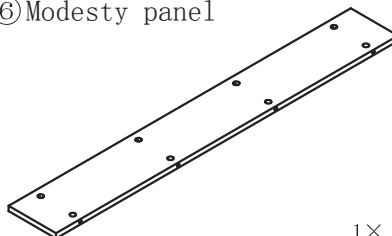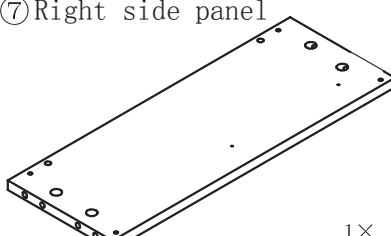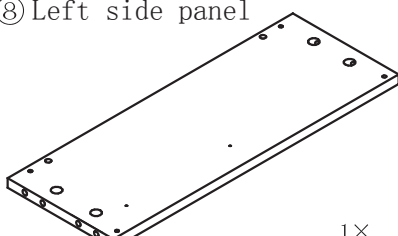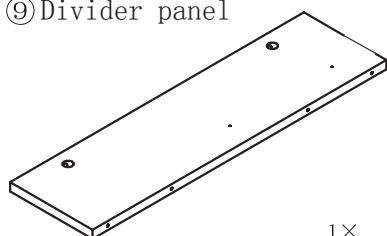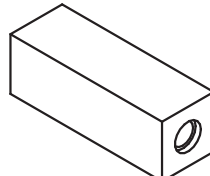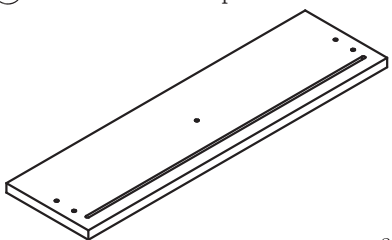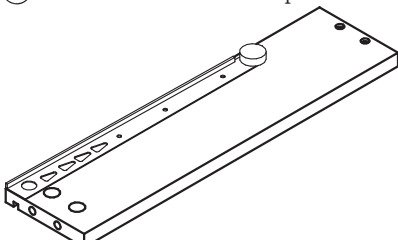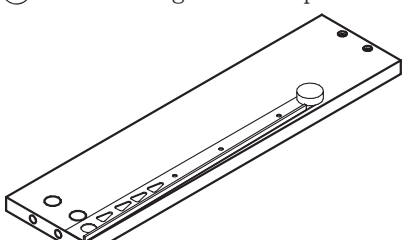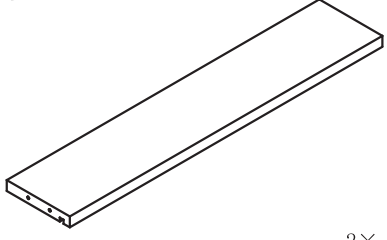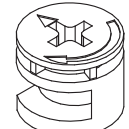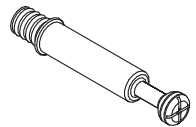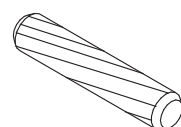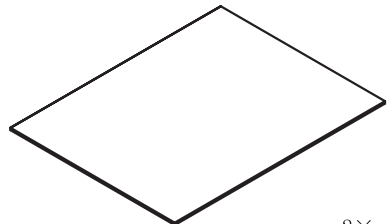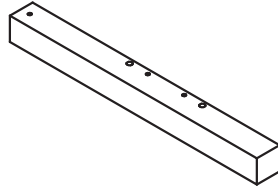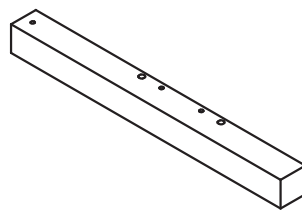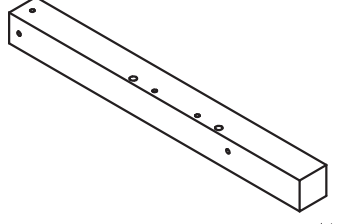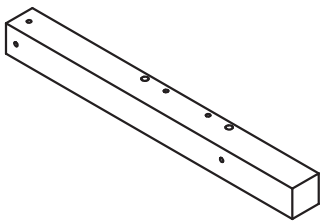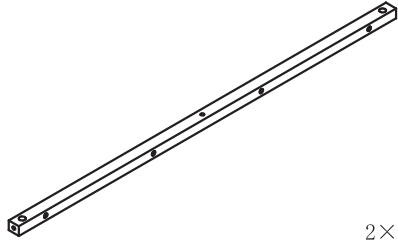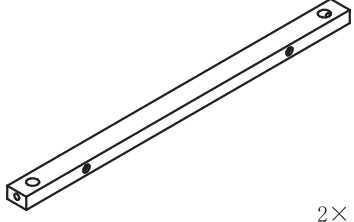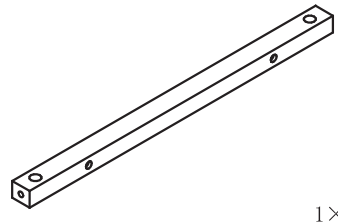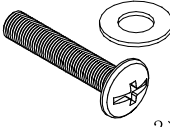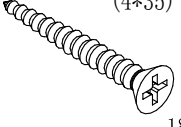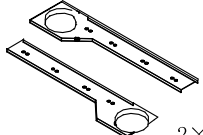


### Step 1

Attention:First of all, put a piece of carton or rug on the floor,and then begin to install the panels, so as to prevent the parts from scratch.

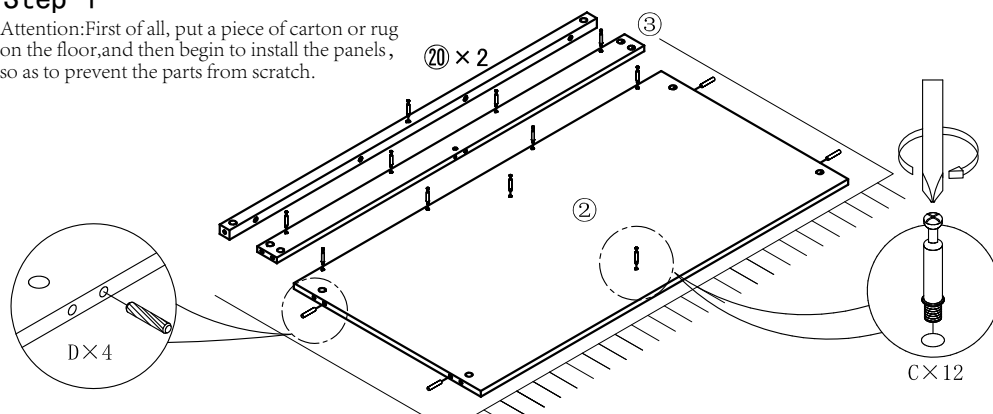


### Step 2

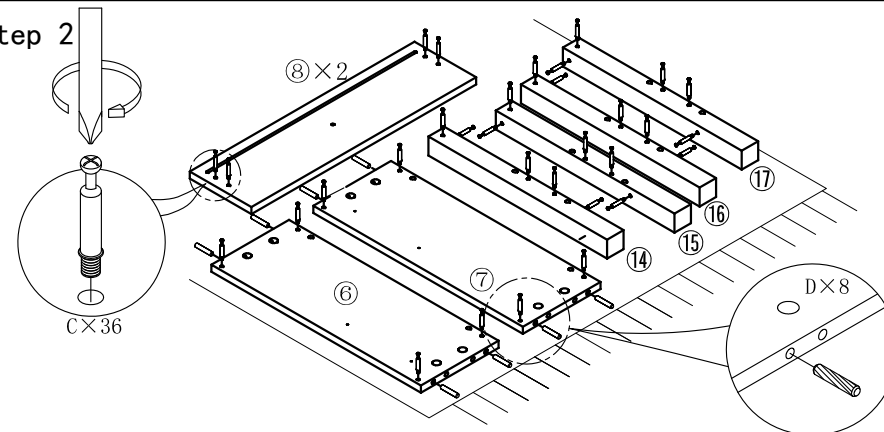


### Step 3


Note: First tighten the solid wood pulling bar 1 and solid wood rail, and then screw.

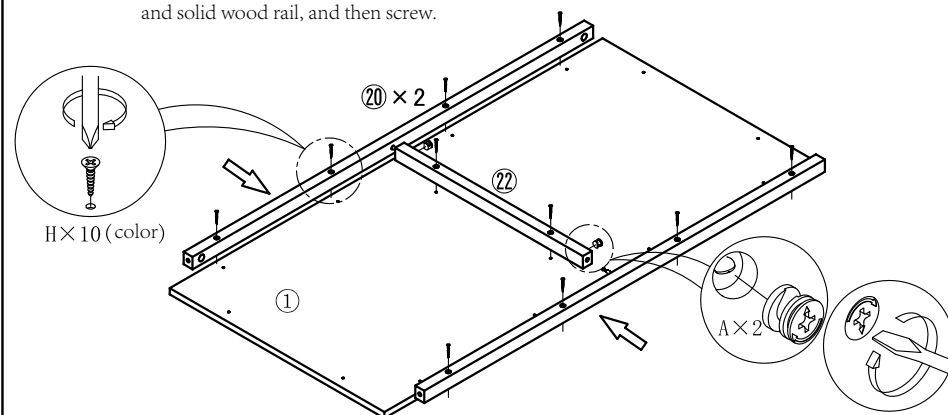


### Step 4

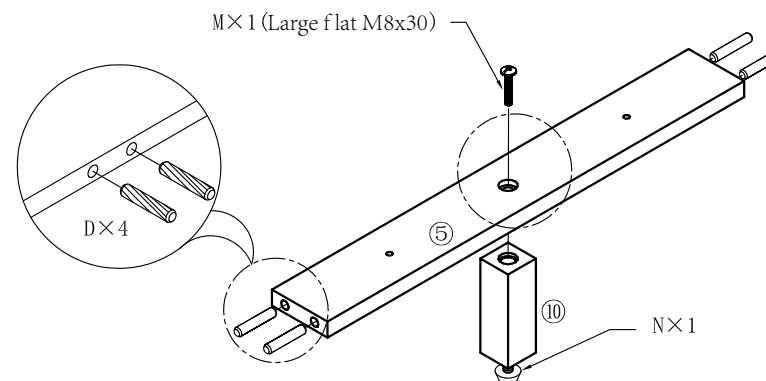


### Step 5

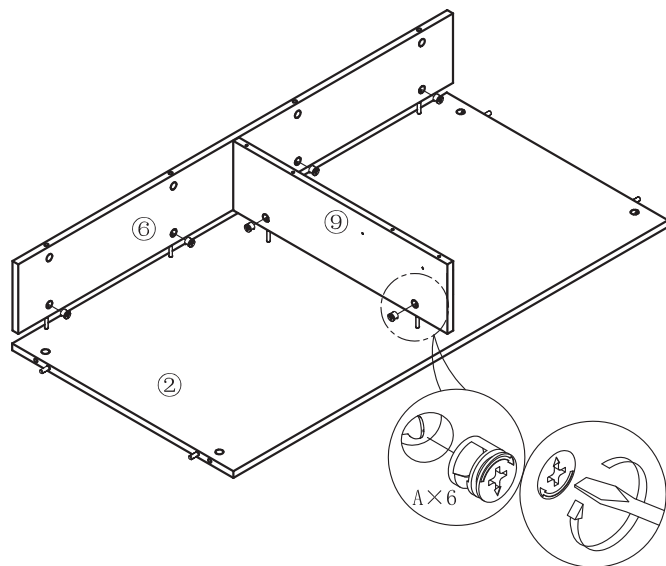

### Step 6

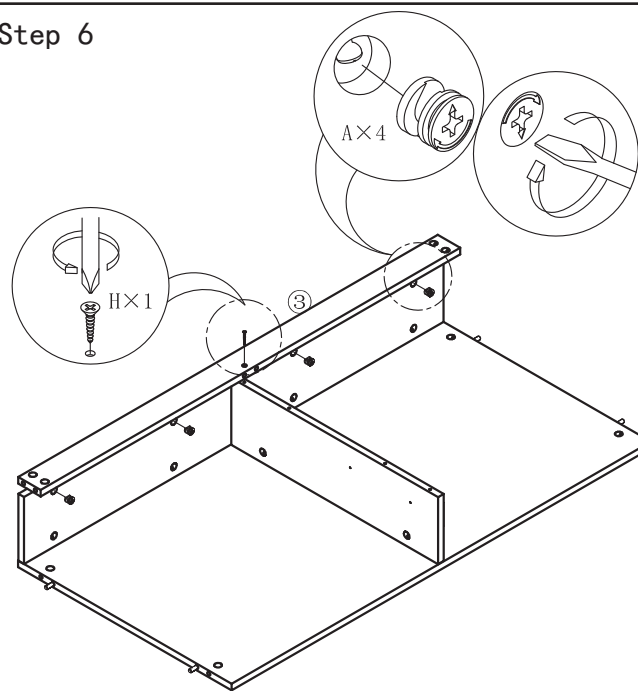


### Step 7

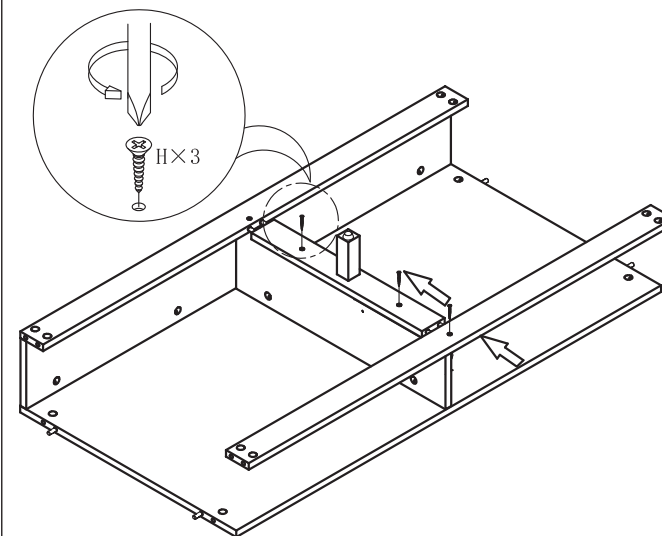


### Step 8

Note: The left part

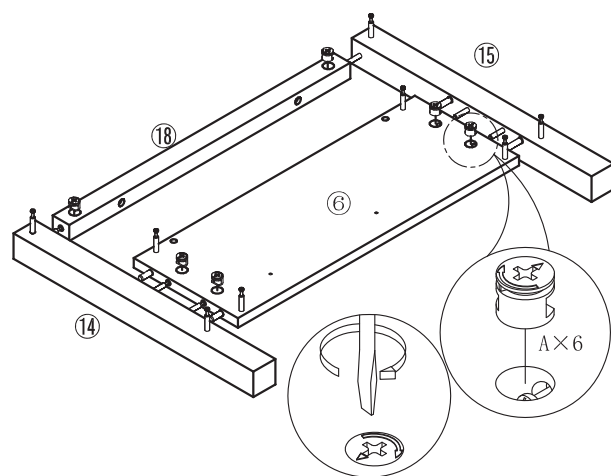


### Step 9


Note: The right part

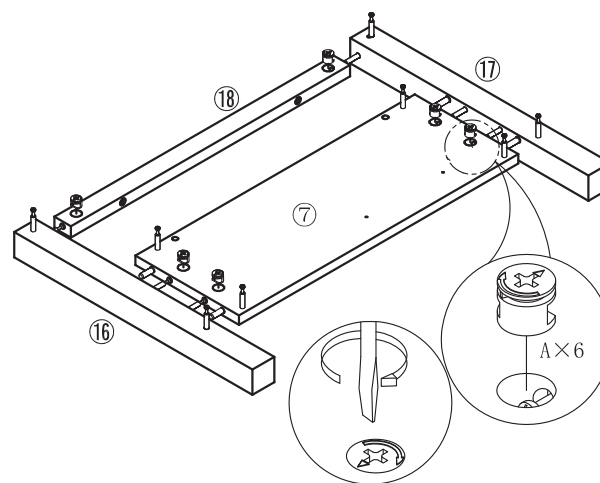

### Step 10

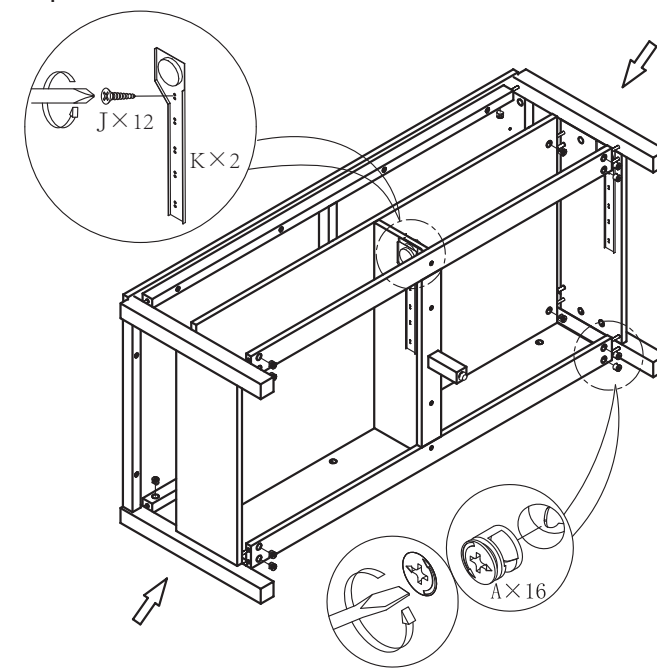


### Step 11

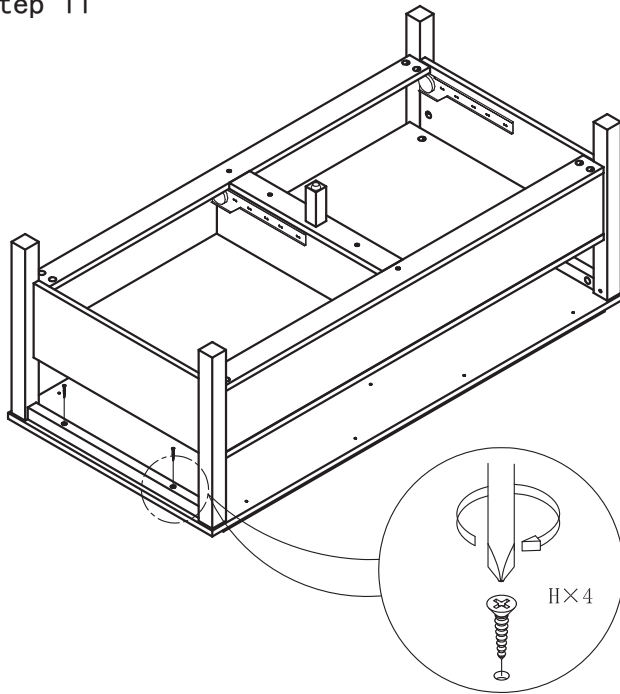


### Step 12

Note: There are two parts in this drawer, the installation diagram is as follows.

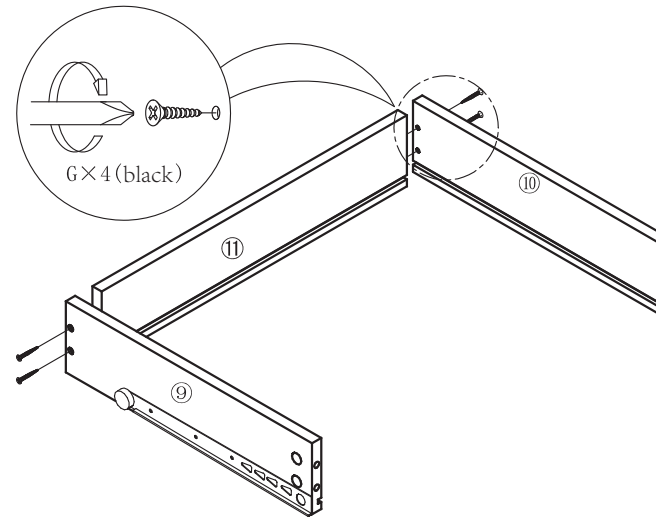


### Step 13

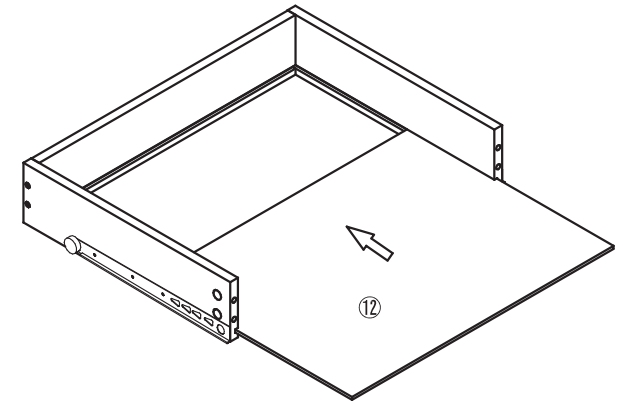


### Step 14

Note: After installing all the blocking latches, put on the cover sticker.

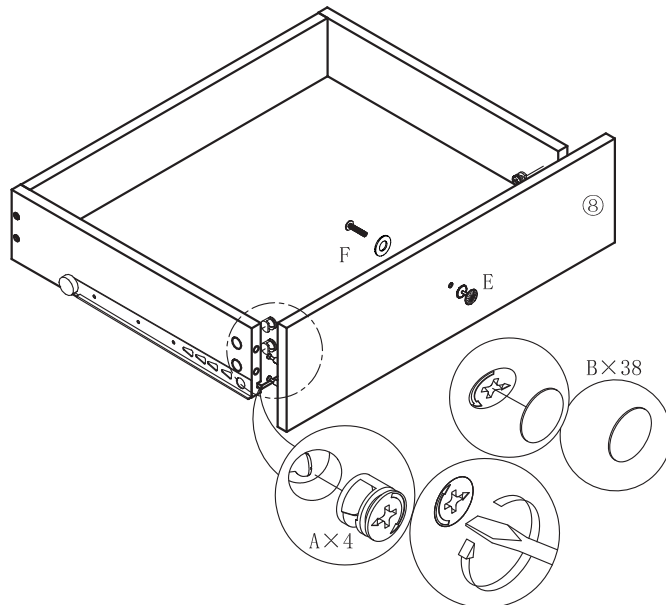

### Step 15

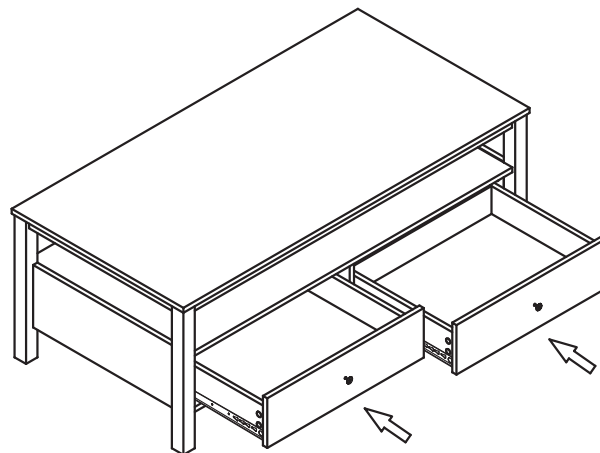

### Step 16

