30'

2

No.	Size	Qty
A1	918x350x22mm	1
A2	918x350x22mm	1
B1	890x382x23mm	1
B2	890x384x23mm	1
C	752x216x20mm	4
D	801x351.5x38mm	1
E	799x320x20mm	2
F	796x302x25mm	1
G	796x302x20mm	3

Hardware	Ctn No.	1

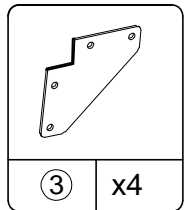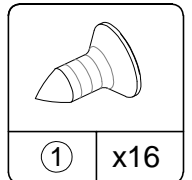|					
Ø5*12mm				Ø9*0.8mm	
① x34	② x2	③ x4	④ x4	⑤ x4	⑥ x4
spare:2			spare:2	spare:2	

⑦ x8

Ø8*38mm
⑧ x2
WALL ANCHOR
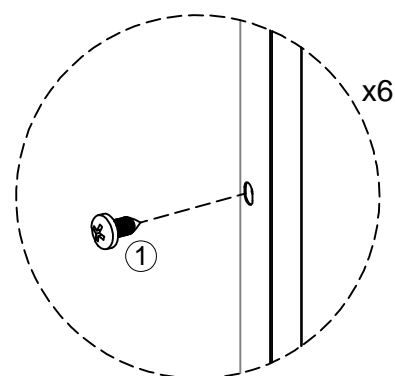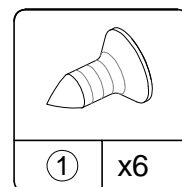
Ø4*38mm
⑨ x2
SCREW
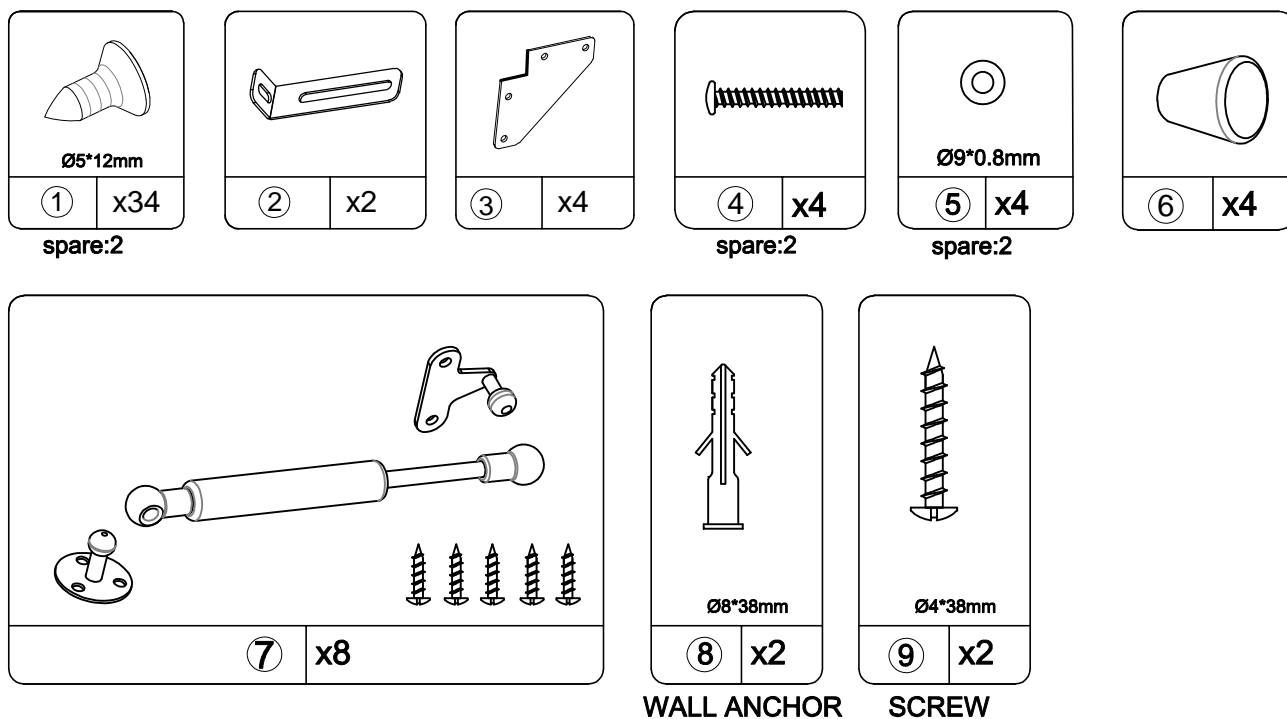
(1) - Attach (7) to (A1) & (A2) as below shown.

(A1) & (A2)

⑦ x8
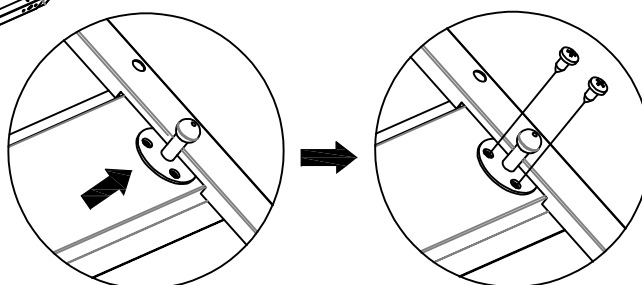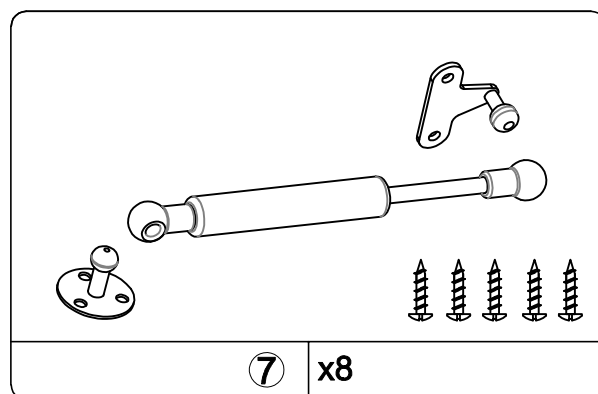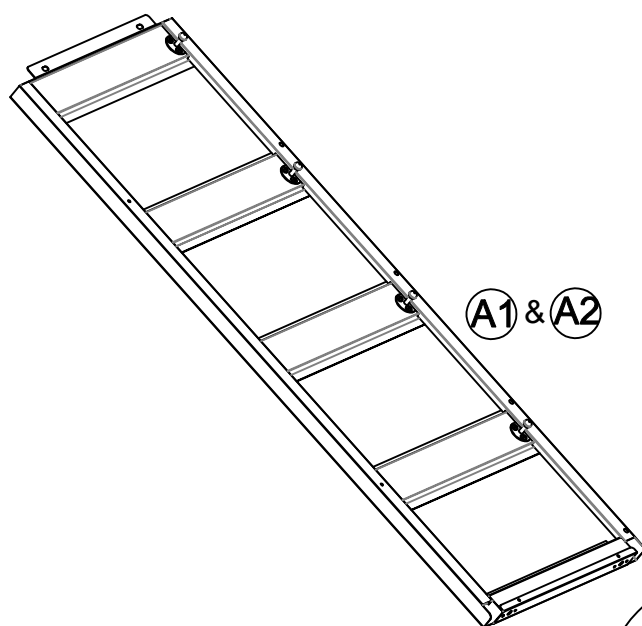
(2) - Attach (A) to (E) as below shown.

Make sure the holes are nearest to outside otherwise will affect door assembling.

A1

A2

E

E

E

The plastic foot cover face down
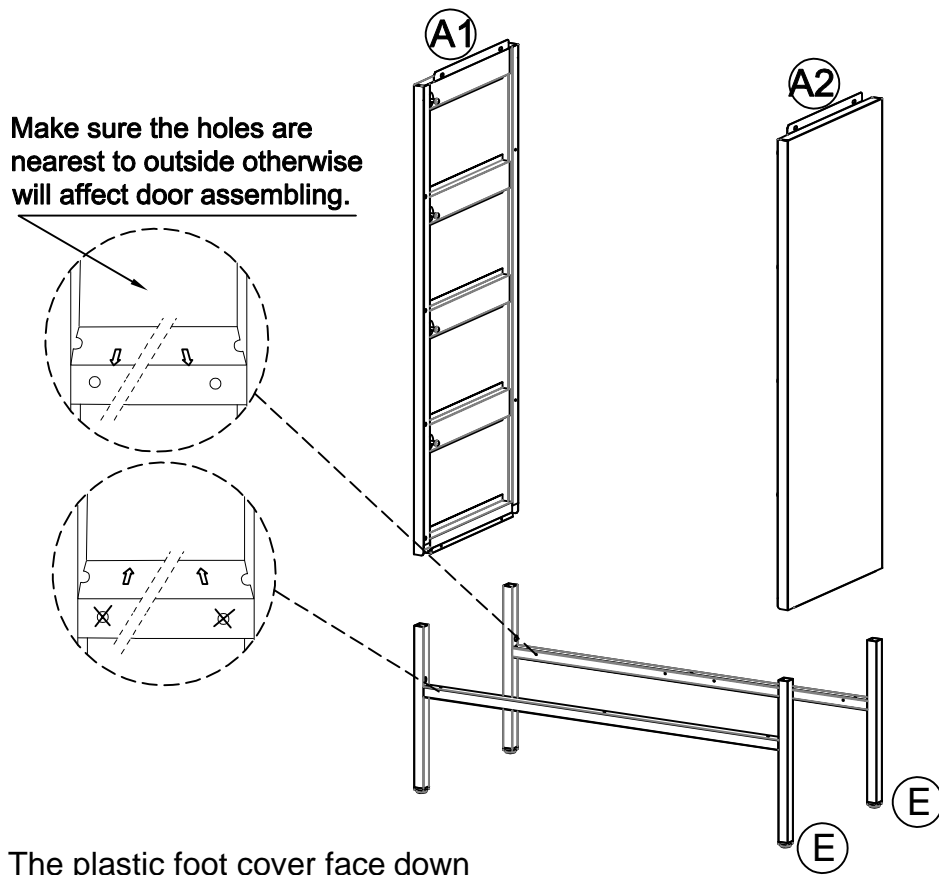
(3) - Attach ③ to (A)&(E) as below shown.

A1

A2

E

E

③

③

③

③

①

①

A

x4

③

①

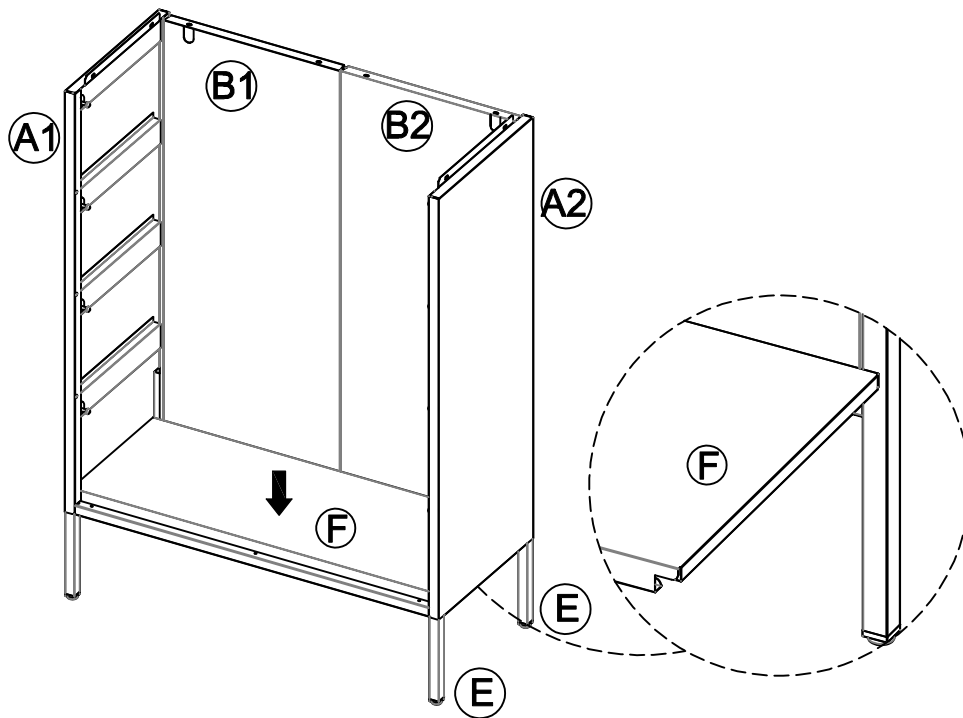| ①	x16

③	x4
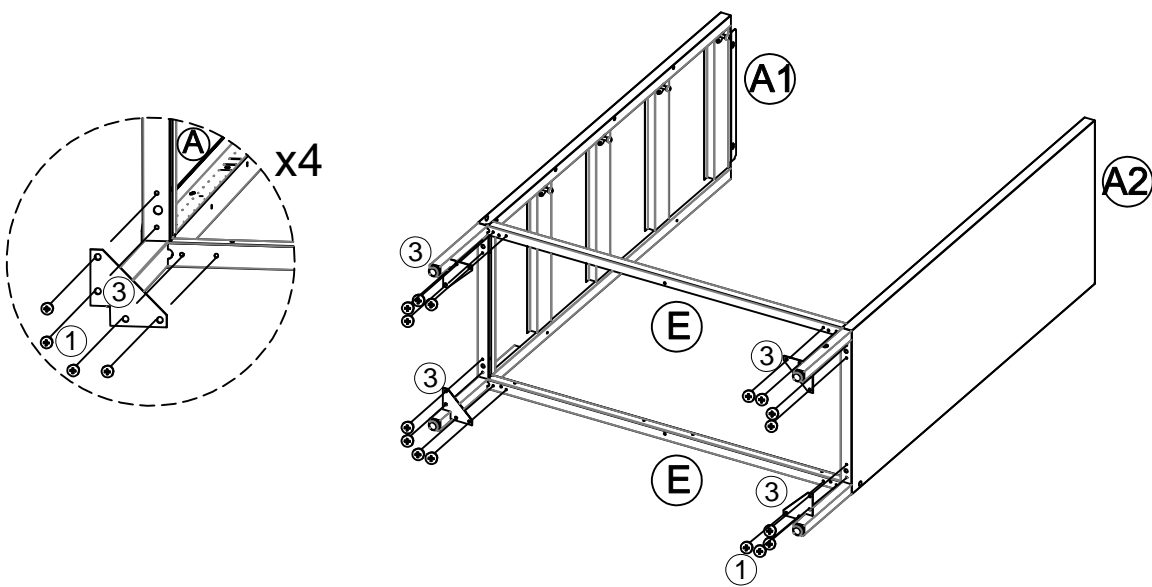
(4) - Attach (B) to (A) as below shown.

| ① | x6 |
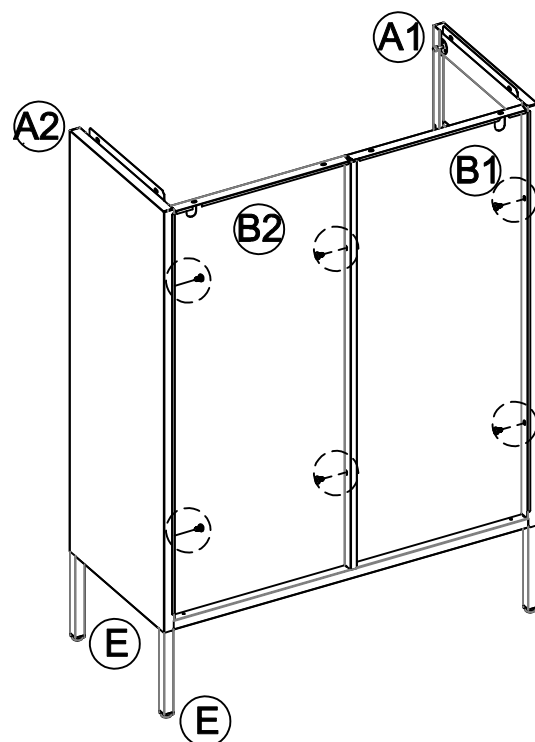
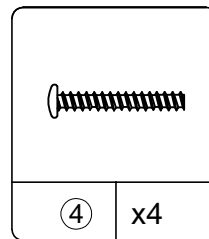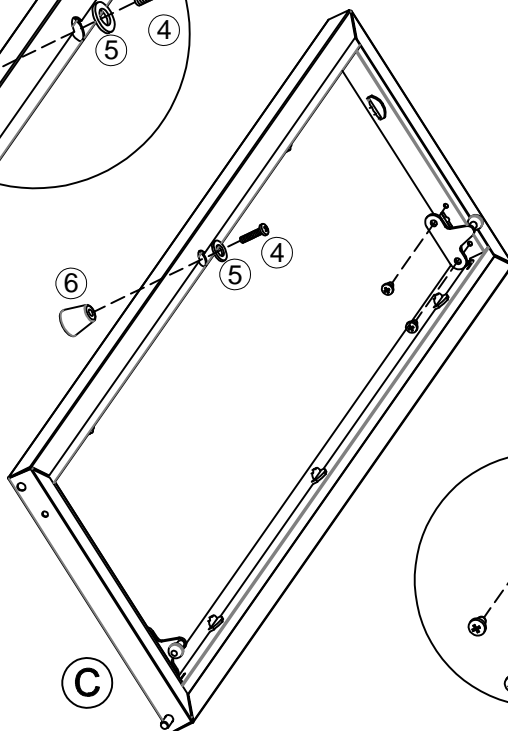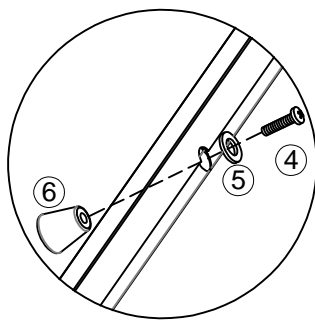(5) - Attach (B) to (E) as below shown.

| ① | x4 |
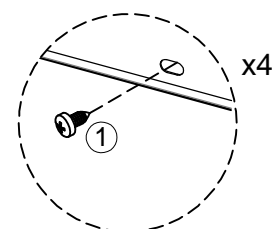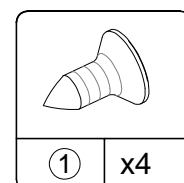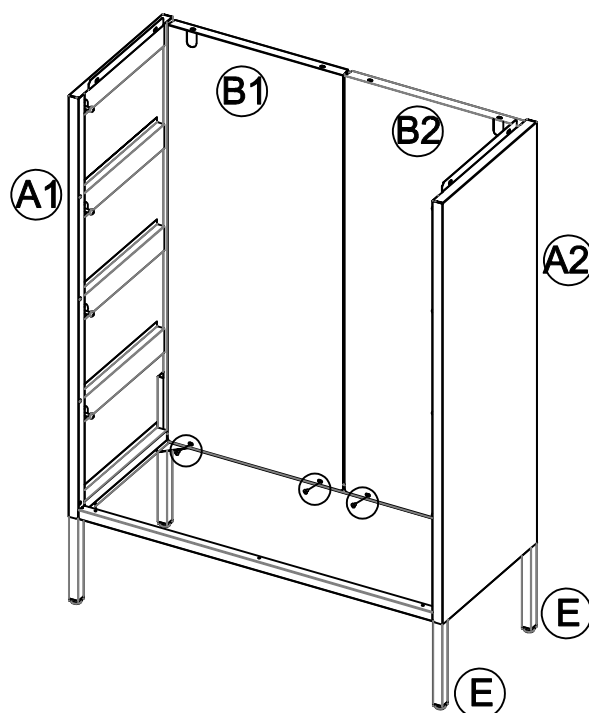
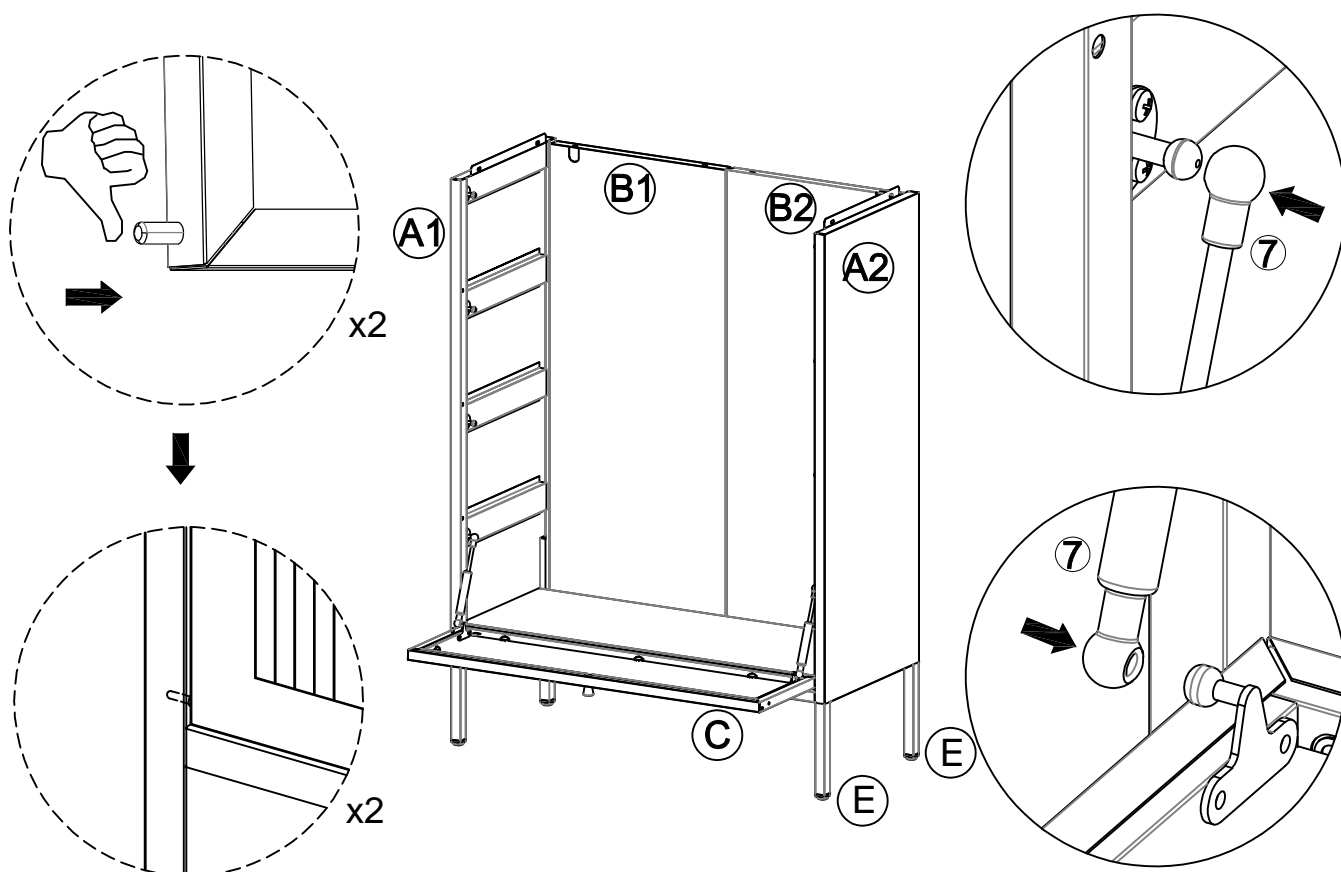## ⑥ - Attach (F) to pre-assembled unit as below shown.

⑦ - Attach (6) to (C) as below shown.

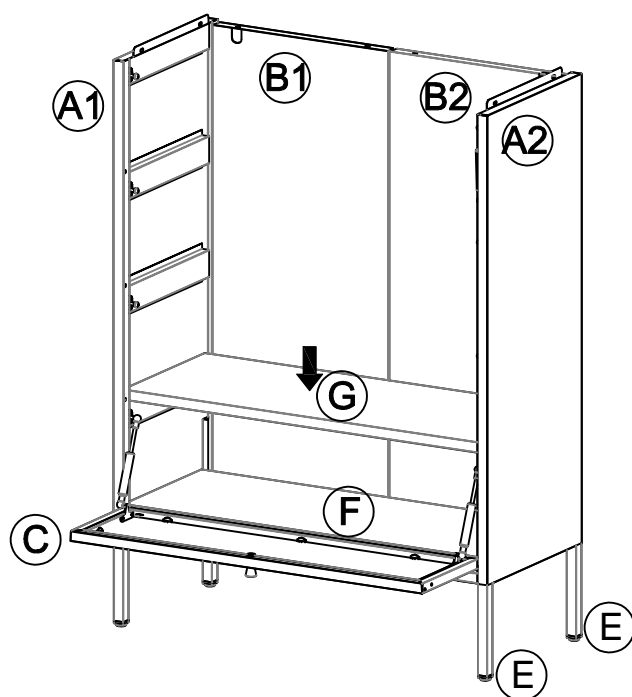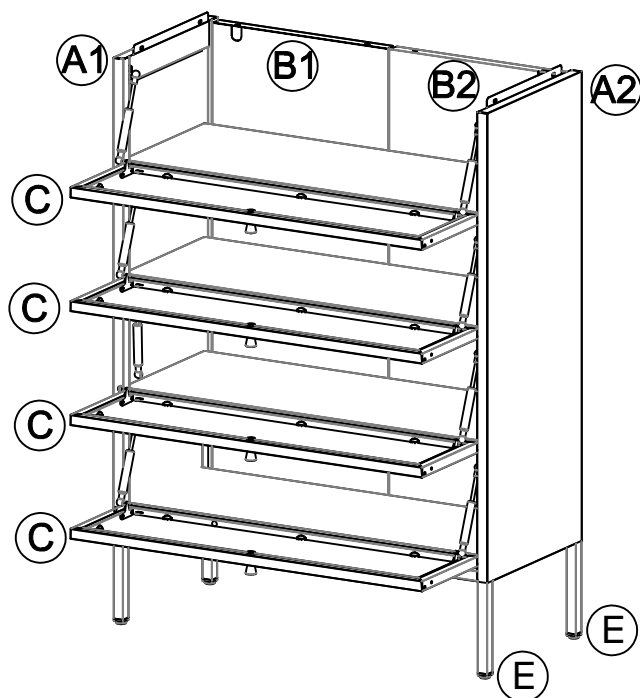| ④	x4	⑤	x4	⑥	x4

⑦	x8

x2
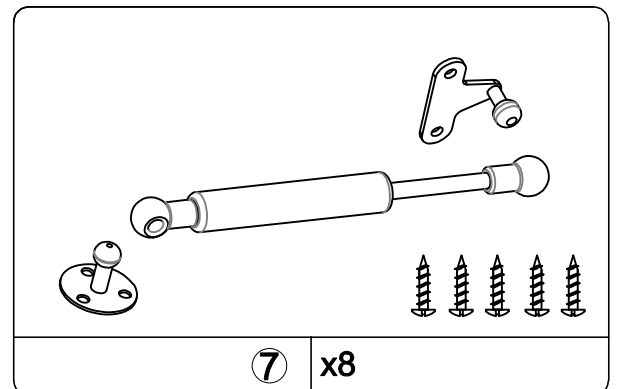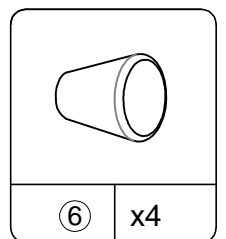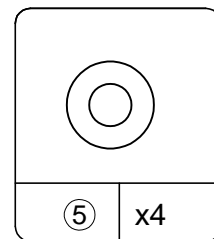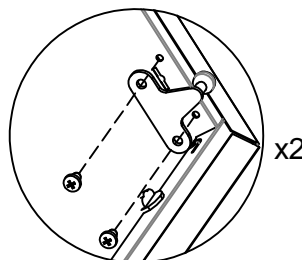
x4

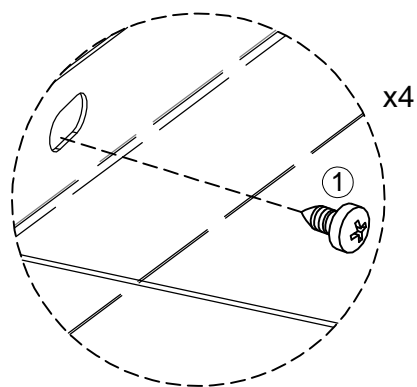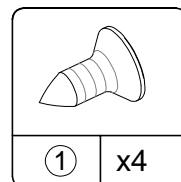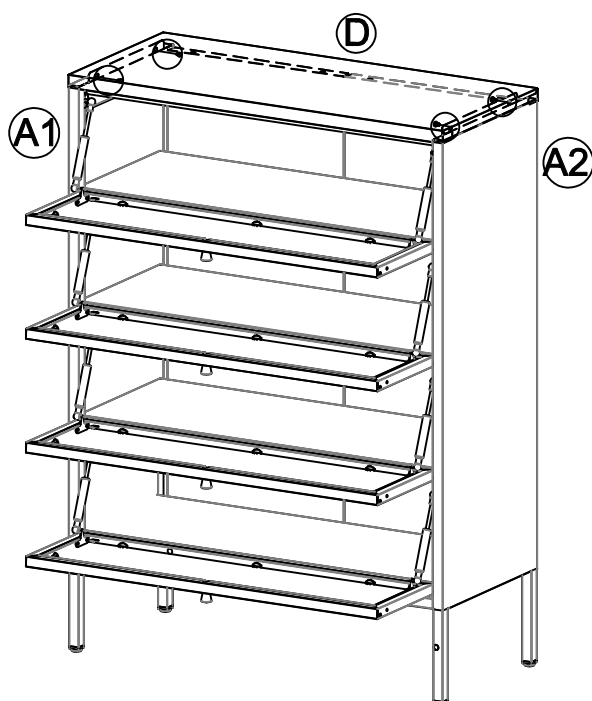(8) - Attach (C) to pre-assembled unit as below shown.
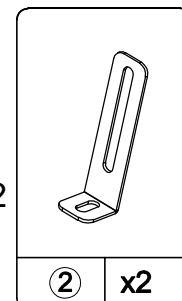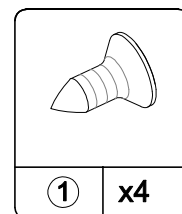
x2

x2

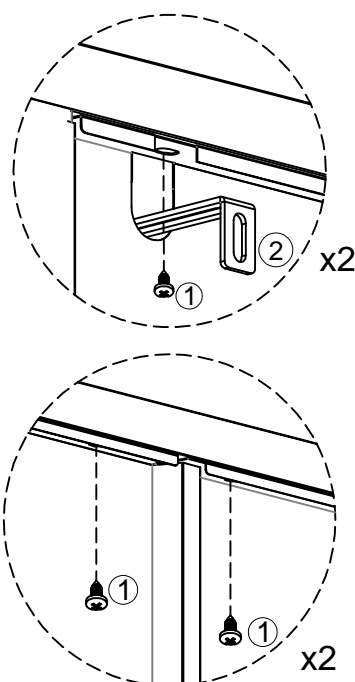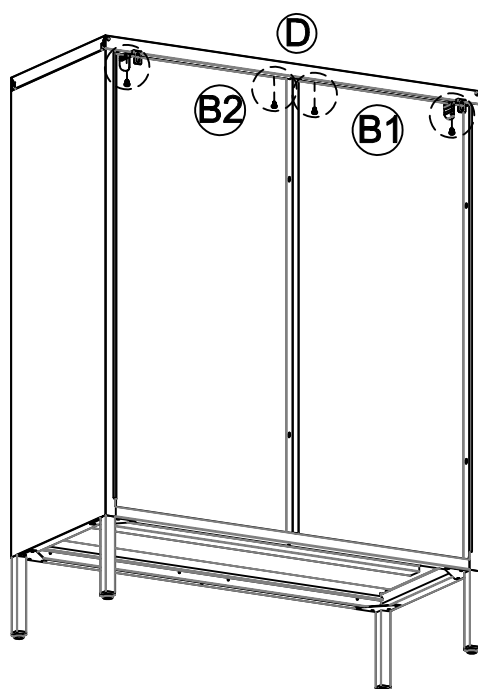(9) - Attach (G) to pre-assembled unit as below shown.

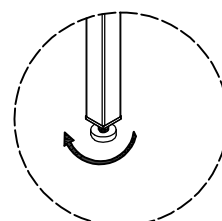(10) - Attach (C)& (G) to pre-assembled unit as below shown.
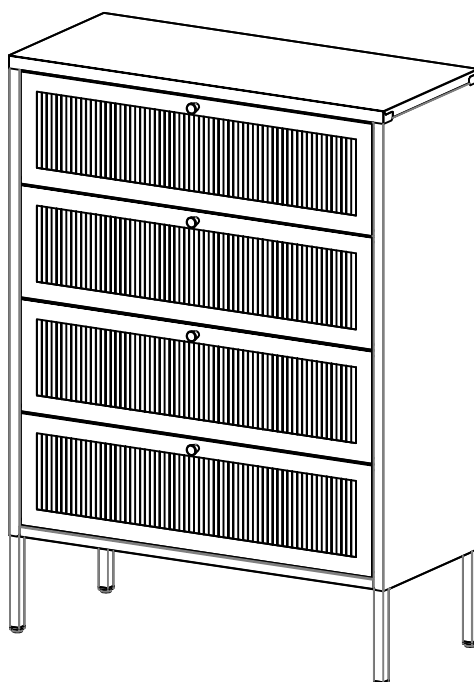

(11) - Attach (D) to (A) as below shown.

(12) - Attach (D) to (B) as below shown.

(13)

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.

(14)

⑧ x2

⑨ x2

x2