# ASSEMBLY INSTRUCTION

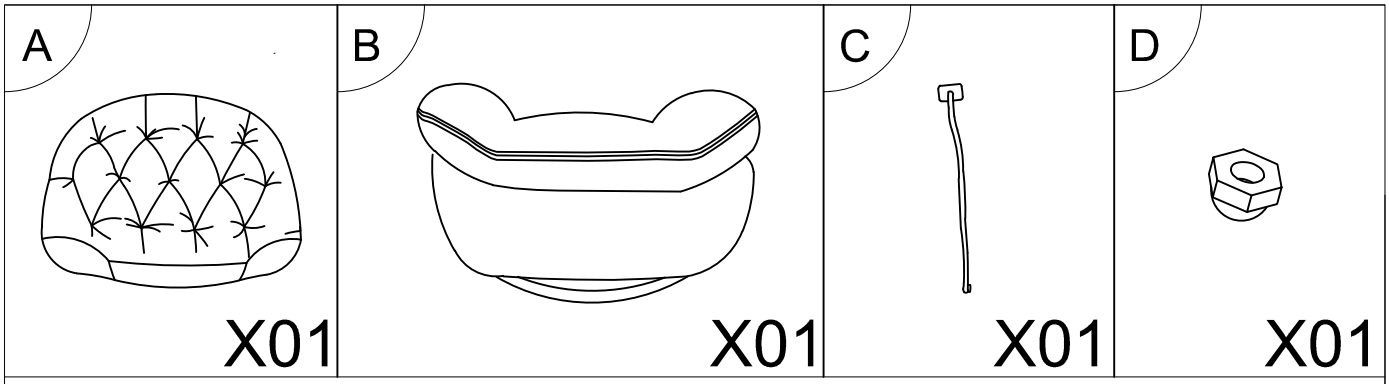


①

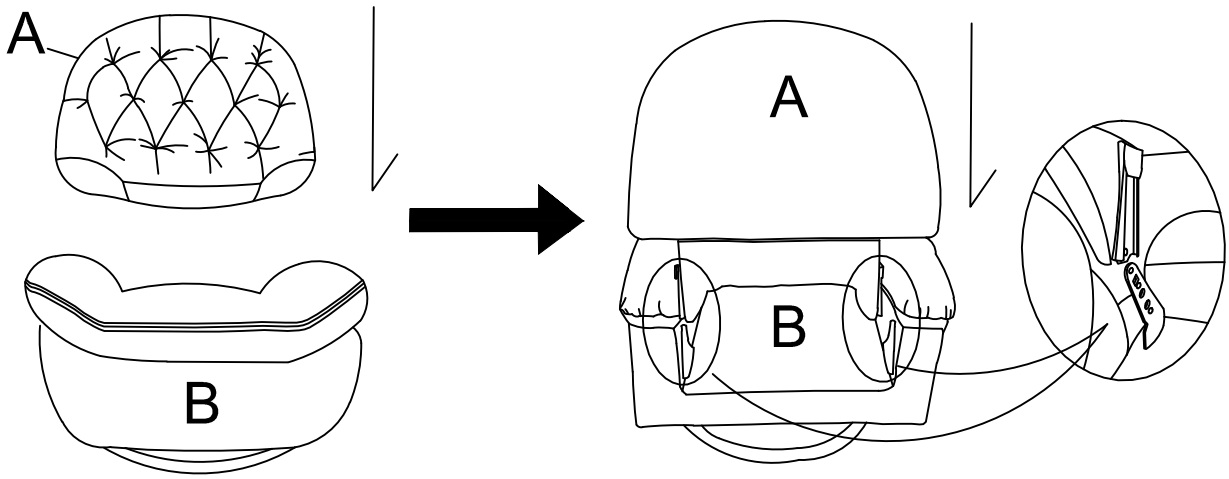


Align your back downwards and insert the plug-in

②

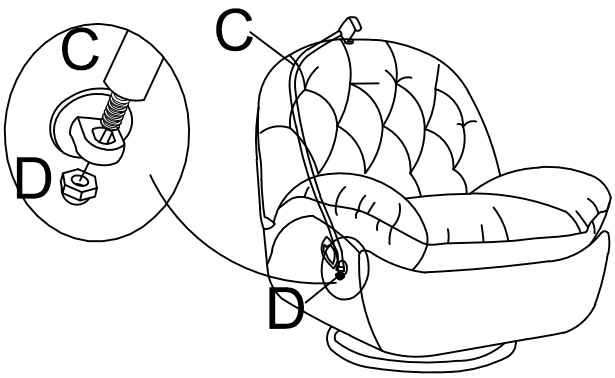


③